

CLEANING:

- Always remove the plug from the electrical socket and allow the heater to cool down before cleaning the heater.
- Wipe heater with a soft dry cloth.
- Store the heater in a clean dry place.
- Do not try to repair the heater yourself, always consult a suitably qualified engineer.

WARNING:

Do not immerse the heater in water.

Do not use any cleaning chemicals such as detergents and abrasives.

Do not allow the interior to get wet.

EVENTUALLY, YOU MAY WANT TO REPLACE THIS HEATER:

New regulations require the recycling of Waste from Electrical and Electronic Equipment (European "WEEE Directive" effective August 2005—UK WEEE Regulations effective 2nd January 2007). Environment Agency Registered Producer: WEE/GA0248QZ.

When your heater comes to the end of its life or you choose to replace it, do not dispose of it with your normal household waste. Please recycle where facilities exist. Check with your supplier or local authority for suitable options.



IF YOU EXPERIENCE PROBLEMS:

If your heater is defective or develops a fault, please return it to the place where you bought it. You can call our Helpline for advice. The Helpline will gladly give advice on any aspect of any Eterna heating product.

SPECIFICATION:

VOLTAGE: 220 – 240V – 50Hz

POWER MAX: 2kW



110419-BT

SAFETY AND INSTALLATION INSTRUCTIONS



Pack contents:

Convector heater with timer c/w 13A. fused 3 pin plug fitted	Qty.1
Mounting feet	Qty.2
Feet fixing screws	Qty.4
Wall mounting brackets	Qty.4
Wall plugs	Qty.4
Wall fixing screws	Qty.4

Model: CTIME 2kW Convector Heater with Timer

These instructions are provided as a guideline to assist you.

**PLEASE READ THESE INSTRUCTIONS BEFORE USING YOUR HEATER
PLEASE RETAIN FOR FUTURE REFERENCE**

General Information, Safety Instructions & Installation:

READ THIS FIRST:

Check the pack and make sure you have all of the parts listed on the front of this booklet. If not, contact the supplier where you bought this product.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be observed, including the following:

- If operating the heater as a freestanding appliance, ensure the feet are correctly attached beforehand.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Extreme caution is necessary where children or persons with reduced physical, sensory or mental capabilities may come into contact with the heater when in use.
- The product is for household/office use only.
- In order to avoid overheating do not cover or obstruct grilles or air intake openings when in use.
- Do not place the heater on carpets with a very deep pile.
- Always ensure that the heater is placed on a firm level surface and ensure that the heater is not positioned close to flammable materials, such as curtains, drapes etc as this could create a fire hazard.
- The heater must not be located adjacent to or against an electrical socket.
- Do not run the cord under carpets/rugs.
- Arrange the cord away from high traffic areas and where it will not become a trip hazard.
- Keep the mains lead away from the heater when in use.
- Do not operate the heater with a damaged cord/plug or if the heater malfunctions.
- If the supply cord is damaged, it must be replaced by a qualified engineer.
- Avoid the use of an extension cord as this may overheat and cause a risk of fire.
- Do not use the heater in any areas where petrol, paint or other flammable liquids or flammable fumes may be present e.g. garages or workshops.
- Do not use this heater in the immediate surroundings of a bath, shower, swimming pool or where water is present.
- This heater is hot when in use. To avoid burns and personal injury, do not let bare skin touch hot surfaces.
- Never leave the heater unattended whilst it is in use.

WARNING:

- This product must only be operated in an upright position.

OPERATION OF THE HEATER:

NOTE: It is normal for the heater to smell slightly for a short while when turned on for the first or after a period of not being used.

ATTACHING THE FEET:

1. Tip heater upside down.
2. Attach feet to each end of the heater using the screws provided. Affix the feet using 2 screws diagonally to correspond with the pre cut holes. Fasten securely.
3. Turn heater correct way up.

WALL MOUNTING THE HEATER:


CAUTION: The heater must be installed away from flammable surfaces at least 40cm between the lower part of the appliance and the floor, 50 cm in front/side and 100cm below any given surfaces as shown in fig. 1 opposite.

The feet must be removed before mounting the appliance on the wall.

1. Measure the distance between the two slots situated at the back of the appliance (see fig.2).
2. Drill two holes at the same distance in the wall and insert a wall plug in each hole.
3. Place the brackets facing the holes as indicated on fig.3 (slots upwards) and attach them in this position with the screws supplied.
4. Before attaching the appliance on the brackets, attach the two other brackets underneath the appliance as indicated on fig.4.
5. Attach the appliance on the wall. To do so, hold it in such way that the slots are facing the brackets; insert the appliance halfway onto the brackets until the appliance can go down into the grooves of the brackets.
6. As soon as the appliance is positioned correctly, take a pencil and mark a dot in the hole of each bracket situated underneath the appliance.
7. Then remove the appliance.
8. Drill a hole in the wall as marked and insert a wall plug in each hole.
9. Attach the appliance back on the wall as indicated in point 5, insert screws through the brackets underneath the appliance and tighten.

Installation & Timer Instructions:

WALL MOUNTING THE HEATER DIAGRAMS:

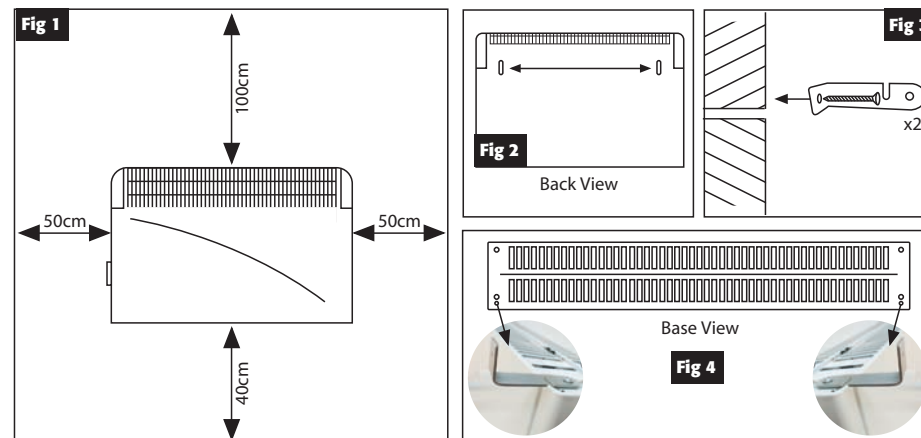

INSTRUCTIONS FOR USE / TIMER OPERATION:

This model is also fitted with a 24hr timer which has 96 segments around its circumference, each segment being equivalent to 15 minutes of time. With the aid of this timer it is possible to preset the time and duration of the period(s) that is desired for the heater to operate in any 24hr period.

TIMER OPERATION:

The centre of the timer has a 2 position slide switch. (See Fig. 5 opposite).

- ① = Unit is always on
- ⌚ = Timer function is on

SETTING THE TIMER:

Ensure the slide switch on the timer is at the clock position.

Rotate the outer ring of the timer in a clockwise direction until the current time is lined up with the arrow pointer, i.e. if the time the timer is being set is 8pm, rotate the outer ring until the number 20 is in line with the arrow pointer.

Set the time the heater is required to run by pulling the segments around the outer ring forward appropriate to the running period(s) required.


When set, the heater will operate each day during the times programmed.

NOTE: The heater must always be plugged into a power socket, the element switches must be in the on position and the thermostat must be suitably set to ensure the heater will come on.

If the heater is required to run continuously, the slide switch on the timer should be set to the "1" position.

If it is subsequently required to revert back to timer operation, the slide switch on the timer should be set to the clock.

NOTE: When using in timer mode, due consideration should be given to the fact that the heater may come on whilst unattended.

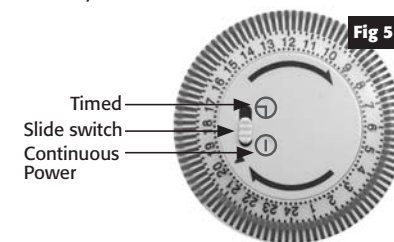

- Choose a suitable location for the heater, taking into account the safety instructions above.
- Insert the plug of the heater into a suitable socket.
- Turn the thermostat knob fully in a clockwise direction to the maximum setting.
- Turn on the heating elements by means of the rocker switches on the side panel. When the heating elements are on the switches will illuminate. For maximum heat output both switches should be on.

Example:
Switch one = 750W
Switch two = 1.25kW
Combined = 2kW

- When the desired room temperature has been reached, the thermostat knob should be turned slowly anti-clockwise until the thermostat click is heard and the lights on the element switches are seen to go out. After this the heater will keep the air temperature in the room at the set temperature by switching on and off automatically.