

Low Voltage Cabinet Lights GENERAL INSTRUCTIONS

These instructions should be read carefully and retained after installation for further reference and maintenance.

SAFETY

- Before installation, maintenance or lamp replacements ensure that the mains supply to the luminaire is switched off and the circuit supply fuses are removed or circuit breaker turned off.
- It is recommended that a qualified electrician is consulted or used for the installation of this luminaire and installed to the current edition of the Building & IEE wiring regulations.
- Check that the total load on the circuit including when this luminaire is installed does not exceed the rating of the circuit cable, fuse or circuit breaker.
- It is recommended that a ceiling specialist is consulted about additional ceiling suspension points due to the weight of this luminaire.

RATINGS

- Supply: 220-240 Volts 50Hz AC
- Low Voltage Electronic Transformer: Output 12 Volts
- Halogen lamps: 12 Volt, 20Watt, G4 Capsule Lamp
- You may interconnect up to a maximum of 6 fittings using the optional leads.
- CE approved

INSTALLATION

- Fix the unit securely to a surface with the screws provided ensuring not to infringe with any joists, gas or water pipes or electrical cables
- Do not mount closer than 0.5m from a surface below.
- Disconnect the free end of the cable to the supply.
- Insert the supply cable into the socket at the end of the light fitting.
- This fitting is double insulated and must not be earthed.
- Switch the supply on & test for correct operation
- NOT suitable for bathrooms etc.

LAMP REPLACEMENT

- Disconnect from the electricity supply before changing lamps.
- Remove the inner ring and the glass lens.
- The halogen capsule may then be removed from the lampholder.
- Take care not to touch the glass envelope of the new lamp with your bare hands.
- Insert the pins of the new lamp into the lampholder.
- Place the glass lens in the lens ring and locate the three tabs in the slots around the lamp reflector.
- Push the lens ring into place ensuring the tabs locate securely in the slots.