

AIRFLOW™

SPECIALISTS IN AIR MOVEMENT TECHNOLOGY

iCON™ Modules – SELV

Available Modules for iCON SELV Range

SELV Module Description	Part No.	Wiring Diagram ³	Trigger Input	Timer ¹	PIR	Humidity ²	Pull Cord Momentary	Pull Cord Latching
Pull Cord Module	72573603	A	✗	✗	✗	✗	✗	✓
PIR Humidity Timer Module	72574201	A,B	✓	✓	✓	✓	✗	✗
Humidity Pull Cord Timer Module	72574202	A,B	✓	✓	✗	✓	✓	✗
PIR Timer Module	72574203	A,B	✓	✓	✓	✗	✗	✗
Pull Cord Timer Module	72574204	A,B	✓	✓	✗	✗	✓	✗

Notes:

- 1: Run on 2- 45 minutes
 - 2: Adjustable 40-90 %RH
- PIR: Passive infra-red
3: See Ventilator Instructions.

Fitting, Wiring and Adjusting

All installation and adjustment to be carried out by a qualified person.


Always isolate the transformer and ventilator units from the power supply before disassembling the equipment.

Fitting and Wiring

- ✦ Remove the front cover, [See: Ventilator Instructions].
- ✦ Lift the terminal block away from the fan housing and push the two connector pins at one end of the module into the electrical terminal block and tighten with a suitable screwdriver. Ensure that the leads are under the retaining clip.
- ✦ Fit slot in power connector end of module into the location block in the fan housing.
- ✦ Push module back into the fan body ensuring that the terminal block locates over the 2 retaining pillars.
- ✦ **For modules with pull-cords:** ensure that the pull-cord is properly located within the cord slot at the bottom of the fan housing
- ✦ **For modules with PIR control:** remove the oval lens cap fitted at the bottom of the front cover of the fan unit. Replace it with the translucent lens supplied with the PIR module.

Note: The lens must be replaced in order for the PIR module to function properly. Ensure that the orientation of the lens is correct, i.e. lens face should be flush with surface.


- ✦ **Connecting external DC cable into Ventilator:** Fix the supplied sealed grommet into the cable entry hole. Pierce the grommet to allow the cable to be pulled through while maintaining the integrity of the seal. Connect the cable to the 3-way connector block [See: iCON SELV Ventilator instructions for possible wiring schemes] ensuring that the supplied cable clamp is fitted. Refit the front cover, [See: Ventilator Instructions].

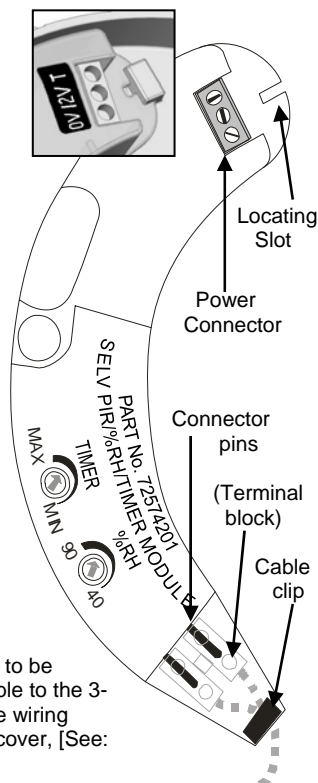

Module Adjustment

All installation and adjustment to be carried out by a qualified person. Do not open the unit or adjust the controls unless the transformer and ventilator units have been isolated from the power supply.

A module with a Timer or Humidistat control is supplied preset, but may be adjusted by the installer.

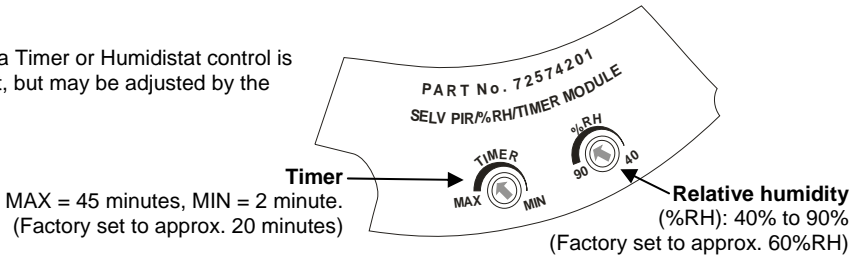

Contacting AIRFLOW

United Kingdom (Head Office)

AIRFLOW DEVELOPMENTS Limited
Lancaster Road
Cressex Business Park
High Wycombe
Buckinghamshire HP12 3QP
England

Tel: +44 (0) 1494 525252
Fax: +44 (0) 1494 461073
Email: info@airflow.co.uk
WWW: <http://www.airflow.co.uk>

United States of America

AIRFLOW TECHNICAL PRODUCTS Inc.
P.O. Box 372,
219 Route 206,
Andover, NJ 07821
USA

Tel: +1 973 786 6386
Fax: +1 973 786 7586
Email: info@airflow.com
WWW: <http://www.airflow-usa.com>

Germany

AIRFLOW LUFTECHNIK GmbH
Postfach 1208
D-53349 Rheinbach
Germany

Tel: +49 (0) 222 69205 0
Fax: +49 (0) 222 69205 11
Email: info@airflow.de
WWW: <http://www.airflow.de>

Czech Republic

AIRFLOW LUFTECHNIK GmbH
o.s. Praha
Hostýnská 520
108 00 Praha 10
Malešice
Czech Republic

Tel: +42 (0) 2 7477 2230
Fax: +42 (0) 2 7477 2370
Email: airflow@ms.anet.cz

The statements and opinions contained in this document are made and expressed in good faith. Whilst every effort has been made to provide reliable information, Airflow Developments Limited do not hold themselves responsible for possible errors of an editorial or other nature, however caused. Should you require a more detailed specification for a product described herein, please contact our sales department. In view of our continuous programme of improvements we reserve the right to change the specification for any model or item described in this publication.