



Technical Data

Wi-Fi Socket Range Extender


Brief product description:

Eliminate dead spots and expand your Wi-Fi coverage with the Wi-Fi Socket Range Extender.

Features:

- Improved Wi-Fi coverage throughout your home
- Works with all wireless broadband routers
- Easy to install and setup with one touch WPS
- N300 Wi-Fi Technology - Up to 300Mbps data transfer speed
- Perfect for streaming music and videos or playing online games
- Suitable for Computers, Tablets, Mobile Phones, Games Consoles, TVs
- Single band (2.4Ghz)
- No plug-in adapters - keeps socket free for use

Product Images

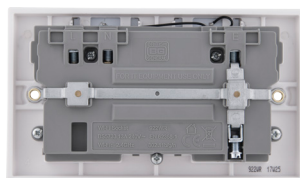

922WR

Technical Specifications

Standard(s)	BS 1363-2I	
Rating	13 Amp 240V~	
Contact Gap	3.0mm minimum	
Switch Type	Single Pole	
Terminal Capacity - L & N	3 x 2.5mm ² , 3 x 4.0mm ² & 2 x 6.0mm ²	
RoHS Directive	Yes	
WEEE Directive	Yes	
Mounting Box Depth (Min)	25mm	
Fixing Centres	120.6mm	



Wi-Fi Socket Range Extender

Wireless Specifications

Setup

- WPS - Wi-Fi Protected Setup® or via web browser

Wireless Band

- 2.4ghz Single Band
- Wireless Specification

Wireless standards 2T2R 2.4GHz

- IEEE 802.11n (up to 300Mbps)
- IEEE 802.11g (up to 54Mbps)
- IEEE 802.11b (up to 11Mbps)

Security

- Wi-Fi Access password
- Wi-Fi Protected Access®:
- 256-bit WPA -PSK
- 256-bit WPA2-PSK
- 256-bit WPA/WPA2-PSK

Minimum System Requirements

- 802.11 b/g/n 2.4GHz wireless router with broadband internet connection
- Android 3.0, Android 4.X, IOS 5 or above
- Windows® XP 32(SP3 or greater), Windows Vista® 32/64, or Windows 7 32/64, Windows 8 32/64, Windows 10 32/64; or Mac OS® X v10.5 or above
- Internet Explorer® 10.0, Firefox® 20, Google Chrome™ 25, or Safari® 5.1

Wiring Specification

- 2 gang switched socket with outboard rockers
- Red rocker indicators (printed)
- Terminal capacity: 3 x 2.5mm², 3 x 4.0mm² or 2 x 6mm²
- Minimum mounting box depth 25mm
- Twin earth fitted as standard to allow a double earth facility for installations requiring high integrity protective connection Ref. BS 7671:2008
- Supplied with 2 x 32mm screws and screw covers


 

Material

- White moulded square edge profile
- Screw covers for sleek appearance
- Blue/Amber LED indicator

Dimensions

- 86mm x 146mm x 10mm (front plate) (H x W x D)
- Fits a standard 25mm wall box

Line Diagrams

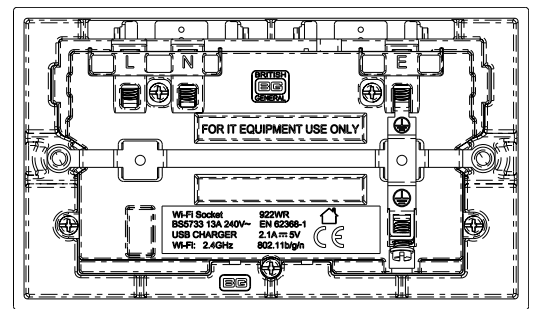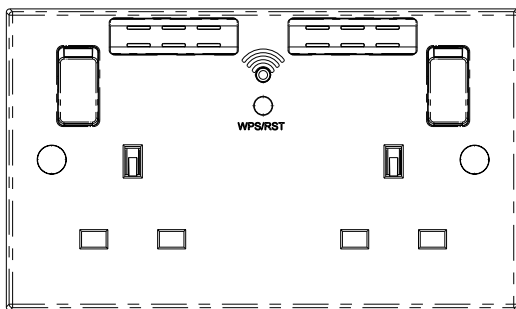

922WR

Packaging Information

Cat No.	Description	Packaging Type			Pack Quantity			Barcode		
		Product	Inner Box	Outer Box	Each	Inner Box	Outer Box	Individual	Inner Box	Outer Box
922WR	2g, SP, Wi-Fi	Eco Blister	Box	Carton	1	5	50	5050765154611	5050765154628	5050765154635

Weights & Dimensions

Cat No.	Description	Dimensions (L x W x D) cm				Weight (kg)				CBM (m ³)
		Unpacked Product	Packed Product	Inner Box	Outer Box	Each	Packed Product	Inner Box	Outer Box	Outer Box
922WR	2g, SP, Wi-Fi	14.6 x 8.6 x 3.2	18 x 16.3 x 3.5	18.8 x 16.3 x 3.5	21.5 x 41 x 45	0.225	0.240	1.230	7.920	0.03



Wi-Fi Socket Range Extender

Installation Information

Safety Warning

For your safety, this product must be installed in accordance with local building regulations. If in any doubt, or where required by the law, consult a competent person who is registered with an electrical self-certification scheme. Further information is available online or from your Local Authority.

Please read carefully and use in accordance with these safety wiring instructions.

Before commencing any electrical work ensure the supply is switched off at the mains either by switching off the consumer unit or by removing the appropriate fuse.

Wiring should be in accordance with the latest edition of the IET regulations (BS 7671). To prevent fire hazard always use cable of the correct rating, size and type for the application.

Any bare earth wires must be covered with appropriate green/yellow sleeving.

Warning do not exceed the load rating of this device as stated on the rear of the product.

If in doubt consult a competent electrician.

Wire Identification – Twin & Earth Cable

EARTH = Green/Yellow Sleeving

NEUTRAL = Black (pre Apr 04) / Blue (after Apr 04)

LIVE = Red (pre Apr 04) / Brown (after Apr 04)



Technical Helpline: 03300 249 279

If in doubt consult a competent electrician.

The ends of the individual conductors should have the insulation removed by approx. 12mm. Any bare earth conductors should be sleeved to within 12mm of the ends. (These details are for general information only and conductor lengths may need to be trimmed in certain installations).

Position your Wi-Fi socket:

Your Wi-Fi socket should be positioned half way between your router and the Wi-Fi dead-zone. Use the signal strength indicator on your mobile device to determine the mid-signal point. Choose a location away from Bluetooth devices and other household electronics (cordless phone, microwave oven, baby monitor, etc.) to minimise signal interference. Choose a location away from Bluetooth devices and other household electronics (cordless phone, microwave oven, baby monitor, etc.) to minimise signal interference.

Wiring Instructions:

- 1) Install mounting box (metal or patress) for either flush or surface mounting, ensuring appropriate size of product. (mounting box to be purchased separately)
- 2) Select the most suitable entry point of the mounting box (knock-out) and route the supply cable through.
- 3) Cables should be prepared so a sufficient conductor length reaches the terminals. Strip the ends of the individual conductors leaving an adequate length bare to enter terminals
- 4) Line up the new socket to mounting box and take note of where each terminal is located.
- 5) Connect each wire to the matching terminal. (**Earth** = Green & Yellow sleeving, **Neutral** = Blue (Black pre Apr 04), **Live** = Brown (Red pre Apr 04)). An earth connection should always be made between the mounting box earth terminal and the socket earth terminal. Make sure no copper wire is exposed & that only the bare end enters the terminal.
- 7) Tighten terminal screws securely. (do not over tighten)
- 8) Carefully position the accessory into the mounting box, ensuring that no wires are trapped between the plate and the wall and secure with screws (do not over tighten) then set screw covers in place (optional).
- 9) Once installation has been completed correctly, replace the fuse for the circuit, switch the power back on at the consumer unit and test.

Twin Earth Fitted

This socket is fitted with with two linked terminals to provide a dual earth facility. This is for use in "clean earth" installations where additional earth capacity is required to comply with Regulation 607 of BS7671 IEE Wiring Regulations. Connect the cables as shown in the diagram.

Wi-Fi socket setup instructions:

Ensure that your Wi-Fi socket is connected to the power supply as per 'Wiring instructions' (see reverse).

After the initial power up the LED indicator will illuminate with a solid blue light. After a short period of time the indicator will then start to blink and the product will then be ready for set-up. Proceed with your preferred method of connection:

Wireless setup:

There are three installation methods to connect to the Wi-Fi socket;

Web browser - Using your computer, smart phone or tablet's internet browser (Safari, Chrome, Firefox, Edge, Internet Explorer).

QR code - Scan the QR code to take you directly to the setup page.

WPS (Wi-Fi Protected Setup) - One touch setup, no configuration needed.

QR code setup:

- On your smartphone or tablet, connect to a new Wi-Fi network called "BG" (no password is required).
- Scan the QR code.
- Select the Wi-Fi network to be extended.
- Enter your Wi-Fi router password.
- Ensure the tick-box "Set Local & Internet SSID as the same" is ticked.
- This will change the BG network name to match your current router network name.
- Click 'Next'.
 - * Note: Should you need to change the network encryption mode, choose from drop-down menu. Default is WPA2-PSK. Refer to your router handbook for further details.
- Click 'Apply'.
- The Wi-Fi socket should show a solid blue LED, and is now ready to use.
- Your devices will connect using your existing Wi-Fi network name.

Web browser setup:

- Connect to a new Wi-Fi network called "BG" (no password is required).
 - * Note: if the BG network is not showing, please reset the Wi-Fi socket.
- Enter <http://bg.repeater.net> into your browser search bar.
- Select the Wi-Fi network to be extended.
- Enter your Wi-Fi router password.
- Ensure the tick-box "Set Local & Internet SSID as the same" is ticked. This will change the BG network name to match your current router network name.
- Click 'Next'.
 - * Note: Should you need to change the network encryption mode, choose from the drop-down menu. Default is WPA2-PSK. Refer to your router handbook for further details.

- Click 'Apply'.
- The Wi-Fi socket will show a solid blue LED, and is now ready to use.
- Your devices will connect using your existing Wi-Fi network name.

WPS (Wi-Fi protected) setup:

- Press and hold the WPS button on your router for 5 seconds.
 - * Note: WPS connection may differ for each manufacturer, please refer to your router handbook for you specific WPS connection method.
- Press the WPS/RST button once on the Wi-Fi socket.
- The LED will blink orange whilst connecting to your router/
- Once connected, the LED will light solid blue.
- Your devices will connect using your existing Wi-Fi network name.

Resetting your Wi-Fi socket:

- Press and hold the WPS/RST button on the front of the Wi-Fi socket for 5 seconds
- The LED will blink amber/blue and then extinguish.
- Wait for a blue blinking LED to return
- Your Wi-Fi socket is now ready to setup

For a visual guide on all setup information please visit www.bgelectrical.uk/wifi-sockets



Technical Data

Wi-Fi Socket Range Extender + USB Charger


Brief product description:

Eliminate dead spots and expand your Wi-Fi coverage with the Wi-Fi Socket Range Extender.

Features:

- 1x 2.1A USB outlet for charging your mobile devices
- Improved Wi-Fi coverage throughout your home
- Works with all wireless broadband routers
- Easy to install and setup with one touch WPS
- N300 Wi-Fi Technology - Up to 300Mbps data transfer speed
- Perfect for streaming music and videos or playing online games
- Suitable for Computers, Tablets, Mobile Phones, Games Consoles, TVs
- Single band (2.4Ghz)
- No plug-in adapters - keeps socket free for use

Product Images

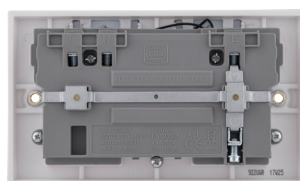

922UWR

Technical Specifications

Standard(s)	BS 1363-2
Rating	13 Amp 240V~
Contact Gap	3.0mm minimum
Switch Type	Single Pole
Terminal Capacity - L & N	3 x 2.5mm ² , 3 x 4.0mm ² & 2 x 6.0mm ²
RoHS Directive	Yes
WEEE Directive	Yes
Mounting Box Depth (Min)	25mm
Fixing Centres	120.6mm
USB Output	5V, 2.1A
Output Tolerance	<5%
Stand-by Power	<75mW
USB Overcurrent Protection	<2.43A



Wireless Specifications

- Wireless standards 2T2R 2.4GHz
- IEEE 802.11n (up to 300Mbps)
- IEEE 802.11g (up to 54Mbps)
- IEEE 802.11b (up to 11Mbps)



Wi-Fi Socket Range Extender + USB Charger

Wireless Specifications

Setup

- WPS - Wi-Fi Protected Setup® or via web browser

Wireless Band

- 2.4ghz Single Band
- Wireless Specification

Wireless standards 2T2R 2.4GHz

- IEEE 802.11n (up to 300Mbps)
- IEEE 802.11g (up to 54Mbps)
- IEEE 802.11b (up to 11Mbps)

Security

- Wi-Fi Access password
- Wi-Fi Protected Access®:
- 256-bit WPA -PSK
- 256-bit WPA2-PSK
- 256-bit WPA/WPA2-PSK

Minimum System Requirements

- 802.11 b/g/n 2.4GHz wireless router with broadband internet connection
- Android 3.0, Android 4.X, IOS 5 or above
- Windows® XP 32(SP3 or greater), Windows Vista® 32/64, or Windows 7 32/64, Windows 8 32/64, Windows 10 32/64; or Mac OS® X v10.5 or above
- Internet Explorer® 10.0, Firefox® 20, Google Chrome™ 25, or Safari® 5.1

Wiring Specification

- 2 gang switched socket with outboard rockers
- Red rocker indicators (printed)
- Terminal capacity: 3 x 2.5mm², 3 x 4.0mm² or 2 x 6mm²
- Minimum mounting box depth 25mm
- Twin earth fitted as standard to allow a double earth facility for installations requiring high integrity protective connection Ref. BS 7671:2008
- Supplied with 2 x 32mm screws and screw covers


 

Material

- White moulded square edge profile
- Screw covers for sleek appearance
- Blue/Amber LED indicator

Dimensions

- 86mm x 146mm x 10mm (front plate) (H x W x D)
- Fits a standard 25mm wall box

Line Diagrams

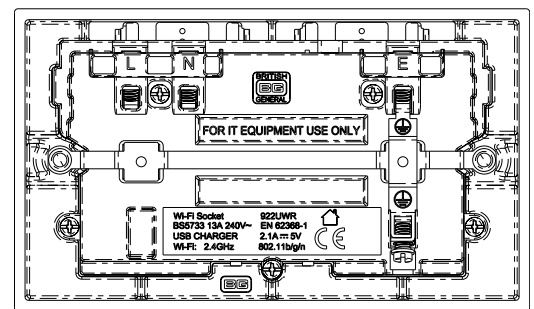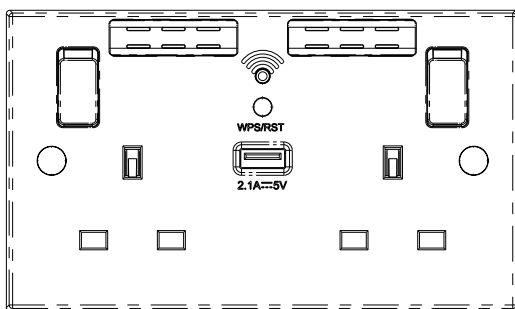

922UWR

Packaging Information

Cat No.	Description	Packaging Type			Pack Quantity			Barcode		
		Product	Inner Box	Outer Box	Each	Inner Box	Outer Box	Individual	Inner Box	Outer Box
922UWR	2g, SP, Wi-Fi + USB	Eco Blister	Box	Carton	1	5	50	5050765154581	5050765154598	5050765154604

Weights & Dimensions

Cat No.	Description	Dimensions (L x W x D) cm				Weight (kg)				CBM (m ³)
		Unpacked Product	Packed Product	Inner Box	Outer Box	Each	Packed Product	Inner Box	Outer Box	
922UWR	2g, SP, Wi-Fi + USB	14.6 x 8.6 x 3.2	18 x 16.3 x 3.5	18.8 x 16.3 x 3.5	21.5 x 41 x 45	0.225	0.240	1.230	7.920	0.03



Wi-Fi Socket Range Extender + USB Charger

Installation Information

Safety Warning

For your safety, this product must be installed in accordance with local building regulations. If in any doubt, or where required by the law, consult a competent person who is registered with an electrical self-certification scheme. Further information is available online or from your Local Authority.

Please read carefully and use in accordance with these safety wiring instructions.

Before commencing any electrical work ensure the supply is switched off at the mains either by switching off the consumer unit or by removing the appropriate fuse.

Wiring should be in accordance with the latest edition of the IET regulations (BS 7671). To prevent fire hazard always use cable of the correct rating, size and type for the application.

Any bare earth wires must be covered with appropriate green/yellow sleeving.

Warning do not exceed the load rating of this device as stated on the rear of the product.

If in doubt consult a competent electrician.

Wire Identification – Twin & Earth Cable

EARTH = Green/Yellow Sleeving

NEUTRAL = Black (pre Apr 04) / Blue (after Apr 04)

LIVE = Red (pre Apr 04) / Brown (after Apr 04)



Technical Helpline: 03300 249 279

If in doubt consult a competent electrician.

The ends of the individual conductors should have the insulation removed by approx. 12mm. Any bare earth conductors should be sleeved to within 12mm of the ends. (These details are for general information only and conductor lengths may need to be trimmed in certain installations).

Position your Wi-Fi socket:

Your Wi-Fi socket should be positioned half way between your router and the Wi-Fi dead-zone. Use the signal strength indicator on your mobile device to determine the mid-signal point. Choose a location away from Bluetooth devices and other household electronics (cordless phone, microwave oven, baby monitor, etc.) to minimise signal interference. Choose a location away from Bluetooth devices and other household electronics (cordless phone, microwave oven, baby monitor, etc.) to minimise signal interference.

Wiring Instructions:

- 1) Install mounting box (metal or patress) for either flush or surface mounting, ensuring appropriate size of product. (mounting box to be purchased separately)
- 2) Select the most suitable entry point of the mounting box (knock-out) and route the supply cable through.
- 3) Cables should be prepared so a sufficient conductor length reaches the terminals. Strip the ends of the individual conductors leaving an adequate length bare to enter terminals
- 4) Line up the new socket to mounting box and take note of where each terminal is located.
- 5) Connect each wire to the matching terminal. (**Earth** = Green & Yellow sleeving, **Neutral** = Blue (Black pre Apr 04), **Live** = Brown (Red pre Apr 04)). An earth connection should always be made between the mounting box earth terminal and the socket earth terminal. Make sure no copper wire is exposed & that only the bare end enters the terminal.
- 7) Tighten terminal screws securely. (do not over tighten)
- 8) Carefully position the accessory into the mounting box, ensuring that no wires are trapped between the plate and the wall and secure with screws (do not over tighten) then set screw covers in place (optional).
- 9) Once installation has been completed correctly, replace the fuse for the circuit, switch the power back on at the consumer unit and test.

Twin Earth Fitted

This socket is fitted with two linked terminals to provide a dual earth facility. This is for use in "clean earth" installations where additional earth capacity is required to comply with Regulation 607 of BS7671 IEE Wiring Regulations. Connect the cables as shown in the diagram.

Wi-Fi socket setup instructions:

Ensure that your Wi-Fi socket is connected to the power supply as per 'Wiring instructions' (see reverse).

After the initial power up the LED indicator will illuminate with a solid blue light. After a short period of time the indicator will then start to blink and the product will then be ready for set-up. Proceed with your preferred method of connection:

Wireless setup:

There are three installation methods to connect to the Wi-Fi socket;

Web browser - Using your computer, smart phone or tablet's internet browser (Safari, Chrome, Firefox, Edge, Internet Explorer).

QR code - Scan the QR code to take you directly to the setup page.

WPS (Wi-Fi Protected Setup) - One touch setup, no configuration needed.

QR code setup:

- On your smartphone or tablet, connect to a new Wi-Fi network called "BG" (no password is required).
- Scan the QR code.
- Select the Wi-Fi network to be extended.
- Enter your Wi-Fi router password.
- Ensure the tick-box "Set Local & Internet SSID as the same" is ticked.
- This will change the BG network name to match your current router network name.
- Click 'Next'.
 - * Note: Should you need to change the network encryption mode, choose from drop-down menu. Default is WPA2-PSK. Refer to your router handbook for further details.
- Click 'Apply'.
- The Wi-Fi socket should show a solid blue LED, and is now ready to use.
- Your devices will connect using your existing Wi-Fi network name.

Web browser setup:

- Connect to a new Wi-Fi network called "BG" (no password is required).
 - * Note: if the BG network is not showing, please reset the Wi-Fi socket.
- Enter <http://bg.repeater.net> into your browser search bar.
- Select the Wi-Fi network to be extended.
- Enter your Wi-Fi router password.
- Ensure the tick-box "Set Local & Internet SSID as the same" is ticked. This will change the BG network name to match your current router network name.
- Click 'Next'.
 - * Note: Should you need to change the network encryption mode, choose from the drop-down menu. Default is WPA2-PSK. Refer to your router handbook for further details.

- Click 'Apply'.
- The Wi-Fi socket will show a solid blue LED, and is now ready to use.
- Your devices will connect using your existing Wi-Fi network name.

WPS (Wi-Fi protected) setup:

- Press and hold the WPS button on your router for 5 seconds.
 - * Note: WPS connection may differ for each manufacturer, please refer to your router handbook for you specific WPS connection method.
- Press the WPS/RST button once on the Wi-Fi socket.
- The LED will blink orange whilst connecting to your router/
- Once connected, the LED will light solid blue.
- Your devices will connect using your existing Wi-Fi network name.

Resetting your Wi-Fi socket:

- Press and hold the WPS/RST button on the front of the Wi-Fi socket for 5 seconds
- The LED will blink amber/blue and then extinguish.
- Wait for a blue blinking LED to return
- Your Wi-Fi socket is now ready to setup

For a visual guide on all setup information please visit www.bgelectrical.uk/wifi-sockets