

**PHC620SS 60 cm/  
PHC720SS 77 cm  
Front touch control  
ceramic hob**

## **Instruction manual**




# User Manual for your Baumatic

**PHC620SS 60 cm**

**PHC720SS 77 cm**

**Front touch control 4 hyperspeed  
zone ceramic hob.**

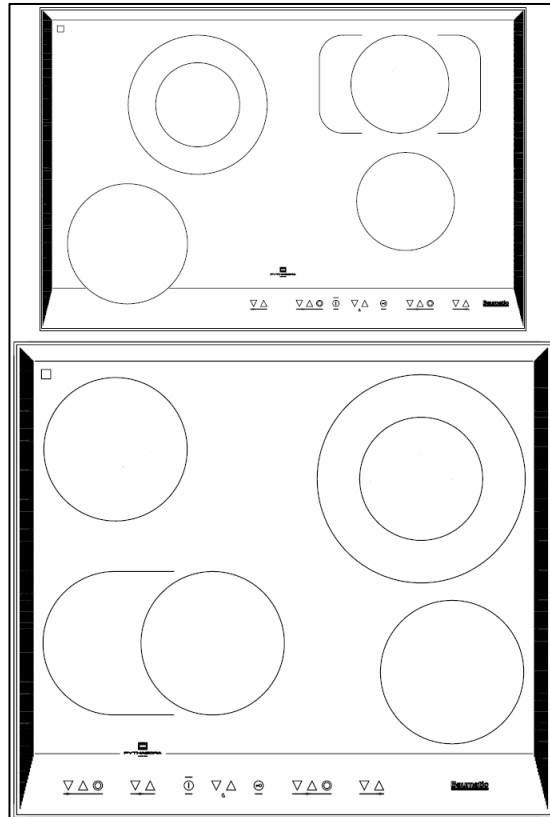

*You will be mine ...*


***NOTE: This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference; for you or any person not familiar with the operation of the appliance.***

# Contents

<b>Environmental note</b>	4
<b>Important safety information</b>	5 – 8
<b>Specifications</b>	8 – 9
Ceramic hob surface layout	10
Control panel layout	10
Cooking zone indicators and neon's	11
<b>Using the ceramic hob</b>	11
Before first use	11
Touch controls	11
Turning the hob on	12
Turning on a zone and setting a power level	12
Turning on the dual circuit zones	12 – 13
Turning off a dual circuit's outer section	13
Turning off a zone gradually	13
Turning off a zone instantly	14
Turning the hob off	14
Residual heat indicator	14
Locking the hob top	15
Safety cut-off	15
Automatic pre-heating	16
Increasing the power level during automatic pre-heating	17
Switching off automatic pre-heating	17
The hob timer	17 - 18
Hob guidelines	18 - 19
<b>Cleaning and maintenance</b>	20
Cleaning the ceramic hob top	20
After each use	20
Cleaning table	20
Using a ceramic hob scraper	21
Using a specialist ceramic hob cleaner	21
<b>Installation</b>	22
Positioning	22
Unpacking the appliance	22
Installing the appliance	23 – 24
Electrical connection	25
Connecting the mains supply cable	25 – 26
Replacing the mains supply cable	26 - 27
<b>My appliance isn't working correctly</b>	27 – 28
<b>Baumatic Ltd. Conditions of Guarantee</b>	29
<b>Contact details</b>	30

## Environmental note

**This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.**

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

**Disposal must be carried out in accordance with local environmental regulations for waste disposal.**

**For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.**



- The packaging materials that Baumatic uses are environmentally friendly and can be recycled.
- Please discard all packaging material with due regard for the environment.

## Important safety information



Your safety is of the utmost importance to Baumatic. Please make sure that you read this instruction booklet **before** attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Baumatic Technical Department.

### General Information

- This appliance is designed for domestic household use and for the cooking and frying of domestic foodstuffs.
- **IMPORTANT:** The adjacent furniture and all materials used in the installation **must** be able to withstand a minimum temperature of 85°C above the ambient temperature of the room it is located in, whilst in use.
- Certain types of vinyl or laminate kitchen furniture are particularly prone to heat damage or discolouration at temperatures below the guidelines given above.
- Any damage caused by the appliance being installed in contravention of this temperature limit, **will be the liability of the owner.**
- Your new appliance is guaranteed against electrical or mechanical defects, subject to certain exclusions that are noted in Baumatic's Conditions Of Guarantee. The foregoing does not affect your statutory rights.
- The use of this appliance for any other purpose or in any other environment without the express agreement of Baumatic Ltd. will invalidate any warranty or liability claim.
- You should not use this appliance to store items on or as a work surface.
- No modifications to the appliance are permitted by Baumatic Ltd.
- You should not store or place flammable or highly flammable liquids/materials on top of or near the appliance. Items made from aluminium, plastic or plastic film should also be kept away from the appliance, as they may fuse to the surface.
- **Repairs may only be carried out by Baumatic Service Engineers or their authorised service agent.**



























































