 


RETRO2
FRIDGE-FREEZER

Instruction manual

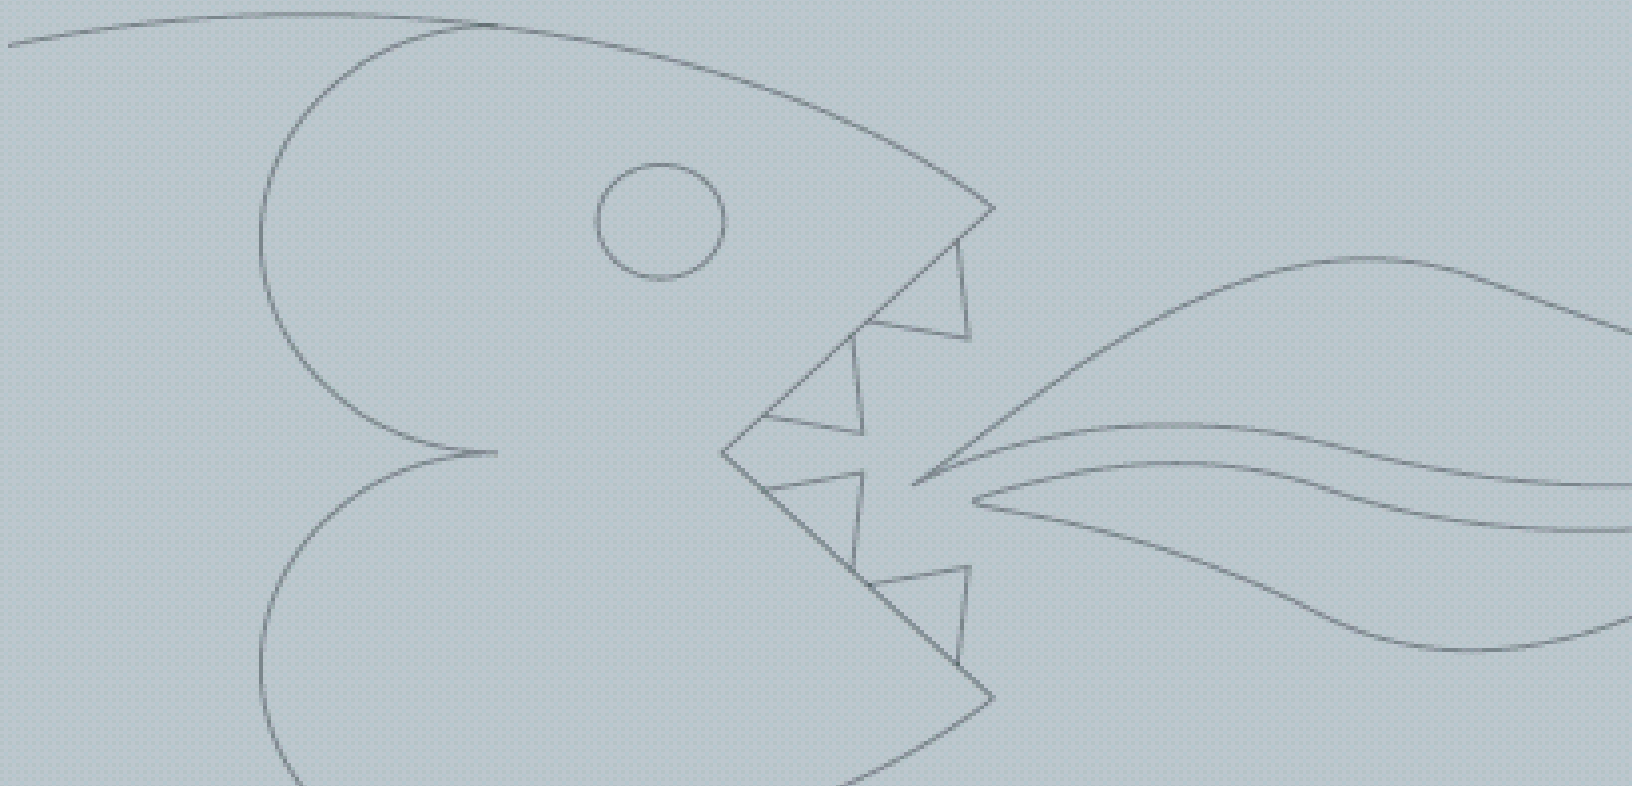

User Manual for your
RETRO2
FRIDGE-FREEZER



NOTE: This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference.

CONTENTS

YOUR FRIDGE-FREEZER'S SPECIFICATIONS3

SAFETY INFORMATION / ENVIRONMENTAL NOTE 4

USING YOUR FRIDGE-FREEZER.....5-18

YOUR RETRO2 FRIDGE-FREEZER.....5

BEFORE USING YOUR FRIDGE-FREEZER.....6

USING YOUR FRIDGE-FREEZER.....7-8

ARRANGING FOOD9-15

DEFROSTING.....16-17

CLEANING AND MAINTENANCE.....18

INSTALLING YOUR FRIDGE-FREEZER.....19

TROUBLESHOOTING20

CONDITIONS OF GUARANTEE.....21

CONTACT DETAILS.....22

Specifications of your RETRO2 Fridge-freezer

Congratulations on purchasing a Baumatic RETRO2 Fridge-Freezer!

Your Fridge-Freezer has:

- ↻ ***Gross capacity: 256***
- ↻ ***Net capacity (fridge / freezer): 216/40 litres***
- ↻ ***Energy efficiency class: A***
- ↻ ***Star rating: *******
- ↻ ***4 Safety glass shelves***
- ↻ ***2 Salad Crispers***
- ↻ ***2 Butter compartments***
- ↻ ***Egg rack***
- ↻ ***2 Bottle racks***
- ↻ ***1 Freezer drawer***

Dimensions mm (H x W x D)
1570 x 540 x 620

To fully enjoy using your appliance long into the future, please firstly familiarise yourself with the specifications, safety advice and operational instructions included in this manual.

NOTE:

When you install your Fridge-Freezer, it is important to bear in mind its climatic rating.

In order to find out the climatic rating of your appliance, check the data rating tag inside your refrigerator. It indicates the ambient temperature range within which your appliance will function.

Important Safety Information: Please Read this before installing & using.

ELECTRICAL SAFETY

CE This appliance complies with Directives 89/368/EEC, 73/23/EEC and following changes.

- **NOTE** - This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance of electrical current. You will be able to tell if it is because a non-grounded appliance will give off an electrical discharge. **Manufacturer declines all responsibility for any damage due to non-grounding of appliance.**
 - DURING THE GUARANTEE PERIOD ONLY BAUMATIC SERVICE ENGINEERS OR AN AUTHORISED AGENT OF BAUMATIC SHOULD CARRY OUT REPAIRS ON THIS UNIT.
 - DO NOT USE IF THE SUPPLY CORD IS DAMAGED. NEVER TAKE RISKS WITH FIRE!
- **ENSURE YOU CONNECT THIS APPLIANCE TO A SUPPLY RATED AT 220-240V (or 200-230V) and 50HZ.**
- **NOTE: the supporting structure is constructed in panels of treated sheet steel, electrostatically enamelled to resist ill-treatment and to give long-lasting beauty and shine.**

X Do not attempt to alter the specifications of this appliance. Doing so could damage the machine, cause injury & invalidate your warranty. **DO NOT USE ADAPTERS/SHUNTS.**

X Do not allow children to play with, near or inside this Fridge-Freezer.

X Do not pull on the power supply cable to free the plug from the wall!

X Do not attempt to use your Fridge-Freezer outdoors or any place where it is likely to come into contact with the elements.

X Do not pull out or insert the plug with wet hands.

X Before any cleaning or maintenance work, ensure that the appliance has been disconnected from the power supply.

X Never allow the back coils of the Fridge-freezer to come into contact with any wall surface. **ALWAYS ENSURE THAT THE SPACE INTO WHICH YOU ARE PLACING YOUR APPLIANCE IS FREE OF STORED ITEMS SUCH AS PAPERS OR OTHER FLAMMABLE MATERIALS.**

X NEVER block the VENTILATION OPENINGS OF THE APPLIANCE EITHER INSIDE OR ON ITS EXTERIOR. IT IS VITAL TO KEEP YOUR FRIDGE-FREEZER WELL VENTILATED SO THAT THERE IS PROPER AIR FLOW BETWEEN THE BOTTOM OF THE UNIT AND THE PLINTH / KICK PLATE ON WHICH IT IS SITTING.


X WARNING – DO NOT DAMAGE THE REFRIGERANT CIRCUIT. AT THE END OF THE FUNCTIONAL LIFE OF THE EQUIPMENT (WHICH USES COOLING GAS R600o [ISOBUTANE]) AND INFLAMMABLE GAS INSIDE THE INSULATING FOAM, IT MUST BE PLACED IN SAFETY BEFORE SENDING IT FOR PROPER WASTE DISPOSAL.

PLEASE OBSERVE ALL INSTALLATION ADVICE IN THIS MANUAL FOR SAFE USAGE OF YOUR APPLIANCE.

 
Note: Before discarding an old refrigerator/freezer, switch off and disconnect it from the power supply. Cut off and render any plug useless. Ensure that the door cannot jam (removing it is best), regardless of whether or not it can be pushed open from inside. AN OLD FRIDGE/FREEZER CAN BE A DEADLY PLAYTHING FOR CHILDREN!

CONFORMITY TO W.E.E.E. DIRECTIVE

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.


The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

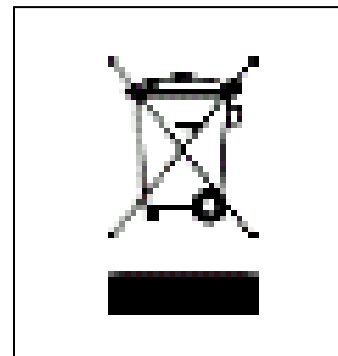

Using your Baumatic RETRO FRIDGE-FREEZER:

 Your RETRO2 Fridge-Freezer:

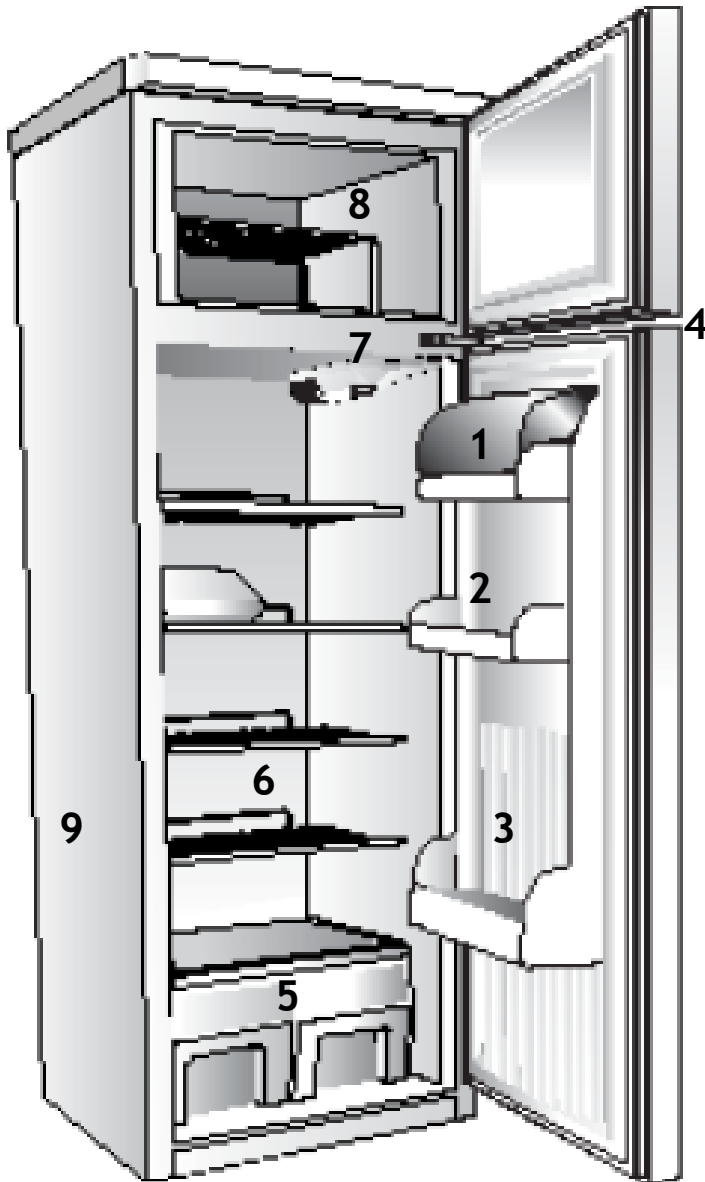

KEY

1. Dairy Section - For storing dairy products such as butter and cheese.
2. Small Pocket - For storing small, packaged foods.
3. Bottle Rack - For storing bottles & tall containers.
4. Doors
5. Crisper Drawers
6. Fridge Shelves
7. Control Panel and Light
8. Freezer Compartment.
9. Appliance

UPON DELIVERY:

When your Fridge-Freezer has been delivered, you will need to wait approximately 8 hours before turning it on. The fluid of the compressor installed in the appliance will need time to settle. **PLEASE DO NOT PLUG IN ANY EARLIER THAN THIS!**

.....
NOTE:

THERE CAN BE AN ODOUR WHEN YOU FIRST SWITCH ON THE APPLIANCE. IT WILL VANISH WHEN THE UNIT STARTS COOLING.

We recommend that you have the Fridge-Freezer delivered near to where you plan to install it so that this fluid can settle.

SITUATING YOUR FRIDGE-FREEZER

CAUTION: DO NOT PLACE THE APPLIANCE NEAR HEAT SOURCES AND LEAVE AT LEAST 5CM OF SPACE ABOVE THE UPPER SECTION AND 5 INCHES (12.7 CM) BETWEEN THE REAR OF THE APPLIANCE AND THE WALL BEHIND IT.

FOR FULL INSTALLATION ADVICE, PLEASE SEE PAGE 19

MAKE A NOTE OF THE LOCATION FOR YOUR NEW FRIDGE-FREEZER. MAKE SURE THAT IT WILL FIT PROPERLY SO THAT:

- 1) The doors can open freely and completely.**
- 2) You can access your food conveniently.**
- 3) There is sufficient space at the back for the cooling coils to give off heat safely & that they do not touch the plug (see SAFETY SECTION).**

Turning on your Baumatic RETRO FRIDGE-FREEZER:

PLEASE FAMILIARISE YOURSELF WITH THE DISPLAY PANEL AT THE TOP OF THE UNIT (ILLUSTRATED BELOW).

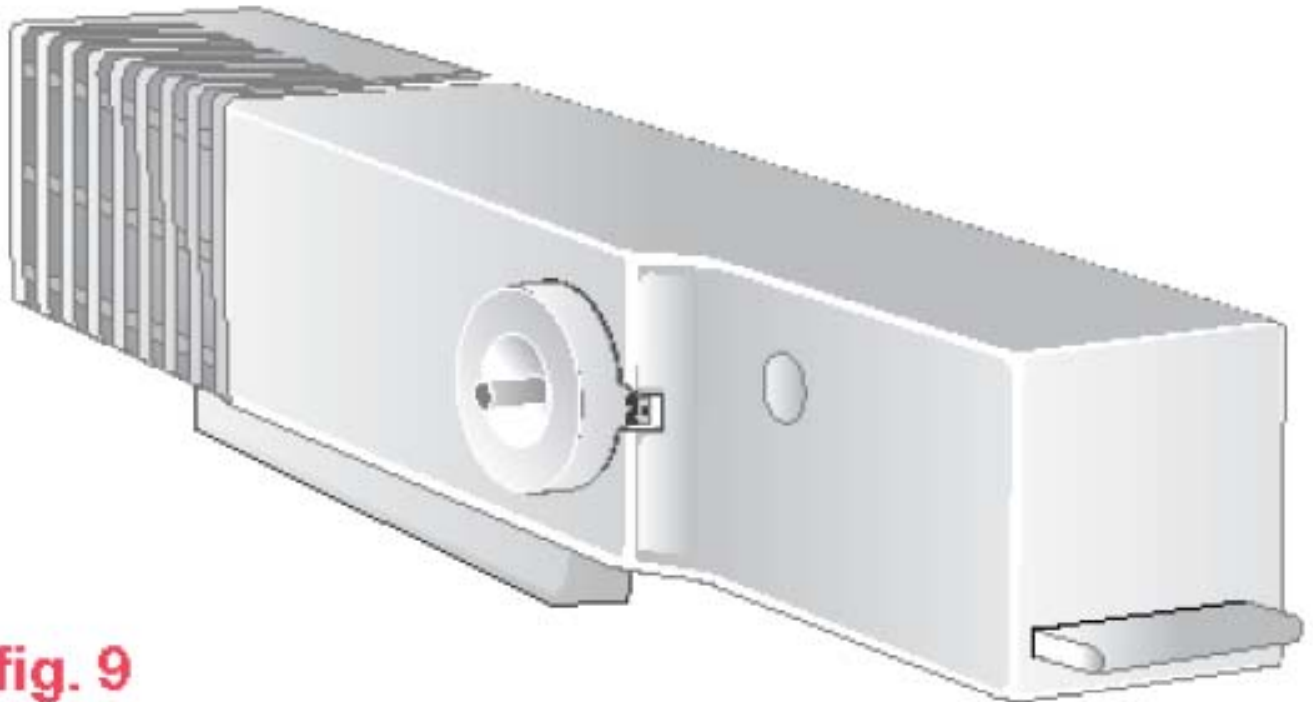 


fig. 9

THERMOSTAT

- The thermostat automatically settles the temperature inside the appliance. Turn the knob from setting '0' to setting '5' to obtain increasingly colder temperatures.
- To obtain the optimum temperature inside both the refrigerator and the freezer, turn the thermostat to a middle setting (see Fig.9, above).
- While adjusting the cold setting, however, keep in mind how often the door is opened, the amount of food placed on the racks and the ambient (room) temperature.

NOTE

- When arranging food, do it in such a way so as to allow a good circulation of air inside the refrigerator.

UNDERSTANDING your Baumatic RETRO2 FRIDGE-

NOTE: When you first switch on the appliance, allow 24 hours for it to cool down to the desired temperature. During this time, DO NOT open the door often or place a lot of food inside the unit.

 
* If the appliance is switched off then switched back on again after a short period, the compressor will start up again after approximately half-an-hour. This is part of the normal operation of the appliance.

MAKING ICE CUBES

Pour water into the Ice cube tray. Fill to $\frac{3}{4}$ full in each cell of the tray then place the tray in the topmost shelf of the freezer compartment.


Do not use a knife or other metal tools to take ice out of the tray once ice has been made.

Ice can easily be removed by hand after the tray has been placed in warm water for a short time.

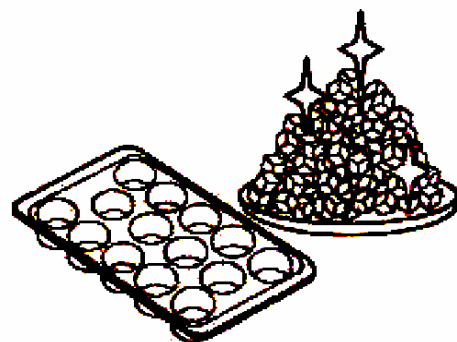

ARRANGING FOOD IN YOUR FRIDGE-FREEZER

 - *To reduce humidity inside your fridge-freezer, NEVER place liquids in unsealed containers in the refrigerator. Always dry off wet items before placing them in the appliance.*

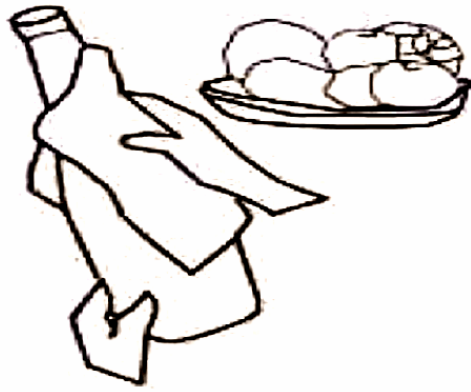

- *Make sure that you arrange food in such a way that the door can close completely. Be especially wary of protruding items (such as bottles) between shelves and the inside of the door.*
- *NEVER place warm food inside your refrigerator or freezer. Warm food must be allowed to cool at room temperature first. It should then be arranged to ensure adequate air circulation in the refrigerator compartment.*
- *Crispy / delicate foods should be stored in the coldest parts of the fridge.*
- *DO NOT open the refrigerator door too often or leave it open for long spells of time.*
- *ARRANGE meat and cleaned fish (wrapped in packages or sheets of plastic) which you will then use within 1-2 days.*
- *You can put fruits and vegetables into the crisper without leaving them in their packaging.*
- *Unpleasant odours within may mean your fridge needs cleaning or that food has spoiled.*

 
ARRANGING FOOD IN YOUR FRIDGE-FREEZER

- *If you are planning on being away from your refrigerator for a few days (such as going on holiday), make sure that you remove quickly perishable articles of food from your fridge before you go and dispose of them.*
- *Always be mindful of the storage life of foods you are going to be freezing for a long time. Although the temperature of the freezer can dip to a very low level this does not mean that food can be stored indefinitely. Pay particular attention to the information printed on the packaging of the foods you are going to be placing in your freezer.*
- *You should seal your food in suitable storage bags before placing them in the refrigerator or freezer. Label freezer bags appropriately.*




Always store food with a view to how often it will be used. Food consumed daily should be placed in the most convenient area so that you don't end up leaving the door open for long periods while you search for food.

- *Do NOT store excess quantities or weights of food. Always try to leave gaps between your packages for better storage results.*

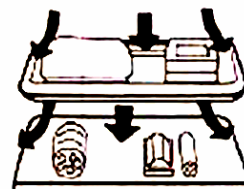


ARRANGING FOOD IN YOUR FRIDGE-FREEZER

 - *Do not place food too closely to the interior walls - items put too close to the walls may freeze to them!*
- *If you place vegetables with their stalks or roots facing towards the cold source, you will be able to store them for longer.*

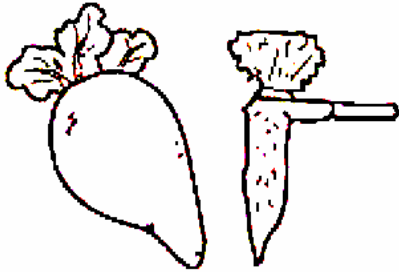

- *The leaves on carrots, turnips, etc. should be removed before you store them.*

 - *Always store eggs vertically in the egg holder provided in the door.*

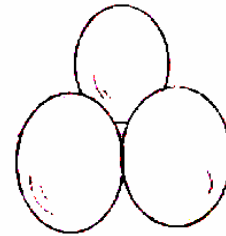

Onions, garlic, ginger and other root vegetables should not be stored in the refrigerator as these types of food can be stored appropriately at room temperature.

- *Ripe squashes, melon, pawpaw, bananas and pineapples should not be stored in the refrigerator. Colder temperatures accelerate the ripening process.*



NOTES ON USING YOUR FRIDGE-FREEZER

❖ **ALWAYS Cover and wrap foods, especially if they are PUNGENT.**

❖ **DO NOT place paper or plastic on the shelves which would block the flow of air through the grids.**

NOTE: At the maximum cold setting, with a high outside (ambient) temperature and well-stocked (full or nearly full) compartments, the Fridge's operation may be continuous. If your appliance has taken in an unusually high amount of moisture, some ice deposits may temporarily form inside, on the evaporator.

REMINDER: *You should regulate the temperature of your Fridge bearing the following in mind:*

- Ambient temperature
- How often the doors are opened and closed
- Quantity of food stored in the compartments
- Moisture content of what you place in your fridge
- The location of your appliance

IN CASE OF A BLACKOUT (GENERAL POWER FAILURE)

In case of Power Failure, find out how long the electricity will be off. **If the failure is *not* going to be for any longer than 12 hours, leave the food in the freezer and keep the door closed.**

If the POWER FAILURE is going to last longer than 12 hours and some food defrosts, consume the latter as soon as possible.

LONG ABSENCES

(holidays, etc.): In the case of long absences, your appliance must be switched off, emptied out completely, dried and the doors left open to prevent the formation of mould and unpleasant odours.

STORAGE GUIDE FOR YOUR FRIDGE-FREEZER

The charts below are approximate guidelines only.

STORING FOOD IN YOUR REFRIGERATOR

Fresh Food Storage Time in the Refrigerator

Fresh Food Storage	Storage time (days)													
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
Butter	+	+	+	+	+	+	+	=	=	=	=	=		
Eggs	+	+	+	+	+	+	+	+	+	+	=	=	=	=
Meat: fresh uncut	+	+	=											
	chopped	+	=											
	smoked	+	+	+	+	+	+	+	+	+	=	=	=	=
Fish	+	=												
Marinade	+	+	+	+	+	+	+	+	+	+	=	=	=	=
Root	+	+	+	+	+	+	+	+	=	=	=	=	=	=
Cheese	+	+	+	+	=	=	=	=	=	=	=	=	=	=
Sweets	+	+	=	=	=	=								
Fruit	+	+	=	=	=	=	=	=	=	=				
Prepared dishes	+	+	=	=										

Legend: + recommended storage time = possible storage time

Remember to store food properly, observing advice on the packaging.

STORING FOOD IN YOUR FREEZER

Fresh foods – Foods to be stored in the freezer should be in good edible condition and suitable for freezing BEFORE they are put into the freezer.

 
NOTE: When buying commercially available frozen food, make sure that the packaging is neither sodden nor covered with frost (snow) before you place it in the freezer at home.

➤ Use correct packaging and wrap items correctly.

➤ The packaging should be airtight and shouldn't leak since this could cause substantial vitamin loss and dehydration from your food.

➤ Foil and bags should be applied carefully to articles of food so that they can be stored systematically & comfortably within the freezer.

➤ Mark your packages with data such as: the type and amount of food inside the package, and the date on which it was prepared and loaded into the freezer.

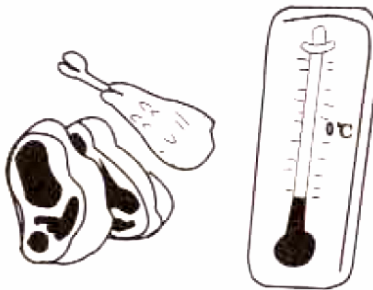

➤ It is **very** important that the food is frozen as quickly as possible. We therefore recommend that the size of the package not be too large. It should also be sufficiently cooled (at least to room temperature) before being inserted in the freezer compartment.

➤ The amount of fresh foods that can be loaded into the freezer within 24 hours is indicated on the rating plate (freezing capacity).

➤ Food cut into small portions will freeze faster & be easier to defrost and cook. The recommended weight for each portion is 2.5kg.

➤ The outside of any food packaging should be dry before being placed in the freezer. All packages should be odour-free, airtight & non-toxic.

Defrosting

Frozen Food -

Partially thawed or defrosted food should be used as soon as possible.

Defrosted food cannot be put back in the freezer unless it has been cooked first.

APPROXIMATE STORAGE TIME FOR FROZEN FOODS

(Always read the information printed on the packaging of the foods you are about to store in your freezer).

Approximate Storage Time for Frozen Foods

Food	Storage time (in months)											
	1	2	3	4	5	6	7	8	9	10	11	12
Vegetable								+	+	+		
Fruit										+	+	+
Bread, pastries			+									
Milk			+									
Ready-made meals			+									
Meat: Beef										+	+	+
Veal								+	+	+		
Pork				+	+	+						
Poultry								+	+	+		
Game						+	+	+				
Minced meat				+								
Smoked sausages	+											
Fish: lean			+									
fat	+											
Offal		+										

NOTE:

For fast, intensive cooling, turn the thermostat knob to a *very high (i.e., close to maximum or maximum itself)* position for some 24 hours.

DEFROSTING

**The frost which forms on the cooling grids
MUST be removed when it is 3-5mm thick**

1. REFRIGERATOR

There is no need to defrost the refrigerator – ice forming on the inner back wall is automatically defrosted.

Ice deposits on the inner back wall while the compressor operates. Later on, when the compressor is not operating, ice defrosts and water drops collect and drain through the outlet in the inner back wall into the drain pan situated above the compressor, from where it evaporates.

2. FREEZER

You must, however, MANUALLY DEFROST the FREEZER

When the frost and ice layer in the freezer is 3-5 mm thick, you should clean the freezer. NOTE – IF YOU SHOULD NOTICE WATER LEAKING FROM YOUR FRIDGE-FREEZER, YOU SHOULD:

a)

Set the thermostat to position '7' so that packages are well frozen. Reset the thermostat to the 'STOP (0)' position and disconnect the power supply. Empty the freezer and take care that the packages remain frozen.

b)

Insert the enclosed pipe into the groove in the bottom of the appliance and place a vessel underneath to collect the defrosted water.

- NOTE: Defrosting is accelerated if the door is left open or if you insert a basin of warm water to speed the process.
NEVER USE HAIR DRYERS TO DEFROST WITH.
- *NEVER USE DEFROSTING SPRAYS. SPRAYS MAY CONTAIN CHEMICALS THAT ARE TOXIC OR CAUSTIC.*

c)

Remove the detachable accessories in the interior of the appliance and clean them with water & liquid detergent. Plastic parts cannot be washed in the washing machine.

d)

Wash the interior of the appliance with lukewarm water, in which you have added one or two spoonfuls of vinegar.

e)

Every now and then clean the condenser on the rear wall. Use a soft duster or vacuum cleaner to do this.

TIPS FOR ENERGY SAVINGS

- ✓ **Try not to open the door too often, especially when the weather is wet and hot. Once you open the door, be sure to close it as soon as possible.**
 - ✓ **Use higher thermostat settings only if essential and not for constant, long-term use.**
 - ✓ **Before loading the appliance with packages of fresh foods, ensure they are cooled to an ambient temperature (except in the case of soup).**
 - ✓ **If the door seal (gasket) is damaged, the energy consumption will be much higher. To keep the sealing in good condition, be sure not to spill oils or fats on it. A damaged seal will need to be replaced.**
 - ✓ **The condenser at the bottom of the appliance must always be clean and free of dust.**
-

 
CLEANING / MAINTENANCE

NOTE: Before attempting to clean your Fridge-Freezer, UNPLUG IT and make sure you do the following:

- ✓ Remove the baskets and the ice-cube tray.
- ✓ Leave the door open.
- ✓ In order to collect water deposits, take out the bottom drawer and soak up the water using a sponge.
- ✓ Clean the inside of your Fridge-Freezer using a solution of soda bicarbonate in warm water (1 tablespoon Bicarbonate to 2 litres of water).
- ✓ Clean the condenser (back of unit) with a broom once a year.

NEVER USE SOLVENTS TO CLEAN THE INSIDE OF YOUR FRIDGE-FREEZER.

MAINTENANCE THE ONLY MAINTENANCE YOUR FRIDGE-FREEZER REQUIRES IS THE REPLACEMENT OF THE INTERNAL BULB. REMEMBER TO UNPLUG YOU APPLIANCE FIRST!

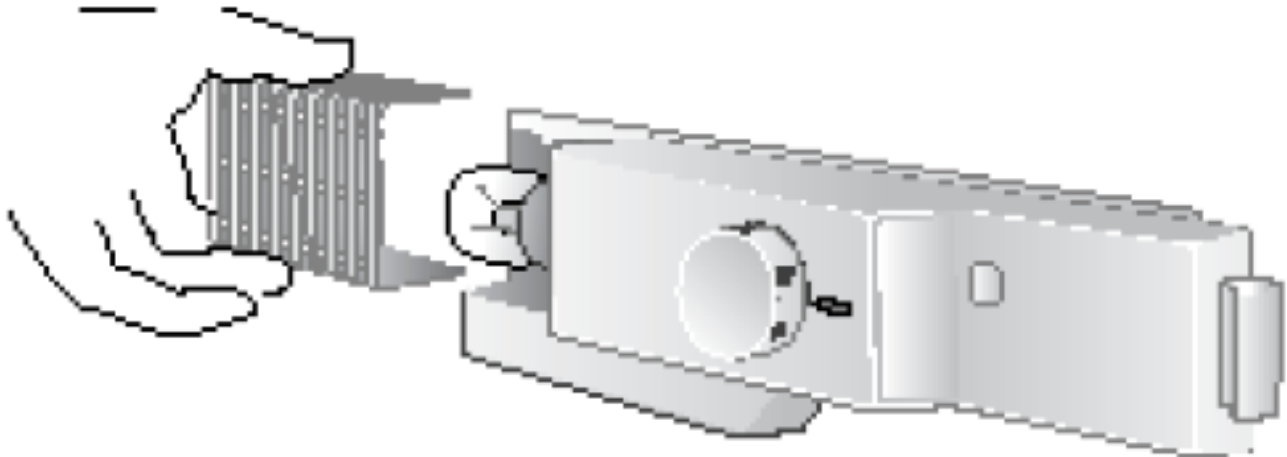

- 1) **Carefully remove the light cover.**
- 2) **Replace the spent bulb with a new one (max. 15W)**
- 3) **Remount the light cover.**
- 4) **Plug your fridge-freezer back in.**

 
INSTALLATION INSTRUCTIONS –RETRO2 FRIDGE-FREEZER:

- 1) Allow for adequate space and install your fridge-freezer on a firm, level floor. This is very important as the appliance must be level so that there will be no unnatural noises or poor cooling.
- 2) Ensure that you are going to be placing your fridge-freezer away from heat sources and in a well-ventilated position. This should be at least 50 cm from radiators, gas or coal stoves and 5 cm away from electric stoves. Do not place the appliance in the path of direct sunlight.
- 3) Make sure that the plug is accessible after positioning your fridge-freezer.

4) Keep a space of 15cm above your fridge freezer.

- 5) You need 5 inches, (12.7 cm) clearance between the rear of your appliance and the wall behind it. If supplied, fit the plastic wall spacers to the condenser at the back of the refrigerator.

This will maintain good performance.

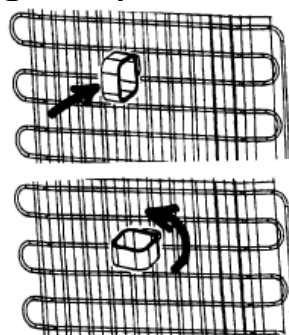

6) If placing beside another refrigerator or freezer, keep at least 2cm between the units to prevent condensation.

7) Gently move the appliance into place or, in the case of installing in a unit, into its housing.

8) Your fridge-freezer has adjustable feet so you will be able to level it to the surface on which you want to install it. Simply turn each foot to either raise or lower it.



INSTALLATION-AMBIENT TEMPERATURE GUIDELINES

YOU MUST install this appliance in well ventilated, dry room.

Energy use is affected by the ambient temperature.

You are therefore advised to:

- Not expose the appliance to direct sunlight;
- Not install the appliance next to radiators, cookers or other sources of heat;
- Only install the appliance at a location whose ambient temperature corresponds to the climate classification, for which the appliance is designed.

The climate classification can be found on the data rating tag, which is located at the left on the inside of the appliance.

Cooling Temperature Ranges

Climate Classification	Recommended Ambient Temp.
SN	+10 to +32° C
N	+16 to +32° C
ST	+18 to +38°C
T	+18 to +43°C

If the appliance is installed next to another refrigerator or freezer a clearance of 5 cm at the side is required. This is to prevent the formation of condensation on the outside of the appliance.

Troubleshooting

Trace a problem using the table below instead of having to call for help.

PROBLEM	WHAT TO DO
YOUR FRIDGE-FREEZER DOES NOT APPEAR TO BE WORKING / OPERATION LAMPS ARE OFF WHEN THEY SHOULD BE ON / FOOD HAS DEFROSTED WITHOUT YOUR KNOWLEDGE / NO APPARENT POWER	CHECK THAT THE PLUG IS WELL-INSERTED INTO THE POWER SOCKET
	THAT THERE IS POWER FROM THE MAINS – THERE MAY BE A BLACKOUT OR YOUR FUSES MAY HAVE BLOWN.
	THAT THE ELECTRONIC THERMOSTAT (REGULATOR FOUND ON THE INSIDE WALL OF THE FRIDGE-FREEZER NEAR THE TOP) IS IN THE RECOMMENDED FUNCTIONING POSITION AND NOT '0' (OFF).
	THAT THE SOCKET IS SUFFICIENT AND NO ADAPTER OR EXTENSION LEADS HAVE BEEN USED.
	THAT THE POWER SUPPLY VOLTAGE CORRESPONDS TO THE APPLIANCE.
YOUR FRIDGE-FREEZER APPEARS TO BE PERFORMING POORLY	YOU HAVE OVERLOADED THE APPLIANCE. TAKE OUT AND CONSUME FOOD; LOOK FOR OUT-OF-DATE FOOD THAT CAN BE DISPOSED OF.
	THE THERMOSTAT SETTING IS SET TO '1'. SET IT HIGHER.
	ENSURE THAT THE DOOR HAS BEEN CLOSED PROPERLY. FOR INSTANCE, THERE MAY BE A PROBLEM INSIDE THE UNIT, KEEPING THE DOOR OPEN OR ANOTHER FAULT, SUCH AS BROKEN OR MISSING DOOR SEAL.
	ENSURE THAT THERE IS NO DUST ON THE CONDENSER.
	ENSURE THAT THERE IS ENOUGH ROOM AT THE REAR AND SIDES OF THE UNIT/
THERE IS A NOISE	THE COOLING GAS WHICH CIRCULATES MAY MAKE A SLIGHT NOISE (BUBBLING SOUND) EVEN WHEN THE COMPRESSOR IS NOT RUNNING. THIS IS NORMAL. IF THESE SOUNDS CHANGE, ENSURE:
	YOUR UNIT IS WELL LEVELLED / NOTHING IS TOUCHING THE REAR OF THE UNIT / NO MATERIAL ON THE APPLIANCE IS VIBRATING.
<p><i>IMPORTANT</i> – MAKE SURE THAT THERE IS ADEQUATE AIR FLOW FOR YOUR FRIDGE-FREEZER. PARTICULAR AREAS TO WATCH INCLUDE THE SPACE BETWEEN THE FEET. KEEPING THESE AREAS WITH ADEQUATE AIR-CIRCULATION WILL PREVENT YOUR FRIDGE FREEZER FROM EXPERIENCING PROBLEMS.</p>	

Baumatic Ltd. Conditions of guarantee

Dear Customer,

Your new Baumatic appliance comes complete with a free 12 month guarantee covering both parts and labour costs resulting from defective materials or workmanship.

Baumatic also gives you the opportunity to automatically extend the guarantee period for a further 12 months at no extra cost, giving an initial guarantee period of 24 months. The extended guarantee period applies to England, Scotland, Wales and Northern Ireland only.

To qualify for your full 24 months guarantee you **must** register your appliance within 28 days of purchase to be covered under this guarantee. This can be done online via: www.baumatic.co.uk or through returning the guarantee card which can be found in each new Baumatic appliance.

* In addition, your appliance is covered by a 5 year parts warranty. Baumatic Ltd will provide free of charge the parts required to repair the appliance, only if they are fitted by a Baumatic engineer, for any defect that arises due to faulty materials or workmanship within a period of 5 years from the original purchase date.

* An additional 1 to 3 year insurance scheme for labour is available should you wish to extend the warranty period.

Should any person other than an authorised representative of Baumatic Ltd interfere with the appliance, the policy is negated and Baumatic Ltd will be under no further liability.

The guarantee covers the appliance for normal domestic use only, unless otherwise stated.

Any claims made under the terms of the guarantee must be supported by the original invoice/bill of sale issued at the time of purchase.

This guarantee is transferable only with the written consent of Baumatic Ltd.

If the appliance fails and is considered either not repairable or uneconomical to repair between 12 months (2 years if registered) and five years, a free of charge replacement will not be offered.

The guarantee for any replacement will only be for the remainder of the guarantee on the original product purchased.

The guarantee does not cover:

- Sinks and taps
- Failure to comply with the manufacturers instructions for use.
- The replacement of cosmetic components of accessories
- Accidental damage or wilful abuse.
- Subsequent loss or damage owing to the failure of the appliance or electrical supply
- Incorrect installation
- Losses caused by Acts of God, civil war, failure to obtain spare parts, strikes or lockouts
- Filters, fuses, light bulbs, external hoses, damage to bodywork, paintwork, plastic items, covers, baskets, trays, shelves, burner bases, burner caps, decals, corrosion, rubber seals.

In the course of the work carried out it may be necessary to remove the appliance from it operating position. Whilst all reasonable care will be taken, Baumatic Ltd cannot accept responsibility for damage sustained to any property whatsoever in this process.

This guarantee is in addition to and does not diminish your statutory or legal rights.

Contacting Baumatic Ltd

Sales	Service	Spares	Technical/Advice
TEL: 0118 933 6900	TEL: 0118 933 6911	TEL: 0118 933 6922	0118 933 6933
FAX: 0118 931 0035	FAX: 0118 986 9124	FAX: 0118 933 6942	0118 933 6942

For ROI (Republic of Ireland), please contact one of the numbers below:

TEL: 01 - 6266798 FAX: 01 - 6266634

Thanks you for buying Baumatic.

* Applies to UK, Scotland, Wales & Northern Ireland only (Republic of Ireland has 1 year labour & 1 year parts warranty only)



You will be mine ...

Headquarters

Baumatic Ltd.
Baumatic Buildings,
6 Bennet Road,
Reading,
Berkshire
RG2 0QX, United Kingdom

Sales Telephone
+44 118 933 6900

Sales Fax
+44 118 931 0035

Service Telephone
+44 118 933 6911

Service Fax
+44 118 986 9124

Spares Telephone
+44 118 933 6922

Technical / Advice Telephone
+44 118 933 6933

E-mail:

sales@baumatic.co.uk

technical@baumatic.co.uk

Http (Internet site):
www.baumatic.com



Baumatic®

www.baumatic.com