

**B602.1/B604.1/
B609.1 60 cm Gas
fan-assisted oven**

Instruction manual



User Manual for your Baumatic

B602.1BL/W

B604.1SS

B609.1SS

60 cm Gas fan-assisted oven



You will be mine ...

NOTE: This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference; for you or any person not familiar with the operation of the appliance.


DD 23/04/07

Contents

| | |
|---|-------|
| Environmental note | 4 |
| Important safety information | 5 – 8 |
| Specifications | 9 |
| Product specifications | 9 |
| Standard accessories | 10 |
| Optional extras | 10 |
| Electrical details | 10 |
| Control panel | 11 |
| Before first use | 12 |
| Setting the time of day (B609.1SS only) | 12 |
| Switching the gas oven on | 13 |
| Switching the gas grill on | 14 |
| Operation of the fan | 15 |
| Cooking guidelines | 15 |
| Warnings | 16 |
| Setting a countdown time (B609.1SS only) | 17 |
| Using the minute minder (B602.1 & B604.1 only) | 18 |
| The oven light | 18 |
| Cleaning and maintenance | 19 |
| Replacing the oven bulb | 20 |
| Removing the oven door for cleaning | 21 |
| Removing the inner door glass for cleaning | 22 |
| Installation | 22 |
| Electrical connection | 22-23 |
| Positioning | 23 |
| Installing the oven into the kitchen cabinet | 24 |
| Positioning the appliance | 24 |
| Ventilation requirements | 25-26 |
| Gas connection | 27 |
| Gas Safety (Installation and Use) Regulations | 28 |
| Gas connection | 29 |
| Gas adjustment (Conversion to LPG and gas adjustment) | 30-32 |
| My appliance isn't working correctly | 32-33 |
| Baumatic Ltd. conditions of guarantee | 34 |
| Contact details | 35 |

Environmental note

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



- The packaging materials that Baumatic uses are environmentally friendly and can be recycled.
- Please discard all packaging material with due regard for the environment.

IMPORTANT SAFETY INFORMATION



Your safety is of the utmost importance to Baumatic. Please make sure that you read this instruction booklet **before** attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Baumatic Technical Department.

General Information

- This appliance is designed for domestic household use and can be built into a standard kitchen cabinet or housing unit.
- **IMPORTANT:** The adjacent furniture or housing and all materials used in the installation **must** be able to withstand a minimum temperature of 85°C above the ambient temperature of the room it is located in, whilst in use.
- Certain types of vinyl or laminate kitchen furniture are particularly prone to heat damage or discolouration at temperatures below the guidelines given above.
- Any damage caused by the appliance being installed in contravention of this temperature limit, or by placing adjacent cabinet materials closer than 4mm to the appliance, **will be the liability of the owner.**
- For use in **leisure accommodation vehicles**, please refer to the appropriate information given in the installation instructions for this appliance.
- **IMPORTANT:** Baumatic Ltd. **DO NOT** recommend that this appliance is installed on any type of marine vessel.
- The use of this appliance for any other purpose or in any other environment without the express agreement of Baumatic Ltd. will invalidate any warranty or liability claim.
- Your new appliance is guaranteed against electrical or mechanical defects, subject to certain exclusions that are noted in Baumatic's Conditions Of Guarantee. The foregoing does not affect your statutory rights.
- **Repairs may only be carried out by Baumatic Service Engineers or their authorised service agent.**

Warning and safety instructions

- This appliance complies with all current European safety legislation. Baumatic do wish to emphasise that this compliance does not remove the fact that the appliance surfaces **will become hot during use and retain heat after operation.**

Child Safety

- Baumatic strongly recommend that babies and young children are prevented from being near to the appliance and not allowed to touch the appliance **at any time.** During and after use, all surfaces will become hot.
- If it is necessary for younger family members to be in the kitchen, please ensure that they are kept under close supervision at all times.

General Safety

- ✓ Make sure that you understand the controls before using the appliance.
- ✓ Check that all of the controls on the appliance are turned off after use.
- ✓ Always stand back when opening the oven door, this will allow heat to disperse.
- ✓ Take care when removing items from the oven, as the contents may be hot.
- ✓ Always keep the oven doors closed when the oven is not in use.
- ✓ Always follow the basic principles of food handling and hygiene, this will prevent the possibility of bacterial growth.
- ✓ Always keep ventilation slots clear of obstructions.
- ✓ Keep fingers away from the hinge areas when closing the door, otherwise you may trap them.
- ✓ Oven gloves should be used when placing food in the oven cavity and when removing it. Care should be taken to avoid direct contact with any of the elements in the appliance.
- **DO NOT LEAVE THE APPLIANCE UNATTENDED WHILST IN USE.**

- **Do not** place heavy objects on the oven door or lean on the oven door when it is open, as this can cause damage to the oven door hinges. Nobody should be allowed to sit or stand on any part of the oven.
- **Do not** heat up unopened food containers, as pressure can build up which may cause the container to burst.
- **Do not** place flammable or plastic items in the oven.
- **Do not** leave heated oil or fat unattended, as this is a fire risk.
- **Do not** allow fat or oil to build up in the oven trays, grill pan or oven base.
- **Do not** place pans or baking trays directly on the base of the oven cavity, or line it with aluminium foil.
- **Do not** grill food containing fat without using the grill trivet. The grill trivet should never be covered with aluminium foil.
- **Do not** place hot enamel parts in water, leave them to cool first.
- **Do not** allow vinegar, coffee, milk, saltwater, lemon, tomato juice or any liquid with high sugar content to remain in contact with the enamel parts of the appliance. Spillages should be wiped up immediately.
- **Do not** allow electrical fittings or cables to come into contact with areas on the appliance that get hot.
- **Do not** use the appliance to heat the room it is located in or to dry clothing. No clothing should be placed over or near to the oven door.
- **Do not** install the appliance next to curtains or soft furnishings.
- **Do not** attempt to lift or move cooking appliances by using the oven door or handle, as this may cause damage to the appliance or result in injury to the person lifting the appliance.
- **Do not** store chemicals, food stuffs, pressurised containers in or on the oven or in cabinets immediately above or next to the oven.

Cleaning

- Cleaning of the oven should be carried out on a regular basis.
- Great care should be taken whilst using this appliance and when following the cleaning procedure.
- **IMPORTANT:** The appliance must be disconnected from the mains before following the cleaning procedure.

Installation



This appliance must be correctly installed by a suitably qualified person, strictly in accordance with the manufacturer's instructions. Please see the specific section of this booklet that refers to installation.


- **Baumatic Ltd. declines any responsibility for injury or damage, to person or property, as a result of improper use or installation of this appliance.**
- Heat, steam and moisture will be created during use of the appliance, take care to avoid injury and ensure that the room is adequately ventilated. If the appliance is going to be used for prolonged periods of time, then additional ventilation may be required.
- Please consult with your qualified installer if you are in any doubt about the amount of ventilation that you will require.

Declaration of conformity

This appliance complies with the following European Directives:

- 73/23/EEC regarding "low voltage"
 - 89/336/EEC regarding "electromagnetic disturbances"
 - 90/396/EEC regarding "gas appliances"
 - 89/109/EEC regarding "materials in contact with food".
- The above directives comply with 93/68/EEC regarding CE marking.
 - The manufacturer declares that the oven is built using certified materials and requires the appliance to be installed in accordance with the standards currently in force. This appliance must be used by a trained person for domestic purposes only.

Specifications

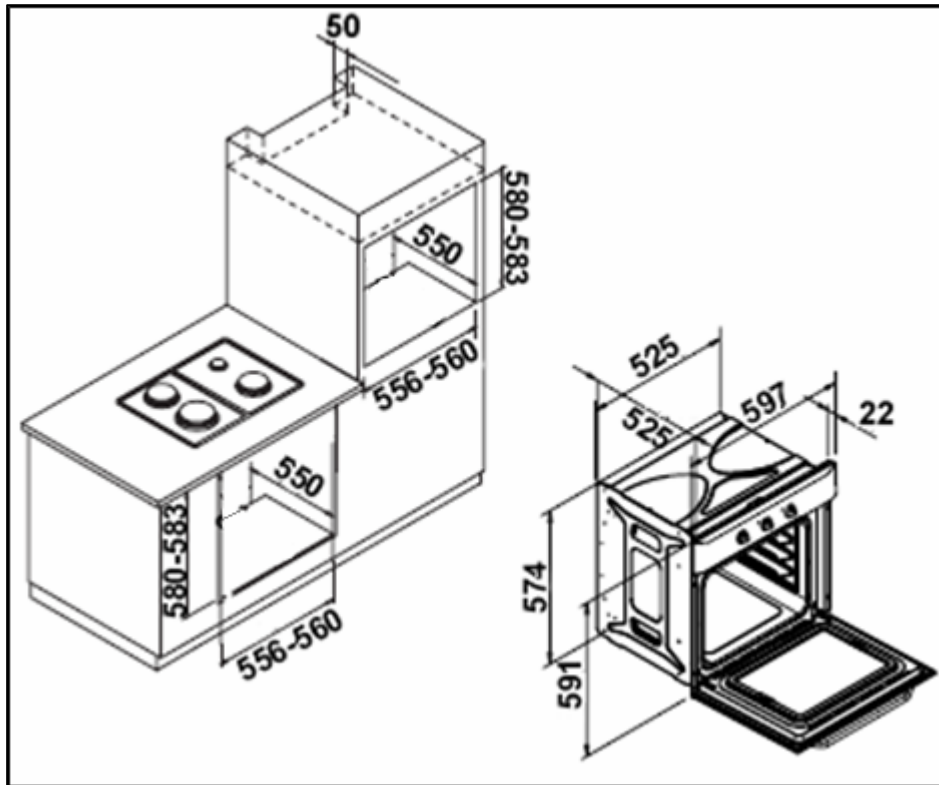

(**IMPORTANT:** The above drawing does not show the ventilation requirements that are necessary for installing this appliance, please refer to the installation instructions for this information).

Product Dimensions

Height: 591 mm
Width: 597 mm
Depth: 525 mm

Aperture Dimensions

580 mm – 583 mm
556 mm - 560 mm
550 mm

Cooling fan

- A tangential cooling fan is fitted inside of this appliance, to make the internal temperature of the oven stable and the external surface temperature lower.

Product specifications

- Oven capacity: 47 litres
- Minute minder
- LED minute minder (**B609.1SS only**)
- Cooling fan
- Gas grill
- Flame failure safety device
- Auto-ignition
- Fan-assisted gas oven with lower burner
- Double-glazed removable door

Standard accessories

- Removable side racks
- 2 x safety shelves
- Enamelled drip tray with handle
- Trivet
- LPG conversion jets

Optional extras

- BPS1 Pizza stone

Electrical details

| | |
|--------------------|---|
| Rated Voltage: | 230 Vac 50 Hz |
| Supply Connection: | 13 A (double pole switched fused outlet with 3mm contact gap) |
| Fuse rating: | 3 amp |
| Max Rated Inputs: | 0.075 kW |
| Mains Supply Lead: | 3 x 1.0 mm ² |

For future reference please record the following information which can be found on the Rating Plate and the date of purchase which can be found on your sales invoice. The rating plate for your oven can be located by opening the oven door and looking on the right hand side of the oven chassis.


Model Number

Serial Number


Date of Purchase

Control Panel

B602.1/B604.1

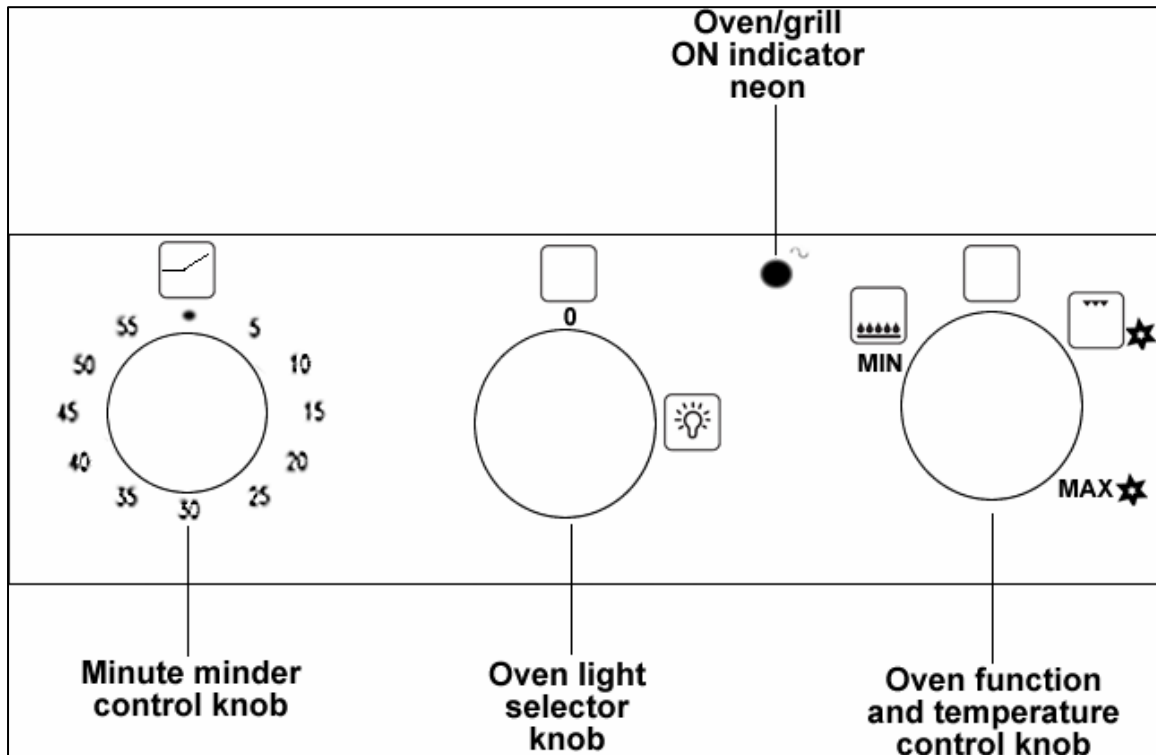


B609.1

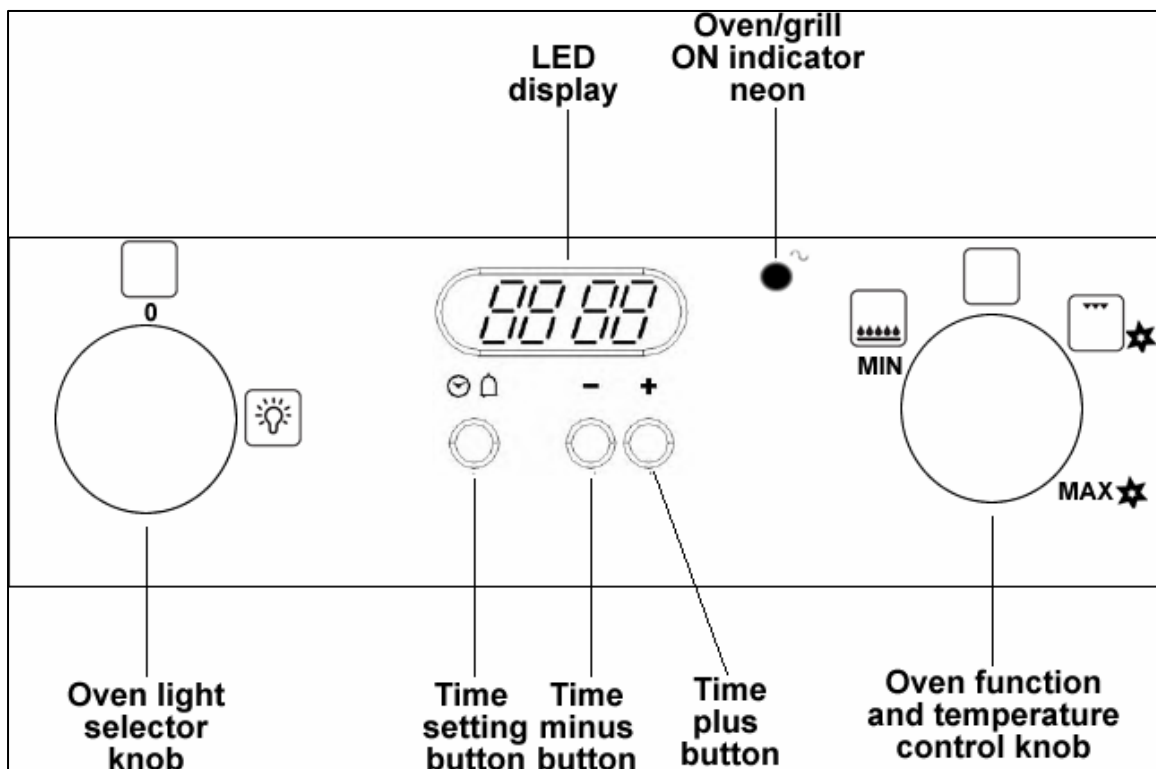

Before first use

- To remove any residue from the oven that may have been left from the manufacturing process, you should select the gas oven and set it to its maximum temperature setting.
- It is perfectly normal for a smell to be produced during this process.
- You should make sure that any windows in the room are left open during this process.
- It is advisable for you not to remain in the room whilst the burning off process is taking place.
- You should leave the oven on maximum setting for 30 – 40 minutes.

Setting the time of day (B609.1SS only)

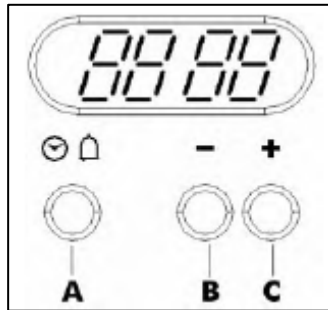

When the oven is switched on for the first time (or if power has been cut to the appliance), three zeros will flash on the timer display.

- To set the time of day, hold down button **(A)** and then press the **(B)** and **(C)** buttons until the current time of day is shown on the timer display.
- The speed that the time adjusts at depends on how hard the **(B)** and **(C)** buttons are held down.
- When the correct time of day is shown, release all of the buttons. After a few seconds the time of day will be set on the timer display.

Switching the gas oven on



The oven has electric ignition, to light it you should do the following:-

- Open the door of the appliance.
- Push the oven function and temperature control knob down slightly and then turn it anticlockwise to the word MAX.
- Whilst it is pointed to the MAX position, fully push down this knob and hold it down.
- The gas oven should light within 15 seconds.
- Once the burner has lit, continue to keep the oven function and temperature control knob held down for a further 10 seconds. Otherwise the safety cut off will operate and block the flow of gas.
- **IMPORTANT:** When you are certain that the oven burner is fully lit, close the oven door. Then turn the oven function and temperature control knob clockwise until it reaches the temperature that you desire.
- **DO NOT** turn the control knob past the MIN position, otherwise the burner may go out.
- If the gas oven does not light within 15 seconds, then release the oven function and temperature control knob. **IMPORTANT: YOU MUST TURN THE CONTROL KNOB BACK TO ITS ORIGINAL POSITION; OTHERWISE GAS WILL CONTINUE TO BE RELEASED.**
- Wait for 1 minute, before repeating the ignition procedure again.




When lighting your oven for the first time, it may take several times until the electric ignition operates. This is due to air being in the gas pipe.

Switching the gas grill on



The grill has electric ignition, to light it you should do the following:-

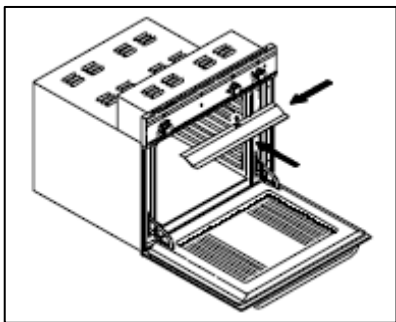

- Open the door of the oven and fit the grill deflector to the front of the appliance.
- Push the oven function and temperature control knob down slightly and then turn it anticlockwise to the grill symbol (shown above)
- Whilst it is pointed to the grill symbol, fully push down this knob and hold it down.
- The gas grill should light within 15 seconds.
- Once the burner has lit, continue to keep the oven function and temperature control knob held down for a further 10 seconds. Otherwise the safety cut off will operate and block the flow of gas.
- **THE OVEN DOOR MUST BE LEFT OPEN WHILST YOU ARE GRILLING.**
- If the gas grill does not light within 15 seconds, then release the oven function and temperature control knob. **IMPORTANT: YOU MUST TURN THE CONTROL KNOB BACK TO ITS ORIGINAL POSITION; OTHERWISE GAS WILL CONTINUE TO BE RELEASED.**
- Wait for 1 minute, before repeating the ignition procedure again.



When lighting your grill for the first time, it may take several times until the electric ignition operates. This is due to air being in the gas pipe.

- **IMPORTANT: You should allow the oven to cool completely before attempting to remove the grill deflector. If you attempt to remove the grill deflector before the oven is cool, it will be hot.**

Operation of the fan

- After igniting the oven and shutting the door of the appliance, check to make sure that the fan on the rear wall of the oven cavity is turning.
- **IMPORTANT:** If there is a power cut whilst the oven is in use, then you should immediately turn the oven off until power is restored.
- If the cooling fan does not operate and there is still power to the appliance, then **DO NOT** continue to use the appliance. Switch the oven off and contact the Baumatic Service Department to arrange for an engineer to attend the appliance.



If the oven is in use and the door is opened, the cooling fan will stop operating. This is to prevent excessive heat being blown in the direction of the user. When the door is shut again, check to make sure that the fan restarts.


Cooking guidelines

- Please refer to the information given on food packaging for guidance on cooking temperatures and times. Once familiar with the performance of your appliance, temperatures and times can be varied to suit personal preference.
- Make sure that frozen foods are thoroughly thawed before cooking, unless the instructions on the food packaging advise that you can “cook from frozen”.
- Before cooking, check that any unused accessories are removed from the oven.
- Place cooking trays in the centre of the oven and leave gaps between the trays to allow air to circulate.
- Try to open the door as little as possible to view the dishes.

Warnings

- Keep the oven door open when using the grill function and make sure that the grill deflector is fitted.
- Do not use aluminium foil to cover the grill pan or heat items wrapped in aluminium foil under the grill. The high reflectivity of the foil could potentially damage the grill element.
- You should also never line the base of your oven with aluminium foil.
- During cooking, never place pans or cookware directly onto the bottom of your oven. They should always be placed on the shelves provided.
- The grill heating element becomes extremely hot during operation, avoid touching it inadvertently when handling the food which you are grilling.
- **Important:** Be careful when opening the door, to avoid contact with hot parts and steam.
- The drip tray handle should only be used to reposition the drip tray and **NOT** for removing it from the oven cavity. When removing the drip tray, you should **ALWAYS** use an oven glove.
- The drip tray handle should not be left in position when the appliance is switched on.

Setting a countdown time (B609.1SS only)

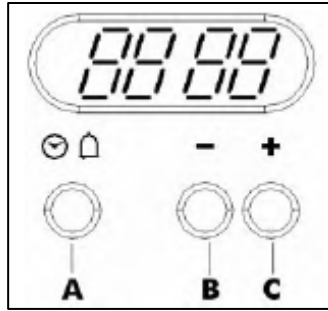

- Press button **(C)** and the numbers on the timer display will begin to advance and a symbol will illuminate.
- Use buttons **(B)** and **(C)** to adjust the time on the timer display, until it shows the length of time that you want the oven to countdown for.
- The maximum countdown time that can be set is 99 minutes and 59 seconds.
- Once your desired countdown time is displayed, release all of the buttons. After 10 seconds, the countdown time will be stored and the countdown will commence immediately.
- At the end of the cooking time a bell will ring for 7 minutes. It can be switched off by pressing button **(C)** once.
- To reset a countdown before it reaches its end time, press buttons **(B)** and **(C)** simultaneously. Then release button **(C)** first, followed by button **(B)**.




IMPORTANT: If you have the oven or grill in use whilst the timer is counting down. When the countdown ends, the oven will continue to heat. You must turn off the oven/grill using the oven function and temperature control knob.

Adjusting the audible signal (B609.1SS only)

There are 3 levels of audible signal available; to adjust it you should do the following:

- When the time of day is shown on the timer display, press button **(B)** for approximately 2 seconds. You will then hear the current level of audible signal.
- Repeat this process until the audible signal reaches the level that you require, and then release the button **(B)**.

Using the minute minder (B602.1 & B604.1)

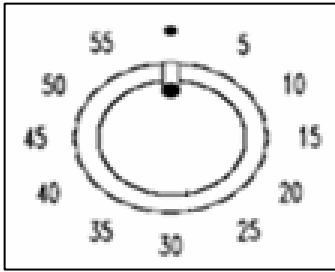

The minute minder can be used independently of an oven cooking function for a time period of up to 60 minutes.

- To set the timer, turn the knob fully clockwise until it stops and then turn it back anticlockwise to the required time.
- The time period that has been set will expire when the control knob reaches zero, a brief audible signal will sound.



IMPORTANT: If you have the oven or grill in use whilst the timer is counting down. When the countdown ends, the oven will continue to heat. You must turn off the oven/grill using the oven function and temperature control knob.

The oven light

- Turn the oven light selector knob clockwise, until it reaches the light bulb symbol.
- The oven light can be turned on, regardless of whether the oven/grill are in use.

Cleaning and maintenance



Cleaning operations must only be carried out when the oven is cool.


The appliance should be disconnected from your mains supply before commencing any cleaning process.

- The oven should be thoroughly cleaned before it is operated for the first time and after each use. This will avoid residual food stuffs becoming baked on the oven cavity. After residues have been baked on several times, they are far more difficult to remove.
- **Never** clean the oven surfaces by steam cleaning.
- The oven cavity should only be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.
- Any stains that may appear on the bottom of the oven will have originated from food splashes or spilt food, these splashes occur during the cooking process. These could possibly be a result of the food being cooked at an excessively high temperature or being placed in cookware that is too small.
- You should make sure that the cooking temperature that is selected is appropriate for the food that you are cooking. You should also ensure that the food is placed in an adequately sized dish and that you use the drip tray where appropriate.
- Outer parts of the oven should only be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.
- If you use any form of oven cleaner on your appliance, then you must check with the manufacturer of the cleaner that it is suitable for use on your appliance.
- **Any damage that is caused to the appliance by a cleaning product will not be fixed by Baumatic free of charge, even if the appliance is within the guarantee period.**

Replacing the oven bulb




IMPORTANT: The oven must be disconnected from your mains supply before you attempt to either remove or replace the oven bulb.

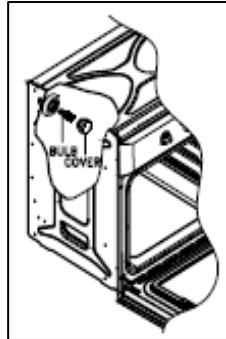

- Remove all oven shelves and the drip tray to make it easier to access the bulb.
- Remove the light cover by turning it anti-clockwise.
- Unscrew the bulb clockwise and remove it from its holder.
- Replace the bulb with a 25 W/300°C, screw type pigmy.
- **Do not** use any other type of bulb.
- Place the lamp cover back into position.

Removing the oven door for cleaning

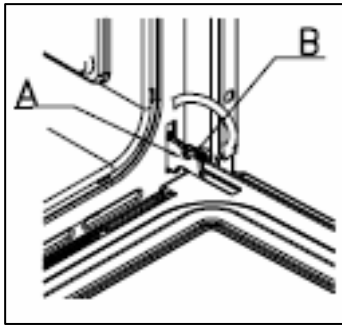

To facilitate the cleaning of the inside of the oven and the outer frame of the oven, the door can be removed as follows:-

- The hinges **(A)** have two movable bolts on them **(B)**.
- If you raise both of the movable bolts **(B)**, then the hinges **(A)** are released from the oven housing.
- You should grip the sides of the door at the centre and then incline it slightly towards the oven cavity and then by pulling it gently away from the oven cavity.
- **IMPORTANT:** You should make sure that the door is supported at all times and that you place the door on some padded material whilst cleaning it.
- The oven door and door glass should only be cleaned using a damp cloth and a small amount of detergent. The cloth **MUST NOT** have come into contact with any form of cleaning product or chemical previously.
- To refit the door you should slide the hinges back into their slots and open the door fully.
- **IMPORTANT:** The movable bolts **(B)** must be closed back into their original positions before closing the door.



- **Take care not to dislodge the hinge locking system when removing the door, as the hinge mechanism has a strong spring.**
- **Do not immerse the door in water at any time.**

Removing the inner door glass for cleaning

- Do not use any abrasive cleaner that could cause damage.
- Remember that if the surface of the glass panel becomes scratched, this could lead to a dangerous failure.
- To facilitate cleaning, the door glass can be lifted out after removing the fixing screws and turning the metal stoppers that hold the glass in position.
- When refitting, make sure that the glass is correctly seated in the door recess and the correct way round, before turning the metal stoppers back to their original position and fully tightening the fixing screws.

Installation

 


The installation must be carried out by a suitably qualified person, in accordance with the current version of the following.

- **UK Regulations and Safety Standards or their European Norm Replacements.**
- **Building Regulations** (issued by the Department of the Environment).
- **Building Standards** (issued by the Scottish Development Department).
- **IEE Wiring Regulations.**
- **Electricity At Work Regulations.**
- **Gas Safety (Installation and Use) (Amendment) Regulations.**

WARNING: THIS APPLIANCE MUST BE EARTHED.

- This appliance should be wired into a 13 A double pole switched fused spur outlet, having 3 mm contact separation and the fuse rating reduced to 3 amps. This should be placed in an easily accessible position adjacent to the appliance, preferably above worktop level. An outlet can then be located at the rear of the appliance for connection.



- To connect the oven power cord, loosen and remove the cover on the terminal block, in order to gain access to the contacts inside. Make the connection, securing the cord in place with the cable clamp provided and then immediately close the terminal block cover again.
- If you have to change the oven power cord, the earthing (yellow/green) conductor must always be 10 mm longer than the line conductors.
- Care must be taken to ensure that the temperature of the mains supply cable does not exceed 50°C.
- If the mains supply cable is damaged, then it must be replaced by an appropriate replacement.


Positioning



The adjacent furniture and all materials used in the installation must be able to withstand a minimum temperature of 85°C above the ambient temperature of the room it is located in, whilst the appliance is in use.

- Your appliance is heavy, so you should be careful when moving or positioning it.
- **Do not** try to move the cooker by pulling on either the door, handle or control panel.
- The oven may be located in a kitchen, or a bedroom, but not in a room containing a bath or shower. **The oven must not be installed in a bedroom of less than 20m³ in size.**
- **LPG models** must not be installed in a room or internal space below ground level (e.g. in a basement).
- This oven may be used for a built-in or built under installation (see the diagrams on pages 25 - 26).


Installing the oven into the kitchen cabinet

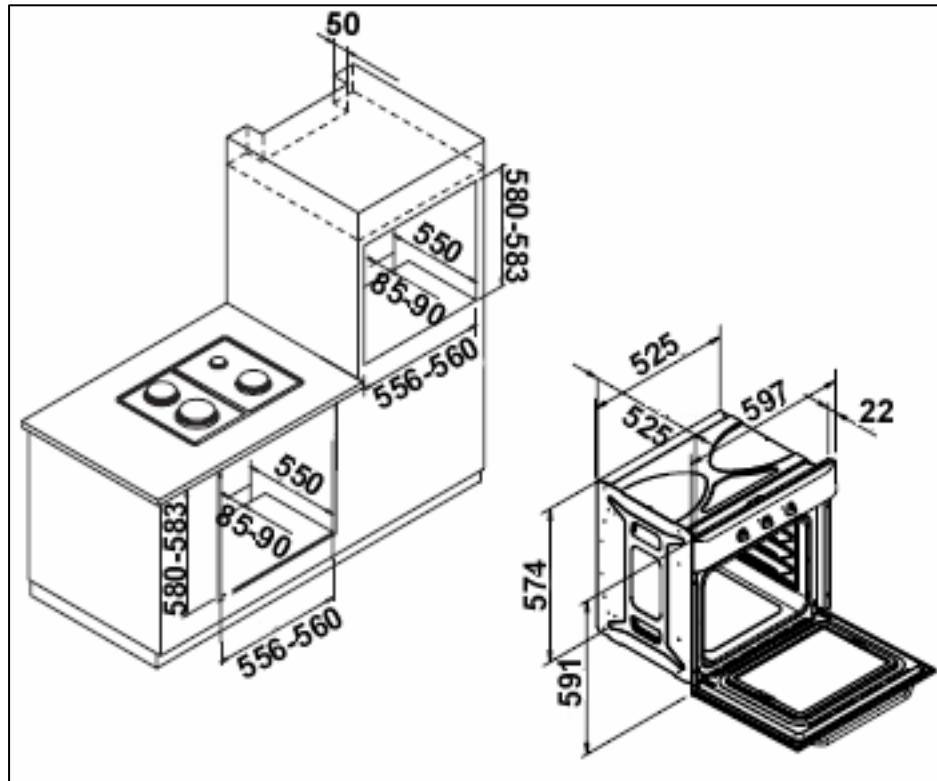

Positioning the appliance


- Ensure that the aperture that you will be fitting the oven into is of the size given in the above diagram.
- The oven must be fitted into an oven housing with the ventilation cut-outs shown in the "Ventilation requirements" section on the next page.
- Ensure that the rear panel of the furniture housing unit has been removed.

Ventilation requirements

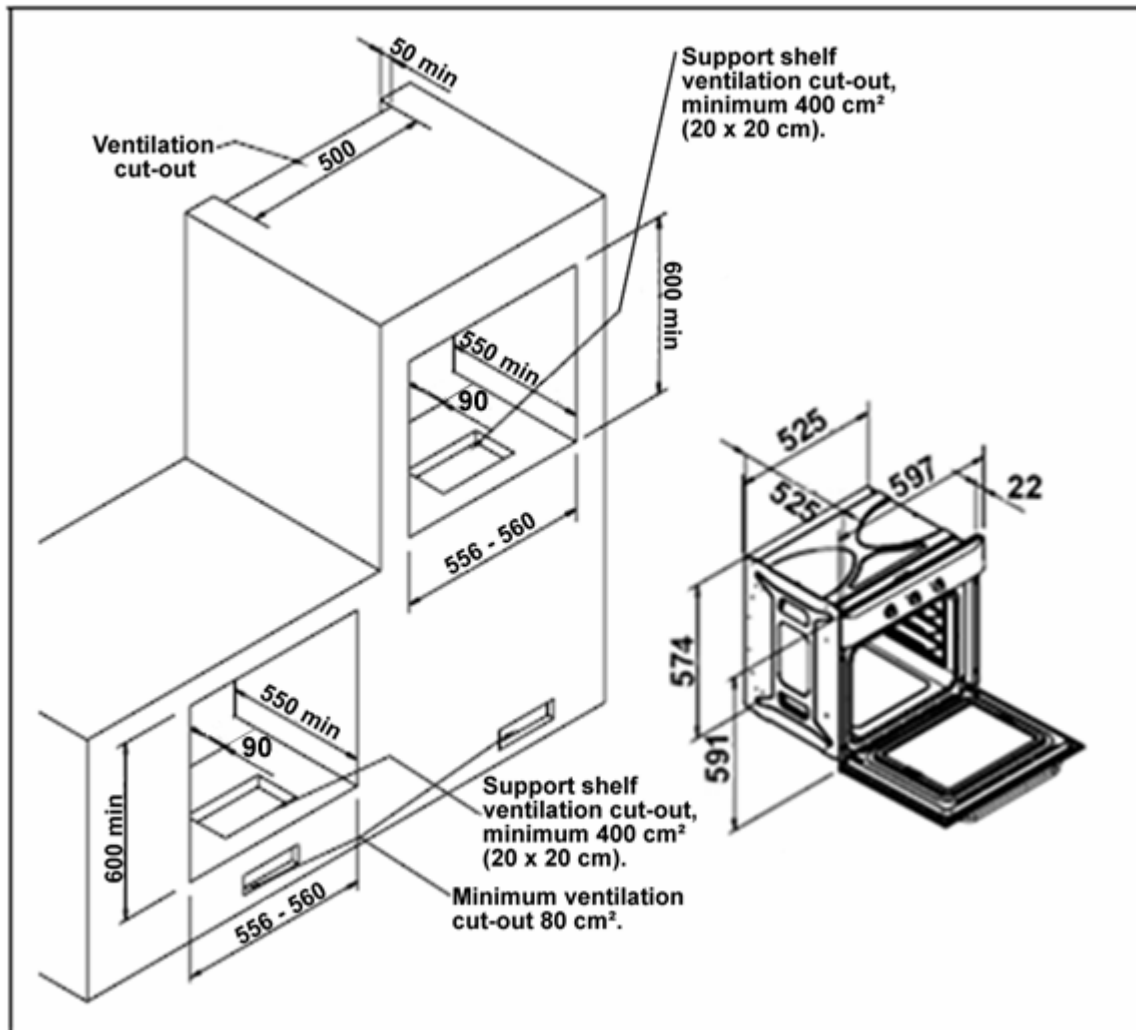

- You should remove the rear panel of the housing unit before attempting to install the oven. A full depth shelf must be incorporated into the housing and positioned 50 mm below the support shelf for the appliance.
- A minimum ventilation gap of 90 mm must be allowed between the rear of the support shelf and the rear of the housing unit.
- A 400 cm² (20 x 20 cm) ventilation cut out must be made in the support shelf.
- A minimum ventilation area of 80 cm² must be allowed below the appliance.
- If the appliance is to be installed in a Leisure Accommodation Vehicle, the requirements of EN 721 must be applied.


Additional built under ventilation requirements

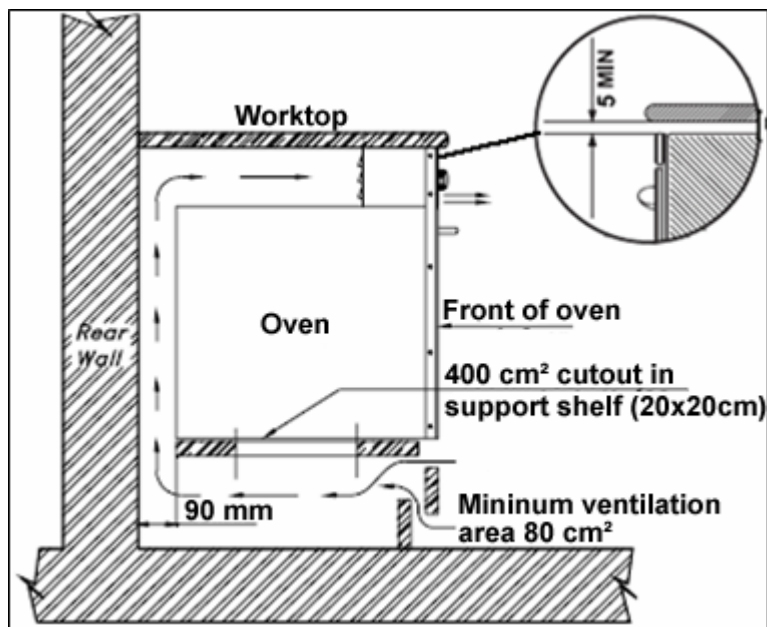

- Remove the horizontal strengthening support at the upper front housing unit.
- If your housing unit incorporates a domestic lower drawer, this must be made non-functioning with a ventilated false front.
- A 5 mm ventilation gap must be allowed between the top of the appliance and the underside of the worktop.

Additional tall housing ventilation requirements

- A 500 x 15 mm cut out must be made in the top of the housing unit, the plinth and any other additional shelves apart from the support shelf.
- If the unit is fitted flush with the kitchen ceiling, a 20 cm² ventilation cut out must be made in the top front of the housing.

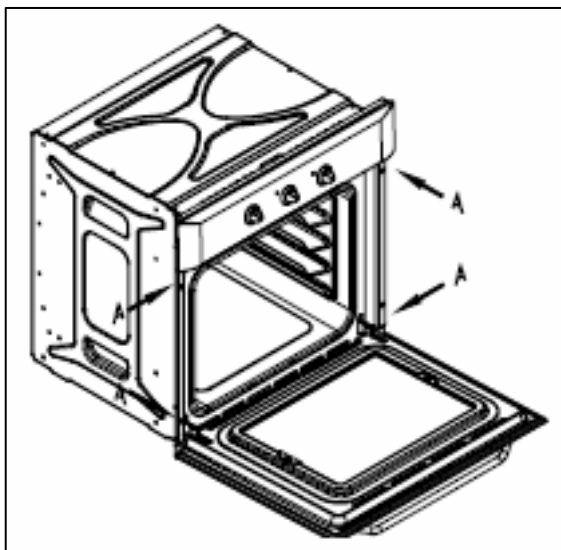

- For both times of installation, ensure that the oven has been securely fixed into the housing unit. The fixing of the oven into the housing is made by using four screws. These should be screwed through the oven cabinet and into the housing unit.

Gas connection



This appliance must be installed by a competent person in accordance with the current versions of the following UK (United Kingdom) or ROI (Republic of Ireland) Regulations and Safety Standards or their European Norm Replacements.

Important information

- This oven is supplied to run on **natural gas only** and cannot be used on any other type of gas without modification.
- Conversion for use on LPG and other gases must only be undertaken by a qualified person. For information on the use of other gases, please contact the Baumatic Technical Department.
- The oven must be installed by a qualified person, in accordance with the current edition of the Gas Safety (Installation and Use) Regulations and the relevant building/I.E.E. Regulations.
- Failure to install the appliance correctly could invalidate Baumatic's guarantee and lead to prosecution under the regulations quoted above.
- In the UK, only **CORGI** registered installers are authorised to undertake the installation and service work, in compliance with the above regulations.

Ventilation requirements

- The room containing the oven should have an air supply in accordance with the current edition of BS 5440: Part 2:
- The room must have opening windows or equivalent; some rooms may also require a permanent vent.
- If the room has a volume between 5 and 10m³, it will require an air vent of 50cm² (effective area). Unless it has a door which opens directly to the outside.
- If the room has a volume of less than 5m³, it will require an air vent of 100cm² (effective area).
- If there are any other fuel burning appliances in the same room the current edition of BS 5440: Part 2: should be consulted to determine air vent requirements.

- Ensure that the room containing the oven is well ventilated, keep natural ventilation holes.
- Prolonged intensive use of the appliance may call for additional ventilation.
- This oven is not fitted with a device for discharging the products of combustion. Ensure that the ventilation rules and regulations are followed.
- Your oven must stand on a flat surface so that when it is in position the oven is level. When in position check that the oven is level by using a spirit level.
- Remember that the quantity of air necessary for combustion must never be less than 2m³/h for each kW of power (see total power in kW on the appliance rating plate).

Gas Safety (Installation and Use) Regulations


- It is a legal requirement that all gas appliances are installed by competent persons in accordance with the current edition of the **Gas Safety Installation and Use Regulations**.
- For reasons of safety, it is in your best interests to ensure compliance with the law.
- In the UK, CORGI registered installers work to safe standards of practice. The cooker must also be installed in accordance with the current edition of BS 6172. Failure to install the oven correctly could invalidate the warranty, liability claims and lead to prosecution.

Gas connection



ALL INSTALLATION AND SERVICE WORK MUST BE CARRIED OUT BY A CORGI REGISTERED ENGINEER.

- Prior to installation, ensure that the gas supply conditions (nature of the gas and gas pressure) and the adjustment conditions are compatible. The adjustment conditions for this appliance are stated on the rating plate which can be found on the back cover.
- This appliance is not designed to be connected to a combustion product evacuation device. Particular attention should be given to the relevant requirements regarding ventilation.

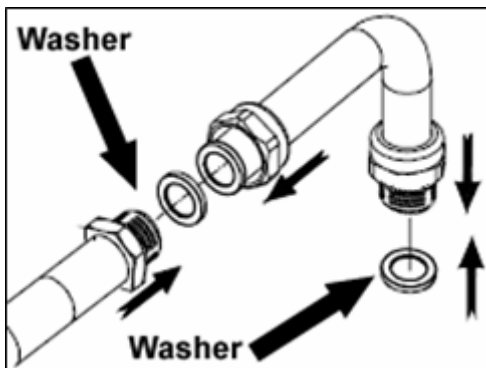

- In compliance with the manufacturer's installation instructions, the adaptor elbow should be connected to the gas inlet at the rear of the appliance and pointing in a downward direction. As indicated in the diagram opposite.

- **IMPORTANT: THE FIBRE WASHERS SHOWN IN THE ABOVE DIAGRAM MUST BE IN PLACE WHEN CONNECTING THE ADAPTOR ELBOW.**
- Connection to the cooker should be made with an approved appliance flexible connection to BS 669.
- If the cooker has been converted for use with LPG, then it should be connected to the gas supply using an appropriate bayonet type hose. The hose **MUST** be suitable for use with LPG gas, these are identifiable by a red band or stripe.
- A hose length of 0.9m to 1.25m is recommended. The length of hose chosen should be such that when the cooker is in situ, the hose does not touch the floor.
- Care should be taken to ensure that the temperature rise of areas at the rear of the cooker that are likely to come in contact with the flexible hose do not exceed 70°C.
- **IMPORTANT: On completion carry out a gas tightness test.**

Gas adjustment (Conversion to LPG and gas adjustment)


IMPORTANT: Your appliance must be disconnected from the electric and gas supply before completing this process.

Power inputs


| | Natural Gas | LPG |
|--------------|-----------------------------|----------------------------|
| Oven | 2.74 kW (injector size 115) | 2.74 kW (injector size 80) |
| Grill | 2.4 kW (injector size 115) | 2.4 kW (injector size 80) |

Gas details


| | |
|------------------------------------|----------------------|
| Gas Connection Type: | 1/2" BSP male thread |
| Gas Type (Natural Gas G20): | 20 mbar |
| Primary air gap (Natural Gas G20): | 1.0 mm |
| Gas Type (LPG G30/31): | 28/37 mbar |
| Primary air gap (LPG G30/31): | 1.0 mm |

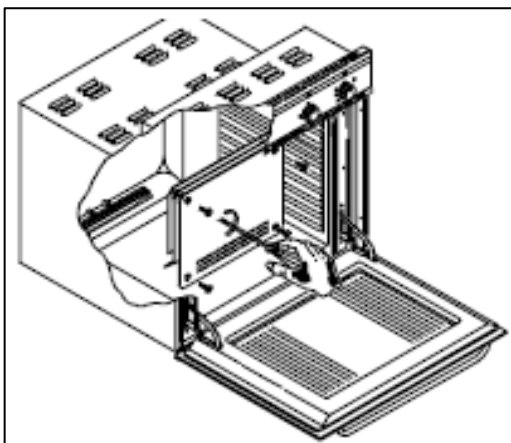

- Remove the rear wall assembly and the oven burner assembly.
- Replace the injector with one suitable for LPG (see power inputs information). It is recommended that the appropriate thread sealant is used; always check for gas tightness after assembly.

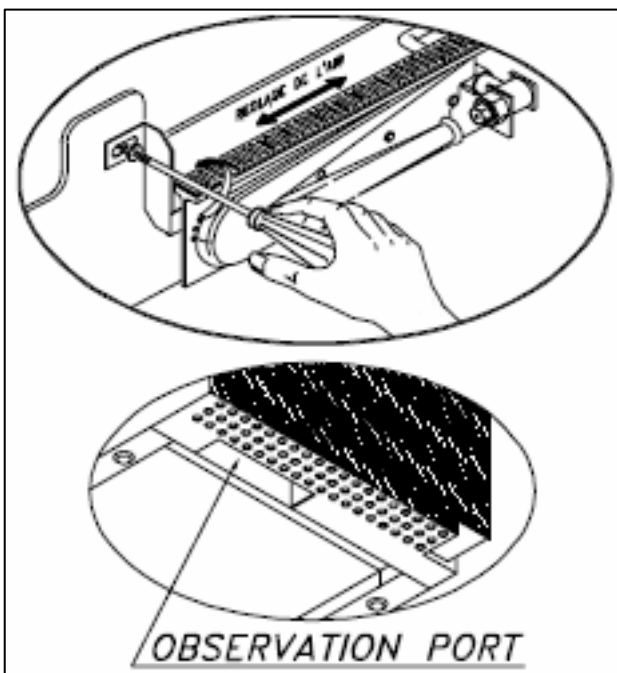


- Re-fix the burner assembly, ensuring that the injector is within the cut-out in the rear of the oven. Adjust the position of the burner to achieve the primary air gap.

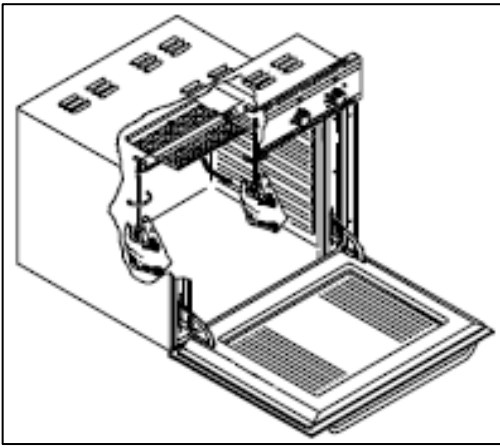

- Remove the grill burner.
- Replace the injector with one suitable for LPG (see power inputs information). It is recommended that the appropriate thread sealant is used; always check for gas tightness after assembly.

- Re-fix the grill burner, no further adjustments are necessary.

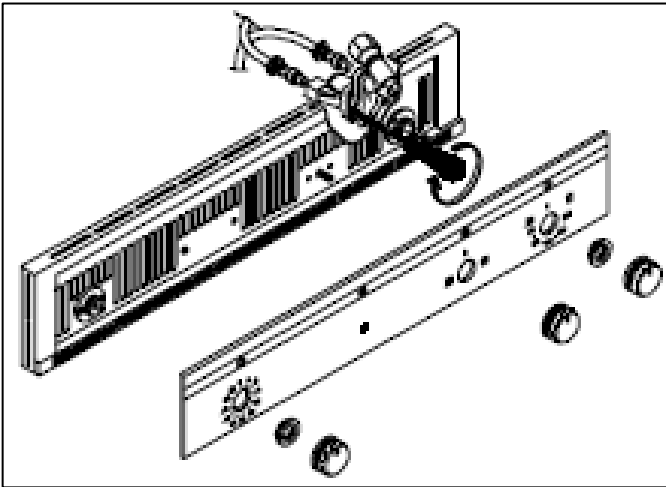

- Remove the control panel cover from the top of the appliance.
- Remove the oven control knobs and then undo the two fixing rings that are exposed underneath, by turning them anti-clockwise.

- Disconnect the neon lamp at the rear of the fascia and then remove the control panel front. Then refit the thermostat control knob.
- Ensure that the appliance is in a safe condition, and then reconnect it to the electric and gas supply.
- Open the oven door fully and ignite the oven burner. You should set the oven to maximum temperature, then close the oven door and leave the appliance for 10 – 15 minutes.
- Reduce the temperature to its minimum setting and remove the thermostat control knob.
- **DISCONNECT THE APPLIANCE FROM THE ELECTRICITY SUPPLY.**
- The bypass adjustment screw is located on the left hand side of the valve body. Access can be made from the front of the appliance and through the rear panel of the control panel. Turn the screw clockwise to decrease the flow.

- Adjust the bypass setting until the correct flame picture is achieved.
- Refit the control knob, then turn it to the Max position and then back to Min several times, checking that the flame is maintained.
- Fully open and close the oven door several times and check that the flame is maintained.
- Turn the appliance off and disconnect it from the gas supply.
- Re-assemble the appliance (including the refitting of the rear wall assembly), reinstall it and then carry out a full function test (this should include a gas tightness test).

My appliance isn't working correctly

The gas oven burner or grill burner do not light.

- * Check that the oven is switched on at your mains supply.
- * Check that the fuse in the spur outlet doesn't need replacing.
- * Check that there is not a problem with your gas supply

Food is cooking too quickly or too slowly.

- * Check that you are cooking at an appropriate temperature and shelf level.

The oven is not cooking evenly.

- * Check that the oven is installed correctly.
- * Check that you are cooking at an appropriate temperature and shelf level.

The oven light does not work.

- * Follow the "Replacing the oven bulb" section on page 20.

I am getting condensation in my oven

- * Steam and condensation is a natural by product of cooking any food with high water content, such as frozen food, chicken etc.
- * You may get condensation in the oven cavity and forming between the oven door glasses. This is not necessarily a sign that the oven is not working correctly.
- * Do not leave food in the oven to cool after it has been cooked and the oven has been switched off.
- * Use a covered container, where practical, when cooking to reduce the amount of condensation that forms.



IMPORTANT: If your appliance appears not to be operating correctly, then you should disconnect it from your mains supply and then contact the Baumatic Service Department on telephone number (0118) 933 6911.

DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.

Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then he will not complete a repair.

This includes situations where appliances have been tiled in, sealed in with sealant, have wooden obstructions placed in front of the appliance, like plinths. Or any installation other than the one specified by Baumatic Ltd. has been completed.

Please refer to the conditions of guarantee document on page 34 of this instruction manual for clarification of this.

Baumatic Ltd. Conditions of guarantee

Dear Customer,

Your new Baumatic appliance comes complete with a free 12 month guarantee covering both parts and labour costs resulting from defective materials or workmanship.

Baumatic also gives you the opportunity to automatically extend the guarantee period for a further 12 months at no extra cost, giving an initial guarantee period of 24 months. The extended guarantee period applies to England, Scotland, Wales and Northern Ireland only.

To qualify for your full 24 months guarantee you **must** register your appliance within 28 days of purchase to be covered under this guarantee. This can be done online via: www.baumatic.co.uk or through returning the guarantee card which can be found in each new Baumatic appliance.

* In addition, your appliance is covered by a 5 year parts warranty. Baumatic Ltd will provide free of charge the parts required to repair the appliance, only if they are fitted by a Baumatic engineer, for any defect that arises due to faulty materials or workmanship within a period of 5 years from the original purchase date.

* An additional 1 to 3 year insurance scheme for labour is available should you wish to extend the warranty period.

Should any person other than an authorised representative of Baumatic Ltd interfere with the appliance, the policy is negated and Baumatic Ltd will be under no further liability.

The guarantee covers the appliance for normal domestic use only, unless otherwise stated.

Any claims made under the terms of the guarantee must be supported by the original invoice/bill of sale issued at the time of purchase.

This guarantee is transferable only with the written consent of Baumatic Ltd.

If the appliance fails and is considered either not repairable or uneconomical to repair between 12 months (2 years if registered) and five years, a free of charge replacement will not be offered.

The guarantee for any replacement will only be for the remainder of the guarantee on the original product purchased.

The guarantee does not cover:

- Sinks and taps
- Failure to comply with the manufacturers instructions for use.
- The replacement of cosmetic components of accessories
- Accidental damage or wilful abuse.
- Subsequent loss or damage owing to the failure of the appliance or electrical supply
- Incorrect installation
- Losses caused by Acts of God, civil war, failure to obtain spare parts, strikes or lockouts
- Filters, fuses, light bulbs, external hoses, damage to bodywork, paintwork, plastic items, covers, baskets, trays, shelves, burner bases, burner caps, decals, corrosion, rubber seals.

In the course of the work carried out it may be necessary to remove the appliance from its operating position. Whilst all reasonable care will be taken, Baumatic Ltd cannot accept responsibility for damage sustained to any property whatsoever in this process.

This guarantee is in addition to and does not diminish your statutory or legal rights.

Contacting Baumatic Ltd

| Sales | Service | Spares | Technical/Advice |
|--------------------|--------------------|--------------------|------------------|
| TEL: 0118 933 6900 | TEL: 0118 933 6911 | TEL: 0118 933 6922 | 0118 933 6933 |
| FAX: 0118 931 0035 | FAX: 0118 986 9124 | FAX: 0118 933 6942 | 0118 933 6942 |

For ROI (Republic of Ireland), please contact one of the numbers below:

TEL: 01 – 6266798 FAX: 01 - 6266634

Thanks you for buying Baumatic.

* Applies to UK, Scotland, Wales & Northern Ireland only (Republic of Ireland has 1 year labour & 1 year parts warranty only)



You will be mine ...

Headquarters

Baumatic Ltd.
Baumatic Buildings,
6 Bennet Road,
Reading,
Berkshire
RG2 0QX, United Kingdom

Sales Telephone
+44 118 933 6900

Sales Fax
+44 118 931 0035

Service Telephone
+44 118 933 6911

Service Fax
+44 118 986 9124

Spares Telephone
+44 118 933 6922

Technical / Advice Telephone
+44 118 933 6933

E-mail:

sales@baumatic.co.uk

technical@baumatic.co.uk

Http (Internet site):
www.baumatic.com

