

BTD1

Instruction manual

please note- this Instruction Manual contains important safety information. Please make sure that you read it before using your Tumble Dryer for the first time. It also contains valuable Troubleshooting tips so that you can solve faults without having to call for a service engineer.

Instruction Manual for your Baumatic

BTD1

FULLY ELECTRONIC TUMBER DRYER



DD 5/3/07



CONTENTS

4

PAGE

5	Specifications
6	Cautions and advice
7	Your BTD1's Control Panel
8	Before using your BTD1 Tumble Dryer
8/9	TO USE YOUR BTD1 TUMBLE DRYER
10	The Filter
11	Troubleshooting
12	Installation Instructions
13	Reversing the Door
14	Fitting the décor door
15	Directive Conformity Confirmation
16	Conditions of Guarantee
17	Contact Details

SPECIFICATIONS OF YOUR BTD1

5

FULLY INTEGRATED AIRVENTED TUMBLE DRYER

- Capacity: 6 kg
- 6 Drying Options
- 2 Heat Settings (50°C, 60°C)
- 120 Minute Minder
- Reverse Tumble Action
- Anti-crease Cool down
- 180 degree door opening
- Reversible Door
- Galvanised Drum
- Removable Fluff Filter
- Extendable 2m vent hose (lower left rear corner)

**ENERGY
EFFICIENCY
CLASS: C**

**Dimensions in cm
(Height x Width x Depth)
85 x 59.5 x 53**

CAUTIONS AND ADVICE




6

In order to get maximum satisfaction and performance from your tumble dryer, please ensure you follow the instructions given below:

- Do NOT let children tamper with the controls.
- ✓ When installing, position the dryer so that the plug is accessible.
- This dryer is intended for domestic use only. Commercial use is NOT recommended and will result in the warranty becoming void.
- ✓ Ensure that the appliance has been grounded before using.
- ✓ Any electrical work needed to install the appliance should only be carried out by a qualified person or electrician.
- It is dangerous to alter or modify the appliance in any way.
- Exhaust gas must NOT be discharged into a flue used for exhausting fumes from appliances burning gas or other fuels.
- ✓ Clean the lint filter after each drying cycle.
- Do NOT put anything but the recommended articles of clothing into the tumble dryer (see page 8).
- Do NOT place articles which have been in contact with dry cleaning fluid or other inflammable substances in the tumble dryer.
- Do NOT attempt to dry items that are dripping wet or articles containing foam rubber or rubber-like materials.
- ✓ Give adequate ventilation to avoid a back flow of gases into the room from appliances burning other fuels, including open fires (not required if the dryer discharges air into the room).
- Do NOT use your tumble dryer if you suspect it is damaged at all. NEVER try to repair the appliance yourself as there is the risk of INJURY!
- ✓ We recommend that the appliance is switched off after each use.
- ✓ If it is to be unattended for long periods (such as weekends or holidays), disconnect it from the power supply.
- The dryer must be installed in a well-ventilated place, away from the influence of gases from other appliances and from defective installations.
- Do NOT overload the tumble dryer.
- Do NOT dry articles singly as they tend to roll up and increase drying time.
- Do NOT allow the venting hose (where applicable) or filter to become blocked.
- Do NOT allow fluff to accumulate around the tumble dryer.

YOUR BTD1'S CONTROL PANEL

7

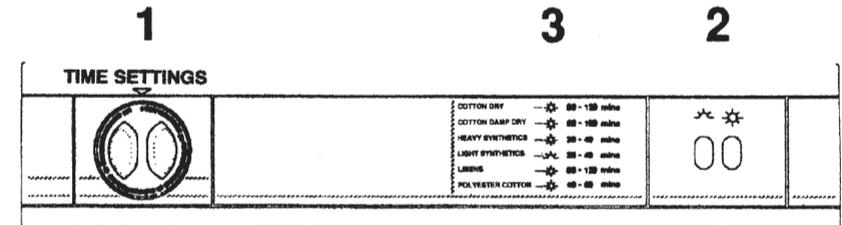

- 1) **THE TIMER:** Select the drying time from the recommendations shown on the control panel (2). Turn the timer knob clockwise until the setting required appears at the top.
- 2) **HEAT SETTING:** Select half ☀️ or full heat ☀️ as recommended on the control panel.
- 3) **CONTROL PANEL:** See above.

COTTON DRY	☀️	80 - 120 mins
COTTON DAMP DRY	☀️	60 - 100 mins
HEAVY SYNTHETICS	☀️	20 - 40 mins
LIGHT SYNTHETICS	☀️	20 - 40 mins
LINENS	☀️	80 - 120 mins
POLYESTER COTTON	☀️	40 - 60 mins

BEFORE USING YOUR BTD1 TUMBLE DRYER

8

CAUTION: Ensure that the clothes you are about to dry are not dripping wet.

- If you have not taken the clothes you want to dry out of a washing machine with an adequate spin cycle, roll the clothes in a towel to remove the excess water.
- Sort your clothes into groups of similar fabrics and colours. Check the care label inside the garment you want to wash.
- Note that fabric conditioner reduces static electricity.
- Delicate articles (eg. Tights, stockings) should be placed inside a pillowcase.

TO USE YOUR BTD1 TUMBLE DRYER:

- 1 Open the door.
- 2 Load clothes loosely into the drum (NOTE: Load sheets corner-first).
- 3 Close the door.
- 4 Dry your hands.
- 5 Select the desired heat position; either heat or full heat (see the programme chart on fascia panel).
- 6 Check that the timer is in the '0' position before you adjust it to the drying time you want.
- 7 The drum will begin rotating.
- 8 It will stop when the timer automatically reaches the '0' position. Note: you may remove your clothes before the completion of the timed programme.

NOTE: Should the clothes become dry before the cycle has finished, the thermostat will automatically switch off the heater and prevent over-drying.

9

This will save energy, although the drum will still rotate.

When drying large items (eg. Sheets) stop the dryer before the completion of a programmed cycle and redistribute the load.

To **stop** the machine during the middle of a programme, **simply open the door**. The drum will stop rotating automatically and reset when you close the door. To lengthen or shorten the programme, turn the timer knob.

CARE LABELS YOU MAY FIND ON YOUR FABRICS


	'Tumble drying beneficial'
	'Do not tumble dry'
	'Dry flat'

There is an automatic 12 minute cool down period at the end of every cycle, during which the heater is switched off. This helps to minimise creasing.

THE FILTER

IMPORTANT:
Please remember that you must have direct access to the power supply when your tumble dryer is sitting in position.

Filter
The filter is located inside the doorway rim at the bottom (see picture below).

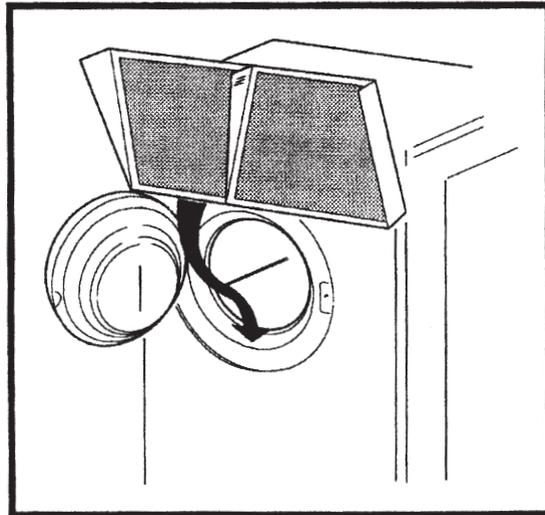

It is important to remove fluff from the filter after each drying session.

To take out the filter:

- 1 Pull the filter upwards.
- 2 Remove any thread or fluff by hand or with a soft brush.
- 3 Slide the filter back.
- 4 Wash the filter occasionally in a detergent solution and with a soft brush. Do not use an abrasive cleaning product on the filter. Remove small particles.
- 5 Switch off the electric supply.

TROUBLESHOOTING

Should your tumble dryer have a fault, checking the problem against this chart may keep you from needing to call for service!


PROBLEM	PROBABLE CAUSE	WHAT YOU CAN DO
<i>Your clothes are not dry after a normal drying time (IE, a length of time within which your appliance usually dries a similar washing load)</i>	The filter is dirty	Clean the filter
	You used the wrong temperature setting.	Increase the temperature setting.
	The power is off	Check if the power is on or not.
	The venting Hose has become blocked (sometimes a strong wind may cause back pressure)	Unblock the venting hose.
	You have not set the timer for a cool down period	Set the timer for a cool down period.
<i>Your Machine isn't working</i>	There is no power supply	Connect to a power supply
	Not switched on	Switch on your machine
	The door is not closed properly	Close the door before trying to operate your appliance again.
	Your appliance has cut-out	Your tumble-dryer has been fitted with a resetable cut-out. Check that this not engaged by seeing if the red button on the back of your appliance gives a sharp 'click' sound when you press it. *NOTE: This cut-out only operates if the airflow is severely restricted so make sure the FILTER is clean and all other restrictions are removed before restarting.
	The mains cord is damaged	You must contact the Manufacturer or its service Agent for a new cord.

INSTALLATION INSTRUCTIONS

12


- THE TUMBLE DRYER IS FULLY COMPATIBLE WITH ANY KITCHEN UNITS THAT HAVE THE DIMENSIONS DEPICTED IN THE FIGURE BELOW AND COMPLIES WITH STRINGENT EEC REGULATIONS.
- YOUR DRYER IS PROVIDED WITH A VENT HOSE WHICH WILL EXTEND TO APPROX 2.4m (8ft). WE STRONGLY RECOMMEND THAT THIS IS VENTED THROUGH THE WALL WITH THE ATTACHMENT PROVIDED.

The position of the hole (100mm diameter) for the vent directly behind the tumble dryer is shown in the diagram.

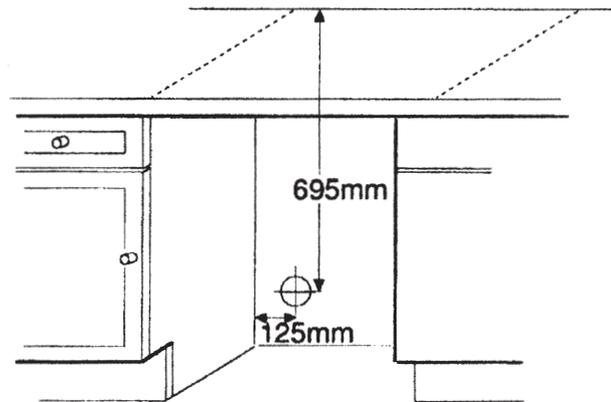

If the through the wall vent is to be positioned other than behind the dryer, the vent hose should be positioned at floor level and through adjacent side panel to a relevant position.

The plinth must be cut-out to accommodate the air vent grill at the bottom front of the tumble dryer.

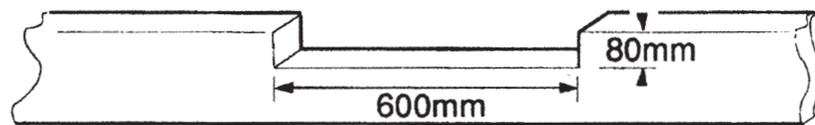


IMPORTANT

The air vent at the front of the appliance must never be covered or blocked in any way as this will cause the dryer to overheat.

REVERSING THE DOOR



13

* Your tumble dryer's door can be positioned to open either to the right or to the left. Please follow the instructions below to change the door position. This operation must not be performed whilst the appliance is connected to the electricity supply.

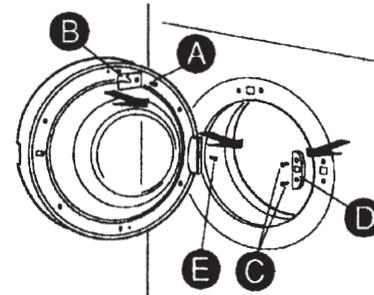


1. Open the door. Undo the screw (A), remove the switch strike (B) and replace the screw. Remove the screws (C) and latch plate (D). Remove the hinge cover screw (E). Close the door.

2. Pull the hinge cover (F) forwards to remove it. Remove two outer screws (G). Remove door. Fit the latch plate (D) with screws (C).

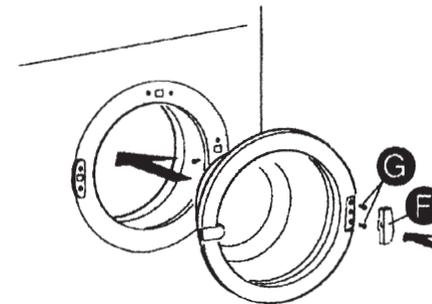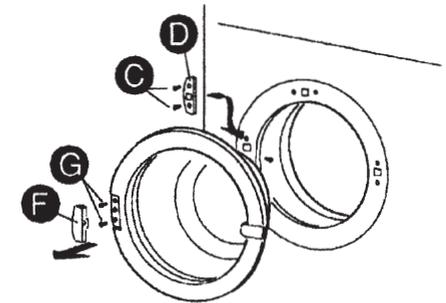

3. Reverse the door and place against the dryer's doorway so that it is in the closed position. Refit the screws (G) and hinge cover (F). Open the door.

4. Fit screw (E) to secure the hinge cover. Remove the screw (A) at the top of the door and refit strike (B) as shown.

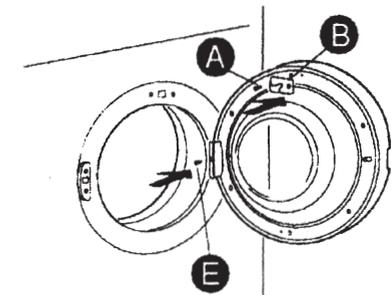


FITTING THE DÉCOR DOOR

14

The hinges can be fastened through the pre-drilled holes on either the left or right hand side with the door stops being fitted on the other side.

NOTE: Illustration below shows a décor door incorporating a false drawer front.

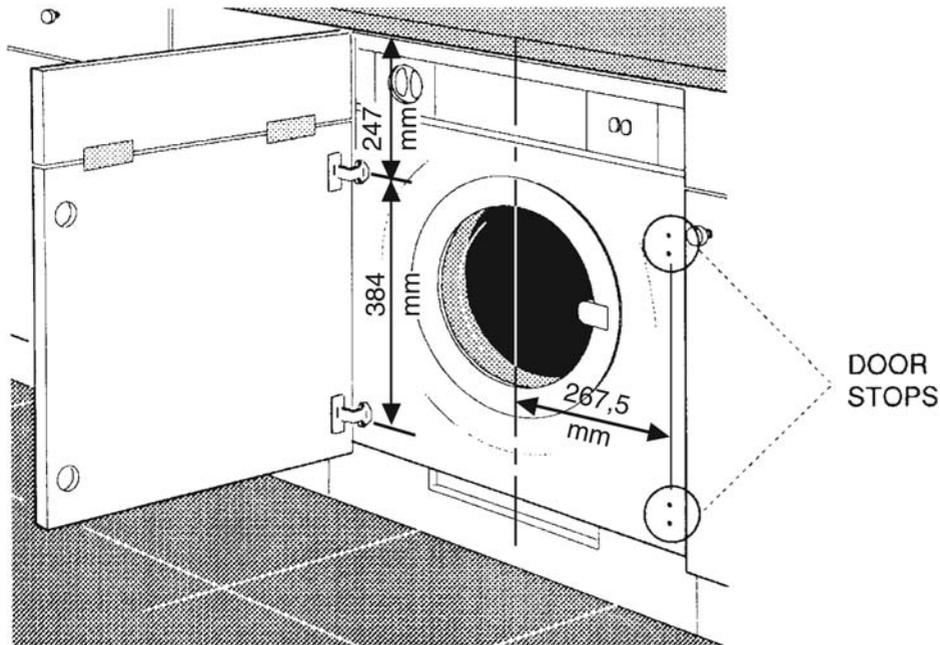


ENVIRONMENTAL NOTE

15

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

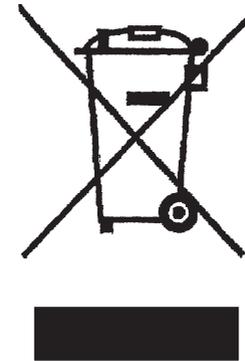

- The packaging materials that Baumatic uses are environmentally friendly and can be recycled.
- Please discard all packaging material with due regard for the environment.

Baumatic Ltd. Conditions of Guarante

16

Dear Customer,

Your new Baumatic appliance comes complete with a free 12 month guarantee covering both parts and labour costs resulting from defective materials or workmanship.

Baumatic also gives you the opportunity to automatically extend the guarantee period for a further 12 months at no extra cost, giving an initial guarantee period of 24 months. The extended guarantee period applies to England, Scotland, Wales and Northern Ireland only.

To qualify for your full 24 months guarantee you must register your appliance within 28 days of purchase to be covered under this guarantee. This can be done online via: www.baumatic.co.uk or through returning the guarantee card which can be found in each new Baumatic appliance.

- * In addition, your appliance is covered by a 5 year parts warranty. Baumatic Ltd will provide free of charge the parts required to repair the appliance, only if they are fitted by a Baumatic engineer, for any defect that arises due to faulty materials or workmanship within a period of 5 years from the original purchase date.
- * An additional 1 to 3 year insurance scheme for labour is available should you wish to extend the warranty period.

Should any person other than an authorised representative of Baumatic Ltd interfere with the appliance, the policy is negated and Baumatic Ltd will be under no further liability.

The guarantee covers the appliance for normal domestic use only, unless otherwise stated.

Any claims made under the terms of the guarantee must be supported by the original invoice/bill of sale issued at the time of purchase.

This guarantee is transferable only with the written consent of Baumatic Ltd.

If the appliance fails and is considered either not repairable or uneconomical to repair between 12 months (2 years if registered) and five years, a free of charge replacement will not be offered.

The guarantee for any replacement will only be for the remainder of the guarantee on the original product purchased.

The guarantee does not cover:

- Sinks and taps
- Failure to comply with the manufacturers instructions for use.
- The replacement of cosmetic components of accessories
- Accidental damage or wilful abuse.
- Subsequent loss or damage owing to the failure of the appliance or electrical supply
- Incorrect installation
- Losses caused by Acts of God, civil war, failure to obtain spare parts, strikes or lockouts
- Filters, fuses, light bulbs, external hoses, damage to bodywork, paintwork, plastic items, covers, baskets, trays, shelves, burner bases, burner caps, decals, corrosion, rubber seals.

In the course of the work carried out it may be necessary to remove the appliance from its operating position. Whilst all reasonable care will be taken, Baumatic Ltd cannot accept responsibility for damage sustained to any property whatsoever in this process.

This guarantee is in addition to and does not diminish your statutory or legal rights.

Contacting Baumatic Ltd

Sales Service	Spares	Technical/Advice
TEL: 0118 933 6900	TEL: 0118 933 6911	TEL: 0118 933 6922 0118 933 6933
FAX: 0118 931 0035	FAX: 0118 986 9124	FAX: 0118 933 6942 0118 933 6942

For ROI (Republic of Ireland), please contact one of the numbers below:
TEL: 01 - 6266798 FAX: 01 - 6266634

Thanks you for buying Baumatic.

* Applies to UK, Scotland, Wales & Northern Ireland only (Republic of Ireland has 1 year labour & 1 year parts warranty only)



17

You will be mine...

Headquarters

Baumatic Ltd.
Baumatic Buildings,
6 Bennet Road,
Reading,
Berkshire
RG2 0QX, United Kingdom

Sales Telephone
+44 118 933 6900

Sales Fax
+44 118 931 0035
Service Telephone
+44 118 933 6911

Service Fax
+44 118 986 9124

Spares Telephone
+44 118 933 6922

Technical / Advice Telephone
+44 118 933 6933

E-mail:

sales@baumatic.co.uk

technical@baumatic.co.uk

Http (Internet site):
www.baumatic.com

