 


**PBQSS/PF1SS
Pythagora 30 cm
domino hob**

Instruction manual

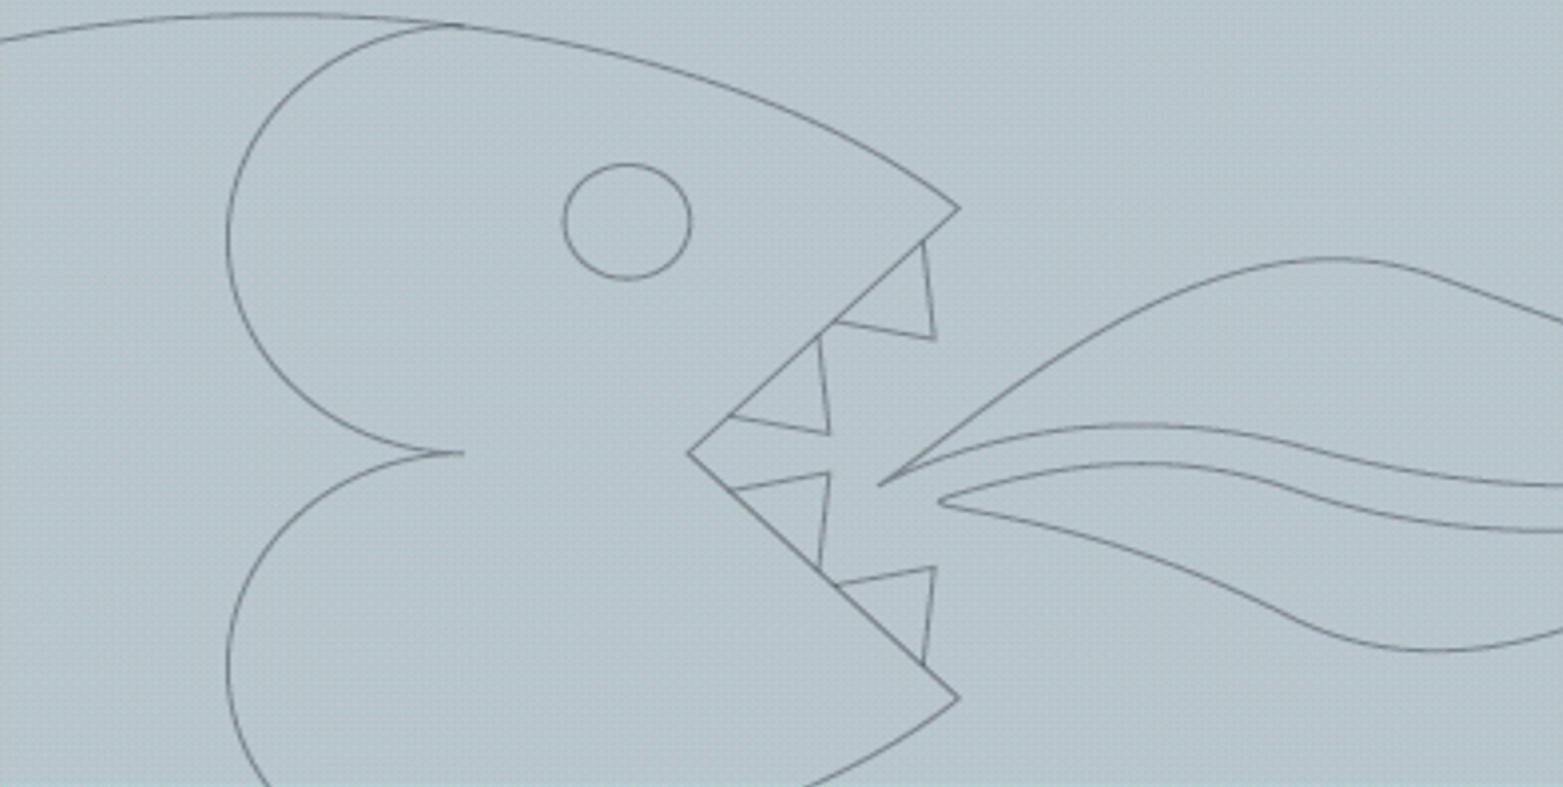

User Manual for your Baumatic

PBQSS Pythagora 30 cm Barbeque domino hob

PF1SS Pythagora 30 cm Deep fat fryer domino hob




You will be mine ...

NOTE: This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference; for you or any person not familiar with the operation of the appliance.

Environmental note

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



- The packaging materials that Baumatic uses are environmentally friendly and can be recycled.
- Please discard all packaging material with due regard for the environment.

ENGLISH

Dear User,

Many thanks for choosing one of our products.

We are sure that this complete, functional, practical, modern appliance will give you full satisfaction, since it has been meticulously designed and constructed with materials of the very best quality.

We advise you to read the instructions in this handbook carefully and follow them; they will allow you to get the best from your appliance from the very first time you use it.

KEEP THIS PRODUCT'S DOCUMENTATION FOR FUTURE REFERENCE.

Baumatic Ltd.

CONTENTS

Instructions for the user

| | |
|--------------|---|
| Installation | 3 |
| Use | 3 |
| Maintenance | 4 |

Instructions for the installer

| | |
|-----------------------|---|
| Installation | 6 |
| Positioning | 6 |
| Electrical connection | 6 |

IMPORTANT:

THIS PRODUCT IS DESIGNED FOR USE IN THE HOME. THE MANUFACTURER ACCEPTS NO LIABILITY IN CASE OF INJURY OR DAMAGE DERIVING FROM INCORRECT INSTALLATION OR IMPROPER, INCORRECT OR UNREASONABLE USE.

INSTRUCTIONS FOR THE USER

INSTALLATION

All installation (electrical connection) procedures must be carried out by a skilled engineer in accordance with the laws and regulations in force.

The appliance may be installed in all masonry, metal, wood or plastic laminate-covered wood furniture units capable of withstanding a maximum temperature of 90°C.

A gap of 50 mm must be left from the rear edge and 120 mm from the left-hand side, as shown in figure 1.

For specific instructions, see the section addressed to the installer.

The following models are covered by these instructions:

BBQ PBQ
BF1 PF1

USE

Turn the knob to the right setting for your cooking requirements, bearing in mind that higher numbers correspond to higher heat output.

BARBECUE: PBQ - BBQ

To turn on the element, turn the knob clockwise; this sets the relative thermostat, with settings from “1” to “10”. (Fig. 3)

The pilot light turns on to show that the element is in operation.

It is normal for some types of lamp to show a little light even when the plates are not working.

Using the grid: Before using the grid, it is always advisable to check that it is firmly positioned and correctly placed on the hob. **Also check that the rubber pads it rests on are intact and properly in place.**

Lava rock: Place the rock inside the tray provided and dispose of the bag. Once it is in place, turn on the heating element.

ADVICE AND WARNINGS:

After cooking, turn knobs back to the “0” setting.

FRYER: PF1 - BF1

To set the cooking temperature, turn the knob clockwise, up to a maximum setting of 200°C.

When the heating element comes on, two lights, one green and one red, light up. The red light goes out when the selected temperature is reached.

It is normal for some types of lamp to show a little light even when the plates are not working.

ADVICE AND WARNINGS:

Put the frying oil in the container provided before switching on the heating element.

After cooking, wait for the oil to cool before emptying the container.

After cooking, turn knobs back to the "0" setting.

If the regulator thermostat fails, a thermostat with manual reset will be activated; this must be reactivated by a skilled engineer.

MAINTENANCE

ALL ADJUSTMENT, SERVICING ETC. PROCEDURES MUST BE CARRIED OUT WITH THE APPLIANCE DISCONNECTED FROM THE ELECTRICITY SUPPLY.

To extend the appliance working life, it must be cleaned regularly, following the instructions below:

- Electrical element:

For a longer working life, heat the element for a few moments to burn off any residues left on it during the manufacturing process.

- Control panel:

Only use warm water with a mild detergent and dry with a clean, dry cloth., dirty cloths. For easier cleaning, you may remove the knobs by pulling them up (do not apply leverage on the control panel). If the knob is stiff, apply leverage with a cloth underneath it, and remove it carefully.

- Enamelled parts:

Simply clean with soap and water with the appliance cold, and dry with a clean, dry cloth. Do not clean when hot, as this may alter the colour of the enamel.

- Stainless Steel Parts:

Clean with a soft cloth using warm water and a mild detergent, dry with a clean dry cloth.

INSTRUCTIONS FOR THE INSTALLER

INSTALLATION

All installation (electrical connection) procedures must be carried out by a skilled engineer in accordance with the regulations in force.

ALL ADJUSTMENT, SERVICING ETC. PROCEDURES MUST BE CARRIED OUT WITH THE APPLIANCE DISCONNECTED FROM THE ELECTRICITY SUPPLY.

POSITIONING

The appliance is designed for built-in installation, with dimensions above the appliance as shown in figures “1” and “2”.

If the hob is combined with an oven, follow the instructions provided by the oven's manufacturer, in all cases assuring ventilation as specified in fig. “6”. ***In all cases, the electrical connections to the two appliances must be made separately***, both for electrical reasons and to simplify extraction.

This product has a special gasket to prevent liquids from seeping into the cabinet. The gasket must be put carefully in place as shown in figure “7”.

Secure the hob with the brackets provided as shown in figure “7”.

ELECTRICAL CONNECTION

Before making the electrical connection, check that:

- The characteristics of the home's power supply comply with the requirements stated on the nameplate provided underneath the hob and in this handbook;
 - Ensure that there is an earth connection system in good working order;
 - If the appliance does not have a power lead, use material complying with characteristics stated on the nameplate provided underneath the hob and in this handbook;
 - In case of direct connection to the mains, an omnipolar circuit-breaker with contact breaking gap of at least 3 mm must be installed on the power supply line in an easily accessible position close to the appliance (there must be no break in the yellow-green earth wire).
 - Characteristics of the Barbecue cable: 3x1,5 IMQ (H05VV-F)
 - Characteristics of the Fryer cable: 3x1,5 IMQ (H05RN-F)
- Add electrical rating for each model please

THE MANUFACTURER ACCEPTS NO LIABILITY IN CASE OF FAILURE TO COMPLY WITH THE ABOVE INSTRUCTIONS AND WITH NORMAL ACCIDENT PREVENTION STANDARDS.

“Please note that this appliances carries the **CE** mark for normal domestic use and is not suitable for the marine environment”

Fig. 1

 
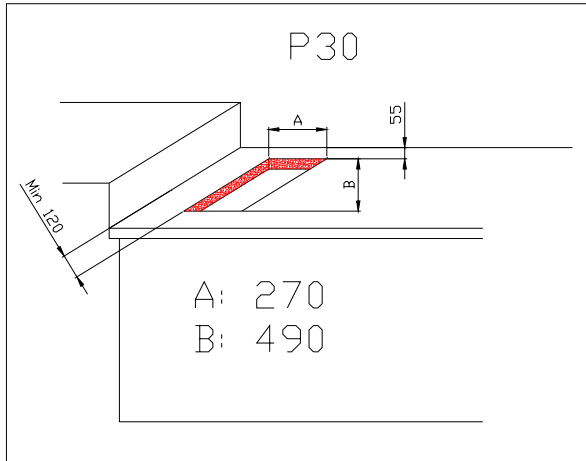 


Fig. 2

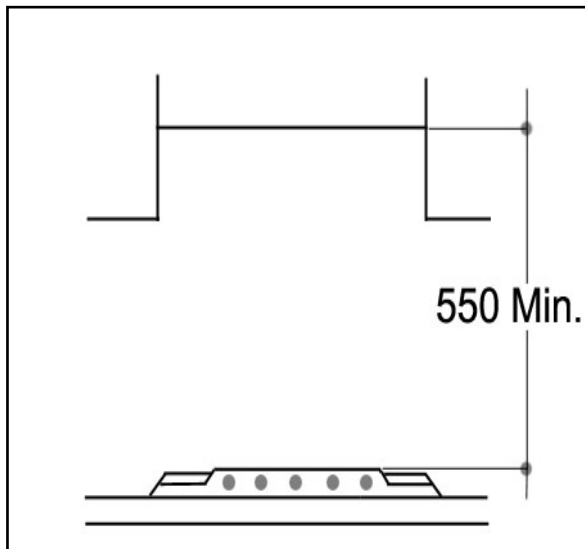

BARBECUE

FRYER

Fig. 3

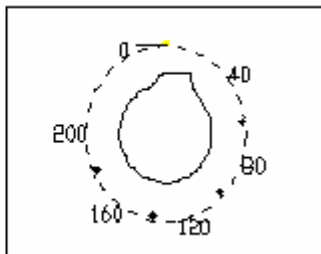 
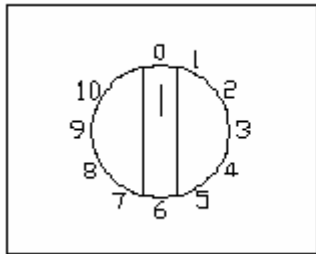 


Fig. 5

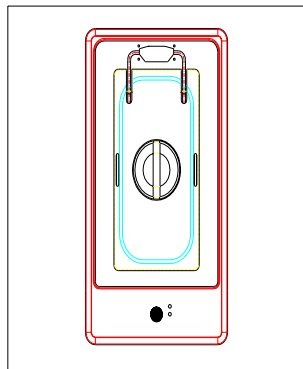 
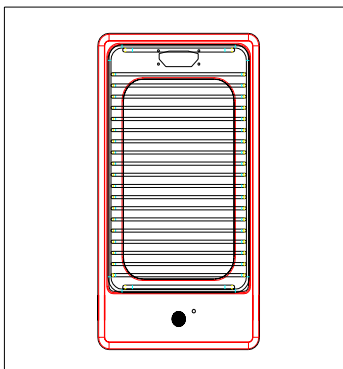 


Fig. 6

 
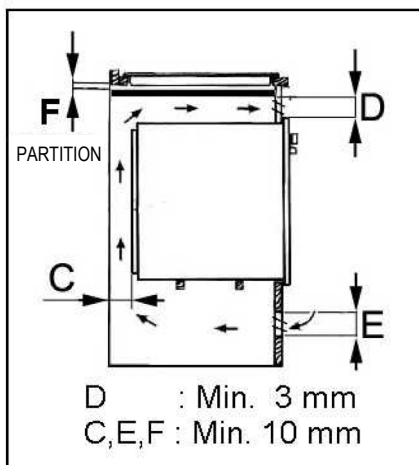 


Fig. 7

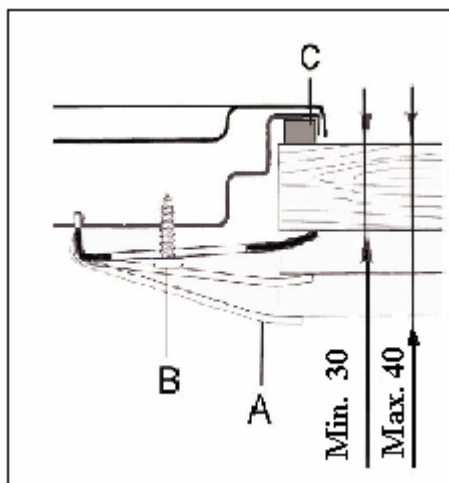

Baumatic Ltd. Conditions of guarantee

Dear Customer,

Your new Baumatic appliance comes complete with a free 12 month guarantee covering both parts and labour costs resulting from defective materials or workmanship.

Baumatic also gives you the opportunity to automatically extend the guarantee period for a further 12 months at no extra cost, giving an initial guarantee period of 24 months. The extended guarantee period applies to England, Scotland, Wales and Northern Ireland only.

To qualify for your full 24 months guarantee you **must** register your appliance within 28 days of purchase to be covered under this guarantee. This can be done online via: www.baumatic.co.uk or through returning the guarantee card which can be found in each new Baumatic appliance.

* In addition, your appliance is covered by a 5 year parts warranty. Baumatic Ltd will provide free of charge the parts required to repair the appliance, only if they are fitted by a Baumatic engineer, for any defect that arises due to faulty materials or workmanship within a period of 5 years from the original purchase date.

* An additional 1 to 3 year insurance scheme for labour is available should you wish to extend the warranty period.

Should any person other than an authorised representative of Baumatic Ltd interfere with the appliance, the policy is negated and Baumatic Ltd will be under no further liability.

The guarantee covers the appliance for normal domestic use only, unless otherwise stated.

Any claims made under the terms of the guarantee must be supported by the original invoice/bill of sale issued at the time of purchase.

This guarantee is transferable only with the written consent of Baumatic Ltd.

If the appliance fails and is considered either not repairable or uneconomical to repair between 12 months (2 years if registered) and five years, a free of charge replacement will not be offered.

The guarantee for any replacement will only be for the remainder of the guarantee on the original product purchased.

The guarantee does not cover:

- Sinks and taps
- Failure to comply with the manufacturers instructions for use.
- The replacement of cosmetic components of accessories
- Accidental damage or wilful abuse.
- Subsequent loss or damage owing to the failure of the appliance or electrical supply
- Incorrect installation
- Losses caused by Acts of God, civil war, failure to obtain spare parts, strikes or lockouts
- Filters, fuses, light bulbs, external hoses, damage to bodywork, paintwork, plastic items, covers, baskets, trays, shelves, burner bases, burner caps, decals, corrosion, rubber seals.

In the course of the work carried out it may be necessary to remove the appliance from it operating position. Whilst all reasonable care will be taken, Baumatic Ltd cannot accept responsibility for damage sustained to any property whatsoever in this process.

This guarantee is in addition to and does not diminish your statutory or legal rights.

Contacting Baumatic Ltd

| Sales | Service | Spares | Technical/Advice |
|--------------------|--------------------|--------------------|------------------|
| TEL: 0118 933 6900 | TEL: 0118 933 6911 | TEL: 0118 933 6922 | 0118 933 6933 |
| FAX: 0118 931 0035 | FAX: 0118 986 9124 | FAX: 0118 933 6942 | 0118 933 6942 |

For ROI (Republic of Ireland), please contact one of the numbers below:

TEL: 01 – 6266798 FAX: 01 - 6266634

Thanks you for buying Baumatic.

* Applies to UK, Scotland, Wales & Northern Ireland only (Republic of Ireland has 1 year labour & 1 year parts warranty only)

Baumatic Ltd

You will be mine

Headquarters

Baumatic Ltd.
Baumatic Buildings,
6 Bennet Road,
Reading,
Berkshire
RG2 0QX, United Kingdom

Sales Telephone
+44 118 933 6900

Sales Fax
+44 118 931 0035

Service Telephone
+44 118 933 6911

Service Fax
+44 118 986 9124

Spares Telephone
+44 118 933 6922

Technical / Advice Telephone
+44 118 933 6933

E-mail:

sales@baumatic.co.uk

technical@baumatic.co.uk

Http (Internet site):
www.baumatic.com



Baumatic®

www.baumatic.com