


REFLEX
FRIDGE-FREEZER

Instruction manual

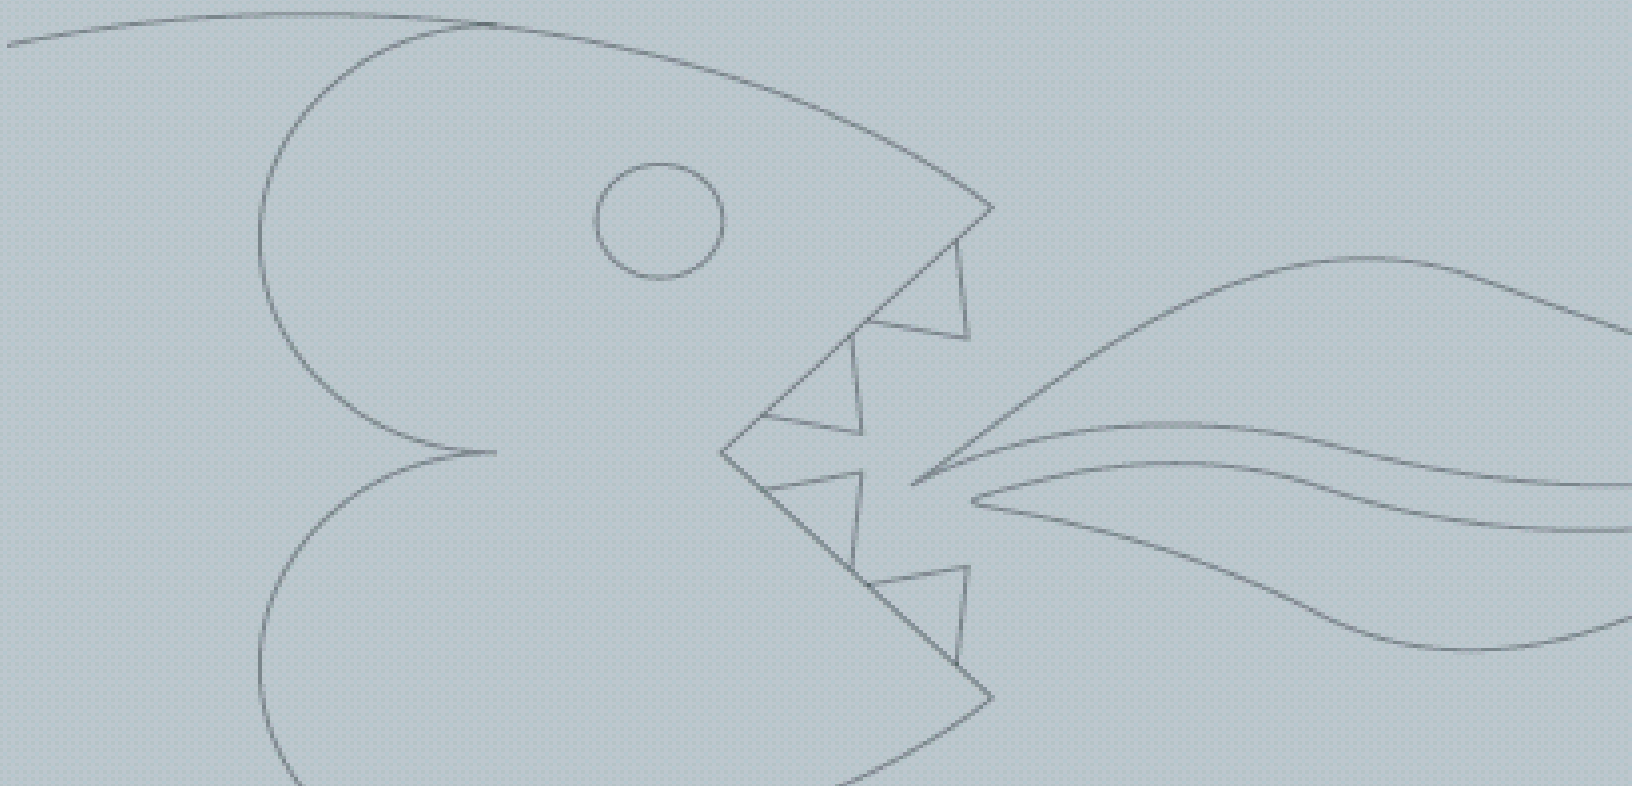

User Manual for your **REFLEX** **FRIDGE-FREEZER**



NOTE: This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference.

DD 18/12/06

CONTENTS

YOUR FRIDGE-FREEZER'S SPECIFICATIONS3

SAFETY INFORMATION / ENVIRONMENTAL NOTE 4

USING YOUR FRIDGE-FREEZER.....5-13

YOUR REFLEX FRIDGE-FREEZER.....5

BEFORE USING YOUR FRIDGE-FREEZER.....6

USING YOUR FRIDGE-FREEZER.....7-15

ARRANGING FOOD16-17

NOTES ON USING YOUR APPLIANCE18

CLEANING AND MAINTENANCE.....19-21

INSTALLING YOUR FRIDGE-FREEZER.....22-29

TROUBLESHOOTING30

CONDITIONS OF GUARANTEE.....33

CONTACT DETAILS.....34

Specifications of your REFLEX Fridge-freezer

Congratulations on purchasing a Baumatic REFLEX Fridge-Freezer!

Your Fridge-Freezer has:

- ***Digital control panel***
- ***Ice maker***
- ***Water dispenser***
- ***Gross capacity: 556 litres***
- ***Net capacity (fridge / freezer): 365/191 litres***
- ***Energy efficiency class: A***
- ***Star rating: *******
- ***Frost Free fridge & freezer***
- ***Multi airflow cooling system***
- ***Deodorizer***
- ***Open door warning alarm***
- ***NANO Anti-bacterial accessories***
- ***4 Safety glass shelves***
- ***Meat drawer***
- ***Folding Wine tray***
- ***2 Salad crispers***
- ***Egg rack***
- ***Butter compartment***
- ***2 General racks***
- ***2 Bottle racks***
- ***3 Freezer shelves***
- ***6 Door racks***

Dimensions mm (H x W x D)

1812 x 942 x 803

To fully enjoy using your appliance long into the future, please firstly familiarise yourself with the specifications, safety advice and operational instructions included in this manual.

NOTE:

When you install your Fridge-Freezer, it is important to bear in mind its climatic rating.


In order to find out the climatic rating of your appliance, check the data rating tag inside your refrigerator. It indicates the ambient temperature range within which your appliance will function.

Important Safety Information: Please Read this before installing & using.

ELECTRICAL SAFETY


 This appliance complies with Directive 89/368/EEC 73/23/EEC and following changes.

- **NOTE** - This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance of electrical current. You will be able to tell if it is because a non-grounded appliance will give off an electrical discharge. **Manufacturer declines all responsibility for any damage due to non-grounding of appliance.**
 - DURING THE GUARANTEE PERIOD ONLY BAUMATIC SERVICE ENGINEERS OR AN AUTHORISED AGENT OF BAUMATIC SHOULD CARRY OUT REPAIRS ON THIS UNIT.
 - DO NOT USE IF THE SUPPLY CORD IS DAMAGED. NEVER TAKE RISKS WITH FIRE!
- **ENSURE YOU CONNECT THIS APPLIANCE TO A SUPPLY RATED AT 220-240V (or 200-230V) and 50HZ.**
- **NOTE: the supporting structure is constructed in panels of treated sheet steel, electrostatically enamelled to resist ill-treatment and to give long-lasting beauty and shine.**


 Do not attempt to alter the specifications of this appliance. Doing so could damage the machine, cause injury & invalidate your warranty. **DO NOT USE ADAPTERS/SHUNTS.**


 Do not allow children to play with, near or inside this Fridge-Freezer.


 Do not pull on the power supply cable to free the plug from the wall!


 Do not attempt to use your Fridge-Freezer outdoors or any place where it is likely to come into contact with the elements.

 Do not pull out or insert the plug with wet hands.

 Before any cleaning or maintenance work, ensure that the appliance has been disconnected from the power supply.

 Never allow the back coils of the Fridge-freezer to come into contact with any wall surface. **ALWAYS ENSURE THAT THE SPACE INTO WHICH YOU ARE PLACING YOUR APPLIANCE IS FREE OF STORED ITEMS SUCH AS PAPERS OR OTHER FLAMMABLE MATERIALS.**

 **NEVER** block the VENTILATION OPENINGS OF THE APPLIANCE EITHER INSIDE OR ON ITS EXTERIOR. IT IS VITAL TO KEEP YOUR FRIDGE-FREEZER WELL VENTILATED SO THAT THERE IS PROPER AIR FLOW BETWEEN THE BOTTOM OF THE UNIT AND THE PLINTH / KICK PLATE ON WHICH IT IS SITTING.


 **WARNING – DO NOT DAMAGE THE REFRIGERANT CIRCUIT. AT THE END OF THE FUNCTIONAL LIFE OF THE EQUIPMENT (WHICH USES COOLING GAS R600a [ISOBUTANE]) AND INFLAMMABLE GAS INSIDE THE INSULATING FOAM, IT MUST BE PLACED IN SAFETY BEFORE SENDING IT FOR PROPER WASTE DISPOSAL.**

PLEASE OBSERVE ALL INSTALLATION ADVICE IN THIS MANUAL FOR SAFE USAGE OF YOUR APPLIANCE.


Note: Before discarding an old refrigerator/freezer, switch off and disconnect it from the power supply. Cut off and render any plug useless. Ensure that the door cannot jam (removing it is best), regardless of whether or not it can be pushed open from inside. **AN OLD FRIDGE/FREEZER CAN BE A DEADLY PLAYTHING FOR CHILDREN!**

CONFORMITY TO W.E.E.E. DIRECTIVE

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.


Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

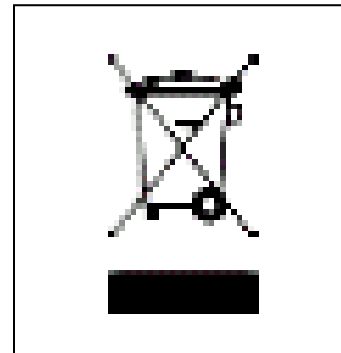

Using your Baumatic REFLEX FRIDGE-FREEZER:

Your REFLEX Fridge-Freezer:

KEY

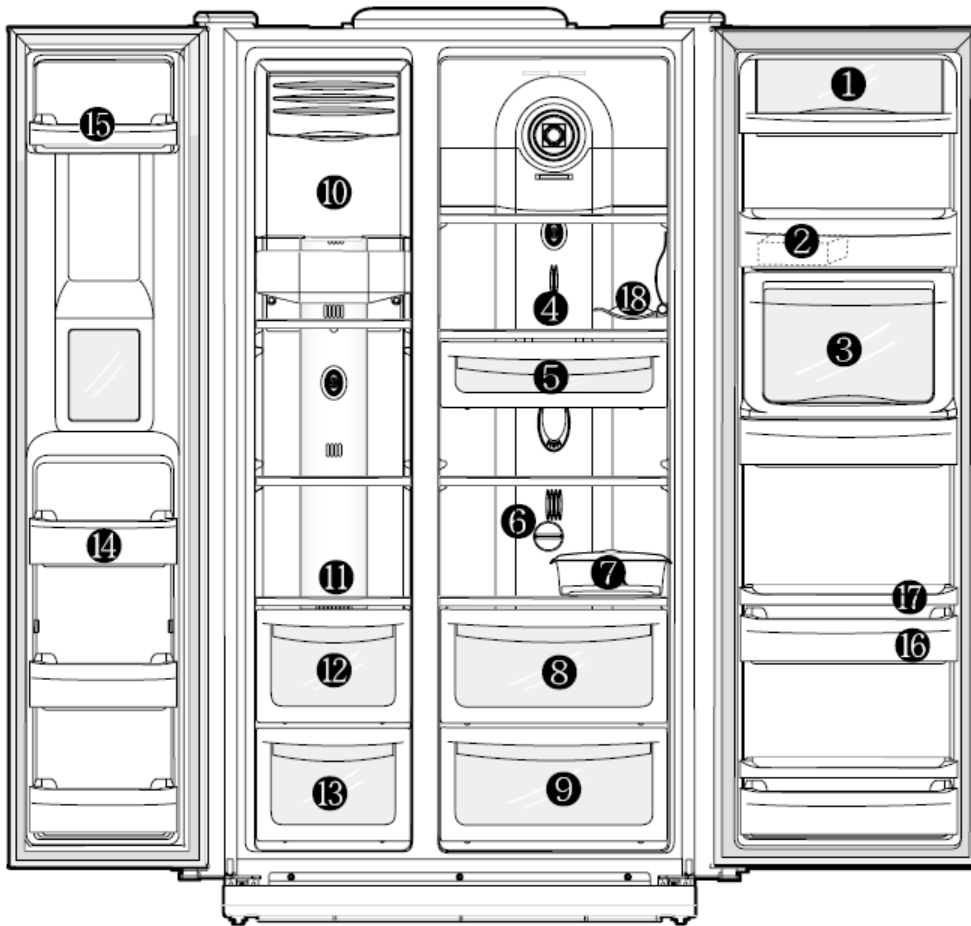

1. **DAIRY SECTION** - For storing dairy products such as butter & cheese.
2. **SMALL POCKET** - For storing small, packaged foods.
3. **DRINKS SECTION** - For beverages and canned drinks.
4. **REFRIGERATOR SHELF** (Tempered Glass) - For storing common foods.
5. **CHILLED CASE** - For storing foods temporarily that are ready to cook (meat, fish ...).
6. **VEGETABLE & CHILLED CASE TEMPERATURE DIAL** - This dial sets the desired temperature.
7. **MOVABLE EGG CASE** - The egg rack within can be lifted out at your convenience.

8. **VEGETABLE CASE & CHILLED CASE** - A crisper for storing vegetables.
9. **FRUIT CASE** - A crisper for storing fruit.
10. **ICE CUBES STORAGE CASE.**
11. **FREEZER SHELF** (Tempered glass) - For storing frozen food such as meat, fish, ice-cream...

12. **DRYING CASE** - For storing dried foods.
13. **MEAT CASE** - For storing meat, fish, chicken with foil cover or vinyl wrap.
14. **FREEZER POCKETS** - For storing frozen foods. **NOTE** - **DO NOT** store ice cream or long stored foods in the top freezer pocket.
15. **FREEZER SMALL POCKET** - For storing small frozen foods.

16. **REFRIGERATOR RACK** - For storing refrigerating foods, milk, juice, beer, etc.
17. **REFRIGERATOR RACK BAR** - Keeps tall containers from falling from the rack bar.
18. **WINE BOTTLE RACK** - Holds one wine bottle.

UPON DELIVERY:

When your Fridge-Freezer has been delivered, you will need to wait approximately **8 hours** before turning it on. The refrigerant in the compressor needs time to settle.

PLEASE DO NOT PLUG OR SWITCH ON THE APPLIANCE ANY EARLIER THAN THIS!

.....
NOTE:

THERE CAN BE AN ODOUR WHEN YOU FIRST SWITCH ON THE APPLIANCE. IT WILL VANISH WHEN THE UNIT STARTS COOLING.

We recommend that you have the Fridge-Freezer delivered near to where you plan to install it so that the refrigerant can settle.

SITUATING YOUR FRIDGE-FREEZER

CAUTION: DO NOT PLACE THE APPLIANCE NEAR HEAT SOURCES, AND LEAVE AT LEAST 5CM OF SPACE ABOVE THE UPPER SECTION AND 5 INCHES (12.7 CM) BETWEEN THE REAR OF THE APPLIANCE AND THE WALL BEHIND IT.


FOR FULL INSTALLATION ADVICE, PLEASE SEE PAGE 21

MAKE A NOTE OF THE LOCATION FOR YOUR NEW FRIDGE-FREEZER. MAKE SURE THAT IT WILL FIT PROPERLY AND ENSURE THAT:-

- 1) The doors can open freely and completely.**
- 2) You can access your food conveniently.**
- 3) There is sufficient space at the back for the cooling coils to give off heat safely & that they do not touch the plug (see SAFETY SECTION).**

TURNING YOUR FRIDGE-FREEZER ON FOR THE FIRST TIME

- Once you have installed your fridge-freezer and plugged it in, you will need to understand how the **CONTROL PANEL** works in order to set the temperature you want your appliance to operate at.
- Please familiarise yourself with the control panel which can be found at the top of the unit.

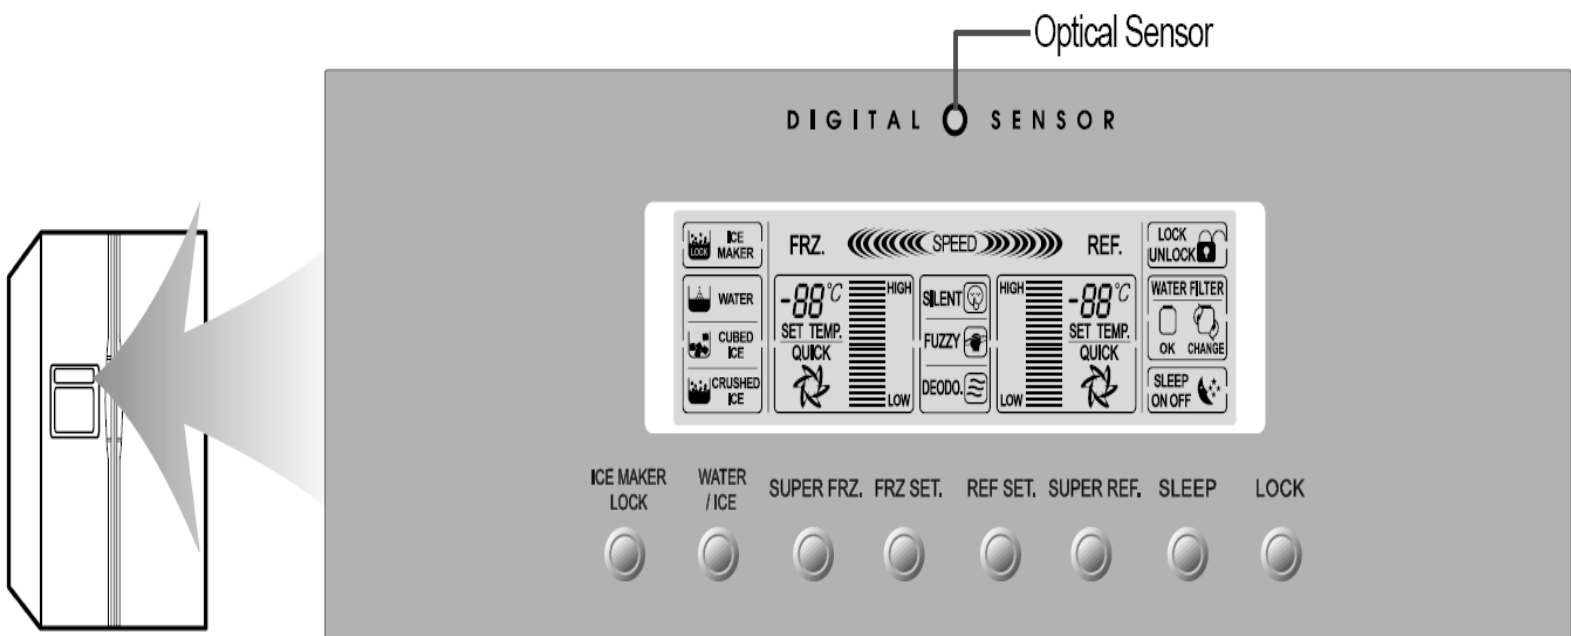

KEY



This mode will engage if you fill the fridge with too much food at once or if you open the door too frequently. SPEED MODE will then start automatically to maintain the optimal temperature.



The Optimal Sensor in the top centre of the panel senses the amount of light surrounding the refrigerator.

Whenever this sensor detects darkness (at night) the Silent Mode will engage so that the appliance makes less working noise.

CAUTION – DO NOT COVER the sensor with anything (magnets, papers, etc.).




Shows that the digital control system is working in the refrigerator (This icon is always lit when appliance is on).



As long as the refrigerator is working, this icon is lit to show that the deodorising function is operating.

LCD Background Light

WATER FILTER CHANGE:

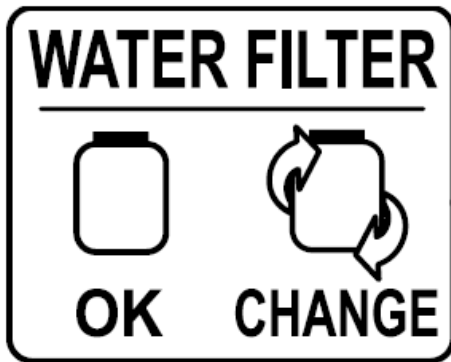

The LCD light turns on in the following case to help you control the panel easily ;

- When the refrigerator is plugged in
- When you push a button (The background light turns on first, then button mode is activated.)
- When you open the door

※ If you push a button when the backlight is off, only the backlight turns on and it does not affect any other button mode.

The LCD light turns off in the following case to save energy consumption ;

- 1 minute after power plug in
- 10 seconds after the door is closed
- No other button is pushed for more than 1 minute after button selection


※ When you look at LCD display from side or down, not from front, the display (letters, icons and signs) can look faded or dim.

The NORMAL LED () will stay lit for the first six months after the first switching on of the appliance.

When the time comes to CHANGE the filter or RESET (), press the ICE MAKER LOCK for 3 seconds or more while pressing the

LOCK button. The LED will then change to NORMAL ().

CHILD LOCK FUNCTION

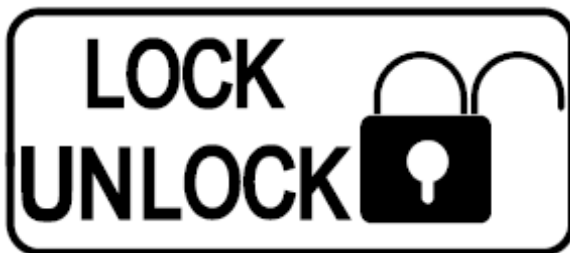

To keep your appliance safe from accidental damage caused by children pressing buttons, you can set the LOCK function.

Press this button to disable the control panel and to keep the function and temperature set as intended.

TO SET THE LOCK:


Press the LOCK button.

TO UNLOCK:

Press the LOCK button again for longer than a second to UNLOCK.

Note

- Interior lights of refrigerator turn off when the doors are open for more than 10 minutes.
- In case either freezer or refrigerator door is open for more than a minute, door alarm rings for 5 minutes with 1 minute interval.

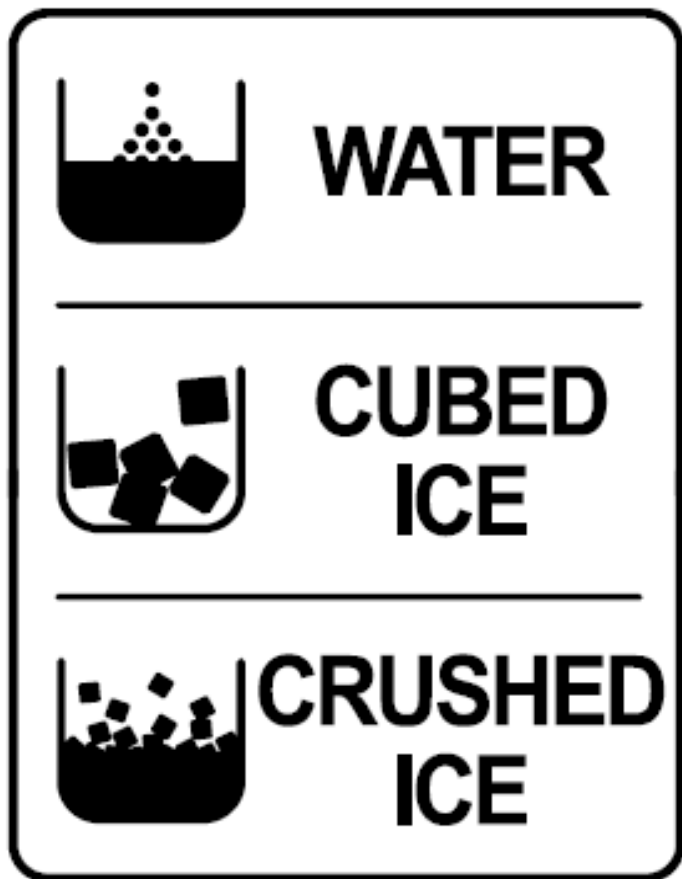

For your convenience, you can select **WATER, CUBED ICE, or CRUSHED ICE.**

- A rectangular line will light up around your selection to indicate that this will be the selection dispensed.

TO OBTAIN YOUR SELECTION:
PRESS the WATER/ICE button until the selection you want is lit up on the display.

- While holding your cup or glass beneath the dispenser, **PRESS the WATER/ICE button again.**
- Your selection will be dispensed 1-2 seconds later.

NOTE: Be careful that you have your glass held properly beneath the dispenser to avoid the chance of spillage.

If you need total silence from the refrigerator, just push the SLEEP button.

- This MODE will work for a maximum of 12 hours before returning to the previously set mode.
- If you want to stop SLEEP mode before 12 hours is up, just push the button again.




When cleaning the ice cubes case assembly or when you do not use the ice maker for a long period, remove the ice cubes in the ice storage case and press the button to stop making ice cubes.



SETTING THE TEMPERATURE IN YOUR REFRIGERATOR

Push the REF SET. button and the setting temperature changes as the figure shows.

>>> Sequential Temperature Change <<<

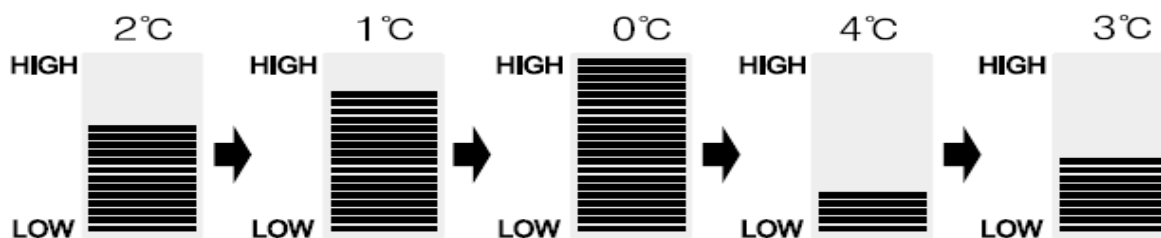


Faster Cooling or Refrigeration

When you want faster refrigerating, push the SUPER REF. button, then “QUICK” icon turns on and the mode starts. Just push the button once again when you want to stop the mode.



REF SET. SUPER REF.

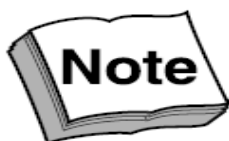

Note

- The inside temperature varies according to door openings, amount of foods, surrounding temperature etc.
- The mode ends automatically and it returns to the previously set mode.

For example) The refrigerator is working on [LOW Mode]. --> [SUPER REF.] starts and ends. --> Returns to [LOW Mode] again.


NOTE: AMBIENT TEMPERATURES OF 5 DEGREES CELSIUS OR LESS CAN CAUSE ITEMS IN YOUR REFRIGERATOR TO FREEZE - BE CAREFUL WHERE YOU SITUATE IT.

YOUR REFRIGERATOR HAS A VEGETABLE AND CHILLED CASE ('6' in Key on page 5).


This can be used either as a crisper for keeping vegetables or as a colder chilled case, for your convenience.

- **THE TEMPERATURE IN THE CHILLED CASE IS SOMEWHAT LOWER THAN THE VEGETABLE ONE.**

SETTING THE TEMPERATURE IN YOUR FREEZER

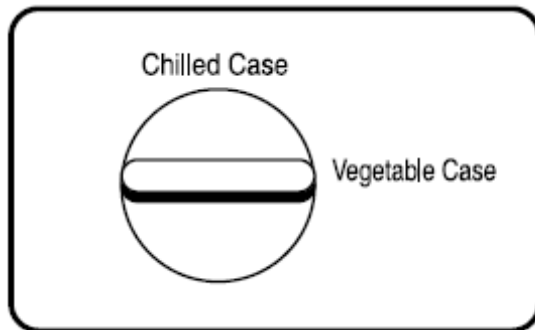

When you turn the dial to 'Vegetable Case', the temperature in the drawer will be ideal for storing vegetables.

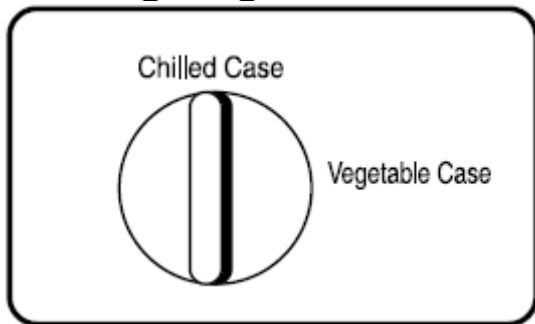



When you turn the dial to 'Chilled Case', the temperature in the drawer will be lower than when set on 'Vegetable Case', this will allow you to keep food more fresh.

- Do not place items of food close to the cold air spout, as this can weaken the cold air circulation.
- Do not try to store fish in the 'Chilled Case' for a long time – it will deteriorate. For long term storage of fish, it is better to store it in the freezer.

SETTING THE TEMPERATURE IN YOUR FREEZER


Push the FRZ SET. button and the setting temperature changes as the figure shows.

>>> Sequential Temperature Change <<<

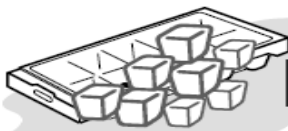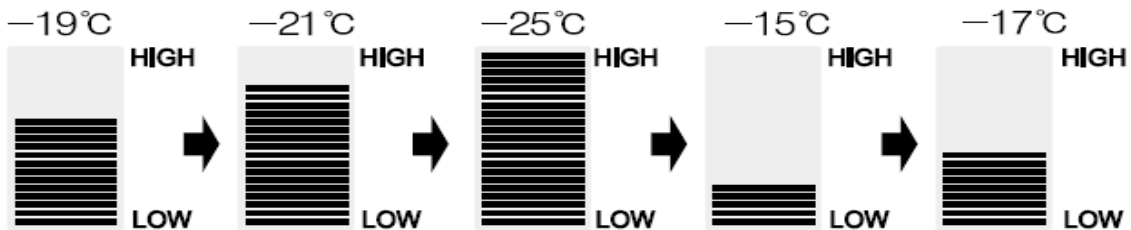


Faster Freezing...

When you want faster freezing, push the SUPER FRZ. button, then “QUICK” icon turns on and the mode starts. Just push the button once again when you want to stop the mode.

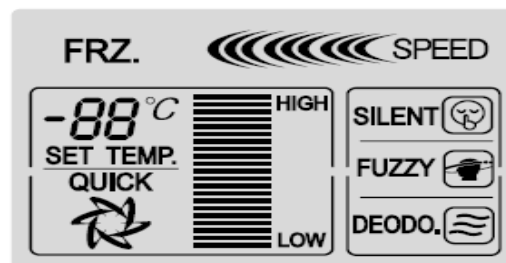

SUPER FRZ. FRZ SET.

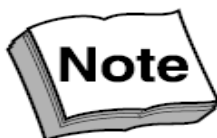

- The inside temperature varies according to door openings, amount of foods, surrounding temperature etc.
- The mode ends automatically and it returns to the previously set mode.

For example) The refrigerator is working on [LOW Mode]. --> [SUPER FRZ.] starts and ends. --> Returns to [LOW Mode] again.

USING THE AUTOMATIC ICEMAKER IN YOUR FRIDGE-FREEZER



Press the WATER/ICE button to select WATER and LED lights up to show it is on.



Press the WATER/ICE button to select CUBED ICE and LED turns on.



Press the WATER/ICE button to select CRUSHED ICE and LED turns on.



WATER



CUBED ICE



CRUSHED ICE

※ When you get [CUBED ICE] or [CRUSHED ICE], remove the cup from the pad when it is half full.
(If you don't, the remaining ICES will make the cup overflow or the dispenser outlet become blocked.)



Caution

- Avoid using thin fragile cups or crystal glasses when taking (crushed) icecubes.
- For your safety, never insert your fingers or other tools into the dispenser outlet.
- If you find the (crushed/cubed) ices discolored, stop using the dispenser and call the service agent.
- 1 hour after you get [CUBED ICE] or [CRUSHED ICE], the selection mode returns to [WATER] automatically.

TIP

- If you dispense 3 cups of water or more, the next charge of water may not be cool. Add some ice cubes to the water or wait until the water becomes cold once again before obtaining water from your appliance.

NOTE:

- About 10 ice cubes a day (7-8 times daily) are made at one time. If the ice storage tray becomes full, ice making will stop.
- The icemaker will make banging noises when ice cubes fall into the ice storage case. **THIS IS NORMAL.**
- To prevent bad odour or smells, regularly clean the ice cube storage chest.

FROST FREE FEATURE

IMPORTANT NOTE:

Both your fridge and freezer are FROST FREE. This means that you will NEVER HAVE TO DEFROST either your refrigerator or your freezer.

- Your appliance will prevent frost from forming anywhere in the appliance.
- Although this feature virtually guarantees a frostless environment, you should still be careful NOT to expose the interior of the appliance to excessive amounts of humidity.

REMINDER: Allow the unit time to settle after delivery. If your plug and power socket are now behind the fridge and you still need to move the unit into place, be especially careful: ***Remember to leave a safe distance between the back of the fridge and the wall.***

When you first switch on the appliance, allow 24 hours for it to cool down to the desired temperature. During this time, DO NOT open the door often or place a lot of food inside the unit.

ARRANGING FOOD IN YOUR FRIDGE-FREEZER

Refrigerator Compartment:

- *To reduce humidity and the consequent increase of frost, NEVER place liquids in unsealed containers in the refrigerator. Frost tends to concentrate in the coldest parts of the evaporator. In time, the unit will need more frequent defrosting if too much humidity develops inside it.*
- *NEVER place warm food inside the refrigerator. Warm food must be allowed to cool at room temperature. It should then be arranged to ensure adequate air circulation in the refrigerator compartment.*
- *DO NOT ALLOW anything to touch the refrigerator's back wall as it will cause frost. Also, packaging, especially paper, can stick to it and spoil.*
- *DO NOT open the refrigerator door too often or leave it open for long spells of time.*
- *ARRANGE meat and cleaned fish (wrapped in packages or sheets of plastic) which you will then use within 1-2 days, towards the rear of the fridge compartment.*
- *You can put fruits and vegetables into the crisper without packing them.*

REMINDER: *You should regulate the temperature of your Fridge-Freezer bearing the following in mind:*

- **Ambient temperature**
- **How often the doors are opened and closed**
- **Quantity of food stored in the compartments**
- **The location of your appliance**

ARRANGING FOOD IN YOUR FRIDGE-FREEZER

Freezer Compartment

- Your freezer's primary function is to allow you to store deep-frozen or frozen foods for long periods of time, and to make ice cubes.

• **DO NOT PUT SEALED CONTAINERS LIKE BOTTLES IN THE FREEZER.**

• **DO NOT PUT WARM FOOD INTO THE FREEZER.**

• **DO NOT PUT FRESH OR WARMISH FOOD WITH FROZEN FOOD SIDE-BY-SIDE AS THE FORMER CAN THAW THE LATTER AND CAUSE SPOILAGE.**

- While freezing large quantities of fresh food (meat, fish, mincemeat, etc.), divide it into freezer bags so you can access them separately.
- The instructions shown on frozen food packages should always be carefully followed. If no information is provided, food should not be stored for more than 3 months from the purchase date.

• **WHEN BUYING FROZEN FOOD, ENSURE THAT THESE HAVE BEEN FROZEN AT SUITABLE TEMPERATURES AND THAT THE PACKAGING IS INTACT AND NOT SODDEN. STORE YOUR FROZEN GOODS IN YOUR FREEZER AS SOON AS POSSIBLE AFTER PURCHASE.**


• **IF A PACKAGE OF FROZEN FOOD SHOWS SIGNS OF SWELLING OR WET MARKS, IT IS PROBABLE THAT THE FOOD HAD PREVIOUSLY BEEN POORLY STORED AND HAS NOW DETERIORATED. DISCARD IT.**

- The storage life of frozen food depends on the room temperature, thermostat setting, how often the door is opened, the type of food and how long it has taken to get the food from the store to your freezer. Always follow the printed packaging instructions and never exceed the maximum storage life indicated.


Food Storage Tips



Wash foods before storing.

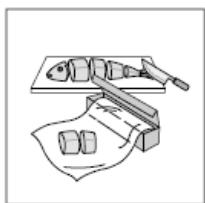

Divide and separate foods into smaller pieces.

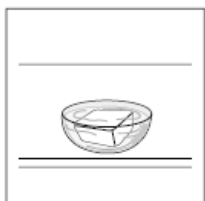

Place watery foods or foods with much moisture in front of shelves (close to door side).

● If they are placed close to the cold air spout, they can be frozen.



Warm or hot foods should be cooled down enough before storing to reduce power consumption and to enhance refrigeration performance.



Be careful in storing such tropical fruit as bananas, pineapples, tomatos, for they can easily be deteriorate in lower temperature.



Keep enough space between the foods as possible. If too tight or too close, cold air circulation is hindered, resulting in poor refrigeration.



Never forget to cover or wrap foods to prevent odour of foods.

DEODORIZER

- This refrigerator is equipped with a deodorizer that traps and breaks down unpleasant smells, thus keeping the air in the refrigeration compartment fresh.
- This deodorization system is located in the cooling air passage in the wall of the refrigeration compartment.

NOTE: To ensure maximum deodorizing performance, wrap foods and foodstuffs that emit powerful odour in plastic wrapping film.

NOTE: Be careful where you store your appliance. For example, your refrigerator will experience performance difficulties if it is kept in a place whose temperature dips below the set temperature of the refrigerator.

Also be careful to keep the air vents on the rear inside wall of the refrigerator open.

IN CASE OF A BLACKOUT **(GENERAL POWER FAILURE)**

In case of Power Failure, try to find out how long the electricity will be off. If the failure is not going to be for any longer than 12 hours, leave the food in the freezer and keep the door closed.

If the POWER FAILURE is going to last longer than 12 hours and some food defrosts, consume the latter as soon as possible.

CLEANING / MAINTENANCE


NOTE: Before attempting to clean your Fridge-Freezer, UNPLUG IT and make sure you do the following:

- ✓ Remove the baskets and the ice-cube tray.
- ✓ Leave the door open.
- ✓ In order to collect water deposits, take out the bottom drawer and soak up the water using a sponge.
- ✓ Clean the inside of your Fridge-Freezer using a solution of soda bicarbonate in warm water (1 tablespoon Bicarbonate to 2 litres of water).
- ✓ Clean the condenser (back of unit) with a broom once a year.


NEVER USE SOLVENTS TO CLEAN THE INSIDE OF YOUR FRIDGE-FREEZER.

Interior Parts

- Use cloth with water and mild(neutral) detergent to clean

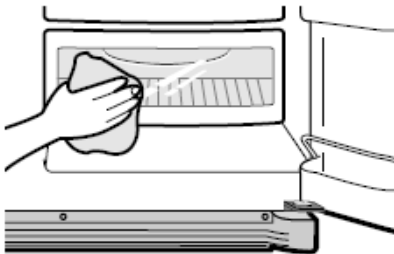


- Remove dust on grill with a vacuum cleaner at least once a year.

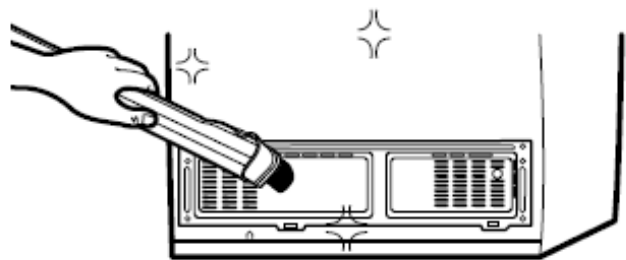


Door Packing

- Use cloth with mild(neutral) detergent.

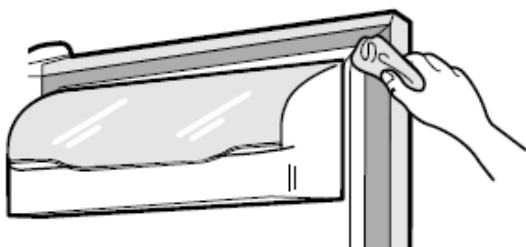


Dairy Pocket

- Dairy Pocket Cover ; Open the cover a little, hold both ends and push left to remove.
- Dairy Pocket ; Hold both ends and pull upward to remove.

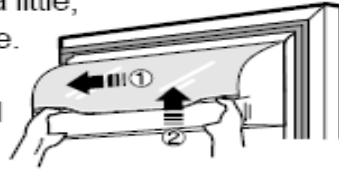

Freezer & Refrigerator Pockets

- Hold both ends and pull up.
- 4th and 5th pocket
- ① Removing ; Remove Pocket Guide first, then Pocket.
- ② Replacing ; Replace Pocket first, then Pocket Guide.

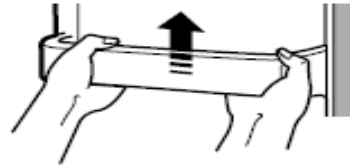


Freezer & Refrigerator Shelves

- Open the doors fully, then pull the shelves forward to remove.



Vegetable Case & Fruit Case


- Pull forward and lift up a little to remove.

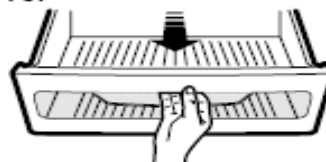


LONG ABSENCES: In the case of long absences, the appliance should be switched off and food removed from the compartments. You should also clean the interior surfaces and leave both doors slightly open to prevent the formation of mould or odour. You should empty it out completely and dry it .

REPLACING THE LIGHT BULBS


Change of Freezer Lights

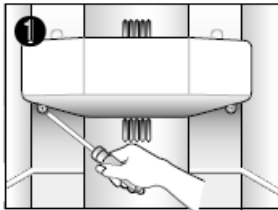


Remove the screw caps at the bottom of the light cover with a tiny tip screw driver.

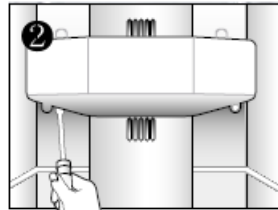

Remove the 2 screws retaining the light cover.

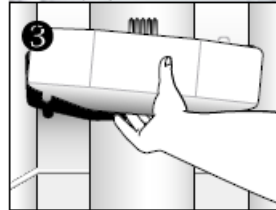


Hold the bottom of the light cover and pull forward to remove.

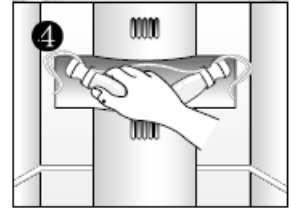


Change the light bulb.
※ Follow the reverse order of disassembling after changing the light

Change of Refrigerator Lights


Refrigerator Top Lights

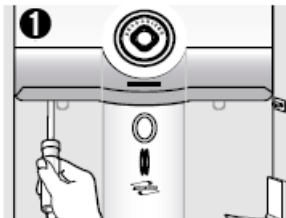


Remove the screw caps located at the bottom of the light cover with a small tip screw driver.

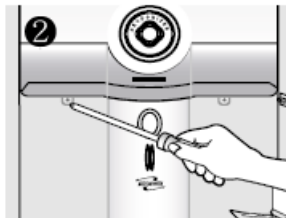

Remove the screws retaining the light cover.

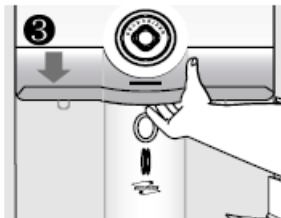


Hold the bottom of cover and pull forward to remove.

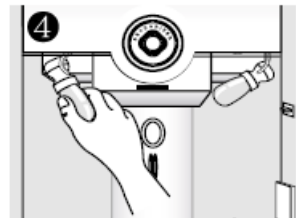

Change the light bulbs.
※ Follow the reverse order of disassembling when assembling back.

Refrigerator Bottom Lights

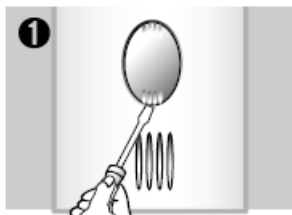

Snap out the bottom hook of the light cover with a flat tip screw driver.



Hold down the light cover to pull out.



Change the light bulb.
※ Follow the reverse order after changing the light.

How to install Water Line

1. The water pressure should be 3kgf/cm² or more to run the automatic icemaker.
※ Checkup your tap water pressure ; if a cup of 180cc is full within 10 seconds, the pressure is OK.
2. When installing the water tubes, ensure they are not close to any hot surfaces.
3. The water filter only "filters" water ; it does not eliminate any bacteria or microbes.
4. If the water pressure is not so high to run the icemaker, call the local plumber to get an additional water pressure pump.
5. The filter life depends on the amount of use. We recommend you replace the filter at least once every 6months.
※ When attaching the filter, place it for easy access (removing & replacing)
6. After installation of refrigerator and water line system, select [WATER] on your control panel and press it for 2~3 minutes to supply water into the water tank and dispense water.
7. Use sealing tape to every connection of pipes/tubes to ensure there is no water leak.
8. The water tube should be connected to the cold water line.

WATER SUPPLY KIT

- ※ Check the parts below for installing water supply.
Some other necessary parts are available at your local service agents.



Installation Procedure


1. Join Connector to the tap water line

- 1) First lock the main tap water valve.
Check if connector B and C has its own rubber packing ring in it.
- 2) Join Connector-C to the water tap, then Connector -B to connector -C with a wrench or spanner.
- 3) Insert water pipe into Connector-B and join Connector-A with a wrench or spanner.
- 4) In case Connector-C does not fit water tap join Connector-B directly to the tap. (See Figure B.)
※ If no connector fits water tap, call your local service.
- 5) Unlock main tap water valve, open tap water and check if any water leaks on each joins.


Dikkat

Place the rubber washer inside the tap connector and screw onto the water tap.

<Figure A>

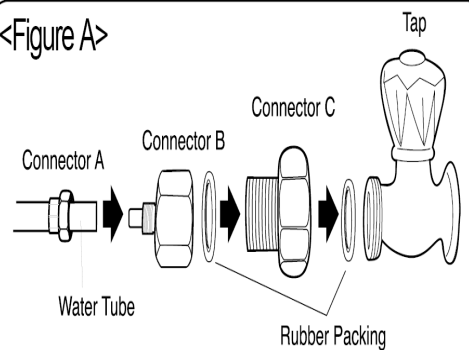

<Figure B>

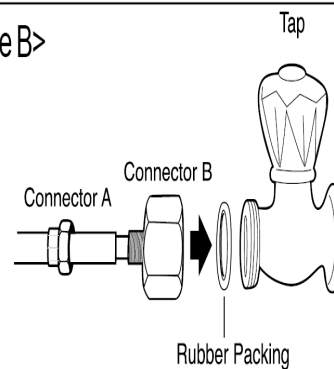


2. Get ready to install the Water Filter

- 1) Measure an approximate distance between the filter and the Water Tube and cut the tube off filter vertically.
- 2) Connect the tubes to the filter as the figure shows.


Dikkat

Leave a sufficient distance when cutting the tubes.

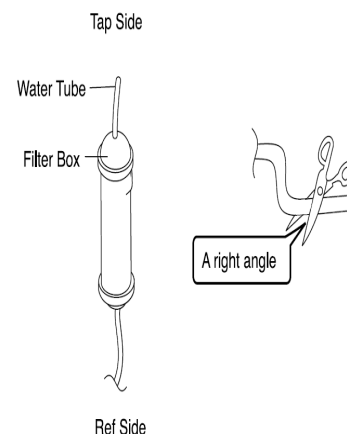


3. Remove any substances in the filter.

- 1) Open the main tap water valve and check if water comes out of the Water Tube.
- 2) Check if the Water Valve is open in case water does not come out.
- 3) Leave the valve open until clean water is coming out.
 - ※ Initial water may contain some substances out of filter (manufacturing process).

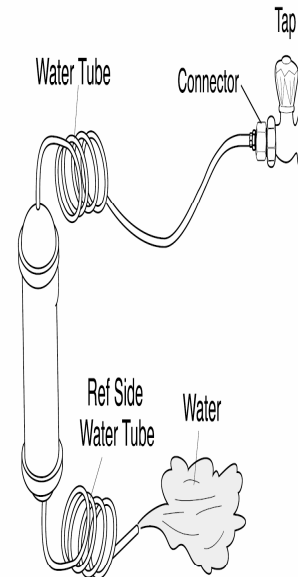


4. Attach the Filter Box

- 1) Screw and fasten the filter holder to the left/right side of the back of refrigerator.
 - ※ In case the holder is not fastened well, remove the back paper of the tape on the filter holder and attach it."
- 2) Insert the filter box into the holder.

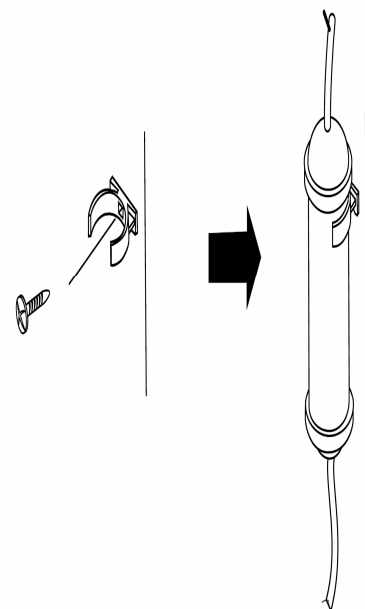

5. Connect the Water Tube to the refrigerator.


- 1) Remove the rear cover at the bottom back of the refrigerator.
- 2) Insert the fastening ring into the Water tube.
(Be careful to follow the direction of the nut.)
- 3) Insert the Water Tube into the top of the Water Valve, turn the nut clockwise to fasten it. (The Water valve is to the right of the motors.)
- 4) Check for any bent tubes or water leaks; if so, re-check installation procedure.
- 5) Replace the rear cover. (The Water Tube should be placed between the groove of the refrigerator back and motor cover.)

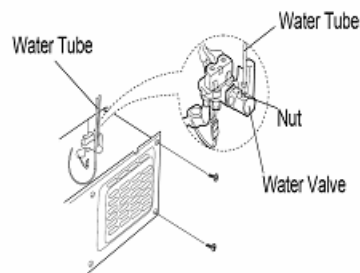

Set the tube upright as the figure shows.


6. Fasten the Water Tube.

- 1) Fasten the Water Tube with the [Fastener A].
- 2) Check if the tube is bent or squeezed. If so, set it right to prevent any water leak.

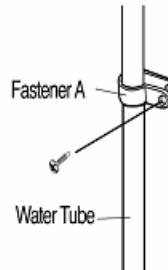

7. After installation of Water Supply System


- 1) Plug in the refrigerator, press the [WATER] button on the control panel for 2~3 minutes to remove any air (bubble) in the pipes and drain out the initial water.
- 2) Check for the water leaks again through the water supply system (tubes, connectors and pipes) Rearrange the tubes again and do not move the refrigerator.

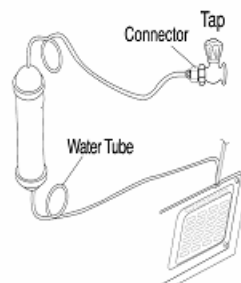

INSTALLATION INSTRUCTIONS – REFLEX FRIDGE-FREEZER:

- 1) Allow for adequate space and install your fridge-freezer on a firm, level floor. This is very important as the appliance must be level so that there will be no unnatural noises or poor cooling.
- 2) Ensure that you are going to be placing your fridge-freezer away from heat sources and in a well-ventilated position. This should be at least 50 cm from radiators, gas or coal stoves and 5 cm away from electric stoves. Do not place the appliance in the path of direct sunlight.
- 3) Make sure that the plug is accessible after positioning your fridge-freezer.
- 4) Keep a space of 15cm above your fridge freezer.
- 5) You need 5 inches, (12.7 cm) clearance between the rear of your appliance and the wall behind it. If supplied, fit the plastic wall spacers to the condenser at the back of the refrigerator.

This will maintain good performance.

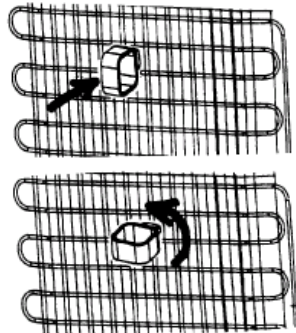
- 6) If placing beside another refrigerator or freezer, keep at least 5cm between the units to prevent condensation.
- 7) Gently move the appliance into place.

NOTE – Upon delivery, you may need to remove the freezer and/or refrigerator door/s if the appliance cannot get through your doorway.

INSTALLATION-AMBIENT TEMPERATURE GUIDELINES

YOU MUST install this appliance in a well ventilated, dry room.

Energy use is affected by the ambient temperature.

You are therefore advised to:

- Not expose the appliance to direct sunlight;
- Not install the appliance next to radiators, cookers or other sources of heat;
- Only install the appliance at a location whose ambient temperature corresponds to the climate classification, for which the appliance is designed.

The climate classification can be found on the data rating tag, which is located at the left on the inside of the appliance.

Cooling Temperature Ranges

Climate Classification	Recommended Ambient Temp.
SN	+10 to +32° C
N	+16 to +32° C
ST	+18 to +38°C
T	+18 to +43°C

If the appliance is installed next to another refrigerator or freezer a clearance of 5 cm at the side is required. This is to prevent the formation of condensation on the outside of the appliance.


● Removing Freezer Door ●

※ Remove front bottom cover first, if it is attached.

- 1** Remove the bottom cover first.
Pull out the left collar of the coupling first, then hold the coupling and pull out the left water tube.




- 2** Unscrew top hinge cover with a screw driver.
Insert a thin screw driver into the side groove of the cover to remove.

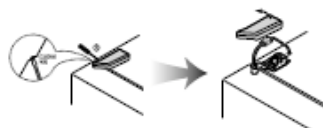


- 3** Turn top hinge fastener counterclockwise 3~4 times.
Disconnect the harness wires.



- 4** Lift up the front of hinge to remove.
(After the hinge is removed the door can fall down forward. Be careful !)

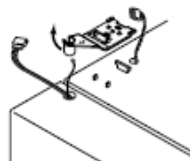


- 5** Be careful not to damage the water line when removing the door.

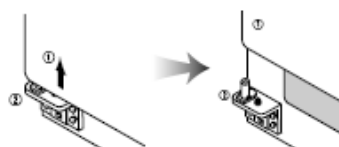


● Removing Refrigerator Door ●

 
- 1** Unscrew top hinge cover with a screw driver.
Insert a thin screw driver into the side groove of the cover to remove.




- 2** Turn top hinge fastener counterclockwise 3~4 times.
Disconnect harness wires.

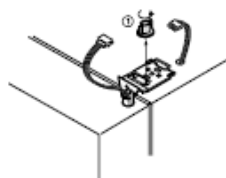

- 3** Lift up the front of hinge to remove.
(After the hinge is removed the door can fall down forward. Be careful !)

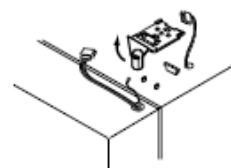

- 4** Lift the door straight up to remove.



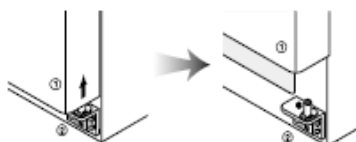




Refrigerator Leveling & Door Adjustment (If needed.)

Refrigerator must be level in order to maintain optimal performance and desirable front appearance.
(If the floor beneath the refrigerator is uneven, freezer and refrigerator doors look unbalanced.)

● In case freezer door is lower than refrigerator door... ●

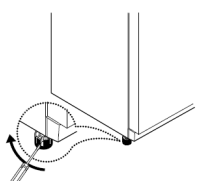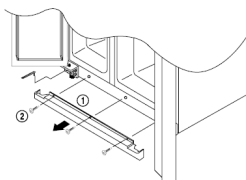
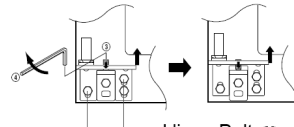
<p>1 Insert a screw driver (flat tip) into a groove of the left wheel (bottom of freezer) and turn it clockwise until the door is balanced. (clockwise to raise freezer door ; counterclockwise to lower) ※ Unless the freezer door is balanced by step 1, then follow the next steps.</p> 	<p>2 Open the doors, unscrew the front cover and remove, if it is attached.</p> 	<p>3 Loosen 3 hinge bolts(1 on the left + 2 on the right) a little. (Do not unfasten them completely.) Insert a hexagonal wrench into the groove of adjusting nut and turn clockwise until the door is level.</p> <p>4 Once the door is balanced, fasten the hinge bolts tightly and screw the front cover.</p>  <p style="text-align: right;">Hinge Bolt (5)</p>
---	--	--



Caution

- The front of refrigerator needs to be higher just a little than the back for easy door closing, but if the wheel is raised too much for door balance, i.e. front of refrigerator is too higher than the back, it can be difficult to open the door.

● In case refrigerator door is lower than freezer door... ●
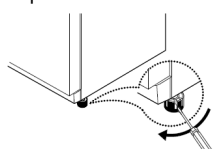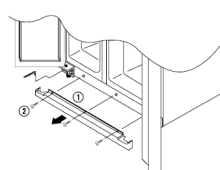
<p>1 Insert a screw driver (flat tip) into a groove of the right wheel (bottom of refrigerator) and turn it clockwise until the door is balanced. (clockwise to raise refrigerator door ; counterclockwise to lower) ※ Unless the refrigerator door is balanced by step 1, then follow the next steps.</p> 	<p>2 Loosen 3 hinge bolts(2 on the left + 1 on the right) a little. (Do not unfasten them completely.) Insert a hexagonal wrench into the groove of adjusting nut and turn clockwise until the door is level.</p> 	<p>3 Once the door is balanced, fasten the hinge bolts tightly.</p>
---	--	--

Front Cover


After installation and/or door leveling, fasten front cover with screws. (Remove the screws on the front bottom panel first. Click and screw the cover)

Attaching of Water Filter Holder


Remove the back paper of the tape on the filter holder and attach the filter holder on a suitable place.

● Replacing Freezer Door ●


- 1** Insert the water tube into the hole of the bottom hinge pin first, then insert the bottom of freezer door into the bottom hinge pin.

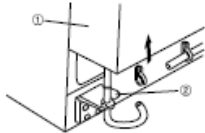


- 2** Insert the bottom hole of freezer door straight to the bottom hinge pin.

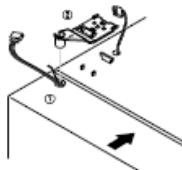

- 3** Let the top of door close to the cabinet and insert the top hinge pin to the top hole of freezer door.
(Insert the back of hinge to the groove of protrusion first, then front to the top hole of door.)

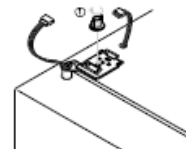

 - 4** Turn the hinge fastener tightly to the end.
Connect harness wirings and screw ground wire.




- 5** Insert the water tube far into the coupling.




● Replacing Refrigerator Door ●


- 1** Insert the bottom hole of refrigerator door straight to the bottom hinge pin

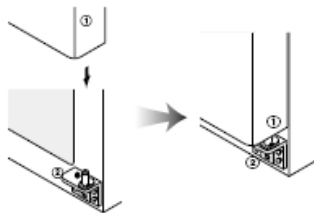

- 2** Let the top of door close to the cabinet and insert the top hinge pin to the top hole of freezer door.
(Insert the back of hinge to the groove of protrusion first, then front to the top hole of door.)

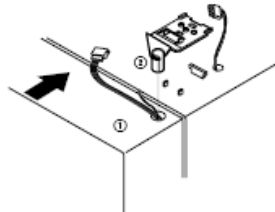

- 3** Turn the hinge fastener tightly to the end.
Connect harness wirings and screw ground wire.
Click and screw the top hinge cover.

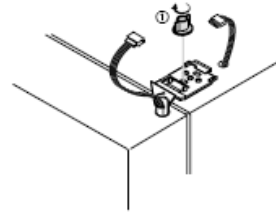

Troubleshooting

Trace a problem using the table below instead of having to call for help.

PROBLEM	WHAT TO DO
YOUR FRIDGE-FREEZER DOES NOT APPEAR TO BE WORKING / OPERATION LAMPS ARE OFF WHEN THEY SHOULD BE ON / FOOD HAS DEFROSTED WITHOUT YOUR KNOWLEDGE / NO APPARENT POWER	CHECK THAT THE PLUG IS WELL-INSERTED INTO THE POWER SOCKET
	THAT THERE IS POWER FROM THE MAINS – THERE MAY BE A BLACKOUT OR YOUR FUSES MAY HAVE BLOWN.
	THAT THE ELECTRONIC THERMOSTAT (REGULATOR FOUND ON THE INSIDE WALL OF THE FRIDGE-FREEZER NEAR THE TOP) IS IN THE RECOMMENDED FUNCTIONING POSITION AND NOT '0' (OFF).
	THAT THE SOCKET IS SUFFICIENT AND NO ADAPTER OR EXTENSION LEADS HAVE BEEN USED.
	THAT THE POWER SUPPLY VOLTAGE CORRESPONDS TO THE APPLIANCE.
YOUR FRIDGE-FREEZER APPEARS TO BE PERFORMING POORLY	YOU HAVE OVERLOADED THE APPLIANCE. TAKE OUT AND CONSUME FOOD; LOOK FOR OUT-OF-DATE FOOD THAT CAN BE DISPOSED OF.
	THE THERMOSTAT SETTING IS SET TO '1'. SET IT HIGHER.
	ENSURE THAT THE DOOR HAS BEEN CLOSED PROPERLY. FOR INSTANCE, THERE MAY BE A PROBLEM INSIDE THE UNIT, KEEPING THE DOOR OPEN OR ANOTHER FAULT, SUCH AS BROKEN OR MISSING DOOR SEAL.
	ENSURE THAT THERE IS NO DUST ON THE CONDENSER.
	ENSURE THAT THERE IS ENOUGH ROOM AT THE REAR AND SIDES OF THE UNIT/
THERE IS A NOISE	THE COOLING GAS WHICH CIRCULATES MAY MAKE A SLIGHT NOISE (BUBBLING SOUND) EVEN WHEN THE COMPRESSOR IS NOT RUNNING. THIS IS NORMAL. IF THESE SOUNDS CHANGE, ENSURE:
	YOUR UNIT IS WELL LEVELLED / NOTHING IS TOUCHING THE REAR OF THE UNIT / NO MATERIAL ON THE APPLIANCE IS VIBRATING.

IMPORTANT – MAKE SURE THAT THERE IS ADEQUATE AIR FLOW FOR YOUR FRIDGE-FREEZER. PARTICULAR AREAS TO WATCH INCLUDE THE SPACE BETWEEN THE FEET. KEEPING THESE AREAS WITH ADEQUATE AIR-CIRCULATION WILL PREVENT YOUR FRIDGE FREEZER FROM EXPERIENCING PROBLEMS.

Baumatic Ltd. Conditions of guarantee

Dear Customer,

Your new Baumatic appliance comes complete with a free 12 month guarantee covering both parts and labour costs resulting from defective materials or workmanship.

Baumatic also gives you the opportunity to automatically extend the guarantee period for a further 12 months at no extra cost, giving an initial guarantee period of 24 months. The extended guarantee period applies to England, Scotland, Wales and Northern Ireland only.

To qualify for your full 24 months guarantee you **must** register your appliance within 28 days of purchase to be covered under this guarantee. This can be done online via: www.baumatic.co.uk or through returning the guarantee card which can be found in each new Baumatic appliance.

* In addition, your appliance is covered by a 5 year parts warranty. Baumatic Ltd will provide free of charge the parts required to repair the appliance, only if they are fitted by a Baumatic engineer, for any defect that arises due to faulty materials or workmanship within a period of 5 years from the original purchase date.

* An additional 1 to 3 year insurance scheme for labour is available should you wish to extend the warranty period.

Should any person other than an authorised representative of Baumatic Ltd interfere with the appliance, the policy is negated and Baumatic Ltd will be under no further liability.

The guarantee covers the appliance for normal domestic use only, unless otherwise stated.

Any claims made under the terms of the guarantee must be supported by the original invoice/bill of sale issued at the time of purchase.

This guarantee is transferable only with the written consent of Baumatic Ltd.

If the appliance fails and is considered either not repairable or uneconomical to repair between 12 months (2 years if registered) and five years, a free of charge replacement will not be offered.

The guarantee for any replacement will only be for the remainder of the guarantee on the original product purchased.

The guarantee does not cover:

- Sinks and taps
- Failure to comply with the manufacturers instructions for use.
- The replacement of cosmetic components of accessories
- Accidental damage or wilful abuse.
- Subsequent loss or damage owing to the failure of the appliance or electrical supply
- Incorrect installation
- Losses caused by Acts of God, civil war, failure to obtain spare parts, strikes or lockouts
- Filters, fuses, light bulbs, external hoses, damage to bodywork, paintwork, plastic items, covers, baskets, trays, shelves, burner bases, burner caps, decals, corrosion, rubber seals.

In the course of the work carried out it may be necessary to remove the appliance from its operating position. Whilst all reasonable care will be taken, Baumatic Ltd cannot accept responsibility for damage sustained to any property whatsoever in this process.

This guarantee is in addition to and does not diminish your statutory or legal rights.

Contacting Baumatic Ltd

Sales	Service	Spares	Technical/Advice
TEL: 0118 933 6900	TEL: 0118 933 6911	TEL: 0118 933 6922	0118 933 6933
FAX: 0118 931 0035	FAX: 0118 986 9124	FAX: 0118 933 6942	0118 933 6942

For ROI (Republic of Ireland), please contact one of the numbers below:

TEL: 01 – 6266798 FAX: 01 – 6266634

Thanks you for buying Baumatic.

* Applies to UK, Scotland, Wales & Northern Ireland only (Republic of Ireland has 1 year labour & 1 year parts warranty only)



You will be mine ...

Headquarters

Baumatic Ltd.
Baumatic Buildings,
6 Bennet Road,
Reading,
Berkshire
RG2 0QX, United Kingdom

Sales Telephone
+44 118 933 6900

Sales Fax
+44 118 931 0035

Service Telephone
+44 118 933 6911

Service Fax
+44 118 986 9124

Spares Telephone
+44 118 933 6922

Technical / Advice Telephone
+44 118 933 6933

E-mail:

sales@baumatic.co.uk

technical@baumatic.co.uk

Http (Internet site):
www.baumatic.com

