


# **SUPREMA1W/SS**

## **DISHWASHER**

### **Instruction manual**

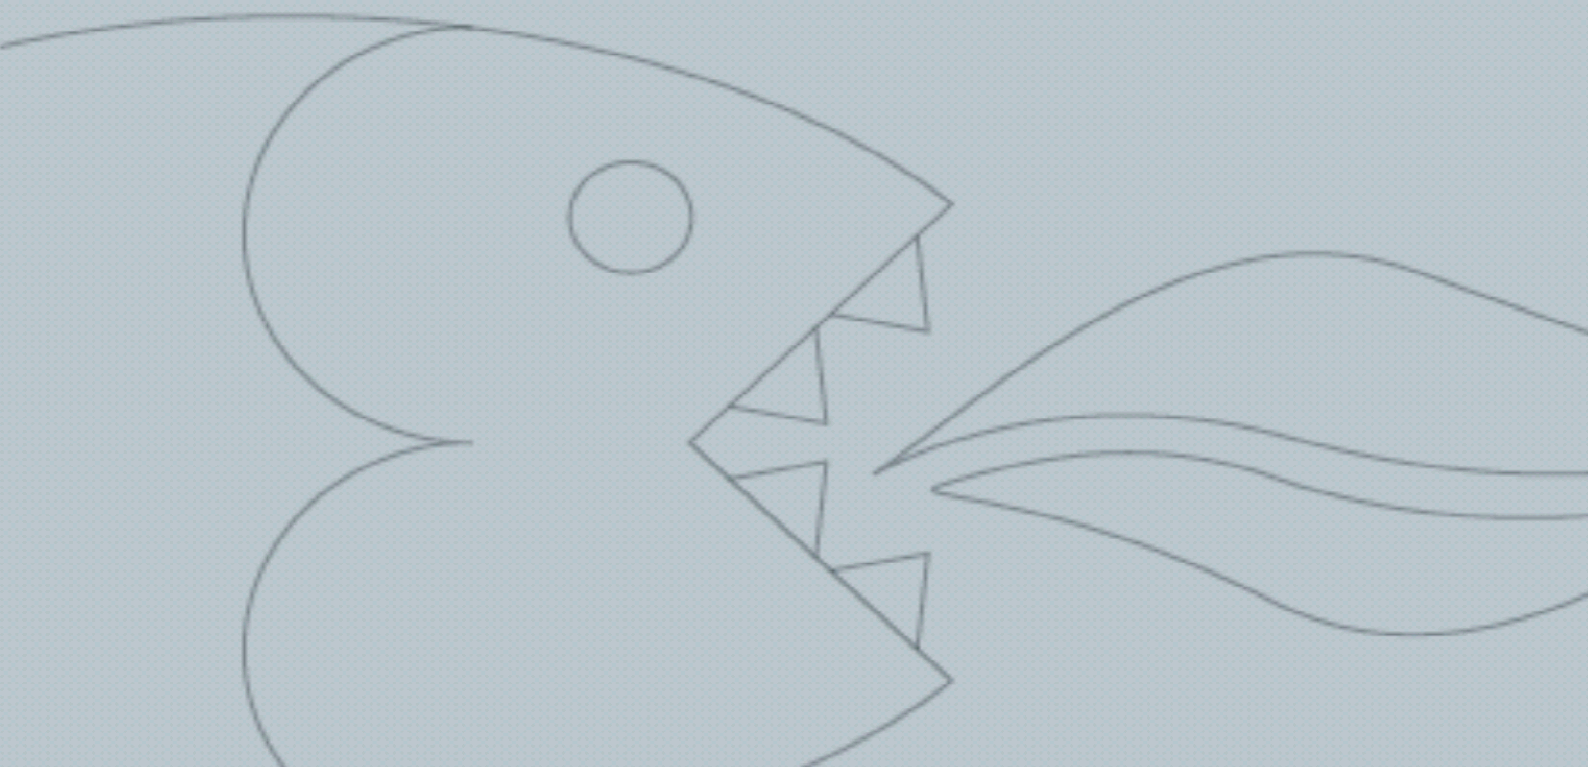


  
**Baumatic®**

**IMPORTANT!**

*PLEASE READ THIS MANUAL AND KEEP IT FOR FUTURE REFERENCE!*  
THIS MANUAL CONTAINS SECTIONS OF **SAFETY INSTRUCTIONS, OPERATING INSTRUCTIONS & TROUBLESHOOTING TIPS, ETC.**

# BAUMATIC

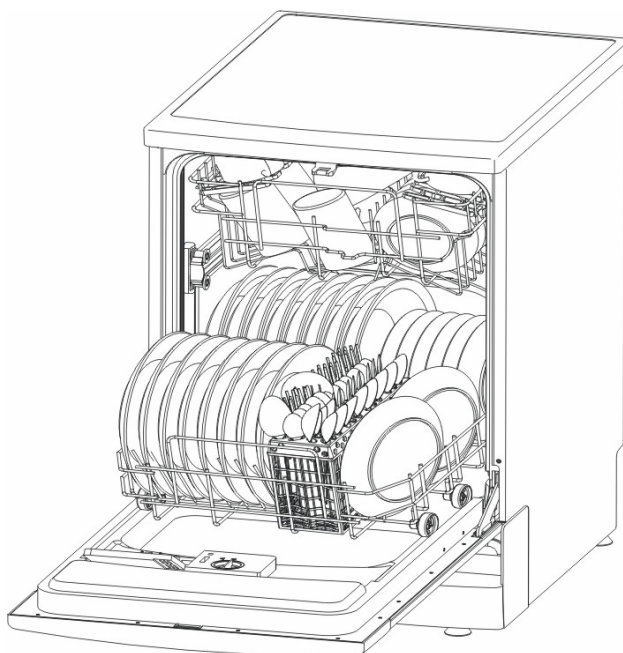

## **SUPREMA1W/SS – DISHWASHER**

### **60CM FULL HEIGHT DISHWASHER**

## **INSTRUCTION MANUAL**

CAREFULLY READING IT BEFORE USING THE DISHWASHER WILL HELP  
YOU USE AND MAINTAIN THE DISHWASHER PROPERLY.

DD 02/11/07



### **BEFORE CALLING FOR SERVICE**

REVIEWING THE SECTION ON TROUBLESHOOTING TIPS WILL HELP YOU SOLVE SOME COMMON PROBLEMS WITHOUT THE NEED TO ASK FOR HELP FROM PROFESSIONAL TECHNICIANS.



**PLEASE NOTE:**  
THE MANUFACTURER RESERVES THE RIGHT TO MAKE MODIFICATIONS TO PRODUCTS WITHOUT GIVING PRIOR NOTICE.

## **CONTENTS**

- **SAFETY FIRST!**

SAFETY INFORMATION .....3

*\* Please read this before using your dishwasher!*

- **KNOWING YOUR  
DISHWASHER**

CONTROL PANEL .....4

DISHWASHER FEATURES .....4

- **USING YOUR  
DISHWASHER**

WATER SOFTENER .....5-6

DETERGENT .....6

RINSE AID .....7

LOADING YOUR DISHWASHER.....8-11

STARTING A WASH CYCLE .....12-14

UNLOADING AT THE END OF A CYCLE.....14

FILTERING SYSTEM .....15

CLEANING AND MAINTAINING  
YOUR DISHWASHER .....15-17

- **BEFORE YOU CALL FOR  
SERVICE...**

TROUBLESHOOTING .....18-21

ERROR CODES .....22

- **MISCELLANEOUS**

CHARACTERISTICS .....23

HOW TO INSTALL .....24-29

FINAL CHECKLIST BEFORE STARTING.....29

MINIMUM AND MAXIMUM PLATE SIZES..30

ENVIRONMENTAL NOTE.....31

CONTACT DETAILS.....32

## IMPORTANT SAFETY INFORMATION



# WARNING!

**READ BEFORE USING!**

### **WARNING! HYDROGEN GAS IS EXPLOSIVE**

Under certain conditions, Hydrogen gas may be produced in a hot-water system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE.**  
If the hot-water system has not been used for such a period, before using the dishwasher turn on all hot-water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.

### ELECTRICAL SAFETY

 This appliance complies with Directives 89/336/EEC, 73/23/EEC and following changes.

- **NOTE** - This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance of electrical current. You will be able to tell if it is because a non-grounded appliance will give off an electrical discharge.
- Manufacturer declines all responsibility for any damage due to non-grounding of appliance.
- DURING THE GUARANTEE PERIOD ONLY BAUMATIC SERVICE ENGINEERS OR AN AUTHORISED AGENT OF BAUMATIC SHOULD CARRY OUT REPAIRS ON THIS UNIT.
- DO NOT USE IF THE SUPPLY CORD IS DAMAGED.
- FOR INSTALLATION PROCEDURE PLEASE CONSULT PAGES 24 – 29.

### CHILD SAFETY

- DO NOT ABUSE OR FORCE THE DISHWASHER. DO NOT SIT ON OR STAND ON ITS DOOR OR DISH RACKS – TIPPING HAZARD.
- KEEP CHILDREN AWAY FROM DETERGENT, RINSE AID AND THE OPEN DOOR OF THE DISHWASHER AS THERE COULD BE DETERGENT LEFT INSIDE.
- SUPERVISE YOUNG CHILDREN TO ENSURE THEY DO NOT PLAY WITH THE APPLIANCE.
- SUPERVISE INFIRM PERSONS IF THEY MUST USE THE APPLIANCE.
- REMOVE THE DOOR TO WASHING COMPARTMENT OF YOUR OLD APPLIANCE BEFORE DISCARDING IT.

### BEFORE USING

SOME ITEMS ARE UNSUITABLE FOR WASHING IN YOUR DISHWASHER. PLEASE SEE PAGE 8 FOR A LIST OF THESE ITEMS.

DO NOT TAMPER WITH THE CONTROLS.  
WHEN LOADING ITEMS TO BE WASHED:

- 1) Keep sharp items like knives away from the door seal.
- 2) Load sharp knives with the handles up to prevent injuries.

ONLY USE AUTOMATIC DISHWASHER DETERGENT, NOT SOAP OR LAUNDRY DETERGENT.  
**NEVER USE SOLVENTS AS THIS COULD RESULT IN AN EXPLOSION!**

### DURING USE


- DO NOT TOUCH THE HEATING ELEMENT DURING OR IMMEDIATELY AFTER USE.
- DO NOT USE YOUR DISHWASHER UNLESS ALL ENCLOSURE PANELS ARE PROPERLY IN PLACE. OPEN THE DOOR VERY CAREFULLY IF THE DISHWASHER IS OPERATING. THERE IS A RISK OF WATER SQUIRTING OUT.

### AFTER USE

- ALWAYS KEEP THE DOOR CLOSED TO AVOID DANGER OF TRIPPING.
- CHECK THAT THE DETERGENT DISPENSER IS EMPTY AFTER COMPLETION OF WASH CYCLE.
- IF LEAVING UNUSED FOR A LONG TIME, DISCONNECT THE WATER SUPPLY (SEE PP. 17, 26).

**READ AND FOLLOW THIS SAFETY INFORMATION CAREFULLY BEFORE USING YOUR DISHWASHER FOR THE FIRST TIME!**


## CONTROL PANEL

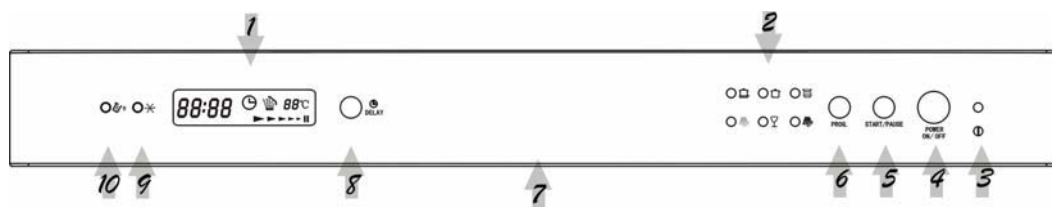

- 1 Display Window:** Time remaining in Program; delay time; running indicator; temperature of water; fault codes, etc.
- 2 Program Indicator Light.**
- 3 Power On Indicator Light:** Comes on when the power is turned on.
- 4 Power Switch:** Turns the power supply on /off.
- 5 Start / Pause Button:** Press this button to start or stop the dishwasher.
- 6 Program Button:** Press this button to select the program you want to run.
- 7 Door Lock:** Pull it to open the door.
- 8 Delayed Start Button:** Press this button to set the delayed hours for washing.
- 9 Rinse Aid Warning Light:** Add more rinse aid as the indicator on the front panel lights up (Certain Models only).
- 10 Salt Warning Light:** Add more salt as the indicator on the front panel lights up.

**WARNING – BEWARE OF HOT WATER & STEAM AS YOU OPEN THE DOOR!**

## DISHWASHER FEATURES

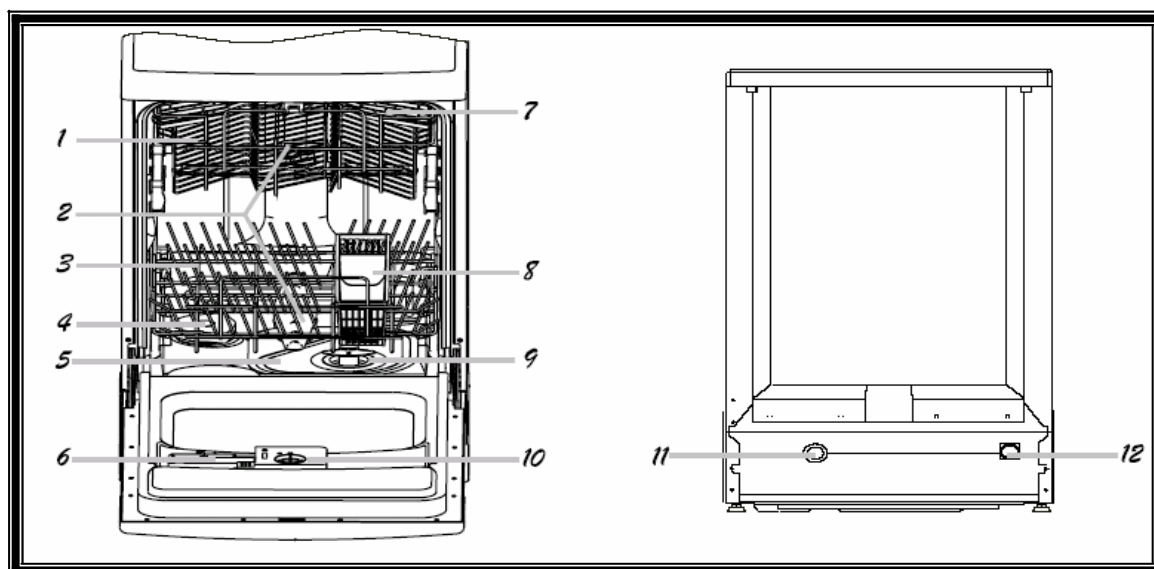

- 1** Adjustable Upper Basket
- 2** Spray Arms
- 3** Lower Basket
- 4** Water Softener

- 5** Main Filter
- 6** Detergent Dispenser
- 7** Cup Shelf
- 8** Cutlery basket

- 9** Coarse Filter
- 10** Rinse Aid Dispenser
- 11** Drain Pipe Connector
- 12** Inlet Pipe Connector

### **Note on chemicals used by the dishwasher**

- Your dishwasher is equipped with an adjustable rinse aid and salt container. Using individual detergents, rinse aid and salt will give the best possible results as this will give the correct dosage of each chemical to suit your needs. Using Two-in-One or Three-in-One tablets may not give the best results when used in your appliance, and may not be suitable for the type of water supply in your home, as they contain pre-determined quantities of salt, rinse aid and detergent and cannot be adjusted to the individual requirements.

***If you are going to use 3-in-1 (or 2-in-1) tablets, we suggest that you contact the manufacturer before use or if you experience poor results in the wash performance and ask for assistance from them.***

## **WATER SOFTENING FEATURE**

THE LIME IN HARD WATER MAKES DEPOSITS FORM ON DISHES AND UTENSILS. **YOUR DISHWASHER HAS A SPECIAL SOFTENING FEATURE** THAT USES SALT SPECIFICALLY DESIGNED TO ELIMINATE LIME AND MINERALS FROM THE WATER.

### **WARNING!**


ONLY USE DISHWASHER SALT IN YOUR DISHWASHER.

### **NOTE:**

IF YOU USE 3-IN-1 OR 2-IN-1 TABLETS, BE SURE NOT TO ADD SALT AND/OR RINSE AID TO THE APPLIANCE AS THESE TABLET TYPES ALREADY CONTAIN SALT AND/OR RINSE AID. **ADDING SALT AND RINSE AID TO YOUR DISHWASHER'S COMPARTMENTS IN A CYCLE INVOLVING A 3-IN-1 OR 2-IN-1 TABLET WILL RESULT IN OVERDOSING OF INDIVIDUAL CHEMICALS AND MAY CAUSE OVERFLOWING OF WATER AND SUDS.**

## **LOADING SALT INTO THE SALT CONTAINER**

- REMOVE THE LOWER BASKET & THEN UNSCREW AND REMOVE THE CAP FROM THE SALT CONTAINER.
- IF YOU ARE FILLING THE CONTAINER FOR THE FIRST TIME, FILL WITH APPROX. 1 LITRE OF WATER.
- PLACE THE END OF THE SUPPLIED FUNNEL INTO THE HOLE & ADD 1.2 Kg OF SALT. **NOTE:** IT IS NORMAL FOR A SMALL AMOUNT OF WATER TO COME OUT OF THE CONTAINER.

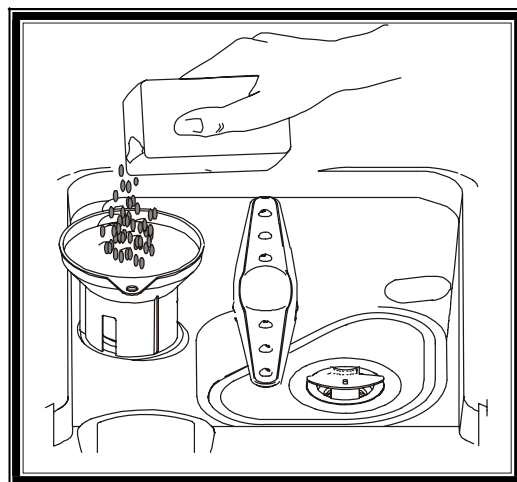

## **SETTING THE WATER SOFTENER LEVEL**

YOU CAN ADJUST THE AMOUNT OF SALT USED BY THE DISHWASHER TO SOFTEN WATER TO GET THE BEST WASHING RESULTS, BASED ON THE HARDNESS OF WATER IN YOUR AREA.



- 1 UNSCREW THE CAP FROM THE SALT CONTAINER.

- 2 THERE IS A RING ON THE NECK OF THE CONTAINER. ROTATE THE RING IN AN ANTICLOCKWISE DIRECTION FROM THE "-" SETTING TOWARDS THE "+" SETTING ACCORDING TO THE HARDNESS OF WATER IN USE. SEE TABLE BELOW.

### NOTE

1. THE SALT CONTAINER MUST BE REFILLED WHEN THE SALT WARNING LIGHT COMES ON. ALTHOUGH THE SALT CONTAINER MAY BE FULL, THE INDICATOR LIGHT MAY NOT GO OUT UNTIL THE SALT HAS DISSOLVED.
2. IF THERE ARE SALT SPILLS, A SOAK PROGRAM CAN BE RUN TO WASH AWAY SPILLAGE BEFORE USING THE MACHINE.
3. CLEAR ANY SALT GRANULES AWAY FROM THE CONTAINER OPENING.

### **ADJUSTMENTS SHOULD BE MADE ACCORDING TO THE TABLE BELOW:**

WATER HARDNESS			Selector Position	Salt consumption (gram/cycle)	Automatic (cycles/1.2kgs)
Clarke Degrees	°dH	mmol/l			
0~14	0~18	0~1.8	/	0	/
14~36	18~44	1.8~4.4	-	20	60
36~71	44~89	4.4~8.9	MED	40	30
71	89	8.9	+	60	20

Contact your local water board for information on the hardness of your water supply.

## **DETERGENT** "How much do I use?"


To OPEN the DETERGENT DISPENSER DOOR, use the CATCH on its LOWER SIDE.

**\*NOTE: SEE P.13 – WASH CYCLE TABLE for AMOUNT of DETERGENT to use.**

### **NOTE:**

- ALWAYS CHECK THE WASH CYCLE TABLE FOR DOSAGE ADVICE. NEVER OVERFILL THE DISPENSER.
- DO NOT OVERDOSE TO PREVENT THE FORMATION OF DEPOSITS (THE WATER SOFTENING FEATURE ALREADY TAKES CARE OF THIS!).

THE HARDER YOUR WATER, THE MORE DETERGENT YOU MAY NEED. ADJUST THE DOSE JUST BY SMALL AMOUNTS UNTIL YOU FIND THE CORRECT AMOUNT OF DETERGENT TO USE.

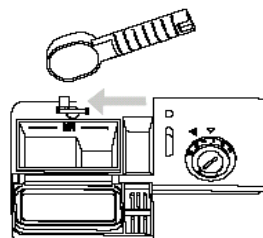


### **⚠ WARNING!**

Dishwasher detergent is corrosive! Take care to keep it out of reach of children.



## RINSE AID

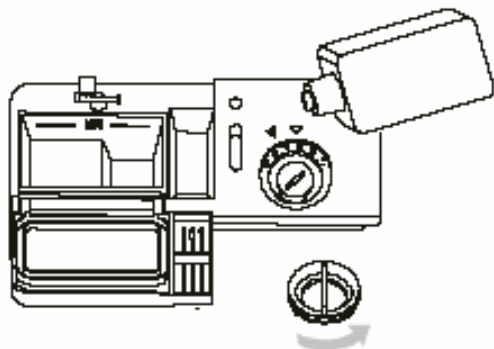

- TO OPEN THE DISPENSER, TURN THE CAP TO THE 'OPEN' (LEFT) ARROW AND LIFT IT OUT.
- POUR THE RINSE AID INTO THE DISPENSER. BE CAREFUL NOT TO OVERFILL.
- REPLACE CAP BY INSERTING IT ALIGNED WITH 'OPEN' ARROW & TURN IT TO THE CLOSED (RIGHT) ARROW.


- THE RINSE AID IS RELEASED DURING THE FINAL RINSE TO PREVENT WATER FROM FORMING DROPLETS ON YOUR DISHES THAT CAN CAUSE SPOTS AND STREAKS. IT ALSO IMPROVES DRYING BY ALLOWING WATER TO FALL OFF THE DISHES.
- YOUR DISHWASHER IS DESIGNED TO USE LIQUID RINSE AIDS. THE RINSE AID DISPENSER CAN BE FOUND INSIDE THE DOOR NEXT TO THE DETERGENT DISPENSER. TO FILL THE DISPENSER, OPEN THE CAP AND POUR THE RINSE AID INTO THE DISPENSER UNTIL THE LEVEL INDICATOR TURNS COMPLETELY BLACK. THE DISPENSER HOLDS ABOUT 100ML OF LIQUID RINSE AID.
- BE CAREFUL NOT TO OVERFILL THE DISPENSER – THIS COULD CAUSE FROTHING. WIPE AWAY SPILLS WITH A DAMP CLOTH. DON'T FORGET TO REPLACE THE CAP BEFORE YOU CLOSE THE DISHWASHER DOOR.

**NOTE:** IF YOU HAVE SOFT WATER, YOU MAY NOT NEED RINSE AID FOR IT MAY CAUSE A WHITE FILM TO DEVELOP ON YOUR DISHES.

## ADJUSTING THE RINSE AID DISPENSER

As with detergent, the amount of rinse aid needed for your dishes depends on the hardness of the water in your area.

*Too much rinse aid can result in foaming and cause cloudiness or streaks on your dishes.* If your water is very soft, you may not need rinse aid. You can always dilute the rinse aid with an equal amount of water.

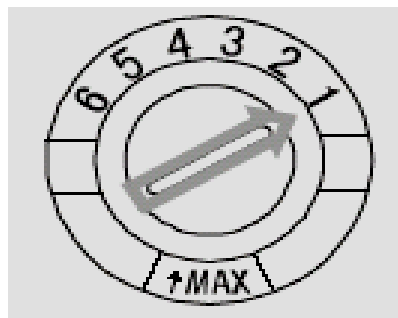


The rinse aid dispenser has six settings. ALWAYS START WITH THE DISPENSER SET ON "1". IF SPOTS & POOR DRYING ARE A PROBLEM, INCREASE THE AMOUNT OF RINSE AID DISPENSED BY REMOVING THE DISPENSER LID AND ROTATING THE DIAL TO "2". IF THE DISHES ARE STILL NOT DRYING PROPERLY OR ARE SPOTTED, ADJUST THE DIAL TO THE NEXT HIGHER NUMBER UNTIL YOUR DISHES ARE SPOT-FREE.

**\*\*\*NOTE:** Please read the notes for detergent use on p. 13.

### WHEN TO REFILL THE RINSE AID DISPENSER

- If the rinse aid warning light (SEE control panel) is not on, you can judge the rinse aid level by looking at the black dot on the rinse aid dispenser. As the rinse aid level decreases, the black dot shrinks. Never let the rinse aid get below 1/4 full.

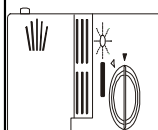

As the rinse aid diminishes, the size of the black dot on the rinse aid level indicator changes, as illustrated below.

- Full
- 3/4 full
- 1/2 full
- 1/4 full - Should refill to eliminate spotting
- Empty



# **LOADING** **YOUR** **DISHWASHER**

**NOTE:**

FOR BEST PERFORMANCE, FOLLOW THESE LOADING GUIDELINES. FEATURES AND APPEARANCE OF RACKS & CUTLERY BASKETS MAY VARY FROM YOUR MODEL.

## ***BEFORE LOADING!***

- REMOVE ALL SCRAPS OF FOOD.
- EMPTY DRINKS & LIQUIDS FROM CUPS.
- SOFTEN BURNT-ON FOOD IN PANS BY SOAKING.

## **DO NOT PUT THESE ITEMS IN YOUR DISHWASHER:**

- |   |  |   |
|---|--|---|
| <ul style="list-style-type: none"> <li>• BRONZE CUTLERY</li> <li>• SAUCEPANS WITH WOODEN HANDLES</li> <li>• CUTLERY WITH WOODEN, HORN, CHINA OR MOTHER OF PEARL HANDLES</li> <li>• PLASTIC ITEMS THAT ARE NOT HEAT RESISTANT</li> </ul> | <ul style="list-style-type: none"> <li>• OLDER CUTLERY WITH GLUED PARTS</li> <li>• BONDED CUTLERY ITEMS OR DISHES</li> <li>• PEWTER OR COPPER ITEMS</li> <li>• LEAD CRYSTAL GLASS</li> </ul> | <ul style="list-style-type: none"> <li>• STEEL ITEMS SUBJECT TO RUSTING</li> <li>• WOODEN PLATTERS</li> <li>• ITEMS MADE FROM SYNTHETIC FIBRES (eg. SPONGES)</li> <li>• DELICATE, REPAIRED OR PAINT / PATTERN OVERLAID CHINA</li> </ul> |
|---|--|---|

**Note:**

Do not wash stainless steel and silver cutlery together. Iron objects can rust and stain other items. Aluminium tends to go black. Copper, pewter & brass stain.


## ***HOW TO USE THE UPPER RACK***

THE UPPER RACK IS FOR MORE DELICATE AND LIGHTER DISHWARE SUCH AS GLASSES, COFFEE & TEA CUPS, SAUCERS, PLATES, BOWLS, AND SHALLOW PANS (PROVIDED THESE ARE NOT TOO DIRTY).

**POSITION THE DISHES AND COOKWARE SO THAT THEY DO NOT GET MOVED BY THE SPRAY OF WATER. ALWAYS PLACE GLASSES, CUPS & BOWLS UPSIDE DOWN.**


### **NOTE:**


YOUR DISHWASHER COMES WITH AN **ADJUSTABLE TOP RACK (BASKET)** – PICTURED AT RIGHT. ITS HEIGHT CAN BE ADJUSTED BY UNDOING THE FRONT RAIL CLIPS, REMOVING THE RACK COMPLETELY AND LATCHING THE WHEELS OF THE LOWER LEVEL (POSITION '1' IN THE FIGURE ON THE RIGHT) OR THE HIGHER LEVEL (POSITION '2' IN THE FIGURE ON THE RIGHT) IN THE GROOVE OF THE RAIL.

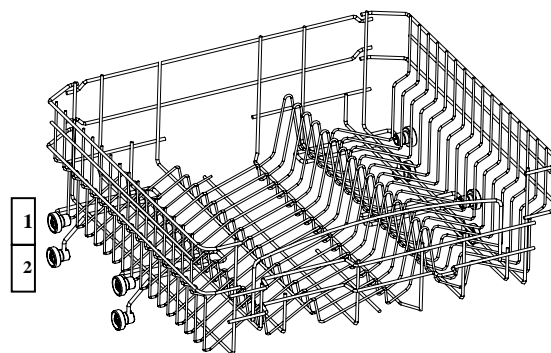

### *Loading the Dishwasher Racks(14 sets). ( Loading the Upper Rack )*

- 1 Cups
- 2 Small serving bowl
- 3 Large serving bowl
- 4 Glasses
- 5 Saucers
- 6 Dish
- 7 Dessert dishes

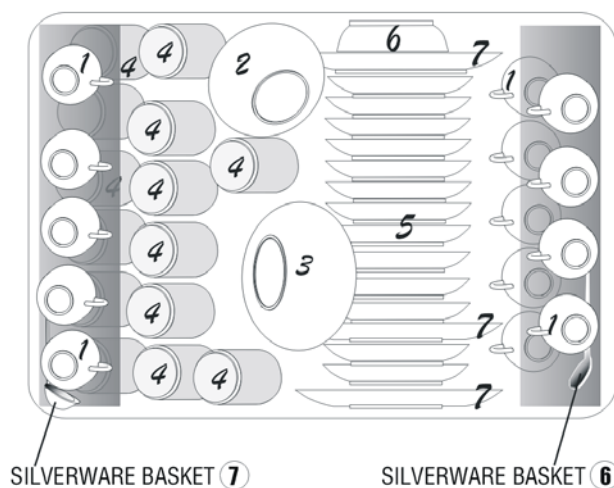

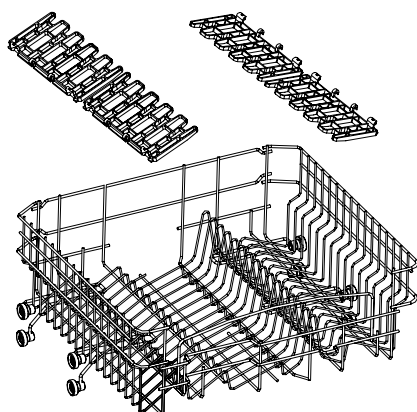

\*\*\***NOTE**\*\*\*: THE UPPER RACK HAS **SIDE FLAPS** (PICTURED AT LEFT ABOVE BASKET). THERE ARE 4 (2 ON EACH SIDE). THESE CAN BE ADJUSTED INTO 2 POSITIONS = POSITION 1 (HIGH) AND POSITION 2 (LOW).

TO MOVE THE FLAPS BETWEEN THESE POSITIONS, **FIND THE LARGE HINGES CLASPING EACH FLAP TO THE UPPER RACK**. THERE ARE TWO OF THESE AT EITHER END OF EACH FLAP. GENTLY PULL BOTH CLASPS OFF THE WIRE RACK AND MOVE THE FLAP TO THE DESIRED POSITION. **BE CAREFUL IF YOU HAVE LONG FINGERNAILS!**

### POSITION 1

THE UPPER POSITION WILL ACCOMMODATE ITEMS SUCH AS GLASS TUMBLERS (PLACED BENEATH FLAP) AND WINE GLASSES. WINE GLASSES CAN BE PLACED UPSIDE DOWN SO THAT THE NECK NESTLES SNUGLY IN THE GROOVES AT SIDE OF FLAP WITH THE BASE OF THE GLASS FACING UPWARD.

### POSITION 2

WHEN THE FLAPS ARE MOVED TO THE LOWER POSITION, THEY CAN BE USED TO HOLD ADDITIONAL TUMBLERS, CUPS AND MUGS. ALWAYS CHECK THAT YOU ARE ONLY PLACING ITEMS ON THE FLAPS THAT WILL CLEAR THE CEILING HEIGHT OF YOUR DISHWASHER WHEN YOU PUSH THE RACK BACK IN. BE PARTICULARLY CAREFUL WITH LONG-STEMMED GLASSWARE SUCH AS CHAMPAGNE GLASSES – **BREAKAGE HAZARD!**


## How to use the Lower Rack

We recommend that you place large items which are most difficult to clean into the lower rack: pots, pans, lids, serving dishes and bowls, as shown in the figure to the right.

It is preferable to place serving dishes and lids on the side of the racks in order to avoid blocking the rotation of the top spray arm.

- Pots, serving bowls, etc, must always be placed top down.
- Deep pots should be slanted to allow water to flow out.
- The bottom rack feature fold down tine rows so that larger or more pots and pans can be loaded.

- 7 Dessert dishes
- 8 Oval platter
- 9 Dinner plates
- 10 Soup plates
- 11 Silverware basket

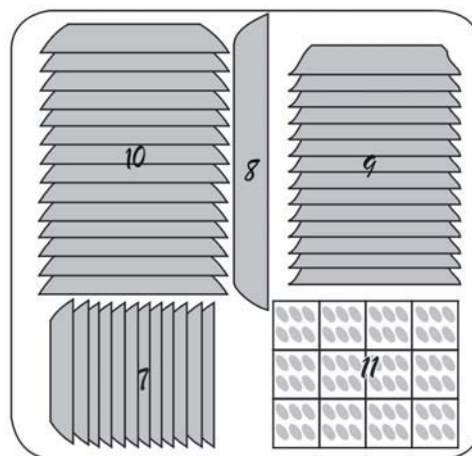

## SILVERWARE BASKET

Silverware should be placed in the silverware basket with handles at the bottom: If the rack has side baskets, the spoon should be loaded individually into the appropriate slots, Especially long utensils should be placed in the horizontal position at the front of the upper rack.



1 Forks

2 Soup spoons

3 Dessert spoons

4 Teaspoons

5 Knife

6 Serving spoon

7 Gravy ladle

8 Serving fork




### ⚠ WARNING!

Do not let any item extend through bottom.

### **NOTE:**

- WHEN YOU ARE SATISFIED YOU HAVE LOADED ALL THE UTENSILS AND DISHES YOU WANT TO WASH AND HAVE ADDED THE PROPER AMOUNT OF DETERGENT TO THE DISPENSER (REMEMBER TO CHECK THE TABLE ON PAGE 13 FOR THE DOSE THAT'S RIGHT FOR THE WASHING CYCLE YOU WANT), ENSURE THE RACKS ARE PUSHED ALL THE WAY BACK INTO YOUR DISHWASHER AND CLOSE THE DOOR.
- YOU ARE NOW READY TO START A WASH CYCLE (SEE NEXT PAGE).

## **STARTING A WASH CYCLE**

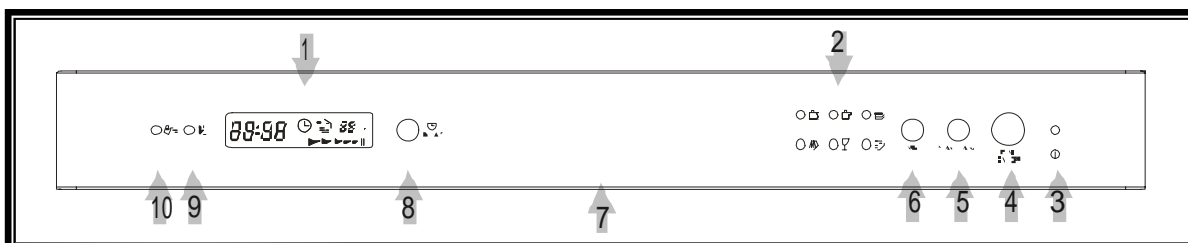

## **STARTING A WASH CYCLE**

- 1) MAKE SURE THAT THE PLUG OF THE APPLIANCE IS INSERTED INTO THE WALL SOCKET.
- 2) MAKE SURE THAT THE WATER SUPPLY IS TURNED ON TO FULL PRESSURE.
- 3) LOAD THE DISHWASHER (SEE THE SECTION ENTITLED 'LOADING YOUR DISHWASHER').
- 4) POUR IN DETERGENT (SEE THE SECTION ENTITLED 'SALT, DETERGENT & RINSE AID').
- 5) TURN THE KNOB LOCATED ON THE RIGHT OF THE CONTROL PANEL CLOCKWISE UNTIL THE NUMBER OR THE SYMBOL FOR THE CYCLE SETTING IS ALIGNED WITH THE REFERENCE MARK (SEE THE SECTION ENTITLED 'WASH CYCLE TABLE' ON NEXT PAGE).
- 6) PRESS THE 'ON/OFF' BUTTON. THE ON/OFF LIGHT WILL COME ON. THE WASH CYCLE WILL NOW BEGIN.

### Note:







The Delay Timer key (in above figure as mark number '6') will set the start of the washing cycle by 30mins into the future for every press. You can set it up to 9½ hours ahead of time for your convenience.

### **Approximate Timing of Wash Cycles**

<b><u>Intensive</u></b> <b><u>(strong)</u></b>	<b><u>Normal</u></b>	<b><u>Economy</u></b>	<b><u>Rinse</u></b>	<b><u>Glass</u></b>	<b><u>Soap</u></b>
139 mins.	150 mins.	95 mins.	76 mins.	103 mins.	7 mins.

## WASH CYCLE TABLE

 
*Wash Cycle Table*

Program	Cycle	Cycle Selection Information	Description of Cycle	Detergent pre/main	Rinse Aid
Strong		For the heaviest soiled loads, such as pots, pans, casserole dishes and dishes that have been sitting with dried food on them for a while.	Pre-wash Pre-wash 50 °C wash 60 °C Rinse 70 °C.	5/22 g.	★
Normal	 (IEC-EN 50242)	For normally soiled loads, such as pots, plates, glasses and lightly soiled pans. standard daily cycle.	Pre-wash Pre-wash wash 50 °C Rinse 70 °C.	5/25 g.	★
Economy		For lightly soiled loads, such as plates, glasses, bowls and lightly soiled pans.	Pre-wash wash 45 °C Rinse 60 °C.	22 g.	★
Rinse		For dishes that need to be rinsed and dried only	Wash 45 °C Rinse 70 °C		★
Glass		A shorter wash for lightly soiled loads that do not need drying.	Pre-wash wash 40 °C Rinse 70 °C	15 g.	
Soak		Pre-wash of dishes, pots and pans while waiting for the load to be completed after the subsequent meal.	Pre-wash		

### OVERFLOW PROTECTION

YOUR BAUMATIC DISHWASHER HAS AN OVERFILL PROTECTION DEVICE WHICH AUTOMATICALLY SHUTS OFF THE INLET VALVE AND STARTS THE DRAIN PUMP IF THE WATER OVERFLOWS. IF THIS OCCURS THEN TURN OFF THE MAINS WATER SUPPLY BEFORE CALLING THE SERVICE DEPARTMENT. IF THERE IS WATER IN THE BASE PAN BECAUSE OF AN OVERFILL OR SMALL LEAK, THE WATER SHOULD BE REMOVED BEFORE RESTARTING THE DISHWASHER

## WHAT YOU WILL SEE ON THE DISPLAY:



Digital sign: Shows the delayed time, remaining time and fault codes.



Delay sign: Shows this sign when delaying.



Washing sign: Displays this sign when washing.



Running sign: Display shows this when your machine is running a cycle. Doesn't flicker when stopping.



Temperature sign: Shows the wash temperature at any time.

## FORGET TO ADD A DISH?

A FORGOTTEN DISH CAN BE ADDED AT ANY TIME BEFORE THE DETERGENT DISPENSER OPENS.

- OPEN THE DOOR A LITTLE TO STOP THE WASHING.
- AFTER THE SPRAY ARMS STOP WORKING, YOU CAN OPEN THE DOOR COMPLETELY.
- ADD FORGOTTEN DISHES.
- CLOSE THE DOOR, THE DISHWASHER WILL WORK AFTER TEN SECONDS.

## Need to Change the Cycle?

1. PRESS THE POWER SWITCH TO STOP WASHING
2. PRESS THE 'PROG.' BUTTON TO SELECT THE NEW PROGRAM
3. PRESS THE POWER SWITCH AGAIN TO START WASHING

**\* Note – You may have to start a new cycle by reloading the detergent if it has been a long time since the old cycle began. See page 12 to see how to do this.**


## At the End of the Wash Cycle

At end of washing, the time display will flash for 8 seconds while the ALARM sounds. The ALARM will not sound at the end of delayed washing, however We recommend you leave about ½ hour before unloading to avoid injury and brittleness in dishware from heat.



## **FILTERING SYSTEM**

FOR YOUR CONVENIENCE, WE HAVE PLACED THE FILTERING SYSTEM WITHIN EASY REACH INSIDE THE TUB. THE FILTER REMOVES BITS OF FOOD TRAPPED IN THE FILTER FROM THE WASH WATER SO IT CAN BE RECIRCULATED DURING THE CYCLE. THERE ARE THREE PARTS TO THE FILTERING SYSTEM: **1) The Main Filter,** **2) The Coarse Filter & 3) The Fine Filter.**

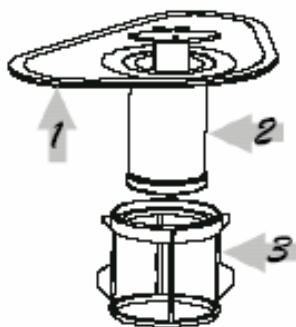

### **1 MAIN FILTER**

Food and soil particles trapped by this filter are pulverized by a special jet on the lower spray arm and washed down the drain.

### **2 COARSE FILTER**

Larger items, such as pieces of bone or glass that could clog the drain are trapped in the coarse filter. To remove an item caught in this filter, **gently squeeze the tabs on top of this filter and lift it out.**


### **3 FINE FILTER**

This filter holds soil and food residue in the sump area and prevents it from being re-deposited on the dishes during a cycle.

## ***Caring for your Dishwasher***

### ***CLEANING THE OUTSIDE SURFACES OF YOUR APPLIANCE***

- TO CLEAN THE EXTERIOR OF YOUR DISHWASHER (INCLUDING THE CONTROL PANEL), USE A LIGHTLY DAMPENED CLOTH THEN DRY THOROUGHLY. **NEVER USE SHARP OBJECTS, SCOURING PADS OR HARSH CLEANERS ON ANY PART OF THE APPLIANCE. SOME PAPER TOWELS CAN SCRATCH.**

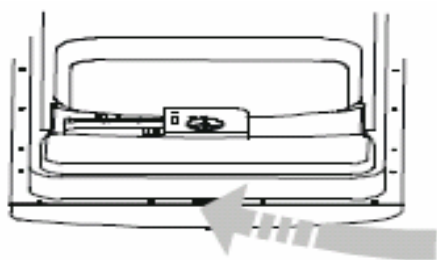


- TO CLEAN THE EDGE AROUND THE DOOR, ONLY EVER USE A SOFT WARM, DAMP RAG. DO NOT USE A SPRAY CLEANER HERE OR WHEN CLEANING THE DOOR PANEL AS THIS MAY HARM THE DOOR LOCK AND ELECTRICAL PARTS.

## ***CLEANING THE SPRAY ARMS***

THE SPRAY ARMS NEED REGULAR CLEANING AS HARD WATER RESIDUES WILL CLOG THEIR JETS & BEARINGS. TO REMOVE THE SPRAY ARM, SCREW OFF THE NUT TO TAKE OUT THE WASHER ON TOP OF THE SPRAY ARM AND REMOVE THE ARM. WASH THE ARMS IN SOAPY WARM WATER & USE A SOFT BRUSH TO CLEAN THE JETS. REPLACE THE SPRAY ARM AFTER RINSING IT THOROUGHLY.



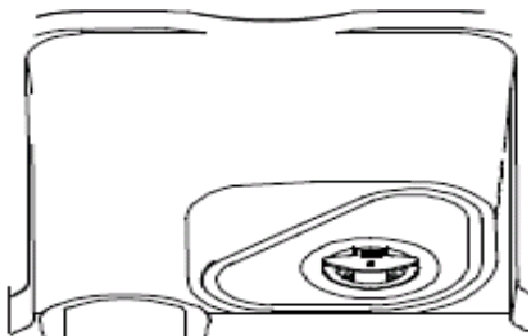

## ***CLEANING THE FILTERS***

- THE FILTER ASSEMBLY MUST BE KEPT CLEAN FOR BEST PERFORMANCE. You should remove the larger bits of food trapped in the filter after each wash cycle by rinsing the semicircular filter and cup under running water. **To remove the filter assembly, pull up on the cup handle.**
- ***The entire filter assembly should be cleaned at least once a month.***
- To clear the coarse filter and the fine filter, use a cleaning brush. Then, reassemble the filter parts as shown in the figure above and reinsert the entire assembly in the dishwasher in its seat & press downward to secure it.
- Improper replacement of the filter may impair appliance performance and damage dishes and utensils.

- ***Warning - never run the dishwasher without the filters in place!***
- ***Warning - Before cleaning the inner cavity of the appliance always allow 30 minutes for the Element to cool down to avoid injury!***

## **HOW TO KEEP YOUR DISHWASHER IN SHAPE**

**AFTER EVERY WASH**, leave the door slightly ajar so that moisture and odours are not trapped inside.

**REMOVE THE PLUG** before cleaning or performing maintenance. Never run the risk of electric shocks.

**DO NOT USE SOLVENTS OR ABRASIVE CLEANING AGENTS** to clean the exterior and the rubber parts of the dishwasher. Only use a cloth and warm soapy water. To remove spots or stains from the surface of the interior, use a cloth dampened with water and a little white vinegar, or a cleaning product made specifically for dishwashers.

**WHEN YOU GO ON HOLIDAY**, run a wash cycle with the dishwasher empty. Then unplug it, turn off the water supply and leave the door slightly ajar to prevent odours and mould from developing.

**MOVING THE APPLIANCE** is possible but **KEEP IT UPRIGHT**.

**SEALS** can trap food, which in turn will cause odours. Periodic cleaning with a damp cloth or sponge will prevent this from becoming a problem.

### **PROTECTING YOUR DISHWASHER AGAINST FREEZING**

*If your dishwasher is left in an unheated place during the winter, ask a service technician to:*

- 1) Cut off electrical power to the dishwasher. Remove fuses or trip circuit breaker.
- 2) Turn off the water supply and disconnect the water inlet pipe from the water valve & discharge hoses.
- 3) Drain water from the inlet pipe and water valve (Use a pan to catch the water).
- 4) Reconnect the water inlet pipe to the water valve.
- 5) Remove the plastic sump cover in the tub bottom and use a sponge to soak up water in the rubber boot.

## ***BEFORE YOU CALL FOR SERVICE ...***

**CHECKING AGAINST THE CHARTS BELOW MAY FIX YOUR PROBLEM.**

<b><i>PROBLEM</i></b>	<b><i>POSSIBLE CAUSES</i></b>	<b><i>WHAT TO DO</i></b>
<b><i>Dishwasher doesn't run!</i></b>	<ul style="list-style-type: none"> <li>Fuse blown, or the circuit breaker acted</li> </ul>	<ul style="list-style-type: none"> <li>Replace fuse or reset circuit breaker.</li> <li>Remove any other appliances feeding from the same socket as the dishwasher.</li> </ul>
	<ul style="list-style-type: none"> <li>Power supply is not turned on</li> </ul>	<ul style="list-style-type: none"> <li>Make sure the dishwasher is turned on and the door is closed securely.</li> </ul>
	<ul style="list-style-type: none"> <li>Water pressure is low</li> </ul>	<ul style="list-style-type: none"> <li>Check that the water supply is connected properly and the water is turned on.</li> </ul>
<b><i>Drain Pump doesn't stop!</i></b>	<ul style="list-style-type: none"> <li>Overflow</li> </ul>	<ul style="list-style-type: none"> <li>The system is designed to detect an overflow. When it does, it shuts off the circulation pump and turns on the drain pump. Call a Baumatic Ltd approved technician.</li> </ul>
<b><i>Noise!</i></b>	<ul style="list-style-type: none"> <li>Some audible sounds are normal</li> </ul>	<ul style="list-style-type: none"> <li>Sound from soft food shredding action and detergent cup opening. This is not a problem.</li> </ul>
	<ul style="list-style-type: none"> <li>Utensils are not secure in the baskets or something small has dropped into the basket and is loose</li> </ul>	<ul style="list-style-type: none"> <li>Ensure everything is placed securely in the dishwasher.</li> </ul>
	<ul style="list-style-type: none"> <li>Motor Hums</li> </ul>	<ul style="list-style-type: none"> <li>Dishwasher has not been used regularly. If you do not use it often, remember to set it to fill and pump out every week. (See Wash Cycle table). This will help keep the seal moist.</li> </ul>

<b>PROBLEM</b>	<b>POSSIBLE CAUSES</b>	<b>WHAT TO DO</b>
<i>Suds in the Tub!</i>	<ul style="list-style-type: none"> <li>Improper detergent</li> </ul>	<ul style="list-style-type: none"> <li>Use only special dishwasher detergent to avoid suds.</li> </ul>
<i>Stained tub Interior!</i>	<ul style="list-style-type: none"> <li>Spilled rinse agent</li> </ul>	<ul style="list-style-type: none"> <li>Always wipe up rinse agent spills immediately.</li> </ul>
	<ul style="list-style-type: none"> <li>Detergent with colorant was used</li> </ul>	<ul style="list-style-type: none"> <li>Make sure you use detergent without colorant.</li> </ul>
<i>Dishes are not dried!</i>	<ul style="list-style-type: none"> <li>Rinse agent dispenser is empty</li> </ul>	<ul style="list-style-type: none"> <li>Make sure that the rinse agent dispenser is filled.</li> </ul>
<i>Dishes and Flatware not Clean!</i>	<ul style="list-style-type: none"> <li>Improper program</li> </ul>	<ul style="list-style-type: none"> <li>Select stronger program.</li> </ul>
<i>Spots and Filming on Glasses and Flatware!</i>	<ul style="list-style-type: none"> <li>Improper rack loading</li> </ul>	<ul style="list-style-type: none"> <li>Make sure there are no large dishes blocking the action of the detergent dispenser and the spray arms.</li> </ul>
	<ul style="list-style-type: none"> <li>Extremely hard water</li> <li>Low inlet temperature</li> <li>Overloading the dishwasher</li> <li>Improper loading</li> <li>Old or damp powder detergent</li> <li>Empty rinse agent dispenser</li> <li>Incorrect dosage of detergent</li> </ul>	<p><b>To remove spots from glassware:</b></p> <ol style="list-style-type: none"> <li>1. Take all metal utensils out of the dishwasher.</li> <li>2. Do not add detergent.</li> <li>3. Choose the longest cycle.</li> <li>4. Start the dishwasher and let it to run for 18 - 22 minutes, then it will be in the main wash.</li> <li>5. Open the door and pour 2 cups of white vinegar into the bottom of the dishwasher.</li> <li>6. Close the door and let the dishwasher complete the cycle.</li> <li>7. If the vinegar does not work, repeat as above, only use ¼ cup (60ml) of citric acid crystals instead of vinegar.</li> </ol>

<b>PROBLEM</b>	<b>POSSIBLE CAUSES</b>	<b>WHAT TO DO</b>
<i>Cloudiness on glass!</i>	<ul style="list-style-type: none"> <li>Combination of soft water and too much detergent</li> </ul>	<ul style="list-style-type: none"> <li>Use less detergent if you have soft water and select a shorter cycle to clean the glassware.</li> </ul>
<i>Yellow or brown film on inside surfaces!</i>	<ul style="list-style-type: none"> <li>Tea or coffee stains</li> </ul>	<ul style="list-style-type: none"> <li>Use a solution of ½ cup of bleach and 3 cups warm water to remove the stains by hand. Rinse thoroughly.</li> </ul>
<i>White film on inside surface!</i>	<ul style="list-style-type: none"> <li>Iron deposits in water can cause an overall film</li> </ul>	<ul style="list-style-type: none"> <li>You have to call a water softener company for a special filter.</li> </ul>
<i>Detergent cup lid won't latch!</i>	<ul style="list-style-type: none"> <li>Hard water minerals</li> </ul>	<ul style="list-style-type: none"> <li>To clean the interior, use a damp sponge with dishwasher detergent and wear rubber gloves. Never use any other cleaner than dishwasher detergent for the risk of foaming or suds.</li> </ul>
	<ul style="list-style-type: none"> <li>Button is not in the 'OFF' position</li> </ul>	<ul style="list-style-type: none"> <li>Turn the Button to 'OFF' position and slide the door latch to the left.</li> </ul>
<i>Detergent left in dispenser cups!</i>	<ul style="list-style-type: none"> <li>Dishes block detergent cups</li> </ul>	<ul style="list-style-type: none"> <li>Reload the dishes properly.</li> </ul>
<i>Steam!</i>	<ul style="list-style-type: none"> <li>Normal phenomenon</li> </ul>	<ul style="list-style-type: none"> <li>There is some steam coming through the vent by the door latch during drying and water draining.</li> </ul>

<i><b>PROBLEM</b></i>	<i><b>POSSIBLE CAUSES</b></i>	<i><b>WHAT TO DO</b></i>
<i>Black or grey marks on dishes!</i>	<ul style="list-style-type: none"> <li>Aluminium utensils have rubbed against dishes</li> </ul>	<ul style="list-style-type: none"> <li>Use a mild abrasive cleaner to eliminate those marks by hand.</li> </ul>
<i>Water standing in the bottom of the tub!</i>	<ul style="list-style-type: none"> <li>This is normal</li> </ul>	<ul style="list-style-type: none"> <li>A small amount of clean water around the outlet on the tub bottom at the back of the tub keeps the water seal lubricated. No action needed.</li> </ul>
<i>Dishwasher leaks!</i>	<ul style="list-style-type: none"> <li>Overfilled dispenser or rinse aid has spilled</li> </ul>	<ul style="list-style-type: none"> <li>Be careful not to overfill the rinse aid dispenser.</li> <li>Spilled rinse aid could cause oversudsing and lead to overflowing.</li> <li>Wipe away any spills with a damp cloth.</li> </ul>
	<ul style="list-style-type: none"> <li>Dishwasher isn't level</li> </ul>	<ul style="list-style-type: none"> <li>Make sure the dishwasher is level.</li> </ul>
	<ul style="list-style-type: none"> <li>3-in-1 Tablets</li> </ul>	<ul style="list-style-type: none"> <li>Make sure if you're using 3-in-1 tablets that you do not put rinse aid and salt into the appliance as well.</li> </ul>
<i>Door popping open!</i>	<ul style="list-style-type: none"> <li>Appliance not level</li> </ul>	<ul style="list-style-type: none"> <li>Level appliance &amp; ensure top screws attaching appliance to work surface are not lifting the weight of the dishwasher.</li> </ul>

### **WARNING!**

IF OVERFLOW OCCURS, TURN OFF THE MAIN WATER SUPPLY BEFORE CALLING A SERVICE TECHNICIAN. IF THERE IS WATER IN THE BASE OF THE TANK PAN BECAUSE OF AN OVERFILL OR SMALL LEAK, THE WATER SHOULD BE REMOVED BEFORE RESTARTING THE DISHWASHER.



## ERROR CODES - WHAT THEY MEAN

**\* YOUR DISHWASHER MAY EXPERIENCE A FAULT. SHOULD THIS HAPPEN, A CODE CONSISTING OF 'E' & A NUMBER FROM 1-7 CAN BE DISPLAYED.**

**USE THIS TABLE TO UNDERSTAND WHAT IS WRONG.**

**\*NOTE\*: ALWAYS CALL FOR A *Baumatic Ltd* ENDORSED / APPROVED SERVICE TECHNICIAN TO CARRY OUT REPAIRS.**

CODE	SYMPTOM:	CAUSE:	WHAT TO DO:
'Err1'	LONGER FILL TIME.	FAUCET IS NOT OPENED.	Ensure that inlet hose is not kinked or crushed.
'Err2'	LONGER or EXTENDED DRAINING TIME	THE DRAIN PIPE WAS PLACED TOO HIGH WHEN IT WAS INSTALLED.	Ensure drainage system is as per manual and not extended.
'Err3'	LONGER HEATING TIME – NOT REACHING REQUIRED TEMPERATURE	MALFUNCTION OF TEMPERATURE SENSOR OR OF HEATING ELEMENT.	CALL FOR A QUALIFIED SERVICE TECHNICIAN.
'Err4'	OVERFILLED	<p>TOO MUCH INLET WATER.</p> <p>*NOTE * - THERE ARE NUMEROUS CAUSES OF AN 'Err4' MESSAGE. REFER TO APPLIANCE USAGE SECTION OF THIS MANUAL FOR GUIDELINES ON HOW TO PREVENT AN OVERFILL.</p>	<p>Overdosing. 3-in-1 put in with salt and/or rinse aid in the appliance = overdose.</p> <p>Could also be a Water Pressure problem.</p>
'Err6'	OPEN CIRCUIT	THERMISTOR.	CALL FOR A QUALIFIED SERVICE TECHNICIAN.
'Err7'	SHORT CIRCUIT	THERMISTOR.	CALL FOR A QUALIFIED SERVICE TECHNICIAN.

### WARNING!

IF OVERFLOW OCCURS, TURN OFF THE MAIN WATER SUPPLY BEFORE CALLING A SERVICE TECHNICIAN. IF THERE IS WATER IN THE BASE OF THE TANK PAN BECAUSE OF AN OVERFILL OR SMALL LEAK, THE WATER SHOULD BE REMOVED BEFORE RESTARTING THE DISHWASHER.

## DISHWASHER CHARACTERISTICS

The BAUMATIC SUPREMA1W/SS dishwasher model is based firmly on convenience. Apart from having the same general workings as other household dishwashers, it has several extra features.



### Performance of

**Dishwasher** - Your dishwasher has a A rated wash performance, A rated drying performance and A rated energy efficiency.



### Overflow protection

- Your dishwasher has an overfill protection program which could automatically shut off the inlet valve and start the drain pump if the water Overflows.



### Stainless steel tub-

You need not worry about stains to the tub.

### 6 wash programs

- You can choose desired program according to the soiled level. Such as, intensive wash, normal wash, economy, rinse, glass, rapid and pre-wash, etc. Then you can change the temperature of the wash.



### Error alarm-

Fault codes show on the display if there is a fault with your dishwasher.



### Temperature display -

Displays the wash temperature at any moment. If you know the water temperature, you'll be less likely to be scalded when you open the door.



### Broad applied

**voltage** - This appliance uses AC (alternating current) voltage. Please be aware that this will make its operation vulnerable to uneven current in your home and power surges.



### 4 Different wash temperatures

The intensive, normal, economic, rinse, glass and rapid wash have different temperature options which you can set before you start a washing cycle.



### 14 place settings -

Normal wash load of 14 place settings.



### Rinse aid Warning

**Indicator** - If the rinse aid is running low, this signal will light up on the control panel, alerting you to top the rinse aid level up so the machine can keep at its optimum performance level.



### Automatic Power off function

Automatically shuts the power off after washing.



### Adjustable upper basket

- Even if the dishware is large, you can load the dishes by adjusting the basket.



### Salt Warning Indicator -

If the salt is running low, this signal will light up on the control panel to alert you to top the salt level up so the machine can keep at its optimum performance level.



### Remaining time indicator

The length of time left in the program will be clearly displayed in the text window, leaving you in no doubt as to when the program will end.



### Time delay feature -

This allows the start of the program to be delayed between 1 and 9½ hours for your convenience and for saving on energy!

## INSTALLATION INSTRUCTIONS

**NOTE:** APPLIANCE SHOULD ONLY BE FITTED  
BY A TRAINED TECHNICIAN

### INSTALLING YOUR DISHWASHER

**Your dishwasher is with a freestanding feature, you only need to do following:**

80:/


- 1 Levelling the Appliance(pls see the section "get your dishwasher level in page 25)
- 2 Connect the water inlet (pls see page 26)
- 3 Electrical connection (see page 27)

**Also you can install it to a cabinet cavity according following:**

#### **a) PREPARATION**

*Before you install your appliance, make sure that the place you have chosen to fit it is:*


- Near the existing power socket (marked **4** in figure).
- So that you can choose one side of the cabinet cavity to easily connect the dishwasher's drain hoses.
- Near your sink so you have easy access to the water inlet and drain hoses (marked **3** [inlet] & **2** [drain] in figure).

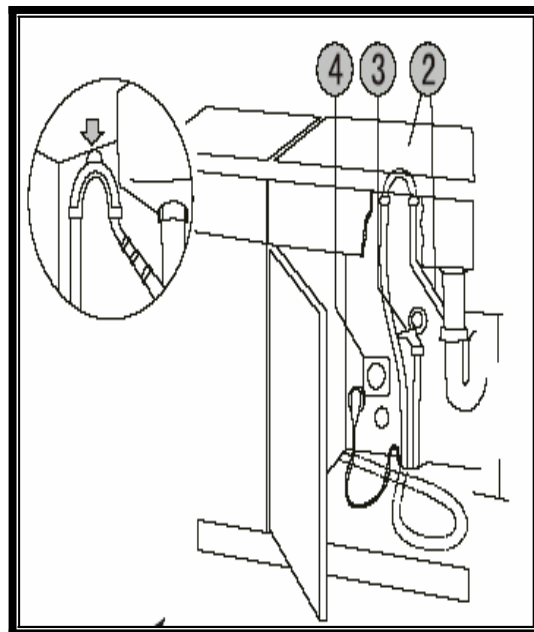


## **INSTALLING YOUR DISHWASHER INTO A CABINET AREA**

- If dishwasher is to be installed at the corner of cabinet area, make sure you have enough space when the door is opened.
- Is structured so that you have less than 5 mm between the top of the dishwasher and cabinet. Also check that the outer door is aligned to cabinet.

REMEMBER THE DIMENSIONS OF YOUR DISHWASHER! THESE ARE (measured in figure in mm):


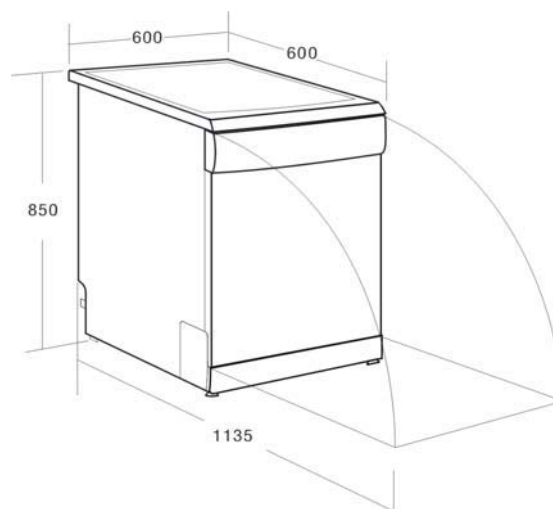


## **FIRSTLY, GET YOUR DISHWASHER LEVEL**

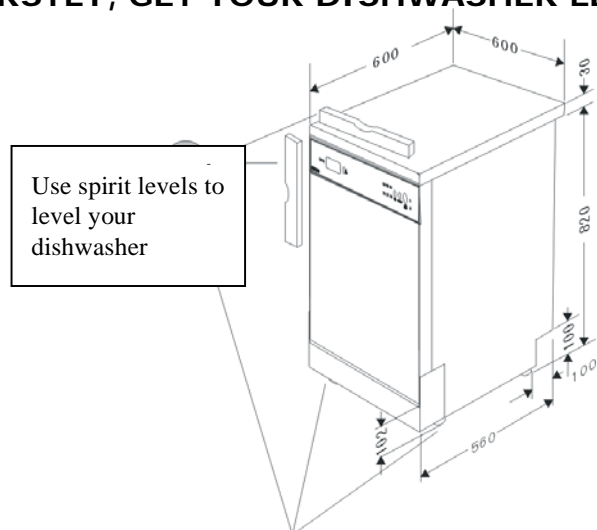

### **Note:**

Once the appliance is positioned, adjust the Four feet (screwing them in or out) to adjust the height of the dishwasher, making it level. In any case, the appliance should not be inclined more than 2°.

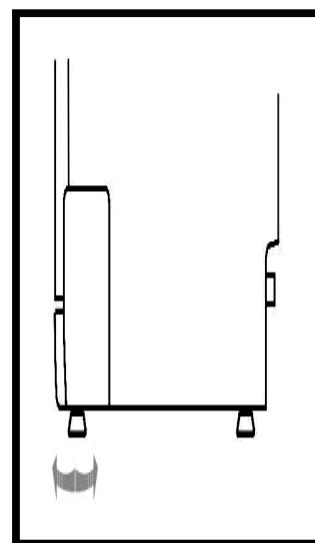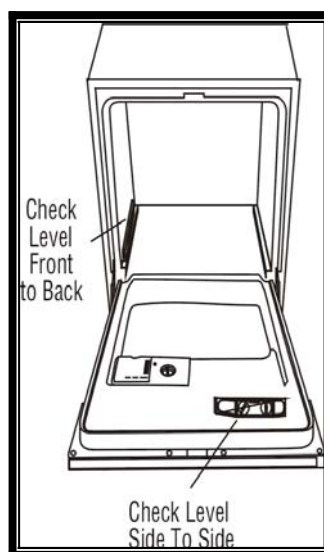


## **b) Connecting to the mains water supply**



**IMPORTANT:** Do not connect the appliance to your mains water supply using an old or an existing water inlet hose. The inlet hose supplied with the dishwasher is the **ONLY** one that should be used.

**DO NOT CONNECT THE WATER INLET HOSE TO A HOT WATER TAP.**

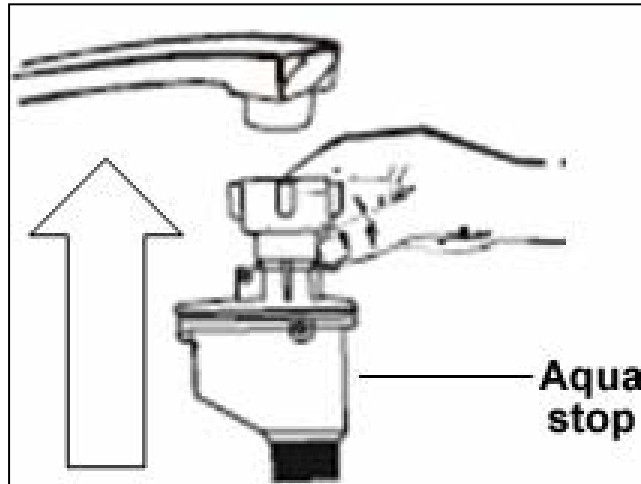


- The inlet hose will be located inside the cabinet of the dishwasher.
- Connect the water inlet hose to a threaded water tap that has a 3/4" thread.
- Fully tighten the inlet hose to the water tap.



**IMPORTANT:** If the inlet hose is fitted with an aqua stop. This **MUST** be fitted in the upright position, as shown in the above diagram.

## **c) Connecting the drain hose**

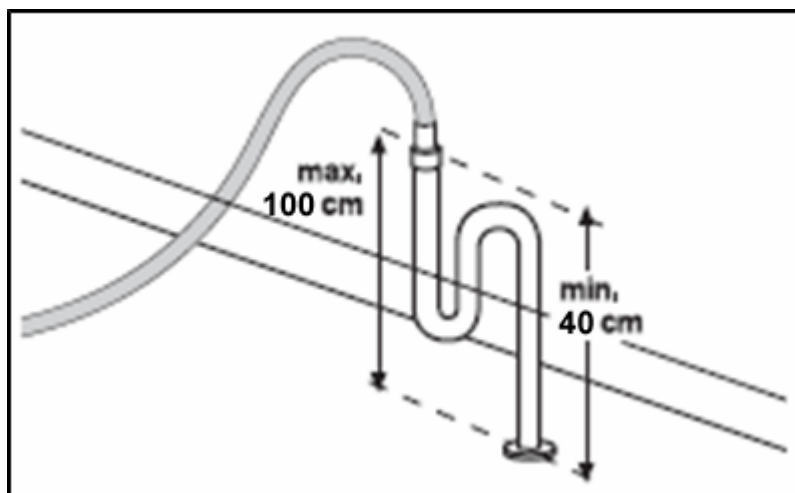

- 9 Secure the drain hose, so that it cannot move whilst the dishwasher is in use.
- 9 Place the end of the drain hose on your drain pipe. Push it a short way down into your drain pipe.
- 9 **IMPORTANT:** Do not insert the drain hose too deeply into the water pipe, as this may cause siphoning.
- 9 **NEVER EXTEND THE DRAINAGE HOSE FROM ITS ORIGINAL LENGTH.**

**d) NOW YOU ARE READY TO CONNECT THE POWER CORD.**

**WARNING!**  
**ELECTRICITY CAN BE DANGEROUS. PLEASE READ THE FOLLOWING CAREFULLY:**

**ELECTRICAL CONNECTION**

**⚠ WARNING!**  
*Ensure proper ground exists before use*

**⚠ CAUTION**, for personal safety:

DO NOT USE AN EXTENSION CORD OR AN ADAPTER PLUG WITH THIS APPLIANCE.

DO NOT, UNDER ANY CIRCUMSTANCES, CUT OR REMOVE THE THIRD GROUNDING PRONG FROM THE POWER CORD.

**Electrical Requirements**

The dishwasher is designed for operation on an adequately wired individual **220-240V AC, 50Hz** system. The required fuse rating is **13amp**. Fused electrical supply is required – copper wire only. Time delay fuse or circuit breaker is recommended. **Make sure that this appliance runs off its own separate circuit.** Outlet should be placed in adjacent cabinet.


**WARNING – ENSURE PROPER GROUND EXISTS BEFORE USE.**

After making sure that the voltage and the frequency values for the current in your home correspond to those on the rating plate and that the electrical system is sized for the maximum voltage on the rating plate, insert the plug into an electrical socket which is earthed properly. If the electrical socket to which the appliance must be connected is **not right** for the plug, replace the socket, rather than using adaptors of the like as they could cause overheating and fire.

**e) THEN, APPLY THE CONDENSATION STRIP.**

The Condensation Strip must be fitted to the underside of the worktop above your dishwasher to protect it against any moisture. Its purpose is to deflect steam rising from your appliance to protect your worktop's underside.

- The strip is located inside your dishwasher.
- Ensure the surface is clean prior to sticking to underside of the worktop.
- Separate the backing paper from the strip.
- Stick to the underside of the worktop.  
**Note:** Failure to attach strip could result in damage to the underside of your work surface!

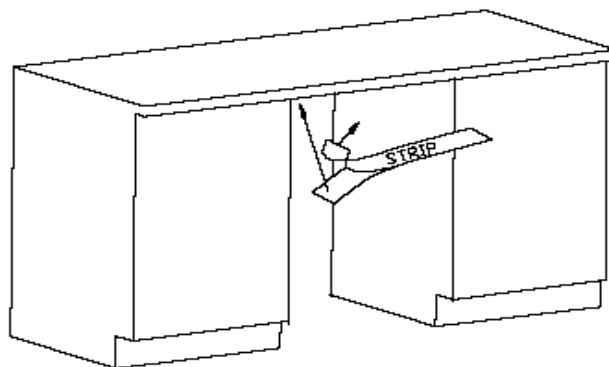


**f) NOW YOU ARE READY TO PUSH THE DISHWASHER INTO POSITION** (SEE FIGURE BELOW):

**NOTE –**  
**MAKE SURE YOU HAVE THE DISHWASHER ON ITS SLIDE RAILS**  
**(SEE ILLUSTRATION ON RIGHT).**

**\* Note \***

**You can detach the top board (5) that comes as part of your dishwasher if you want to install your dishwasher in your cabinet.**

**THEN MOVE IT INTO THE CABINET RECESS (AS PICTURED ON RIGHT, 6-7), ENSURING THAT IT IS BACKED UP AGAINST THE WALL.**

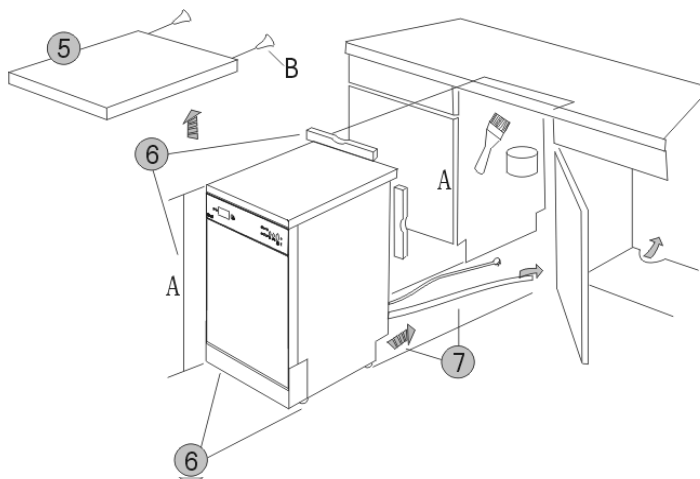


**g) ENSURE THAT YOUR DISHWASHER IS LEVEL IN ITS NEW POSITION.**



**NOTE:**

***YOUR DISHWASHER MUST BE LEVEL FOR PROPER DISH RACK OPERATION AND WASH PERFORMANCE. (GO BACK AND LOOK AT THE BOTTOM RIGHT DIAGRAM ON PAGE 24).***

***IT'S IMPORTANT TO MAKE SURE THAT YOUR DISHWASHER IS LEVEL AGAIN, BECAUSE THE FLOOR SURFACE MAY BE DIFFERENT TO WHERE YOU HAD ADJUSTED IT BEFORE YOU MOVED THE DISHWASHER INTO PLACE***

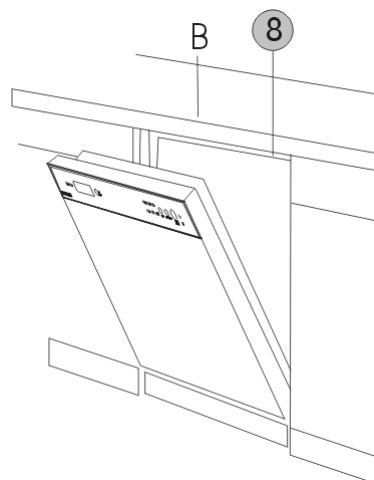

**WARNING!**

**BE CAREFUL WHILE YOU ARE LEVELLING YOUR DISHWASHER IN PLACE – IT COULD TIP OVER AND INJURE YOU!**

**FINAL CHECKLIST BEFORE OPERATING**

**NOTE: BEFORE YOU START USING YOUR DISHWASHER, PLEASE MAKE SURE YOU HAVE CHECKED:**

- **WHETHER THE DISHWASHER IS LEVEL AND FIXED.**
- **WHETHER THE INLET VALVE IS OPENED.**
- **WHETHER THERE IS LEAKAGE AT THE CONNECTIONS OF THE CONDUCTS.**
- **WHETHER THE WIRES ARE TIGHTLY CONNECTED.**
- **WHETHER THE POWER IS SWITCHED ON.**
- **WHETHER THE INLET AND DRAIN HOSES ARE KNOTTED / KINKED.**
- **WHETHER ALL PACKING MATERIALS & PRINTED MATTER HAVE BEEN REMOVED FROM THE DISHWASHER.**

**PLEASE KEEP THIS MANUAL FOR FUTURE REFERENCE**


### Minimum and maximum plate sizes

	Maximum height of dishes (upper basket)	Maximum height of dishes (lower basket)
With upper basket raised	19 cm	30 cm
With upper basket lowered	24 cm	25 cm

**IMPORTANT:** Care should be taken to make sure that the spray arms can move freely when items have been loaded into the baskets.

## Environmental note

**This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.**

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

**Disposal must be carried out in accordance with local environmental regulations for waste disposal.**

**For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.**



- The packaging materials that Baumatic uses are environmentally friendly and can be recycled.
- Please discard all packaging material with due regard for the environment.

**United Kingdom**

Baumatic Ltd.,  
Baumatic Buildings,  
6 Bennet Road,  
Reading, Berkshire  
RG2 0QX  
United Kingdom

**Sales Telephone**

(0118) 933 6900

**Sales Fax**

(0118) 931 0035

**Service Telephone**

(0118) 933 6911

**Service Fax**

(0118) 986 9124

**Spares Telephone**

(01235) 437244

**Technical Advice Telephone**

(0118) 933 6933

**E-mail:**

sales@baumatic.co.uk  
technical@baumatic.co.uk

**Website:**

www.baumatic.co.uk

**Republic of Ireland**

01- 6266 798

**Czech Republic**

Baumatic CR spol s.r.o.  
Amperova 495  
46215, Librec  
Czech Republic

+420 800 185 263

www.baumatic.cz

**Slovak Republic**

Baumatic Slovakia, s.r.o.  
Skultetyho 1  
831 04 Bratislava 3  
Slovakia

+421 255 640 618

**Germany**

Baumatic Gmbh  
Janderstrasse 9  
Mannheim, 68199  
Germany

+4962 112 9190

www.baumatic.de

**Italy**

Baumatic Italia S.R.L.  
Via Caltana 129  
Campodarsego (Padova), 35011  
Italy

+3904 9920 2297

www.baumatic.it

**Holland**

Baumatic Benelux B.V.  
Grindzuigerstraat 22  
1333 MS ALMERE  
The Netherlands

+3136 549 1555

www.baumatic.nl





