


**TITAN2 Stainless steel
side by side frost free
fridge/freezer**

Instruction manual



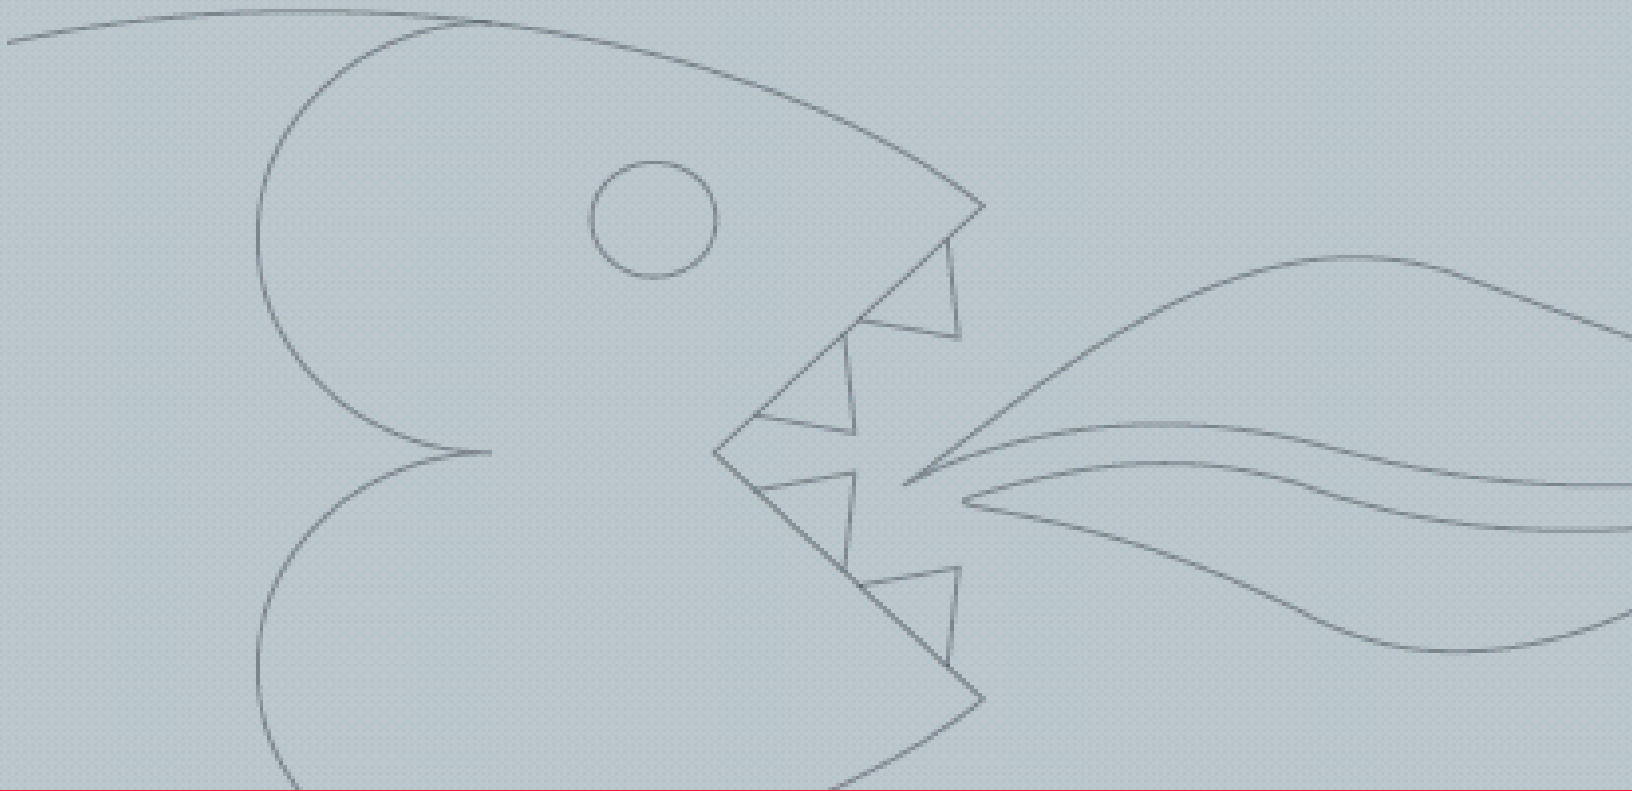

USER MANUAL FOR YOUR BAUMATIC TITAN2 Stainless steel side by side 541 litre frost free fridge/freezer



You will be mine ...

NOTE: This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference, for you or any person not familiar with the operation of the appliance.


Contents

Environmental note	4
Important safety information	5 – 6
Specifications of your fridge freezer	7
Dimensions of the appliance	7
Energy efficiency class	7
Cubic capacities	7
Specifications of your appliance	7
Description of the appliance	8
Description of the product features	9-10
Using your Baumatic fridge freezer	11
Before switching on	11
During first use	11
Control panel	12
Turning on the appliance	13
Setting the thermostat in the freezer	13
Setting the thermostat in the fridge	13-14
Turning on the super freezer option	14
Turning on the super refrigerator option	15
Arranging and storing food in the fridge section	15-16
The  freezer compartment	17
Freezing fresh food	17
Tips on freezing	18
Activating the child lock	18
The dispenser	19
Before first use	19
Using the dispenser	19-20
The ice maker	20
Dispenser and ice maker warnings	21
Locking the ice maker	21
Removing and replacing the ice cube storage case	22
Water filter change icon	22
Important user information	22
Cleaning and maintenance	23-25
Defrosting the  freezer compartment	25-26
Replacing the light bulb	26-27
Installation	28
Electrical connection	28
Positioning	29
Installation preparation	30
Removing the freezer door	30-31
Removing the fridge door	32
Replacing the freezer door	33-34
Replacing the fridge door	34-35
The water inlet hose and water filter	35
Connecting the water inlet hose and water filter	35-38
Levelling the appliance and adjusting the doors	39
Fitting the front cover	39
Replacing the water filter	40
Troubleshooting	40-41
Baumatic Ltd. conditions of guarantee	42
Contact details	43

Environmental note

Note: Before discarding an old appliance, switch off and disconnect it from the power supply. Cut off and render any plug useless. Cut the cable off directly behind the appliance to prevent misuse. This should be undertaken by a competent person. Disable the door lock to make sure that children cannot get stuck inside the appliance.

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.




- The packaging materials that Baumatic uses are environmentally friendly and can be recycled.
- Please discard all packaging material with due regard for the environment.

Important safety information



Your safety is of the utmost importance to Baumatic. Please make sure that you read this instruction booklet **before** attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Baumatic Technical Department.

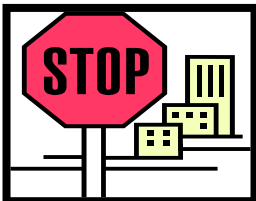

IMPORTANT: Any installation work must be carried out by a qualified electrician or competent person.

Use of the appliance

- Your appliance is only designed to be used in the home. It is suitable for storing food that needs to be chilled and refrigerated. If it is used for any other purpose or it is not used correctly, then Baumatic Ltd. will accept no liability for any damage that is caused.
- Altering the specification of the appliance must not be attempted for reasons of safety.



Before using your appliance

- Check the appliance for any signs of transport damage. If you notice any damage, then you should not connect your appliance to your mains supply and should contact your retailer.

Refrigerant

- Your appliance contains R600a refrigerant, which is a natural gas that does not contain CFCs that can damage the environment. However it is a flammable substance, therefore care should be taken:
 - During the transportation and installation of the appliance, make sure that the refrigeration pipework does not get damaged.
 - If it does become damaged then sources of ignition and open flames should be avoided. Also the room that the appliance is situated in should be thoroughly ventilated.
- Do not place any objects on top of the appliance, as this may damage the table top.





Child safety

- Packaging material should be kept away from children.
- Children should not be allowed to touch the controls or play with the appliance.




General safety

- Do not pull on the power supply cable to remove the plug from your mains supply socket.
- Do not pull out or insert the plug with wet hands.
- Do not attempt to use your appliance outdoors or any place where it is likely to come into contact with the elements.
- Before cleaning the appliance or performing maintenance work, ensure that the appliance has been disconnected from your mains supply.
- Never allow the back coils of the appliance to come into contact with the wall surface.
- Always ensure that the location where you are installing your appliance is free of stored items such as papers and other flammable materials.
- Never block the ventilation openings of the appliance, either on the inside or its exterior.
- It is vital to keep your appliance well ventilated, so that there is proper air flow between the bottom of the unit and the plinth/kick plate which it is sitting on.
- Do not place electrical devices inside of the appliance, such as mixers or ice cream makers.

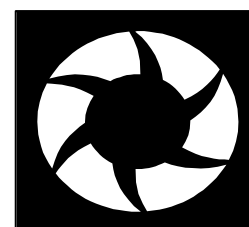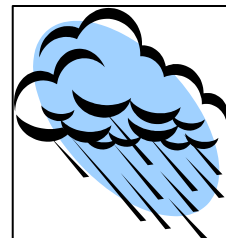

Service

You should not attempt to repair the appliance yourself, as this could cause injury or a more serious malfunction. If you require a service call then please contact the Baumatic Service Department.

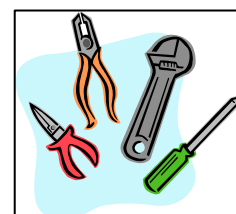

Specifications of your fridge freezer

Congratulations on purchasing a Baumatic fridge freezer

Dimensions of your appliance

- Height: 1790 mm
- Width: 900 mm
- Depth: 730 mm

Energy efficiency class

- Energy class: A

Cubic capacities

- Gross capacity (fridge): 357 litres
- Gross capacity (freezer): 184 litres
- Net capacity (fridge): 334 litres
- Net capacity (freezer): 170 litres


Specifications of the appliance

- Frost free fridge and freezer
- Multi airflow cooling system
- Digital control panel
- Ice maker
- Water dispenser
- Deodorizer
- Anti-bacterial surface
- 4 Safety glass shelves
- Meat drawer
- Folding wine tray
- 2 Salad crispers
- 2 Egg racks
- Butter compartment
- 3 General racks
- 2 Bottle racks
- 4 Freezer shelves
- 6 Freezer storage compartments
- 2 Removable plastic drawers
- Ice cube tray
- Door storage

IMPORTANT: When you install your appliance it is important to bear in mind its climatic rating.

In order to find out the climatic rating of your appliance, you should check the rating plate. The rating plate is located on the front left edge of the inside of the fridge section. You will need to open the door of your appliance to be able to find it. The rating plate will indicate the ambient temperature range that your appliance will function correctly within.

Description of the appliance

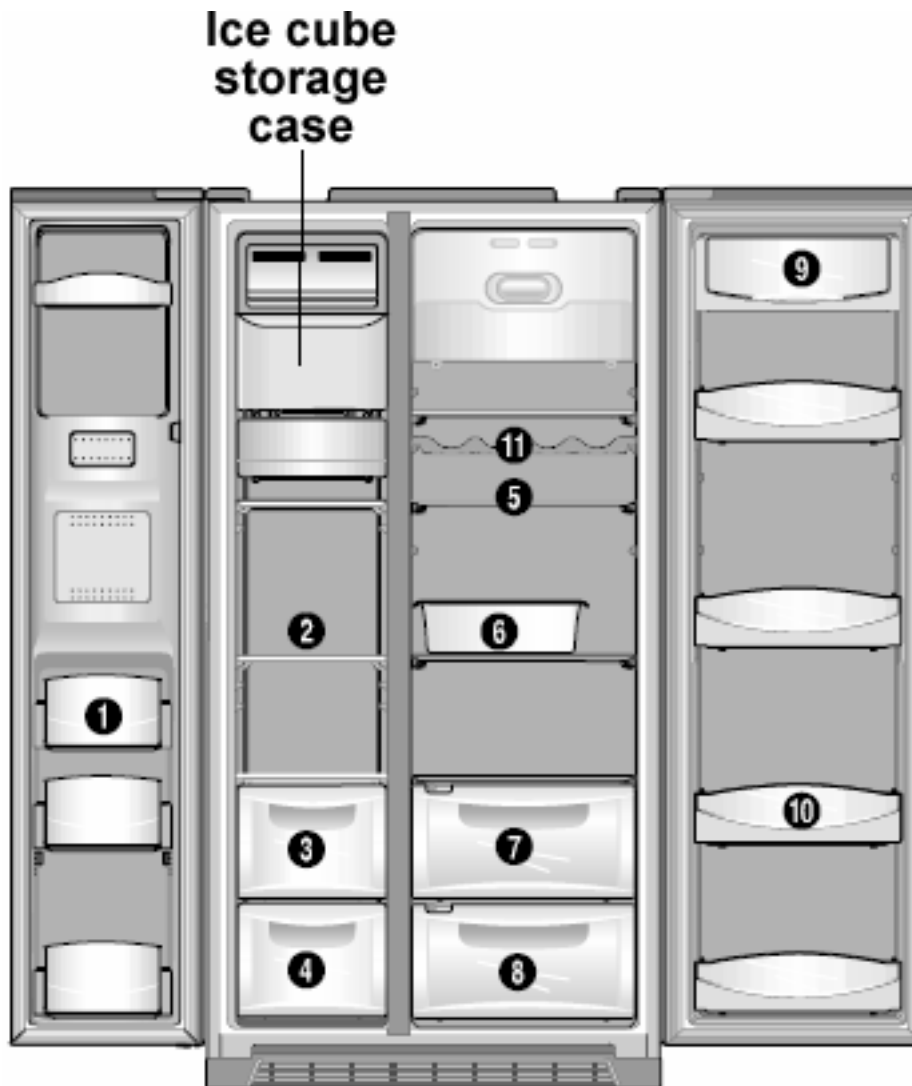

Freezer section

- 1) Door storage compartments
- 2) Freezer shelves (x 4)
- 3) Dried foods compartment
- 4) Meat storage compartment

Fridge section

- 5) Refrigerator shelves (x 4)
- 6) Movable egg container
- 7) Salad/vegetable drawer
- 8) Fruit drawer
- 9) Dairy compartment
- 10) Door storage compartments
- 12) Wine rack

Description of the product features

Shelves

- The shelves may be placed in any of the guide slots within the interior of the appliance. They are protected from sliding out.
- To remove a shelf: Take off all of the items that are stored on the shelf that you want to remove. Then lift the front of the shelf and carefully pull it out of the grooves.

Freezer section door storage compartments

- The top door storage compartment should not have ice cream or foods that are going to be stored for a long period of time put in it.
- **IMPORTANT: IT IS IMPORTANT THAT NONE OF THE SHELVES THAT SIT IN THE DOOR ARE OVERLOADED, AS THIS WILL DRASTICALLY REDUCE THEIR WORKING LIFE.**

Dried foods compartment

- For storage of dried foods (such as dried herbs, dried vegetables etc).

Meat storage compartment

- For storage of meat and fish (we would recommend that they are stored in a foil cover or a vinyl wrap).

Fridge section door storage compartments

- The door liner holds various shelves, which are suitable for storing eggs, cheese, butter and yogurt. As well as smaller packages, tubes, cans etc.
- The lower shelves should be used for storing reasonably sized bottles.
- **IMPORTANT: IT IS IMPORTANT THAT NONE OF THE SHELVES THAT SIT IN THE DOOR ARE OVERLOADED, AS THIS WILL DRASTICALLY REDUCE THEIR WORKING LIFE.**

Movable egg container

- This case can be placed on any shelf, depending on how the food in your fridge is arranged.

Salad/vegetable drawer

- For storing salad and vegetables, the drawer is designed to keep the contents fresh for as long as possible.

Fruit drawer

- For storing fruits, the drawer is designed to keep the contents fresh for as long as possible.
- Care should be taken when storing tropical fruit (bananas and pineapples etc) and tomatoes. As these types of items can easily deteriorate in a lower temperature.

Dispenser

- Will dispense chilled water, cubed ice or crushed ice.

Digital control panel

- Shows the temperature that the fridge and freezer are set at.
- Shows what option the water dispenser is set at.
- Shows whether the child lock is engaged.
- Shows whether the water filter needs changing.


Deodorizer

- An antibiotic deodorizer that keeps food fresher, prevents the growth of bacteria and helps to remove odours from the appliance.

Using your Baumatic fridge freezer

Before switching on


- Make sure that it has been installed by a suitably qualified person, as per the information contained in Baumatic's installation instructions.
- After delivery, wait for eight hours before connecting the appliance to your mains supply. This means that any refrigerant gasses that may have been disturbed during the transportation process are allowed to settle.
- The outside of the appliance and the removable accessories contained within it, should be cleaned with a solution of liquid detergent and water.
- The interior of the appliance should be cleaned with a solution of sodium bicarbonate dissolved in lukewarm water. The interior and accessories should be thoroughly dried, after the cleaning process has been completed.
- There can be an odour when you first switch on the appliance. It will lessen as the appliance starts to cool.

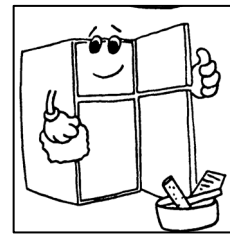

During first use

- When you first switch on the appliance, the compressor will run continuously for approximately 24 hours or until the fridge freezer reaches a cool enough temperature.
- During this period of time, you should try not to open the door frequently or place a large amount of food within the appliance.
- If the unit is switched off or unplugged, you must allow at least 5 minutes before restarting the appliance on the thermostat or reconnecting it to your mains supply.

Control panel

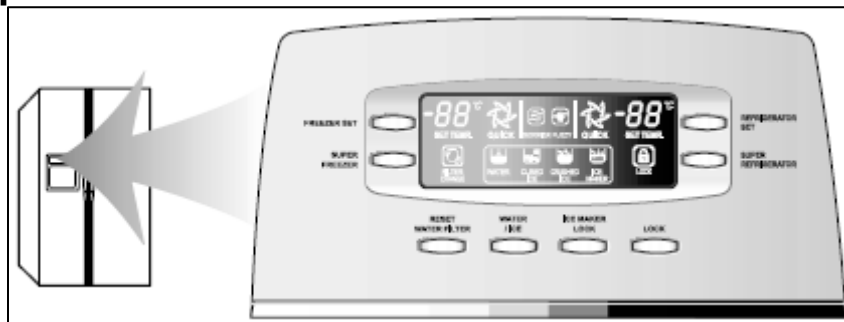

The control panel is located in the front of the freezer door, above the dispenser.



This should always be displayed when the appliance is connected to the mains supply. It shows that the digital control system is operating the appliance.



This should always be displayed when the appliance is connected to the mains supply. It shows that the deodorizer is operating correctly.



This will light when the water filter needs to be replaced.



This will light to show that the child lock is engaged.



A rectangle will show around this icon, when the dispenser is set to the chilled water option.



A rectangle will show around this icon, when the dispenser is set to the cubed ice option.



A rectangle will show around this icon, when the dispenser is set to the crushed ice option.



This will light to show that the dispenser has been set to not dispense ice.

Turning on the appliance

- You switch on your appliance by connecting it to your mains supply.

Setting the thermostat in the freezer

- Press the **FREEZER SET** button to set the temperature in the freezer section.



- The temperature that you have selected will show in the digital display next to the **FREEZER SET** button.
- The temperature shown in the display will count through in the sequence shown below:-



- We would recommend that the freezer section is set to a minimum temperature of -18°C .
- When the desired temperature appears on the digital display, release the **FREEZER SET** button, after a few seconds the temperature will be selected.
- On the maximum setting (-22°C), the freezer section will work harder to maintain a lower temperature. There is no need to run your appliance on this setting for prolonged periods and you should return the temperature setting to (-18°C).

Setting the thermostat in the fridge

- Press the **REFRIGERATOR SET** button to set the temperature in the fridge section.



- The temperature that you have selected will show in the digital display next to the **REFRIGERATOR SET** button.

- The temperature shown in the display will count through in the sequence shown below:-




- We would recommend that the fridge section is set to a minimum temperature of 5°C.
- When the desired temperature appears on the digital display, release the **REFRIGERATOR SET** button, after a few seconds the temperature will be selected.
- On the maximum setting (2°C), the fridge section will work harder to maintain a lower temperature. There is no need to run your appliance on this setting for prolonged periods and you should return the temperature setting to (4°C or 5°C).
- **IMPORTANT:** The ambient temperature of the room, the temperature of food and the amount of food that has been placed in the fridge freezer and how often the door is opened, will all affect the temperature being maintained by the appliance.

Turning on the super freezer option

This setting should be used before and whilst you are freezing fresh food, it will ensure that a powerful supply of cold air enters the freezer compartment.

- Press the **SUPER FREEZER** button to turn on the super freezer option.

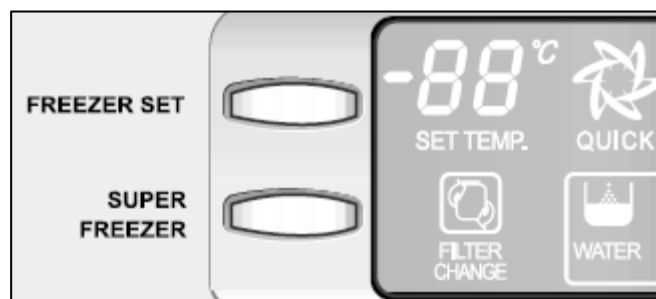

- The QUICK symbol will light to confirm that the super freezer option has been switched on.



IMPORTANT: This mode should only be used prior to and when freezing fresh food. You should not run the appliance in super freezer mode for prolonged periods. After the food is frozen press the SUPER FREEZER button again to switch off this option.

Turning on the super refrigerator option

This setting should be used if you want to chill something quickly, it will ensure that a powerful supply of cold air enters the fridge compartment.

- Press the **SUPER REFRIGERATOR** button to turn on the super refrigerator option.



- The QUICK symbol will light to confirm that the super refrigerator option has been switched on.



IMPORTANT: You should not run the appliance in super refrigerator mode for prolonged periods. After the food is chilled press the SUPER REFRIGERATOR button again to switch off this option.

Arranging and storing food in the fridge section

- Warm food or evaporating liquids should not be stored in your refrigerator, as this will increase the humidity inside of the appliance.
- All foods should be wrapped or covered, this is particularly important if the food has a strong flavour. You should use polythene bags or sheets, aluminium foil, wax paper. Liquids should be stored in covered containers or bottles.
- To maximise the space inside of the fridge section, any excessive packaging on the food should be removed.
- Quickly perishable food should be stored at the back of the refrigerator, which is the coldest part of the appliance.
- No food items should be allowed to come into contact with the back wall of the refrigerator.


- Make sure that you arrange food in such a way that the door can close completely. Particular attention should be given to bottles that may protrude when placed on shelves inside the main section of the refrigerator.
- Some organic solutions, such as the oils in lemon/orange peel and acid in butter, can cause damage to the plastic parts contained inside of the refrigerator.
- Do not open the refrigerator door too often or leave the door open for long periods of time, as this will increase the temperature inside of the appliance.
- **Meat** should be wrapped in polythene bags and then placed on the glass shelf above the vegetable drawer. **(Meat should only be stored in this manner for one or two days at the most).**
- **Cold dishes/cooked food** should be covered and can be placed on any shelf or in the chiller case.
- **Salad and vegetables** should be cleaned thoroughly and placed in the salad/vegetable drawers.
- **Fruit** should be cleaned thoroughly and placed in the fruit drawer.
- **Cheese and butter** should be placed in airtight containers, or they can be wrapped in aluminium foil or polythene bags. As much air as possible should be removed from the bags.
- **Milk bottles** should have a cap on them and be stored on the bottle shelves that sit in the door.
- **Garlic, potatoes, onions and bananas should only be stored in a refrigerator IF they are stored in airtight containers.**

The freezer compartment

The freezer compartment is suitable for storing and freezing food.

- The freezer compartment temperature must have already reached -18 degrees centigrade (or lower) before you attempt to store food that is already frozen or freezing fresh food.
- The freezer compartment is only able to freeze a certain quantity of fresh food at one time. The maximum amount of fresh food (in kilograms) that can be frozen in a 24 hour period is listed on the rating plate.
- Warm food should be allowed to cool down before you attempt to freeze it. If you place warm food in the freezer compartment, then the increased humidity will cause quicker ice formation and increase the amount of power that the appliance uses.
- The guidance of the food manufacturer should be followed, in regard to the maximum storage time.
- Thawed foods must not be frozen for a second time.

Freezing fresh food

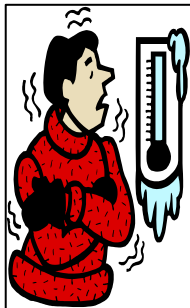



- To freeze the maximum quantity of fresh food specified above, you should press the **SUPER FREEZER** button 24 hours prior to attempting freezing.
- To freeze smaller quantities of fresh food, you should press the **SUPER FREEZER** button a few hours prior to attempting freezing.
- Fresh food should be packed into airtight containers or packaging. This will help to make sure that the food doesn't dry out or lose its flavour. It will also ensure that flavour does not transfer from other foods.



- Do not allow fresh food to touch items that are already frozen.
- After 24 hours you should check that the fresh food is satisfactorily frozen. If it is then you should press the **SUPER FREEZER** button again to return the appliance to normal operation.

Tips on freezing

- Freezer bags, polythene wraps, aluminium foil (extra thick) and special cans for frozen foods are suitable packaging for storing frozen goods in.
- Tape, rubber bands or plastic clips are suitable for sealing bags and wrappings.
- Before sealing a suitable bag, you should compress the air out of it, as this will help the food to freeze more easily.
- Flat packages freeze more easily.

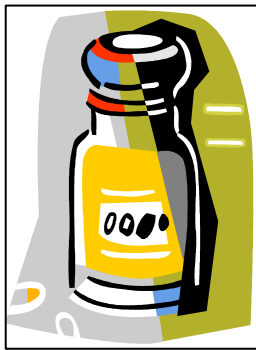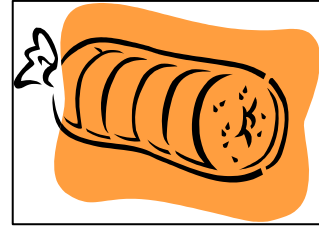

- If you are freezing liquid, then do not fill the container to the brim. Liquids will expand when being frozen.
- **Do not place bottles (glass or tin) containing liquids (especially sparkling liquids) into the freezer as this could cause the bottle to burst during freezing.**

Activating the child lock



Your appliance is fitted with a lock that will prevent a child from changing the temperature settings or any other settings that can be activated from the control panel.

- Press the lock button once and the child lock will activate. The lock icon will light on the display.
- To switch off the child lock, press and hold the lock button for longer than one second. The lock icon on the display will go out.

The dispenser

When your fridge/freezer is first connected to your mains supply, it will automatically select chilled water mode and the water symbol will light.

Before first use



You should not attempt to dispense ice for 24 hours after the appliance is first connected to your mains supply.

- Once the fridge and freezer sections have cooled sufficiently place a cup against the PUSH pad in the dispenser and pour out a couple of glasses of water.
- **IMPORTANT:** These first couple of glasses should not be drunk and the water should be poured down the sink.

Using the dispenser

- The dispenser can produce chilled water, cubed ice and crushed ice.
- Press the **WATER/ICE** button until a rectangular line shows around what you want the dispenser to produce.



- Place a cup against the pad in the dispenser and push it, after a few seconds it will dispense water, cubed ice or crushed ice. What comes out of the dispenser will depend on what option you selected before pushing the pad.
- You should place the glass directly underneath the water/ice chute and not rest it on the base of the dispenser. Otherwise water/ice can spill or splash.
- When the dispenser is producing ice, you should remove the cup/glass from the dispenser chute when it is half full, otherwise you may get ice overflowing or the dispenser outlet could become blocked.
- Shortly after ice has come out, you will hear a snapping sound which is a shut off valve operating, this stops further ice from being dispensed.
- 1 hour after you have dispensed cubed or crushed ice, the selection mode will return to chilled water automatically.

The ice maker

- 7-8 times a day, the ice maker will automatically produce approximately 10 ice cubes.
- These ice cubes will be stored in the ice cube storage case (see page 8 for the location of this).
- If the ice storage case becomes full, then the automatic ice making operation will stop.
- It is normal for there to be banging sounds, whilst the ice is being deposited into the ice cube storage case.
- If you use the dispenser several times in quick succession, then the ice cube storage case may empty. You will then need to wait approximately 24 hours for the ice maker to refill it.

Dispenser and ice maker warnings


- Avoid using fragile cups or crystal glasses if you are dispensing cubed or crushed ice, as damage could be caused to them.
- To prevent a bad odour then you should regularly remove the ice from the ice cube storage case.
- If you have not dispensed ice for a period of time, then clear all of the ice out of the ice cube storage case and let the appliance produce fresh ice.
- **DO NOT USE ICE THAT HAS BEEN STORED IN THE ICE CUBE STORAGE CASE FOR A LONG TIME.**
- **IMPORTANT: If you find that either the cubed or crushed ice is discoloured, do not use the ice.**
 - Remove all of the ice in the ice cube storage case.
 - Let fresh ice form.
 - If the ice is still discoloured then change the water filter.
 - If the ice is **STILL** discoloured after changing the water filter, then contact the Baumatic Service Department.
- If there is a power cut you should remove all ice from the ice cube storage case. If you leave the ice in the storage case, then it will melt and water will flow into the main section of the freezer.
- **DO NOT** insert your fingers or any tools into the dispenser outlet.
- If ice cubes do not dispense, then pull out the ice cube storage case and separate any ice cubes that may have got stuck together. Then try to dispense ice again.

Locking the ice maker



- Before cleaning the ice cube storage case or if you do not want the ice maker to produce ice, press the **LOCK ICE MAKER** button.
- You should then remove all ice from the ice cube storage case.
- To reactivate the ice maker you should press the **LOCK ICE MAKER** button again.

Removing and replacing the ice cube storage case

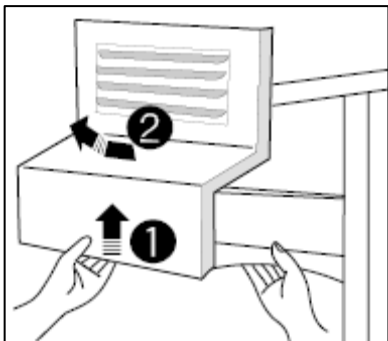

- Pull the storage case forwards to remove it from the freezer.
 - To put the storage case back into position, locate it into the side grooves of the cabinet and push it back into place.
-
- If the storage case does not fully slide back into position, remove it from the freezer again. Rotate the coil inside of the case a quarter of a turn and then slide the storage case back into place.

Water filter change icon



- Six months after you connect your appliance to the mains supply for the first time, the **FILTER CHANGE** icon will come on.
- After changing the water filter (see page 40 for details), press and hold the **RESET WATER FILTER** button until the **FILTER CHANGE** icon switches off.
- If you change the water filter before the **FILTER CHANGE** icon comes on, then you should still press and hold the **RESET WATER FILTER** button for 5 seconds.

Important user information



IMPORTANT: Care should be taken to make sure that the airflow duct vents on the rear interior wall of the fridge and freezer sections are not blocked.




IMPORTANT: If your mains power supply fails, then the food inside of the freezer section will be preserved for a 12 hour period. After 12 hours the food should be removed from the freezer section and consumed as quickly as possible.




IMPORTANT: If power is cut to the appliance, when power is restored it will take approximately 30 minutes for the compressor to start running again.

Cleaning and maintenance

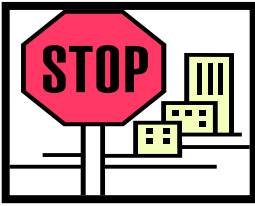


WARNING: PLEASE ENSURE THAT YOUR APPLIANCE IS DISCONNECTED FROM YOUR MAINS SUPPLY BEFORE ATTEMPTING TO CLEAN IT.

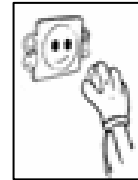

- Do not clean the appliance by pouring water onto it or spraying water over it.



- The refrigerator and freezer compartment should be cleaned periodically, using a solution of bicarbonate of soda and lukewarm water.

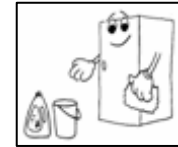

- Clean the accessories separately with soap and water. Do not clean them in a dishwasher.



- Do not use abrasive products, detergents or soaps.




- After washing the appliance, wipe over the area that you have cleaned with a damp cloth and then dry it thoroughly.
- When cleaning is complete, dry your hands and then reconnect the plug to your mains supply.




IMPORTANT: Before attempting any of the cleaning steps shown below, you should remove all items from the shelves and compartments that you are cleaning.

Dairy compartment

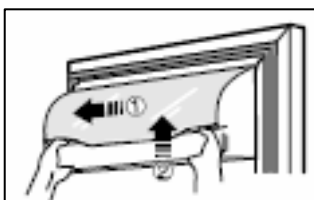


- 1) Open the dairy compartment cover slightly, hold both ends and push left to remove.
- 2) To remove the dairy compartment shelf, hold both ends and pull upwards.

Fridge and freezer door compartments

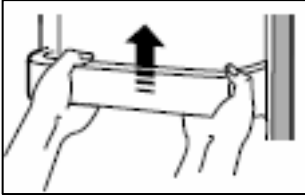


- 1) To remove a fridge or freezer door compartment, hold both ends and pull upwards.

Fridge and freezer shelves

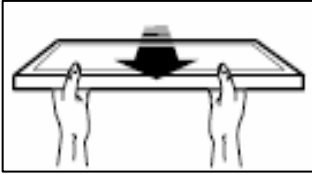


- 1) Open the appliance doors fully.
- 2) To remove a shelf, pull them forwards.

Salad/Vegetable and fruit drawers

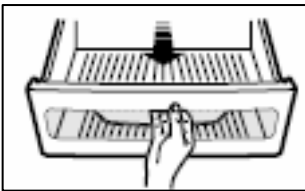


- 1) To remove a drawer, lift up a little and pull forward.

Interior parts

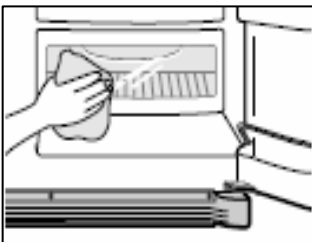


- 1) Use a cloth that has been wetted with water and mild (neutral) detergent and wipe over the interior parts of the appliance.

Door seal

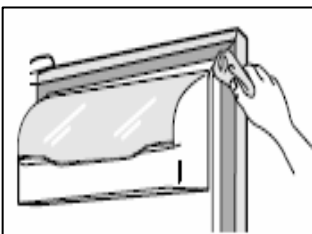


- 1) Use a cloth that has been wetted with water and mild (neutral) detergent and wipe around the door seal.

Rear grill

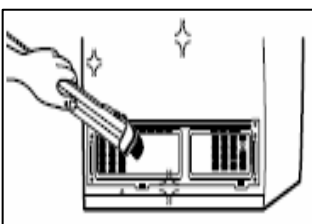


- 1) At least once a year, remove any dust that has gathered on the grill at the rear of the appliance, using a vacuum cleaner.

Dispenser shelf

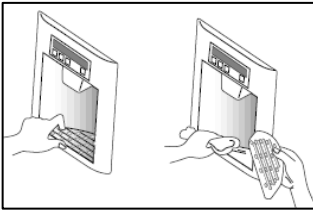

- 1) Take out the spillage grill and use a cloth to remove water from and clean this area.

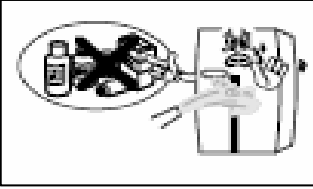

DO NOT USE ANY FORM OF ASOLINE (PETROL) OR BENZENE (BENZOL) THINNERS ON ANY AREA OF THE APPLIANCE. AS THESE CHEMICALS CAN DAMAGE THE SURFACES.

Defrosting the freezer compartment


Your appliance is frost free, so you should not need to manually defrost the freezer section.

However if for example the door is left open for a prolonged period of time or the door gasket is not sealing correctly, then you could get ice building in the freezer section. If this occurs, then you should follow the steps below.


- The day before you defrost, you should select the **SUPER FREEZER** option; this will make sure that the food contained in the compartment is frozen properly.
- Whilst defrosting the appliance, the food should be removed from the compartment and wrapped in several layers of paper and stored in a cool place. The foods rise in temperature will shorten its storage life and therefore the food should be used within a relatively short period of time.
- **DO NOT PLACE FOOD BACK IN THE FREEZER COMPARTMENT THAT HAS STARTED TO THAW.**
- Turn the appliance off by turning off the power supply to the fridge freezer.
- Remove the drawers and shelves from the freezer section and leave the door to the freezer compartment open. You can place a bowl of warm water inside the freezer compartment to speed up the defrost process.
- You can use a sponge to mop up the defrost water that will run into the bottom of the freezer section.

- **IMPORTANT:** You should place some old towels on the flooring that is immediately in front of the appliance. In case any defrost water comes out of the freezer section and onto the floor.
- Once all the ice that has built up has melted, then the inside of the freezer compartment should be dried thoroughly. Failure to do this will result in immediate ice build when the appliance is turned back on.
- With dry hands, reconnect your appliance to your mains supply. You should select the **SUPER FREEZER** option for a 24 hour period, before returning it to the normal temperature setting of at least -18°C
- You should not attempt to freeze fresh food inside the freezer compartment until this 24 hour time period has elapsed.
- **Do not defrost the appliance with other electrical devices (e.g. hair dryer). Do not use sharp metal objects to remove the ice on the freezer, as this could cause damage to the refrigerant system.**

Replacing the light bulb

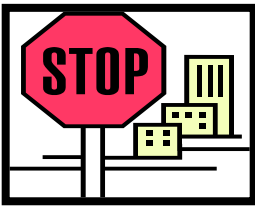


WARNING: PLEASE ENSURE THAT YOUR APPLIANCE IS DISCONNECTED FROM YOUR MAINS SUPPLY BEFORE ATTEMPTING TO REPLACE THE LIGHT BULB.

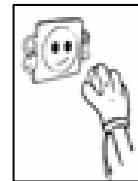

Fridge section


The light bulbs can be found behind the light cover at the top of the fridge section (below the control panel).

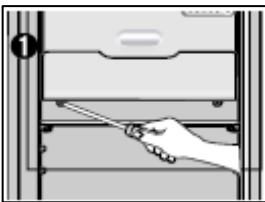

- 1) Remove the screws that hold the light cover in place.



- 2) Hold the bottom of the cover and pull it forward to remove it.

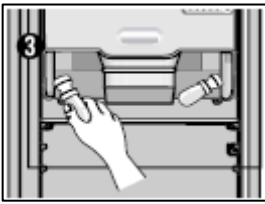


- 3) Change the present light bulb with a new one. The replacement bulb should not have a greater rating than 15 W.


- 4) Push the cover back into position and fully tighten the screws that hold it in place.

Freezer section


The light bulbs can be found behind the light cover that is below the top shelf.

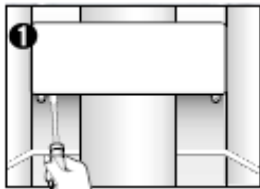

- 1) Remove the screws that hold the light cover in place.

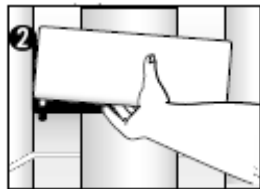


- 2) Hold the bottom of the cover and pull it forward to remove it.

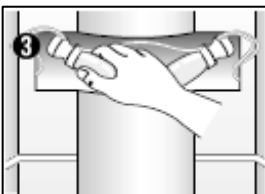

- 3) Change the present light bulb with a new one. The replacement bulb should not have a greater rating than 15 W.

- 4) Push the cover back into position and fully tighten the screws that hold it in place.

Installation

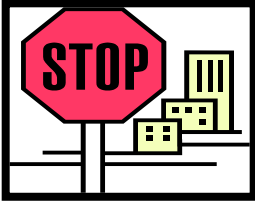

IMPORTANT: Before installation and usage read all the instructions and make sure that the voltage (V) and the frequency (Hz) indicated on the rating plate are exactly the same as the voltage and frequency in your home. The rating plate can be found on the front left edge of the inside of the refrigerator.

The manufacturer declines all responsibility in the event of the installer failing to observe all the accident prevention regulations in force, which are necessary for normal use and the regular operation of the electric system.

Electrical connection



YOUR FRIDGE FREEZER IS INTENDED FOR FITTED AND PERMANENT INSTALLATION.

We recommend that the appliance is connected by a qualified electrician, who is a member of the N.I.C.E.I.C. and who will comply with the I.E.E. and local regulations.

- Your refrigerator comes supplied with a 13 amp plug fitted. If in future you need to change the fuse in this plug, then a 13 amp ASTA approved (BS 1362) fuse **must** be used.
- The wiring in the mains lead is coloured as follows:

Brown	Live
Blue	Neutral
Green and yellow	Earth
- As the colours of the wires in the appliance's mains lead may not correspond with the coloured markings identifying the terminals in your spur box, please proceed as follows:

The **brown wire** must be connected to the terminal marked "L" (live), or coloured **red**.

The **blue wire** must be connected to the terminal marked "N" (neutral), or coloured **black**.

The **green and yellow wire** must be connected to the terminal marked "E" (earth), or by the earth symbol, or coloured **green and yellow**.

- When the connection is completed, no stray strands or cut wire should be present. The cord clamp must be secured over the outer sheath.

Positioning

- It is advisable that your appliance is only installed in a location where the ambient temperature of the room, corresponds with the climate classification that is stated on the rating plate of your appliance. Your appliance may not function correctly if the ambient temperature falls outside of the following ranges.

Climate classification	Appropriate ambient temperature
SN	+10 to +32 degrees centigrade
N	+16 to +32 degrees centigrade
ST	+18 to +38 degrees centigrade
T	+18 to +43 degrees centigrade

- Positioning the appliance requires two persons in order to avoid injuries or damage to the appliance.
- Your appliance should not be located in direct sunlight or exposed to continuous heat or extremes of temperature (e.g. next to a radiator or boiler). If this is not feasible, then you should install an insulation plate between the appliance and the adjacent heat source.
- You should check whether there is an electrical socket available, which will be accessible after your appliance is installed.
- Place the appliance flatly and firmly on a solid base. The appliance is fitted with adjustable feet on the front side, which can be used to level the appliance.
- The rear side of the appliance is fitted with wheels which facilitate the positioning of the appliance into its final location.
- Anything positioned above the appliance must be at least 15 cm away to allow sufficient cooling of the condenser. You must allow a 5cm gap to the rear and side of the appliance.
- If you are placing another cooling appliance next door to this product, then there must be a gap of at least 5 cm between the appliances. This will help to prevent condensation from forming.
- Be sure to leave enough space for the opening of the door, to avoid damage to the appliance or personal injury.

Installation preparation




IMPORTANT: A minimum of two people should complete all of the installation steps given in this manual.


- Check that the appliance will easily pass through all doorways en route to its final position.
- Appliance dimensions: 1790 mm(h) x 900 mm(w) x 730 mm(d). (including door handles).
- If your appliance will not fit through a doorway, then it is possible to remove the fridge and freezer doors.

Removing the freezer door


If the front bottom cover has already been attached, then it should be removed before attempting to remove the door.

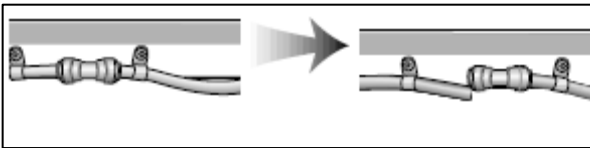


- 1) Push down the left hand collar of the coupling first, and whilst doing this, pull out the left hand water tube.

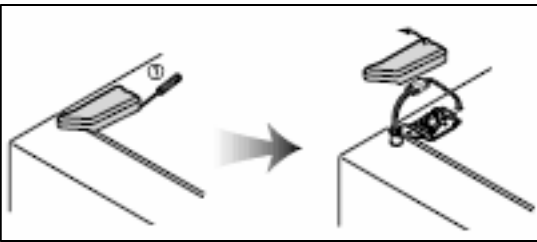


- 2) Unscrew the top hinge cover using a screwdriver. Insert a thin screwdriver into the side groove of the cover to remove it.

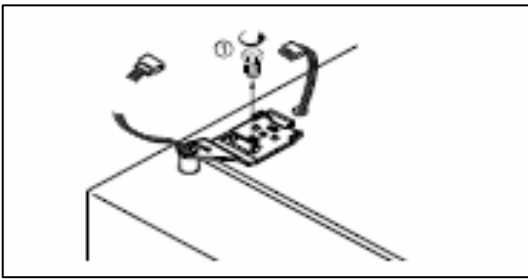

- 3) Turn the top hinge fastener anti-clockwise 3-4 times and then disconnect the harness wires.

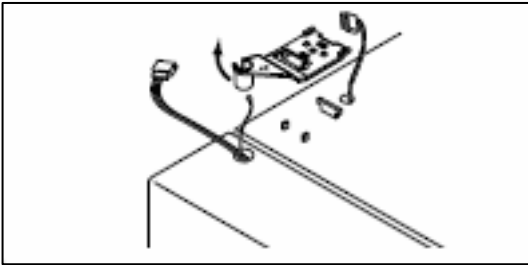


- 4) **IMPORTANT:** One person should support the door before attempting this next step. Lift up the front of the hinge and remove it from the appliance.

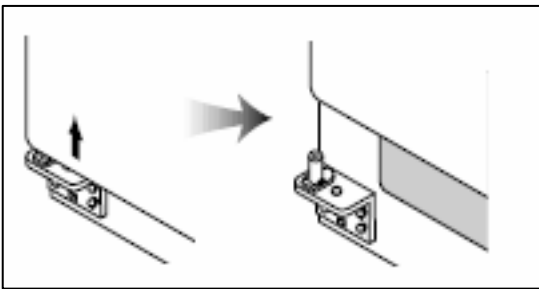


- 5) Whilst still supporting the door, slowly lift it upwards to disengage it from the lower hinge. Once the door has been lifted clear of the lower hinge, pull it away from the main chassis of the freezer section. Care should be taken not to damage the water tube whilst removing the door.

IMPORTANT: The door should be lent carefully against a wall, so that the inner or outer surfaces cannot be accidentally damaged.


Removing the fridge door

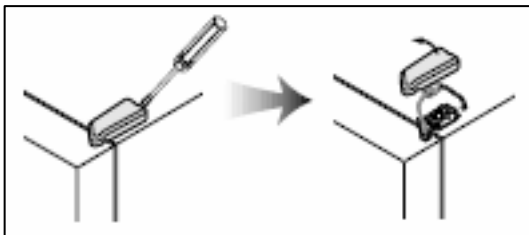


- 1) Unscrew the top hinge cover using a screwdriver. Insert a thin screwdriver into the side groove of the cover to remove it.

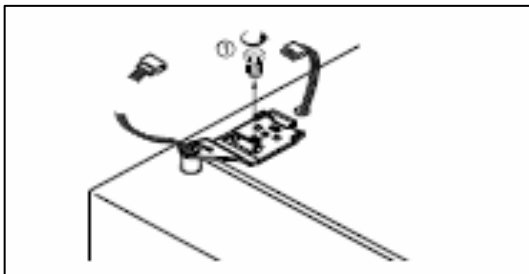

- 2) Turn the top hinge fastener anti-clockwise 3-4 times and then disconnect the harness wires.

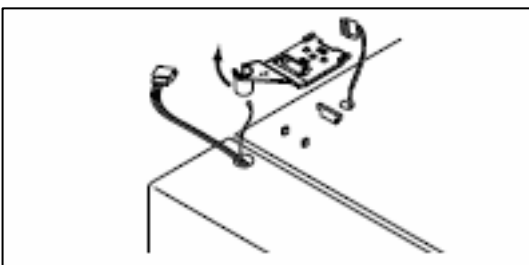


- 3) **IMPORTANT:** One person should support the door before attempting this next step. Lift up the front of the hinge and remove it from the appliance.

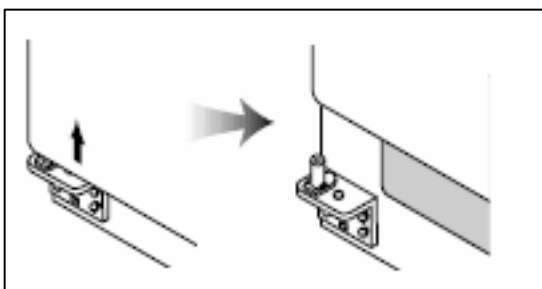


- 4) Whilst still supporting the door, slowly lift it upwards to disengage it from the lower hinge. Once the door has been lifted clear of the lower hinge, pull it away from the main chassis of the fridge section.

IMPORTANT: The door should be lent carefully against a wall, so that the inner or outer surfaces cannot be accidentally damaged.


Replacing the freezer door

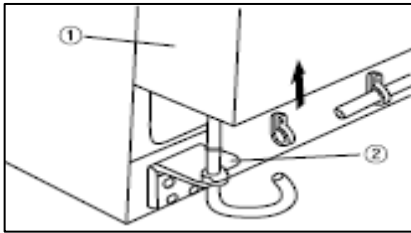


- 1) Firstly insert the water tube into the hole in the bottom hinge and then insert the bottom of the freezer door into the bottom hinge too. Make sure that the hinge pin has been inserted into the hole in the bottom of the freezer door.

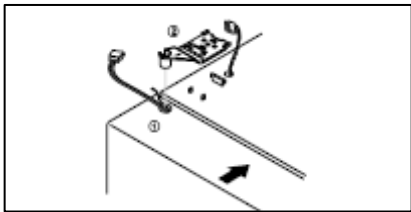


- 2) Insert the back of the top hinge in the groove on the top of the cabinet. Close the door fully against the cabinet, and then make sure that the top hinge pin is fitted securely into the hole on top of the freezer door.

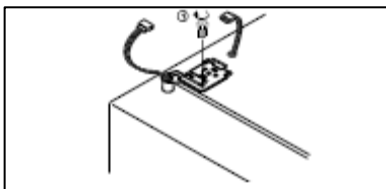

- 3) Reconnect the harness wires and then turn the hinge fastener clockwise. **IMPORTANT:** You should make sure that the hinge fastener is securely tightened as far as it will go.

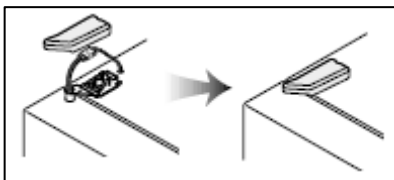


 - 4) Place the top hinge cover back into position and using a screwdriver, fully tighten it to the top of the cabinet.




- 5) Push down the left hand collar of the coupling and then insert the water tube as far as it will go into the coupling. When it is securely in position, release the left hand collar.


Replacing the fridge door

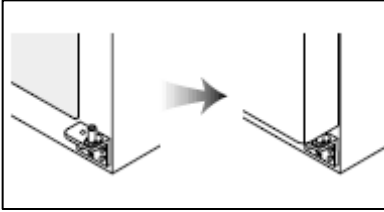


- 1) Insert the bottom of the fridge door into the bottom hinge, making sure that the hinge pin has been inserted into the hole in the bottom of the fridge door.

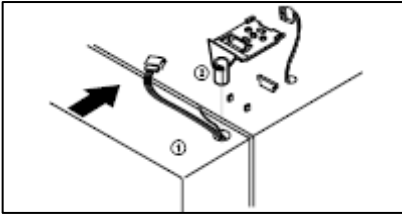

- 2) Insert the back of the top hinge in the groove on the top of the cabinet. Close the door fully against the cabinet, and then make sure that the top hinge pin is fitted securely into the hole on top of the freezer door.

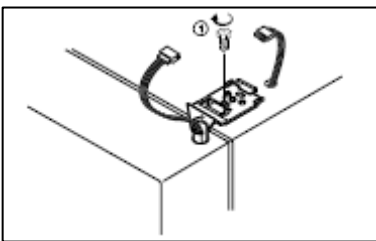

- 3) Reconnect the harness wires and then turn the hinge fastener clockwise. **IMPORTANT:** You should make sure that the hinge fastener is securely tightened as far as it will go.

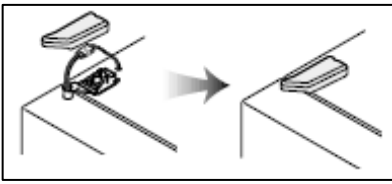


- 4) Place the top hinge cover back into position and using a screwdriver, fully tighten it to the top of the cabinet.

The water inlet hose and water filter

- The water pressure should be 2 bar or higher to allow the icemaker to operate correctly.
- Care should be taken to make sure that the water inlet does not come into contact with any hot surfaces.
- The water filter only filters the water; it does not eliminate bacteria or microbes.
- The water filter life will depend on how often you dispense water and ice. We recommend that the water filter is replaced at least every 6 months.
- **IMPORTANT:** The water inlet **MUST** be connected to your cold water supply.


Connecting the water inlet hose and water filter

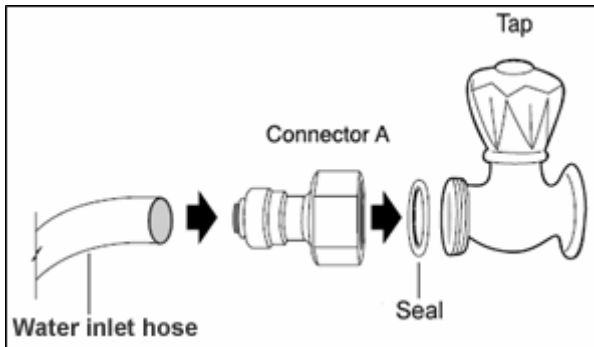


- 1) Place the seal inside of connector A and then screw connector A securely onto your cold water mains supply. Push the water inlet hose firmly onto connector A.

- 2) At the rear of the appliance, you will eventually connect a holder which you will clip the water filter into (on the right or left hand side).


- You should measure an appropriate distance from the tap along the water inlet hose and mark a position where you will want to place the water filter.
- **IMPORTANT:** Put the water filter in a position where it will be able to clip into the holder that you will position on the rear of the appliance.

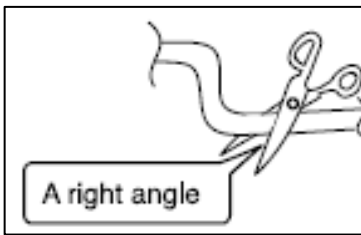

- On the position that you have marked, cut the inlet hose off vertically.

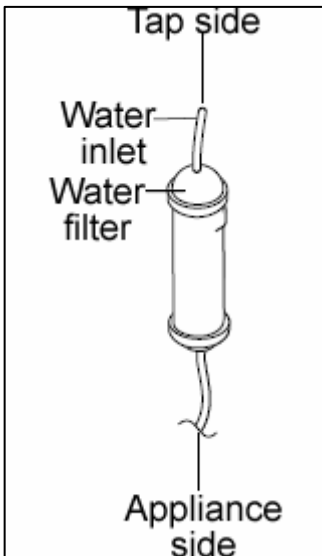

- Connect the inlet hose to either side of the water filter.

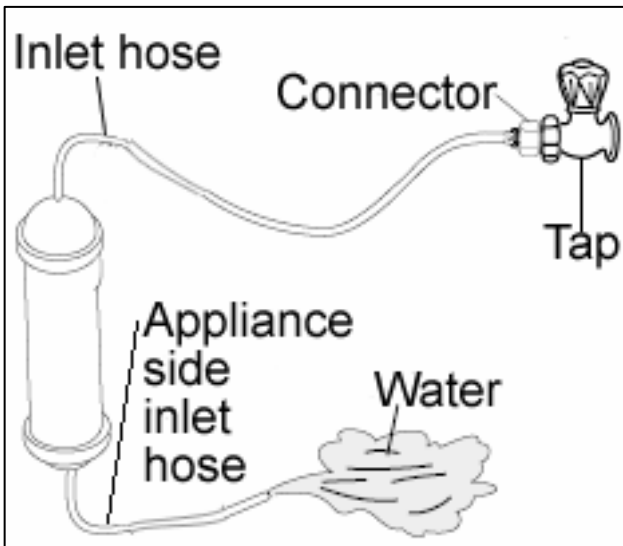


3) Place the appliance side end of the inlet hose into a container that you can run water into.

- Fully open the water tap that the inlet hose is connected to. If water does not come out, then check that you have fully opened the water tap.

- Leave the tap open until clear water is flowing out of the appliance side end of the inlet hose.

IMPORTANT- The running of water through the inlet hose and filter must be done, to make sure that any impurities from the manufacturing process are washed out.


- Turn the tap off again.

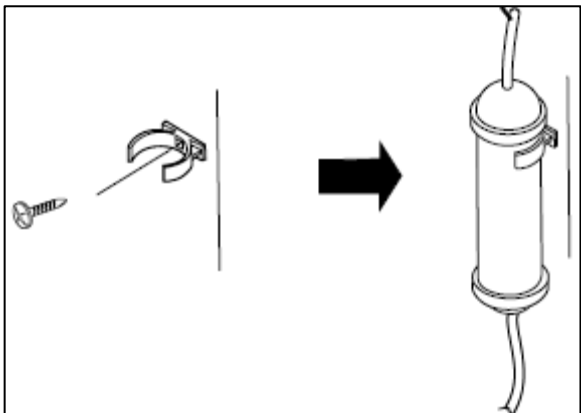

4) Screw and fasten the filter holder to the left or right hand side of the rear of the appliance.

- If the filter holder does not attach very well, then remove the paper that covers a sticky pad on the rear of the filter holder and then screw it into position again.

- Clip the water filter into the filter holder.

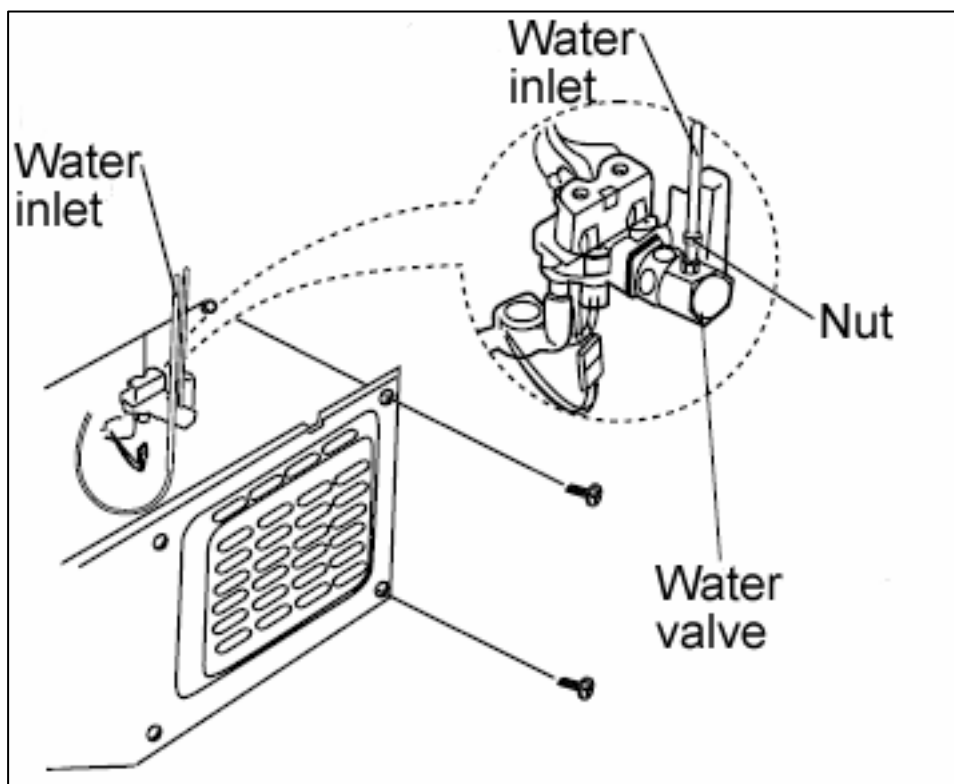


5) Remove the cover at the bottom rear of the appliance.


- Insert the fastening ring into the water inlet, you must ensure that you follow the direction of the nut.
- Insert the water inlet into the top of the water valve (the valve is located to the right of the compressors), then turn the nut clockwise to securely fasten it.
- After checking that there are no bends in the water inlet, turn on the water tap and then check thoroughly for any leaks.

IMPORTANT- If there are any signs of water leaks, you should follow the installation procedure stage by stage again.

- When you are confident that there are no bends in the water inlet or no leaks, replace the rear cover. You should make sure that the water inlet sits between the groove of the refrigerator back and the compressor cover.

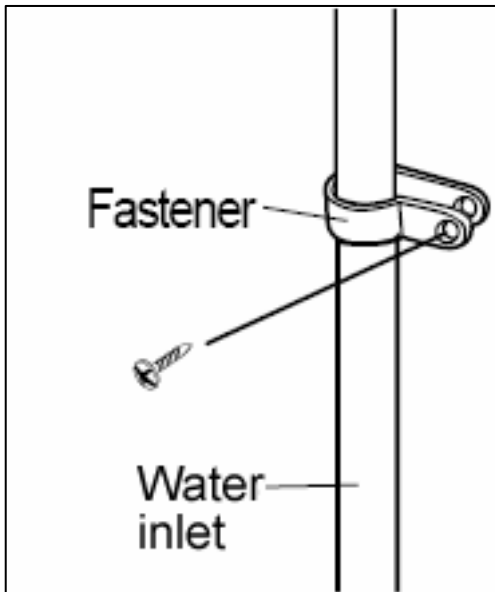

6) Fasten the water inlet in an appropriate position using the fastener provided. **IMPORTANT-** You must make sure that the water inlet does not get bent or squeezed by being fastened.

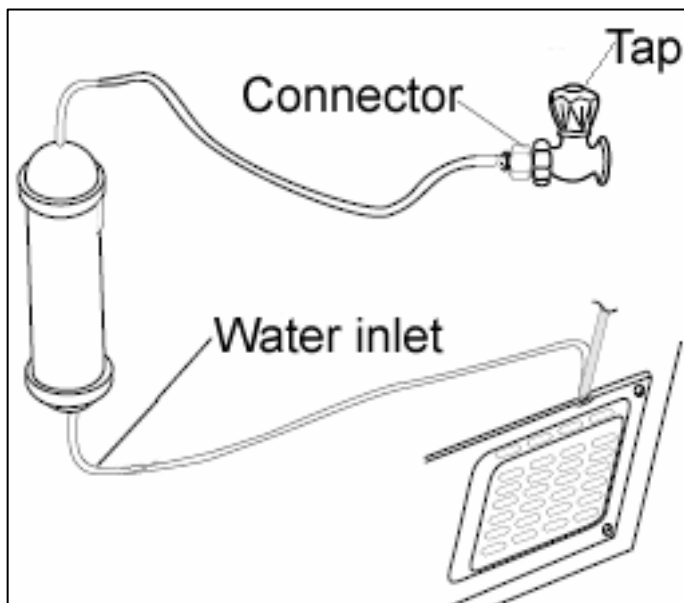

7) Connect your appliance to your mains supply and then press the **WATER/ICE** button for 2 – 3 minutes; this will remove any airlocks in the water inlet and any initial water that has entered the appliance whilst you were installing it to the water supply.

IMPORTANT- Check for all connections and make sure that there is no sign of leaks before placing the appliance in its final location. You should ensure that the inlet hose does not get crushed or kinked.


Levelling the appliance and adjusting the doors

The appliance must be situated on a level and even floor; otherwise the doors may not hang properly or seal correctly.



The front of the appliance should be a little higher than the rear of the fridge freezer. This will allow for easy closing of the doors. However if you raise the front of the appliance too high, then you may find it difficult to open the doors.


Levelling the freezer door

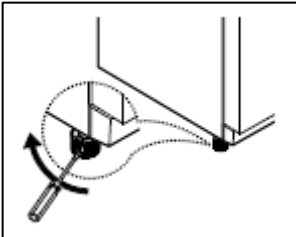

- Insert a flat tipped screwdriver into the groove of the left hand front wheel.
- Turn the screwdriver clockwise to raise the freezer door.

- Turn the screwdriver anti-clockwise to lower the freezer door.

Levelling the fridge door

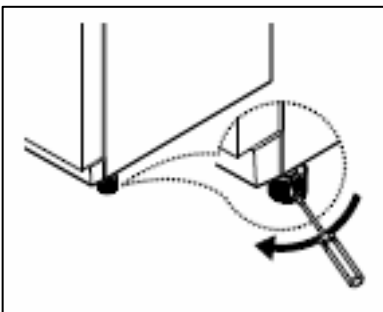

- Insert a flat tipped screwdriver into the groove of the right hand front wheel.
- Turn the screwdriver clockwise to raise the fridge door.
- Turn the screwdriver anti-clockwise to lower the fridge door.

Fitting the front cover

This step should only be done after the appliance is in position and levelled off.

- Remove the screws from the front bottom panel.
- Use these screws to fix the front cover to the appliance.

Replacing the water filter

- **IMPORTANT:** Before commencing this process, please disconnect your appliance from the mains and turn off the water tap.
- Remove the water filter from the filter holder and then disconnect the inlet hose from either end of it.
- Connect the inlet hose back to either end of the new filter, and then insert the filter back into the filter holder.
- Turn back on the water tap and with dry hands reconnect the appliance to the mains. Check for leaks and then dispense water from the appliance.

Troubleshooting



IMPORTANT: If your fridge freezer appears not to be operating properly, before contacting the Baumatic Service Department, please refer to the checklist below.



My fridge freezer does not appear to be working/there is no power to my appliance.

- Check that the plug is fully inserted into the power socket.
- Check that there is power to your mains supply (e.g. that there hasn't been a power cut or that the fuse hasn't blown).
- Check that your mains supply voltage, corresponds to the voltage stated on the rating plate of your appliance.



My fridge freezer appears to be performing poorly

- Check that the appliance isn't overloaded and that food hasn't been packed too tightly into it.
- The thermostat setting is too low; you should turn the thermostat up higher.
- Ensure that the door is closing properly and that the door has not been opened for a prolonged period in error.
- Ensure that there is adequate ventilation for your appliance.



My fridge freezer is noisy

- The refrigerant gas that circulates the pipework of the appliance may make a slight noise, even if the compressor is not running.
- If the noise worsens or the appliance gets louder than normal; check that it is levelled off correctly, that nothing is touching the rear of the fridge freezer and that nothing placed inside the appliance is rattling.
- The defrosting water caused by the frost free process can make a noise.
- The internal parts of the appliance can shrink and expand due to temperature change, which may result in cracking sounds.



Ice has formed on the inner back wall of my fridge or there is water in the base of the fridge.

- Check that food has not been pushed too far back inside the appliance, so that it is in contact with the inner back wall.



The front and side of my fridge freezer feels warm or hot.

- There are pipes placed beneath the surface to prevent moisture from forming on it.



The doors do not open easily.

- Every time you open the door of the appliance, warm air will enter the cabinet. This causes pressure inside of the cabinet when the door is shut and it may take a few moments to equalise.

Baumatic Ltd. Conditions of guarantee

Dear Customer,

Your new Baumatic appliance comes complete with a free 12 month guarantee covering both parts and labour costs resulting from defective materials or workmanship.

Baumatic also gives you the opportunity to automatically extend the guarantee period for a further 12 months at no extra cost, giving an initial guarantee period of 24 months. The extended guarantee period applies to England, Scotland, Wales and Northern Ireland only.

To qualify for your full 24 months guarantee you **must** register your appliance within 28 days of purchase to be covered under this guarantee. This can be done online via: www.baumatic.co.uk or through returning the guarantee card which can be found in each new Baumatic appliance.

* In addition, your appliance is covered by a 5 year parts warranty. Baumatic Ltd will provide free of charge the parts required to repair the appliance, only if they are fitted by a Baumatic engineer, for any defect that arises due to faulty materials or workmanship within a period of 5 years from the original purchase date.

* An additional 1 to 3 year insurance scheme for labour is available should you wish to extend the warranty period.

Should any person other than an authorised representative of Baumatic Ltd interfere with the appliance, the policy is negated and Baumatic Ltd will be under no further liability.

The guarantee covers the appliance for normal domestic use only, unless otherwise stated.

Any claims made under the terms of the guarantee must be supported by the original invoice/bill of sale issued at the time of purchase.

This guarantee is transferable only with the written consent of Baumatic Ltd.

If the appliance fails and is considered either not repairable or uneconomical to repair between 12 months (2 years if registered) and five years, a free of charge replacement will not be offered.

The guarantee for any replacement will only be for the remainder of the guarantee on the original product purchased.

The guarantee does not cover:

- Sinks and taps
- Failure to comply with the manufacturers instructions for use.
- The replacement of cosmetic components of accessories
- Accidental damage or wilful abuse.
- Subsequent loss or damage owing to the failure of the appliance or electrical supply
- Incorrect installation
- Losses caused by Acts of God, civil war, failure to obtain spare parts, strikes or lockouts
- Filters, fuses, light bulbs, external hoses, damage to bodywork, paintwork, plastic items, covers, baskets, trays, shelves, burner bases, burner caps, decals, corrosion, rubber seals.

In the course of the work carried out it may be necessary to remove the appliance from its operating position. Whilst all reasonable care will be taken, Baumatic Ltd cannot accept responsibility for damage sustained to any property whatsoever in this process.

This guarantee is in addition to and does not diminish your statutory or legal rights.

Contacting Baumatic Ltd

Sales	Service	Spares	Technical/Advice
TEL: 0118 933 6900	TEL: 0118 933 6911	TEL: 0118 933 6922	0118 933 6933
FAX: 0118 931 0035	FAX: 0118 986 9124	FAX: 0118 933 6942	0118 933 6942

For ROI (Republic of Ireland), please contact one of the numbers below:

TEL: 01 – 6266798 FAX: 01 - 6266634

Thanks you for buying Baumatic.

* Applies to UK, Scotland, Wales & Northern Ireland only (Republic of Ireland has 1 year labour & 1 year parts warranty only)



You will be mine ...

Headquarters

Baumatic Ltd.
Baumatic Buildings,
6 Bennet Road,
Reading,
Berkshire
RG2 0QX, United Kingdom

Sales Telephone
+44 118 933 6900

Sales Fax
+44 118 931 0035

Service Telephone
+44 118 933 6911

Service Fax
+44 118 986 9124

Spares Telephone
+44 118 933 6922

Technical / Advice Telephone
+44 118 933 6933

E-mail:

sales@baumatic.co.uk

technical@baumatic.co.uk

Http (Internet site):
www.baumatic.com



Baumatic®

www.baumatic.com