


**BO980SS 60 cm  
Built in double gas  
oven**

**INSTRUCTION MANUAL**

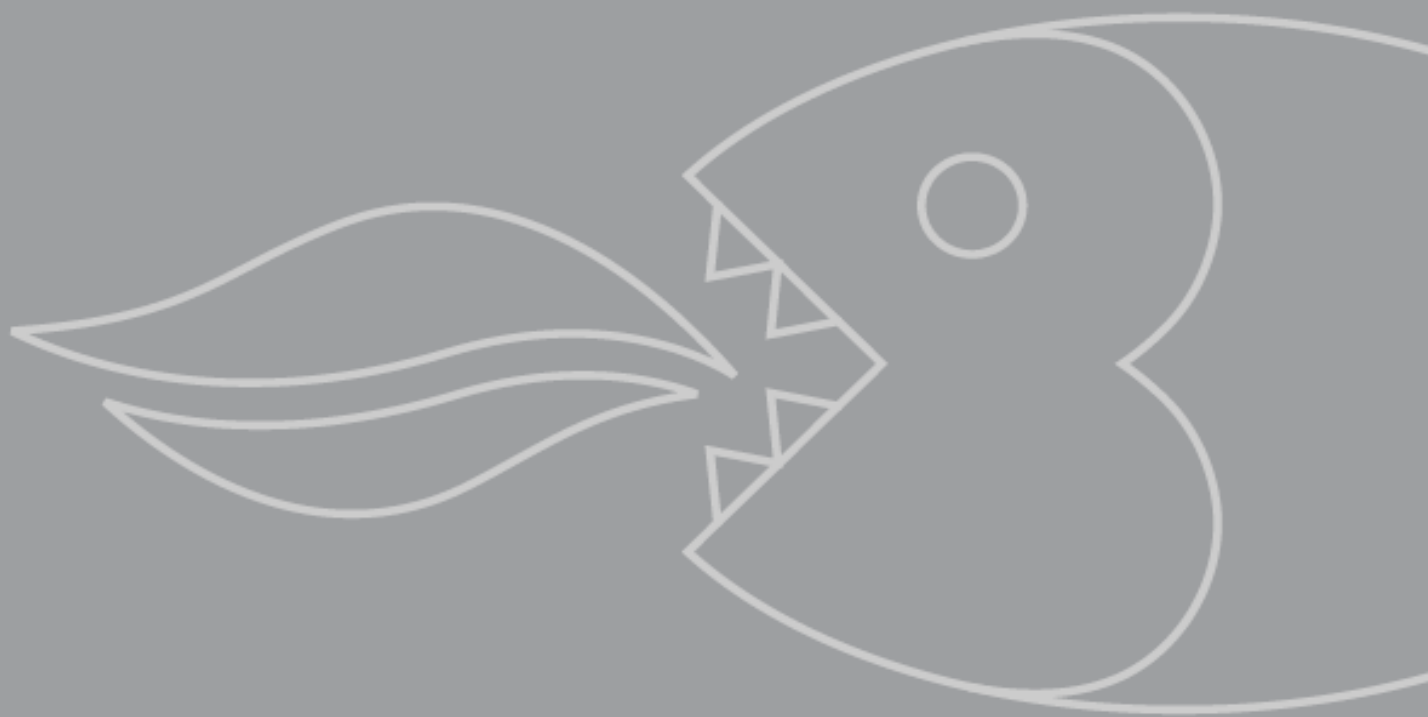

# User Manual for your Baumatic

## BO980SS

### 60 cm Built in double gas oven




***NOTE: This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference; for you or any person not familiar with the operation of the appliance.***

GS 18/11/10

# Contents

|   |         |
|---|---------|
| <b>Environmental note</b>                             | 4       |
| <b>Important safety information</b>                   | 5 – 8   |
| <b>Specifications</b>                                 | 9 – 12  |
| Dimensions  | 9       |
| Product specifications                                | 9 - 10  |
| Standard accessories                                  | 10      |
| Electrical details                                    | 10      |
| Gas details   | 10      |
| Cooling fan   | 10      |
| Description of the oven                               | 11      |
| Control panel   | 12      |
| Oven programmer/timer                                 | 12      |
| <b>Initial set-up of your oven</b>                    | 13 – 14 |
| Setting the time of day                               | 13      |
| Before first use                                      | 13 - 14 |
| <b>Timer functions</b>                                | 14 – 15 |
| The minute minder function                            | 14      |
| Cancelling the minute minder function                 | 14 - 15 |
| Adjusting the volume of the audible signal            | 15      |
| Changing the time of day                              | 15      |
| <b>Using your gas oven</b>                            | 15 - 22 |
| Switching the gas ovens on                            | 15 - 16 |
| Switching the top oven gas grill on                   | 17      |
| Cooking guidelines                                    | 18      |
| Warnings  | 18 - 19 |
| Cooking tables  | 19 - 21 |
| Roasting guide  | 21 - 22 |
| <b>Cleaning and maintenance</b>                       | 22 - 25 |
| Replacing the oven bulb                               | 23      |
| Removing the oven door for cleaning (main oven only)  | 24 - 25 |
| <b>Installation</b>                                   | 25 - 35 |
| Electrical connection                                 | 25 - 26 |
| Positioning   | 26      |
| Assembling the drip-catcher                           | 27      |
| Installing the oven into the kitchen cabinet          | 27      |
| Positioning the appliance                             | 28      |
| Ventilation requirements                              | 28      |
| Gas connection  | 29      |
| Room ventilation requirements                         | 29 - 30 |
| Gas Safety (Installation and Use) Regulations         | 30      |
| Gas connection  | 30 - 31 |
| Gas adjustment (Conversion to LPG and gas adjustment) | 31 – 33 |
| Regulating the oven burner minimum setting            | 33 – 34 |
| Substituting the grill burner                         | 34 - 35 |
| <b>My appliance isn't working correctly</b>           | 35 - 36 |
| <b>Contact details</b>                                | 37      |

**This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.**

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

**Disposal must be carried out in accordance with local environmental regulations for waste disposal.**

**For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.**



- The packaging materials that Baumatic uses are environmentally friendly and can be recycled.
- Please discard all packaging material with due regard for the environment.

## IMPORTANT SAFETY INFORMATION



Your safety is of the utmost importance to Baumatic. Please make sure that you read this instruction booklet **before** attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Baumatic Advice Line.

### General Information

- This appliance is designed for domestic household use and can be built under a standard worktop.
- **IMPORTANT:** *The adjacent furniture or housing and all materials used in the installation **must** be able to withstand a minimum temperature of 85°C above the ambient temperature of the room it is located in, whilst in use.*
- Certain types of vinyl or laminate kitchen furniture are particularly prone to heat damage or discolouration at temperatures below the guidelines given above.
- Any damage caused by the appliance being installed in contravention of this temperature limit, or by placing adjacent cabinet materials closer than 4mm to the appliance, **will be the liability of the owner.**
- For use in **leisure accommodation vehicles**, please refer to the appropriate information given in the installation instructions for this appliance.
- **IMPORTANT:** *Baumatic Ltd. **DO NOT** recommend that this appliance is installed on any type of marine vessel.*
- The use of this appliance for any other purpose or in any other environment without the express agreement of Baumatic Ltd. will invalidate any warranty or liability claim.
- Your new appliance is guaranteed against electrical or mechanical defects, subject to certain exclusions that are noted in Baumatic's Conditions Of Guarantee. The foregoing does not affect your statutory rights.
- **Repairs may only be carried out by Baumatic service engineers or their authorised service agent.**

## Warning and safety instructions

- This appliance complies with all current European safety legislation. Baumatic do wish to emphasise that this compliance does not remove the fact that the appliance surfaces ***will become hot during use and retain heat after operation.***

### Child Safety

- Baumatic strongly recommend that babies and young children are prevented from being near to the appliance and not allowed to touch the appliance ***at any time.*** During and after use, all surfaces will become hot.
- If it is necessary for younger family members to be in the kitchen, please ensure that they are kept under close supervision at all times.

### General Safety

- Make sure that you understand the controls before using the appliance.
- Check that all of the controls on the appliance are switched off after use.
- Always stand back when opening the oven door, this will allow heat to disperse.
- Take care when removing items from the oven, as the contents may be hot.
- Always keep the oven door closed when the oven is not in use.
- Always follow the basic principles of food handling and hygiene; this will prevent the possibility of bacterial growth.
- Always keep ventilation slots clear of obstructions.
- Keep fingers away from the hinge areas when closing the door, otherwise you may trap them.
- Oven gloves should be used when placing food in the oven cavity and when removing it. Care should be taken to avoid direct contact with either of the burners in the appliance.
- ***DO NOT LEAVE THE APPLIANCE UNATTENDED WHILST IN USE.***

- **Do not** place heavy objects on the oven door or lean on the oven door when it is open, as this can cause damage to the oven door hinges. Nobody should be allowed to sit or stand on any part of the oven.
- **Do not** heat up unopened food containers, as pressure can build up which may cause the container to burst.
- **Do not** place flammable or plastic items in the oven.
- **Do not** leave heated oil or fat unattended, as this is a fire risk.
- **Do not** allow fat or oil to build up in the oven trays, enamelled baking tray or oven base.
- **Do not** place pans or baking trays directly on the base of the oven cavity, or line it with aluminium foil.
- **Do not** grill food containing fat without using the grill trivet. The grill trivet should never be covered with aluminium foil.
- **Do not** place hot enamel parts in water, leave them to cool first.
- **Do not** allow vinegar, coffee, milk, saltwater, lemon, tomato juice or any liquid with high sugar content to remain in contact with the enamel parts of the appliance. Spillages should be wiped up immediately.
- **Do not** allow electrical fittings or cables to come into contact with areas on the appliance that get hot.
- **Do not** use the appliance to heat the room it is located in or to dry clothing. No clothing should be placed over or near to the oven door.
- **Do not** install the appliance next to curtains or soft furnishings.
- **Do not** attempt to lift or move cooking appliances by using the oven door or handle, as this may cause damage to the appliance or result in injury to the person lifting the appliance.
- **Do not** store chemicals, food stuffs, pressurised containers in or on the oven or in cabinets immediately above or next to the oven.

## Cleaning

- Cleaning of the oven should be carried out on a regular basis.
- Great care should be taken whilst using this appliance and when following the cleaning procedure.
- ***IMPORTANT:*** *The appliance must be disconnected from the mains before following the cleaning procedure.*

## Installation



***This appliance must be correctly installed by a suitably qualified person, strictly in accordance with the manufacturer's instructions. Please see the specific section of this booklet that refers to installation.***

- ***Baumatic Ltd. declines any responsibility for injury or damage, to person or property, as a result of improper use or installation of this appliance.***
- Heat, steam and moisture will be created during use of the appliance, take care to avoid injury and ensure that the room is adequately ventilated. If the appliance is going to be used for prolonged periods of time, then additional ventilation may be required.
- Please consult with your qualified installer if you are in any doubt about the amount of ventilation that you will require.


## Declaration of conformity

This appliance complies with the following European Directives:

- 73/23/EEC regarding "low voltage"
- 89/336/EEC regarding "electromagnetic disturbances"
- 90/396/EEC regarding "gas appliances"
- 89/109/EEC regarding "materials in contact with food".
- The above directives comply with 93/68/EEC regarding CE marking.
- The manufacturer declares that the oven is built using certified materials and requires the appliance to be installed in accordance with the standards currently in force. This appliance must be used by a trained person for domestic purposes only.



## Specifications

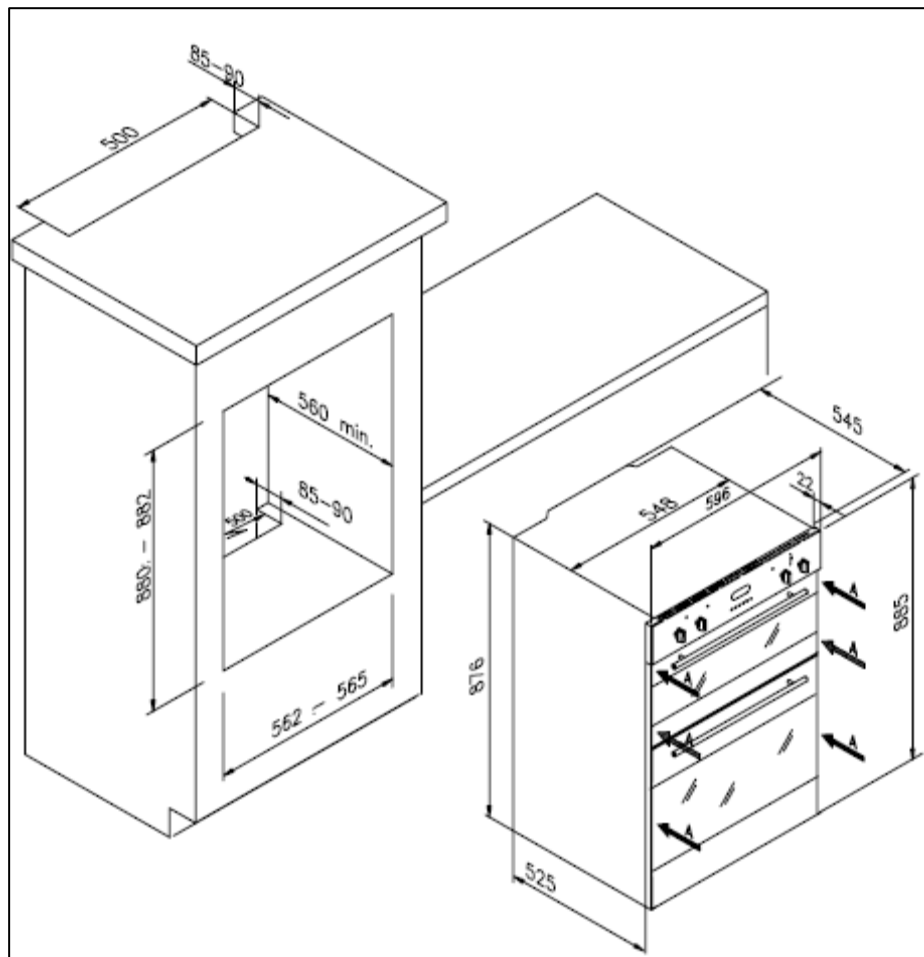

**A** = Location of the four fixing screws.

### Product Dimensions

Height: 885 mm  
Width: 596 mm  
Depth: 545 mm

### Aperture Dimensions

Height: 880-882 mm  
Width: 562-565 mm  
Depth: 560 mm

### Product specifications:

- LED minute minder
- Cooling fan
- Flame failure safety device (oven and grill)
- Auto-ignition
- Gas ovens with lower burners
- Static gas grill
- Double-glazed removable doors
- Mark resistant coating

- **Upper cavity: gas oven and static grill**
- Gross oven capacity: 37 litres
- Net oven capacity: 19 litres
- **Lower cavity: gas oven**
- Gross oven capacity: 67 litres
- Net oven capacity: 52 litres

#### **Standard accessories:**

- Removable side racks
- 2 x Safety shelves
- 2 x Enamelled baking trays with handle
- Trivet
- LPG conversion jets

#### **Electrical details:**

|                    |  |
|--------------------|--|
| Rated Voltage:     | 220 - 240 Vac 50 - 60 Hz                                     |
| Supply Connection: | 3 A (double pole switched fused outlet with 3mm contact gap) |
| Max Rated Inputs:  | 0.08 kW  |
| Mains Supply Lead: | 3 x 1.2 mm <sup>2</sup>                                      |

#### **Gas details:**

|             |   |
|-------------|---|
| Connection: | Rp ½ (ISO R7)   |
| Type:       | Natural Gas (20.9 mbar)<br>Alternative LPG G30 (28-30 mbar) |

#### **Cooling fan**

- The tangential cooling fan is fitted inside of this appliance, to make the internal temperature of the oven stable and the external surface temperature lower.
- After you have finished cooking and switched off the oven, the cooling fan will continue to run for a period of time afterwards. The length of time will depend on how long the oven has been switched on for and at how high a temperature.


For future reference please record the following information which can be found on the rating plate and the date of purchase which can be found on your sales invoice. The rating plate for your oven can be located by opening the oven door and looking on the frame of the main oven chassis.

**Model Number** .....

**Serial Number** .....


**Date of Purchase** .....

### Description of the oven

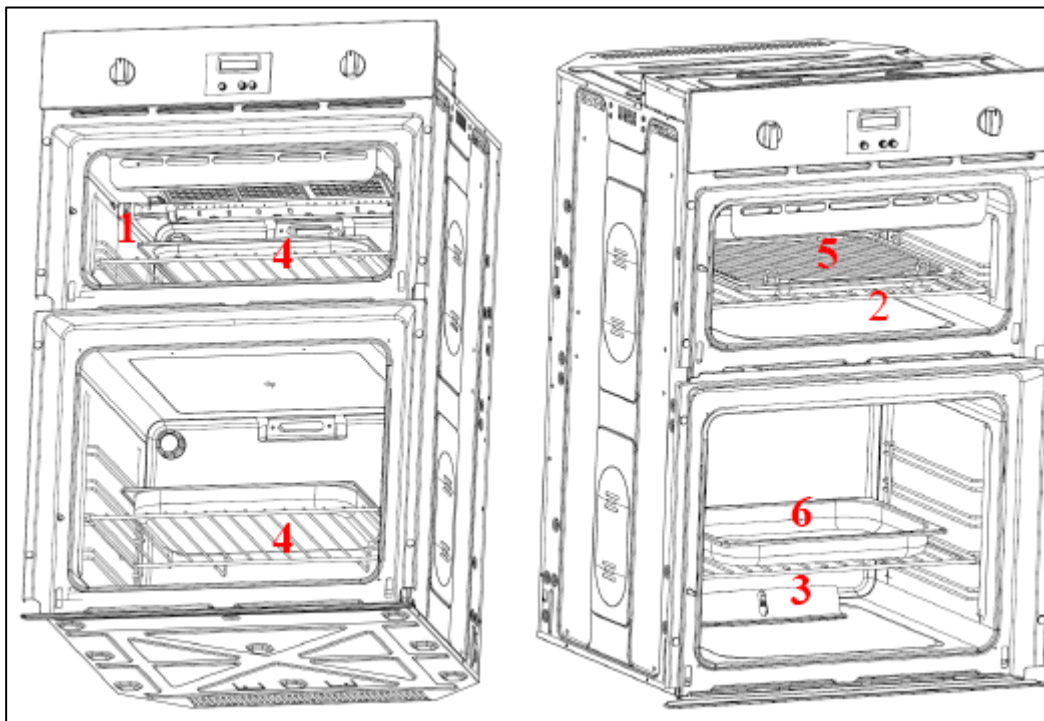


- 1) Grill burner
- 2) Top oven burner
- 3) Main oven burner
- 4) Oven grill (main and top)
- 5) Drip tray for grill cooking
- 6) Drip tray for oven cooking (main and top)

## Control Panel

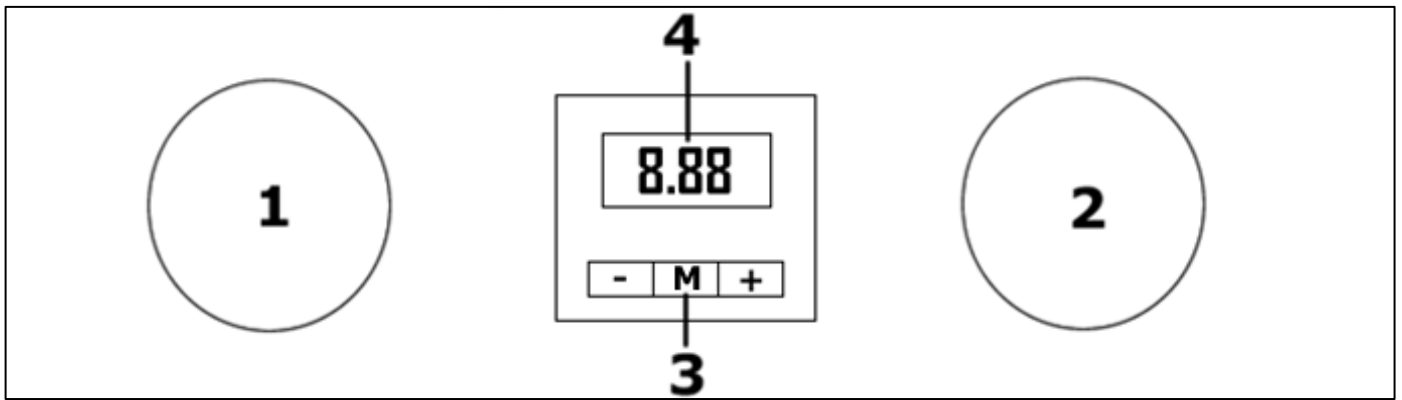

- 1) Top oven control knob
- 2) Lower oven control knob
- 3) Oven timer
- 4) LED display

## Oven programmer/timer

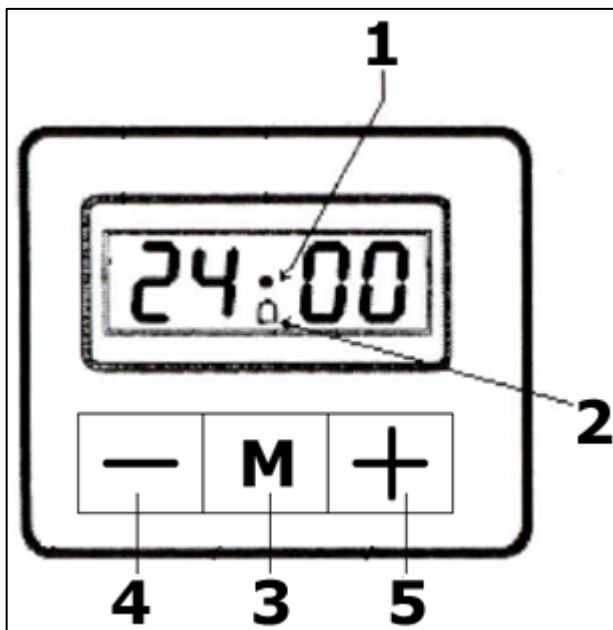

- 1 = Decimal point symbol
- 2 = Minute minder symbol
- 3 = Programme button
- 4 = Minus button
- 5 = Plus button

## Initial set-up of your oven

### Setting the time of day

*After your appliance is connected to your mains supply for the first time, you must set the time of day before you can use the oven.*

- When the oven is connected to your mains supply for the first time (or after a power cut), the digits on the LED display will flash.
- Press and hold down the programme button **(3)** for a couple of seconds and the digits will remain steady.
- Whilst the decimal point symbol **(1)** is flashing, use the plus **(5)** and minus **(4)** buttons to set the correct time of day.
- When the correct time of day is shown on the LED display, release the plus and minus buttons and wait a few seconds. The decimal point symbol will stop flashing and the oven is ready to use.

### Before first use

- To remove any residue from the cavities that may have been left from the manufacturing process, you should set the gas oven to its maximum temperature setting. The gas grill should be set separately to its maximum temperature setting.
- It is perfectly normal for a smell to be produced during this process.
- You should make sure that any windows in the room are left open during this process.
- It is advisable for you not to remain in the room whilst the burning off process is taking place.
- You should leave the oven and grill on maximum setting for 30 – 40 minutes.
- ***IMPORTANT: You should not burn off both cavities simultaneously.***
- After both cavities have cooled, they should then be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.

- Outer parts of the oven should be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.
- We would recommend that an appropriate stainless steel cleaner and polish is regularly used on the stainless steel surfaces of this appliance.

## Timer functions

### The minute minder function

*The minute minder function is a countdown time that can be set on the oven programmer/timer. When the countdown time has finished, an audible signal will sound.*

- Press and hold down the programme button **(3)** until the decimal point starts to flash to enter programming mode.
- Use the plus **(5)** and minus **(4)** buttons to set the countdown time that you require.
- The maximum countdown time that can be set is 23 hours and 59 minutes.
- When the correct countdown time appears on the LED display, release the plus and minus buttons and the countdown will start immediately.
- After a few seconds the LED display will return to showing the time of day.
- At the end of the countdown time, an audible signal will sound and the oven in use symbol will go out. The audible signal will sound for 7 minutes before switching off or you can silence it by pressing any of the oven programmer/timer buttons.
- ***IMPORTANT:*** *If the oven or grill is in use whilst using the minute minder function, they WILL NOT switch off at the end of the countdown time. YOU MUST turn the gas oven and/or gas grill control knobs to their OFF positions.*

### Cancelling the minute minder function

- Press and hold down the programme button **(3)** until the decimal point starts to flash to enter programming mode.
- Press and hold down the minus **(4)** and plus **(5)** buttons simultaneously.

- The minute minder symbol **(2)** will go out.
- **IMPORTANT:** *If you do not turn the gas oven and/or gas grill control knobs to their OFF positions, when you reset the timer function, it will continue to heat.*

### **Adjusting the volume of the audible signal**

*The volume of the audible signal has 3 levels, low, medium and high. To adjust the volume, you should proceed as follows:-*

- **IMPORTANT:** *The oven timer/programmer must not be in countdown mode.*
- Press and hold down the minus **(4)** and plus **(5)** buttons simultaneously until the decimal point starts to flash.
- Press the programme button **(3)** and the LED display will show "n" followed by a number. 1 is the loudest volume, 2 is the middle volume and 3 is the quietest volume.
- Use the minus button to select the volume level that you desire.

### **Changing the time of day**

- **IMPORTANT:** *The oven timer/programmer must not be in countdown mode.*
- Press and hold down the minus **(4)** and plus **(5)** buttons simultaneously until the decimal point starts to flash.
- Release these buttons and then use the minus and plus buttons to alter the time of day.

## **Using your gas oven**

### **Switching the gas ovens on**



The oven has automatic ignition, to light it you should do the following:-


- Open the oven door.
- Push the lower oven control knob down slightly and then turn it anticlockwise to power level 9 / ignition position.

- Whilst it is pointed to the ignition position, fully push down this knob and hold it down.
- The gas oven should light within 15 seconds.
- Once the burner has lit, continue to keep the lower oven control knob held down for a further 10 seconds. Otherwise the safety cut off will operate and block the flow of gas.
- **IMPORTANT:** *When you are certain that the oven burner is fully lit, close the oven door. Then turn the lower oven control knob clockwise until it reaches the temperature that you desire.*
- **DO NOT** turn the control knob past the power level MIN position, otherwise the burner may go out.
- If the gas oven does not light within 15 seconds, then release the gas oven control knob.
- **IMPORTANT: YOU MUST TURN THE CONTROL KNOB BACK TO ITS ORIGINAL POSITION; OTHERWISE GAS WILL CONTINUE TO BE RELEASED.**
- Wait for 1 minute, before repeating the ignition procedure again.



When lighting your oven for the first time, it may take several times until the electric ignition operates. This is due to air being in the gas pipe.

- The drip tray must not be placed above the level indicated in the diagram below to avoid burning the food.
- **IMPORTANT:** *If there is a power cut whilst the oven is in use, the cooling fans will not operate. You should immediately turn the appliance off until power is restored.*

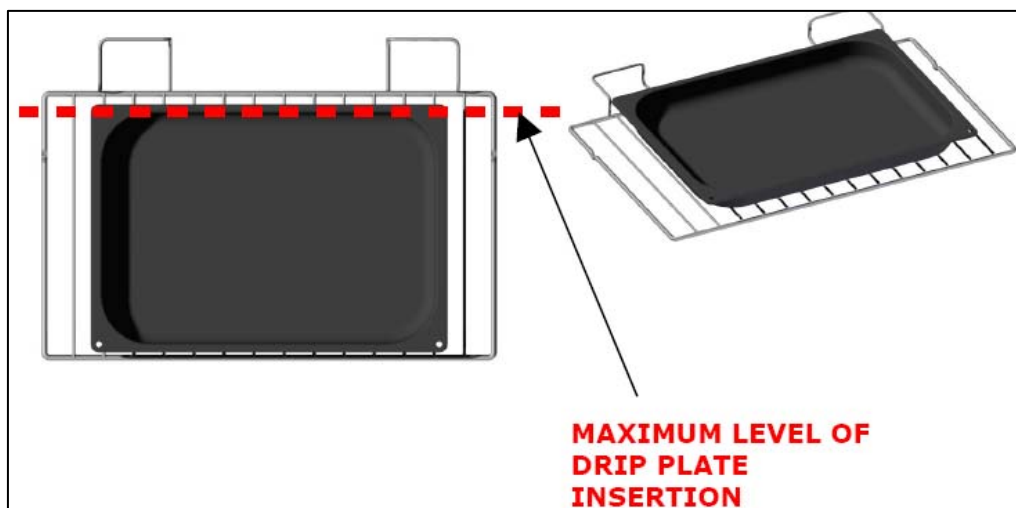



## Switching the top oven gas grill on



The grill has automatic ignition, to light it you should do the following:-

- Open the grill door.
- Push the top oven control knob down slightly and then turn it anticlockwise to the grill symbol.
- Whilst it is pointed to the symbol, fully push down this knob and hold it down.
- The gas grill should light within 15 seconds.
- Once the burner has lit, continue to keep the top oven control knob held down for a further 10 seconds. Otherwise the safety cut off will operate and block the flow of gas.
- If the gas grill does not light within 15 seconds, then release the top oven control knob. **IMPORTANT: YOU MUST TURN THE CONTROL KNOB BACK TO ITS ORIGINAL POSITION; OTHERWISE GAS WILL CONTINUE TO BE RELEASED.**
- Wait for 1 minute, before repeating the ignition procedure again.



When lighting your grill for the first time, it may take several times until the electric ignition operates. This is due to air being in the gas pipe.

- In order to cook with the grill, use the drip tray and griddle. The drip tray should be placed above the main griddle and slid all the way in as in the illustration below:



- **IMPORTANT:** If there is a power cut whilst the grill is in use, the cooling fans will not operate. You should immediately turn the appliance off until power is restored.

## Cooking guidelines


- Please refer to the information given on food packaging for guidance on cooking temperatures and times. Once familiar with the performance of your appliance, temperatures and times can be varied to suit personal preference.
- Preheat the oven for at least 10 minutes, before placing food into the cavity.
- Preheat the grill for 2 minutes, before placing food into the cavity.
- Make sure that frozen foods are thoroughly thawed before cooking, unless the instructions on the food packaging advise that you can "cook from frozen".
- Before cooking, check that any unused accessories are removed from the oven.
- Place cooking trays in the centre of the oven and leave gaps between the trays to allow air to circulate.
- Try to open the door as little as possible to view the dishes.

## Warnings

- Keep the oven door open when using the grill function and make sure that the grill deflector is fitted.
- Do not use aluminium foil to cover the enamelled baking tray or heat items wrapped in aluminium foil under the grill.
- You should also never line the base of your oven with aluminium foil.
- During cooking, never place pans or cookware directly onto the bottom of your oven. They should always be placed on the shelves provided.
- The grill becomes extremely hot during operation, avoid touching it inadvertently when handling the food which you are grilling.
- ***Important:*** Be careful when opening the door, to avoid contact with hot parts and steam.
- The enamelled baking tray handle should only be used to reposition the tray and **NOT** for removing it from the oven

cavity. When removing the enamelled baking tray, you should **ALWAYS** use an oven glove.

- The enamelled baking tray handle should not be left in position when the appliance is switched on.

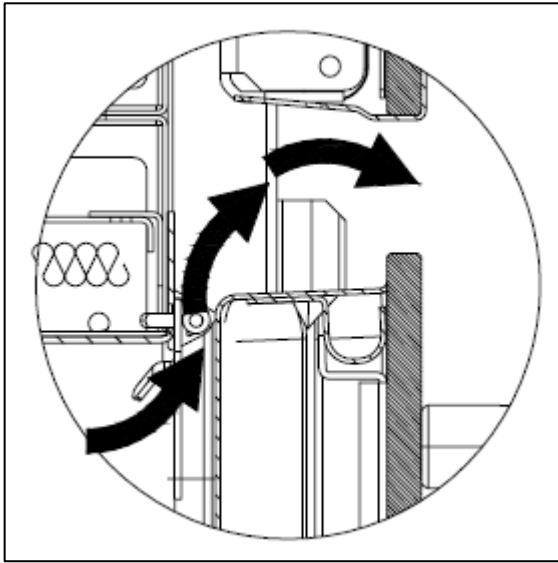

**IMPORTANT:** Air will vent from the top of the lower oven door. Care should be taken to ensure that **NOTHING** obstructs the flow of air coming from this area (as shown in the diagram opposite).

## Cooking tables

### Conversion table:

| <b>Gas mark</b> | <b>Fahrenheit</b> | <b>Celsius</b> | <b>Heat</b>    |
|-----------------|-------------------|----------------|----------------|
| 3               | 325               | 163            | Warm           |
| 4               | 350               | 177            | Medium         |
| 5               | 375               | 191            | Moderate       |
| 6               | 400               | 204            | Moderately hot |
| 7               | 425               | 218            | Hot            |
| 8               | 450               | 232            | Very hot       |
| 9               | 475               | 246            | MAX            |

### Top oven cooking:

| <b>Food</b>             | <b>Gas mark</b> | <b>Shelf position (1 is the highest)</b> | <b>Approx cooking time</b>            |
|-------------------------|-----------------|--|---------------------------------------|
| <b>Fish</b>             |                 |  |                                       |
| Oily and white fish     | 5               | 2  | 25-30 mins                            |
| <b>Meat and poultry</b> |                 |  |                                       |
| Beef (medium)           | 4               | 2  | 25-30 mins per lb (450g) + 25-30 mins |
| Ham                     | 5-6             | 2  | 40 mins per lb (450g) + 40 mins       |
| Lamb                    | 5-6             | 2  | 30-35 mins per lb (450g) + 30 mins    |
| Pork                    | 5-6             | 2  | 40 mins per lb (450g) + 40 mins       |
| Chicken                 | 4-5             | 2  | 25 mins per lb (450g) + 25 mins       |

|                                     |     |   |                                       |
|-------------------------------------|-----|---|---------------------------------------|
| Duckling & Goose                    | 4-5 | 2 | 25 mins per lb (450g) + 25 mins       |
| Turkey                              | 4   | 2 | 15-20 mins per lb (450g) + 15-20 mins |
| <b>Cake, pastries and biscuits</b>  |     |   |                                       |
| Small cakes (12 per tray)           | 5   | 2 | 15-20 mins                            |
| Victoria sandwich (2 x 180 mm / 7") | 4   | 2 | 25-30 mins                            |
| Swiss roll                          | 6-7 | 1 | 10-12 mins                            |
| Rich fruit cake (1 x 180 mm / 7")   | min | 3 | 2 ¼ - 2 ½ mins                        |
| Scones (12 per tray)                | 5-6 | 2 | 12-15 mins                            |
| Biscuits                            | 4   | 2 | 20-25 mins                            |
| Short crust pastry                  | 5-6 | 2 | 15 mins – 1 hr depending on recipe.   |
| Puff pastry                         | 6-7 | 2 | 10-30 mins depending on recipe.       |
| Yorkshire pudding                   | 6-7 | 2 | 20-40 mins                            |
| Meringues                           | 3   | 2 | 2 ½ - 4 hrs turn when necessary.      |

### **Grill cooking:**

| <b>Shelf position</b> | <b>Food</b>  |
|-----------------------|--|
| High position.        | Toast, crumpets, bacon, thin sausages, beef burgers, tomato halves, steak (rare and medium), kipper, gammon, kidneys and toasted snacks.                 |
| Centre position.      | Toast, toasted snacks, thick sausages, beef burgers, fish fingers, steak (well done), gammon and chops (with heat turned down for part of cooking time). |
| Low position.         | Whole fish, fish fillets and fish steaks (on base of pan). Chicken portions (with heat turned down for part of cooking time).                            |

### **Main oven cooking:**

| <b>Food</b>                    | <b>Gas temperature (°)</b> | <b>Shelf position (1 is highest)</b> | <b>Approx cooking time</b>                                       |
|--------------------------------|----------------------------|--------------------------------------|--|
| <b>Fish</b>                    |                            |                                      |  |
| Oily and white fish.           | 4-5                        | 3                                    | 25 mins – 1 hr depending on recipe and size of fish.             |
| White fish (fillets & steaks). | 4-5                        | 3                                    | 25-30 mins   |
| <b>Meat and poultry</b>        |                            |                                      |  |
| Beef (medium)                  | 4-5                        | 4                                    | 25-30 mins per lb (450g) + 25-30 mins                            |
| Ham                            | 5-6                        | 4                                    | 40 mins per lb (450g) covered in foil + 40 mins uncovered        |
| Lamb                           | 4-5                        | 4                                    | 20-30 mins per lb (450g) + 25 mins extra                         |
| Pork                           | 4-5                        | 4                                    | 25-30 mins per lb (450g) + 25 mins                               |
| Chicken                        | 4-5                        | 4                                    | 20-25 mins per lb (450g) + 20 mins (if the chicken is wrapped in |

|                                     |     |         |  |
|-------------------------------------|-----|---------|--|
|                                     |     |         | aluminium foil add 1/3 to total cooking time). |
| Duckling & Goose                    | 4-6 | 4       | 25 mins per lb (450g) + 25 mins                |
| Turkey                              | 4-6 | 4       | 15-20 mins per lb (450g) + 15-20 mins          |
| <b>Cake, pastries and biscuits</b>  |     |         |  |
| Small cakes (12 per tray)           | 4-5 | 2 and 4 | 15-20 mins                                     |
| Victoria sandwich (2 x 180 mm / 7") | 4   | 2 and 4 | 25-30 mins                                     |
| Swiss roll                          | 6-7 | 2       | 10-15 mins                                     |
| Rich fruit cake (1 x 180 mm / 7")   | min | 2       | Depending on size                              |
| Scones (12 per tray)                | 6-7 | 2 and 4 | 10-15 mins                                     |
| Biscuits                            | 4   | 2 and 4 | 20-25 mins                                     |
| Short crust pastry                  | 6-7 | 2       | Depending on use                               |
| Puff pastry                         | 6-7 | 2       | Depending on use                               |
| Yorkshire pudding                   | 5-6 | 2 or 3  | 30-45 mins                                     |
| Meringues                           | 3   | 2 or 3  | 180-240 mins                                   |

***The cooking time, temperatures and shelf levels are indicative and vary, depending on the characteristics of the food to cook and can be modified according to your taste or experience.***

***You should always preheat the oven for 15 minutes before cooking for best results.***

***If soft margarine is used for cake making, temperatures recommended by the manufacturer should be followed.***

### **Roasting guide**

- Frozen meat should be thoroughly thawed before cooking. For larger joints, it is advisable to thaw overnight.
- Frozen poultry should be thoroughly thawed before cooking; the time required depends on the size of the bird. For example, a large turkey may take up to 48 hours to thaw.
- Adjust the shelf position, so that the meat or the poultry will be in the centre of the oven.
- When roasting joints of meat or poultry and for pot roast, preheat the oven to gas mark 5 and cook for 30 minutes. Then adjust the oven control to gas mark 3 for the remainder of the cooking time.

- Slow cooking times will be about three times as long as conventional cooking.

## Cleaning and maintenance



*Cleaning operations must only be carried out when the oven is cool.*

*The appliance should be disconnected from your mains supply before commencing any cleaning process.*


- The oven should be thoroughly cleaned before it is operated for the first time and after each use. This will avoid residual food stuffs becoming baked on the oven cavity. After residues have been baked on several times, they are far more difficult to remove.
- **Never** clean the oven surfaces by steam cleaning.
- The oven and grill cavity should only be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.
- Any stains that may appear on the bottom of the oven will have originated from food splashes or spilt food, these splashes occur during the cooking process. These could possibly be a result of the food being cooked at an excessively high temperature or being placed in cookware that is too small.
- You should select a cooking temperature that is appropriate for the food that you are cooking. You should also ensure that the food is placed in an adequately sized dish and that you use the enamelled baking tray where appropriate.
- Outer parts of the oven should only be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.
- We would recommend that an appropriate stainless steel cleaner and polish is regularly used on the stainless steel surfaces of this appliance.
- If you use any form of oven cleaner on your appliance, then you must check with the manufacturer of the cleaner that it is suitable for use on your appliance.

- *Any damage that is caused to the appliance by a cleaning product will not be fixed by Baumatic free of charge, even if the appliance is within the guarantee period.*

### Replacing the oven bulb




***IMPORTANT:*** *The oven must be disconnected from your mains supply before you attempt to either remove or replace the oven bulb.*

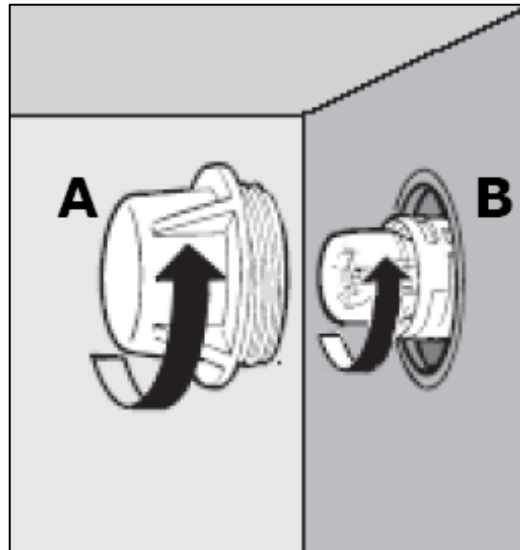


- Remove the protective cover **(A)** by unscrewing it in an anti-clockwise direction.
- Remove the bulb **(B)** by turning it in an anti-clockwise direction.
- Replace the bulb with a 25 W/300°C, screw type pigmy.
- ***Do not*** use any other type of bulb.
- Reassemble the protective cover **(A)**.

## Removing the oven door for cleaning (main oven only)

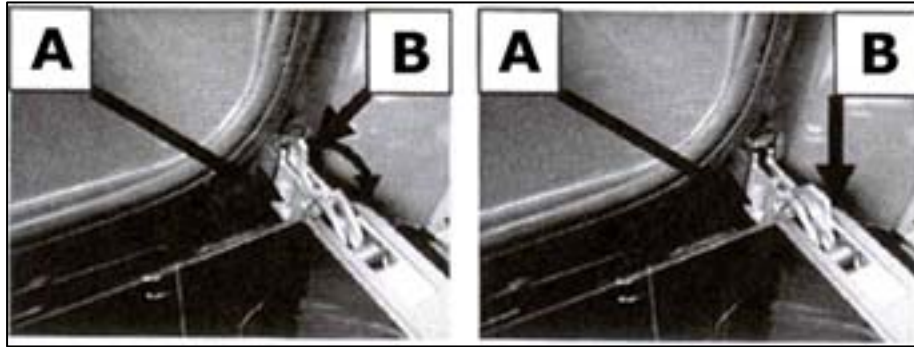

To facilitate the cleaning of the inside of the oven and the outer frame of the oven, the door can be removed as follows:-

- The hinges (**A**) have two movable bolts on them (**B**).
- If you raise both of the movable bolts (**B**), then the hinges (**A**) are released from the oven housing.

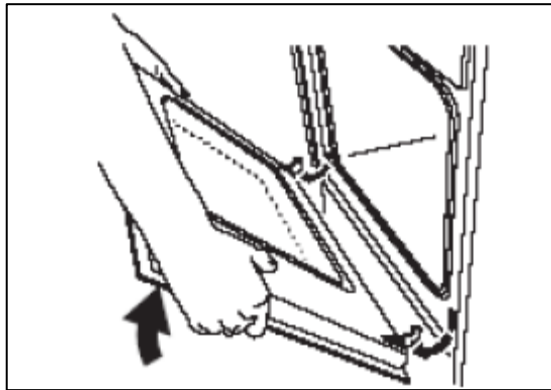

- You should grip the sides of the door at the centre and then incline it slightly towards the oven cavity and then pull it gently away from the oven cavity.
- **IMPORTANT:** You should make sure that the door is supported at all times and that you place the door on some padded material whilst cleaning it.
- The oven door and door glass should only be cleaned using a damp cloth and a small amount of detergent. The cloth **MUST NOT** have come into contact with any form of cleaning product or chemical previously.
- To refit the door you should slide the hinges back into their slots and open the door fully.
- **IMPORTANT:** The movable bolts (**B**) must be closed back into their original positions before closing the door.





- *Take care not to dislodge the hinge locking system when removing the door, as the hinge mechanism has a strong spring.*
- *Do not immerse the door in water at any time.*

## Installation



*The installation must be carried out by a suitably qualified person, in accordance with the current version of the following.*


- *UK Regulations and Safety Standards or their European Norm Replacements.*
- *Building Regulations* (issued by the Department of the Environment).
- *Building Standards* (issued by the Scottish Development Department).
- *IEE Wiring Regulations.*
- *Electricity At Work Regulations.*
- *Gas Safety (Installation and Use) (Amendment) Regulations.*

### **WARNING: THIS APPLIANCE MUST BE EARTHED.**

- This appliance should be wired into a 13 A double pole switched fused spur outlet, having 3 mm contact separation and the fuse rating reduced to 3 amps. This should be placed in an easily accessible position adjacent to the appliance, preferably above worktop level. An outlet can then be located at the rear of the appliance for connection.



- To connect the oven power cord, loosen and remove the cover on the terminal block, in order to gain access to the contacts inside. Make the connection, securing the cord in place with the cable clamp provided and then immediately close the terminal block cover again.
- If you have to change the oven power cord, the earthing (yellow/green) conductor must always be 3 cm longer than the line conductors.

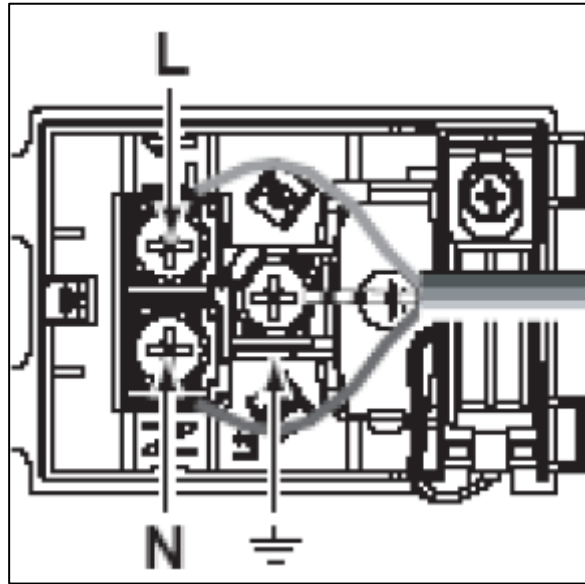

- Care must be taken to ensure that the temperature of the mains supply cable does not exceed 50°C.
- If the mains supply cable is damaged, then it must be replaced by an appropriate replacement.

### Positioning




*The adjacent furniture and all materials used in the installation must be able to withstand a minimum temperature of 85°C above the ambient temperature of the room it is located in, whilst the appliance is in use.*


- Your appliance is heavy, so you should be careful when moving or positioning it.
- **Do not** try to move the cooker by pulling on either the door, handle or control panel.
- The oven may be located in a kitchen, or a bedroom, but not in a room containing a bath or shower. **The oven must not be installed in a bedroom of less than 20m<sup>3</sup> in size.**
- **LPG models** must not be installed in a room or internal space below ground level (e.g. in a basement).
- This oven is designed to be installed as a **built in** appliance only. **IMPORTANT:** *It must not be built under a kitchen unit.*

## Assembling the drip-catcher

- Before installing the oven into the furniture, it is necessary to assemble the lower profile "drip-catcher". This "drip-catcher" must be attached to the lower part using the 3 screws supplied.

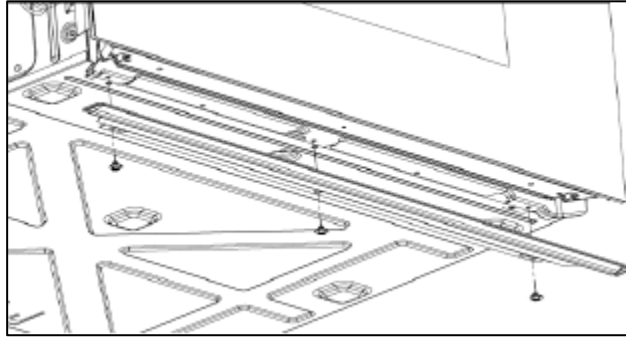


## Installing the oven into the kitchen cabinet

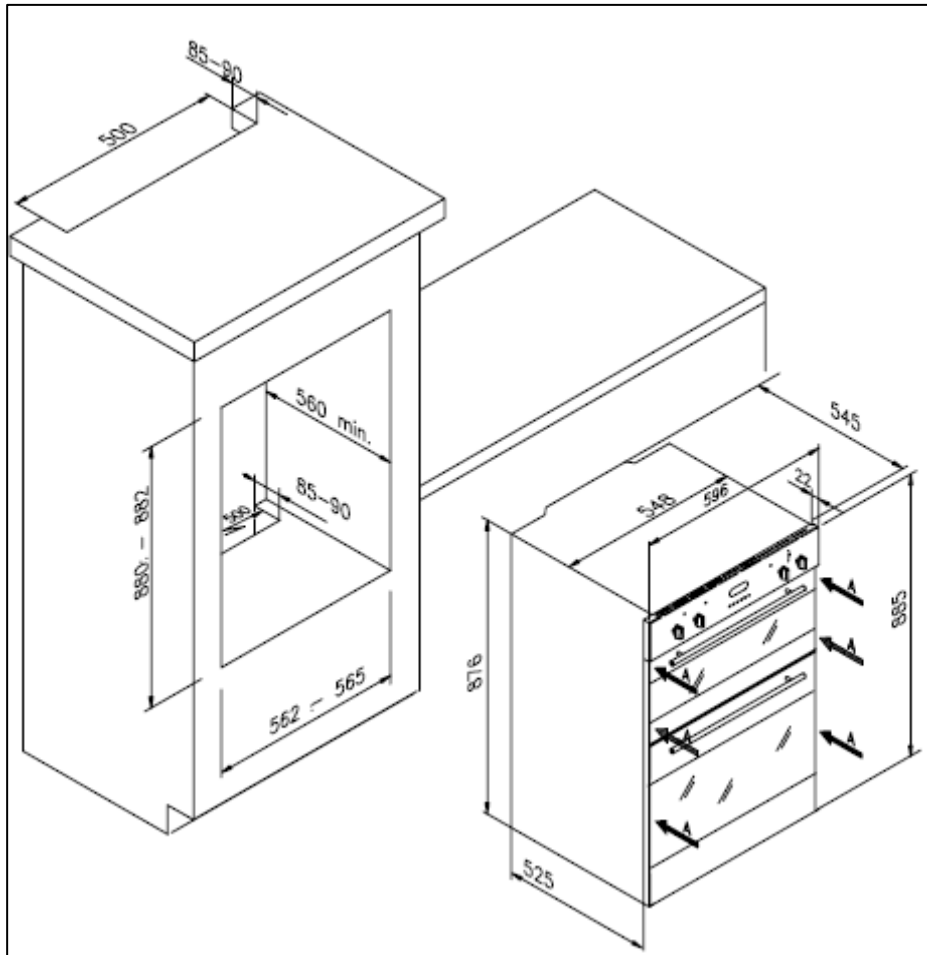

## Positioning the appliance

- Ensure that the aperture that you will be fitting the oven into is of the size given in the diagram on the previous page.
- The oven must be fitted into an oven housing with the ventilation cut-outs shown in the “Ventilation requirements” section below.
- Ensure that the rear panel of the furniture housing unit has been removed.

## Ventilation requirements

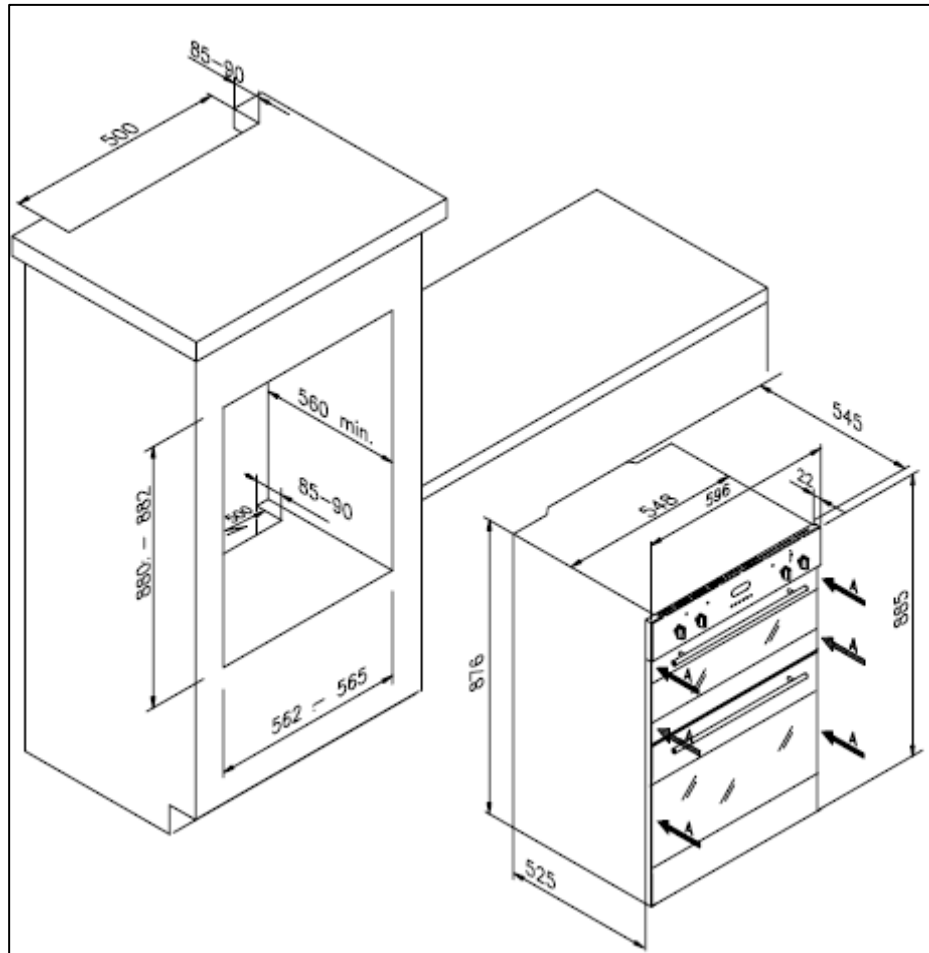

(Figure shows the ventilation and cut-out requirements for the installation of the appliance into a tall housing unit.)

## Gas connection



*This appliance must be installed by a competent person in accordance with the current versions of the following UK (United Kingdom) or ROI (Republic of Ireland) Regulations and Safety Standards or their European Norm Replacements.*

### Important information

- This oven is supplied to run on **natural gas only** and cannot be used on any other type of gas without modification.
- Conversion for use on LPG and other gases must only be undertaken by a qualified person. For information on the use of other gases, please contact the Baumatic Advice Line.
- The oven must be installed by a qualified person, in accordance with the current edition of the Gas Safety (Installation and Use) Regulations and the relevant building/I.E.E. Regulations.
- Failure to install the appliance correctly could invalidate Baumatic's guarantee and lead to prosecution under the regulations quoted above.
- In the UK, only **GASSAFE** registered installers are authorised to undertake the installation and service work, in compliance with the above regulations.

### Room ventilation requirements

- The room containing the oven should have an air supply in accordance with the current edition of BS 5440: Part 2:
- The room must have opening windows or equivalent; some rooms may also require a permanent vent.
- If the room has a volume between 5 and 10m<sup>3</sup>, it will require an air vent of 50cm<sup>2</sup> (effective area). Unless it has a door which opens directly to the outside.
- If the room has a volume of less than 5m<sup>3</sup>, it will require an air vent of 100cm<sup>2</sup> (effective area).
- If there are any other fuel burning appliances in the same room the current edition of BS 5440: Part 2: should be consulted to determine air vent requirements.

- Ensure that the room containing the oven is well ventilated, keep natural ventilation holes.
- Prolonged intensive use of the appliance may call for additional ventilation.
- This oven is not fitted with a device for discharging the products of combustion. Ensure that the ventilation rules and regulations are followed.
- Your oven must stand on a flat surface so that when it is in position the oven is level. When in position check that the oven is level by using a spirit level.
- Remember that the quantity of air necessary for combustion must never be less than 2m<sup>3</sup>/h for each kW of power (see total power in kW on the appliance rating plate).

### **Gas Safety (Installation and Use) Regulations**


- It is a legal requirement that all gas appliances are installed by competent persons in accordance with the current edition of the ***Gas Safety Installation and Use Regulations***.
- For reasons of safety, it is in your best interests to ensure compliance with the law.
- In the UK, GASSAFE registered installers work to safe standards of practice. The cooker must also be installed in accordance with the current edition of BS 6172. Failure to install the oven correctly could invalidate the warranty, liability claims and lead to prosecution.

### **Gas connection**



***ALL INSTALLATION AND SERVICE WORK MUST BE CARRIED OUT BY A GASSAFE REGISTERED ENGINEER.***

- Prior to installation, ensure that the gas supply conditions (nature of the gas and gas pressure) and the adjustment conditions are compatible. The adjustment conditions for this appliance are stated on the rating plate which can be found on the back cover.
- This appliance is not designed to be connected to a combustion product evacuation device. Particular attention should be given to the relevant requirements regarding ventilation.

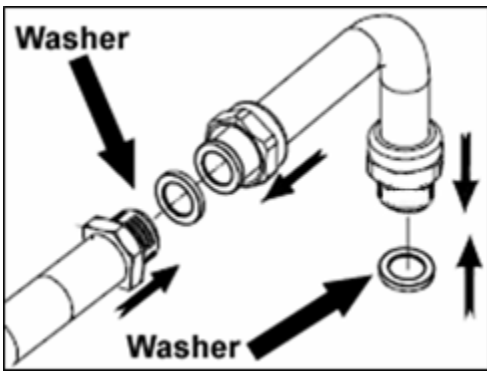

- A ½" BSP female to female gas elbow (not supplied) should be connected to the gas inlet at the rear of the appliance and pointing in a downward direction. As indicated in the diagram opposite.

- **IMPORTANT: FIBRE WASHERS MUST BE USED WHEN CONNECTING THE GAS ELBOW (AS SHOWN IN THE ABOVE DIAGRAM).**
- Connection to the cooker should be made with an approved appliance flexible connection to BS 669.
- If the cooker has been converted for use with LPG, then it should be connected to the gas supply using an appropriate bayonet type hose. The hose **MUST** be suitable for use with LPG gas, these are identifiable by a red band or stripe.
- A hose length of 0.9m to 1.25m is recommended. The length of hose chosen should be such that when the cooker is in situ, the hose does not touch the floor.
- Care should be taken to ensure that the temperature rise of areas at the rear of the cooker that are likely to come in contact with the flexible hose do not exceed 70°C.
- **IMPORTANT: On completion carry out a gas tightness test.**


### Gas adjustment (Conversion to LPG and gas adjustment)

**IMPORTANT: Your appliance must be disconnected from the electric and gas supply before completing this process.**


| Burner    | Thermal power<br>kW (H.s) |         | Liquid gas               |                         |          |     | Natural gas             |             |
|-----------|---------------------------|---------|--------------------------|-------------------------|----------|-----|-------------------------|-------------|
|           |                           |         | By-pass<br>1/100<br>(mm) | Nozzle<br>1/100<br>(mm) | Flow g/h |     | Nozzle<br>1/100<br>(mm) | Flow<br>l/h |
|           | Nominal                   | Reduced |                          |                         | G30      | G31 |                         |             |
| Main oven | 2.40                      | 0.50    | 36                       | 71 (X)                  | 175      | 171 | 113 (F2)                | 229         |
| Top oven  | 1.60                      | 0.50    | 36                       | 62 (H2)                 | 116      | 114 | 86 (O)                  | 152         |
| Grill     | 2.90                      |         |                          |                         |          |     | 122                     | 276         |

|                 |         |  |  |            |     |     |      |     |
|-----------------|---------|--|--|------------|-----|-----|------|-----|
| MAX             | 2.80    |  |  | 86<br>(H3) | 204 | 200 | (F2) |     |
|                 | 5.30    |  |  |            |     |     |      | 505 |
|                 | 5.20    |  |  |            | 378 | 371 |      |     |
|                 | Nominal |  |  |            | 28- | 37  |      | 20  |
| Supply pressure | Minimum |  |  |            | 30  | 25  |      | 17  |
|                 | Maximum |  |  |            | 20  | 45  |      | 25  |
|                 |         |  |  |            | 35  |     |      |     |

- Open the door of the lower cavity fully.

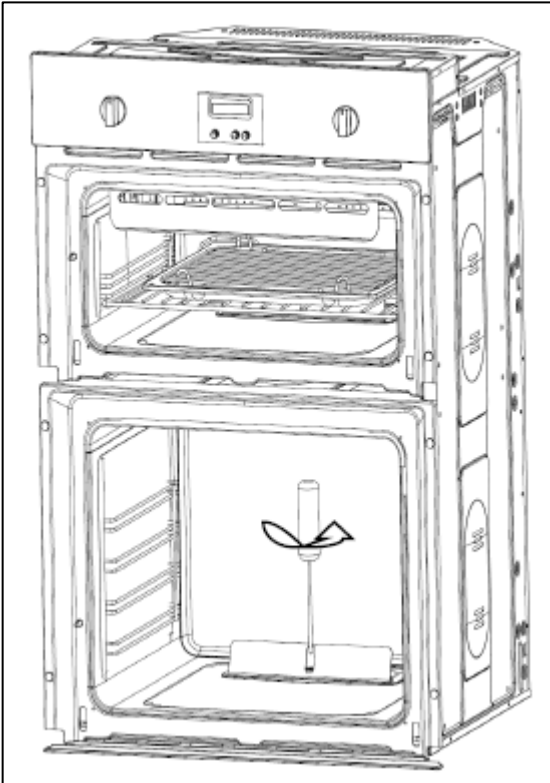

- Remove the oven burner shield from inside of the oven.

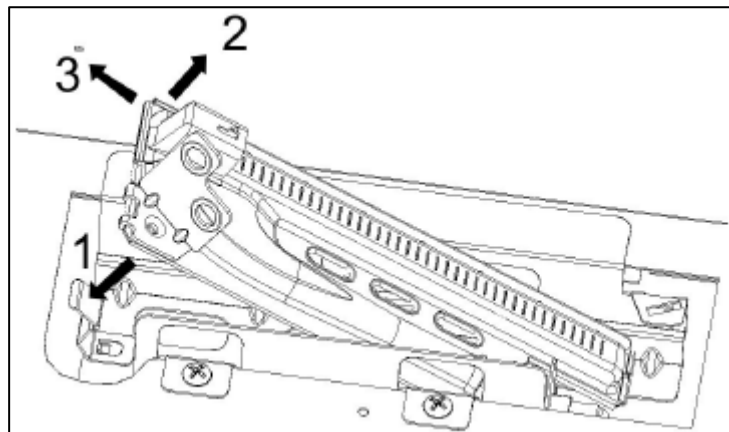


- Remove the burner by moving the restraint spring to the left and sliding the burner out of its housing. In order to slide it out, lift up the left side and then slide it over to the left. In doing so,



take care not to change the position of the igniter and safety device which are attached to the burner.

- Unscrew and remove the injector. Replace with the injector which corresponds to the new gas type (please refer to the table above). It is recommended that the appropriate thread sealant is used; always check for gas tightness after assembly.
- Put the oven burner back together, taking care not to change the position of the igniter and safety device which are attached to the burner. Replace the flame guard.

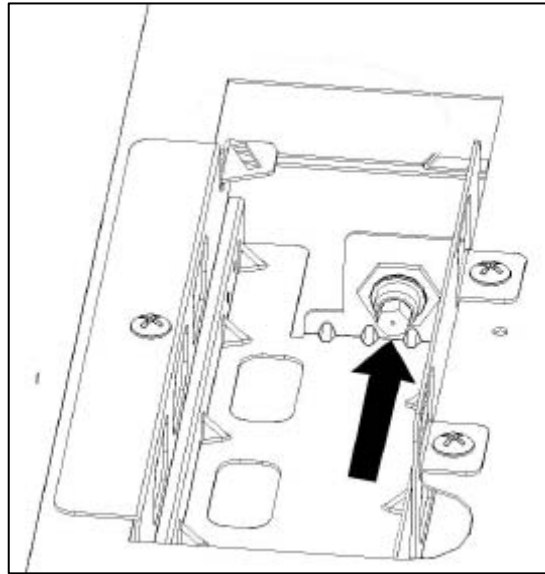

### Regulating the oven burner minimum setting

- Ensure that the appliance is in a safe condition, and then reconnect it to the electricity supply.
- Open the oven door fully and ignite the oven burner. You should set the oven to maximum temperature, then close the oven door and leave the appliance for 10 – 15 minutes.
- Reduce the temperature to its minimum setting and remove the gas oven control knob.
- ***DISCONNECT THE APPLIANCE FROM THE ELECTRICITY SUPPLY.***
- Remove both the control knobs.
- Unscrew the by-pass screws using a screwdriver. In order to regulate the minimum setting, it is only necessary to unscrew the by-pass screws by a few degrees when changing from liquid gas (G30/G31) to methane gas (G20). In order to function with


G30/G31 the by-pass regulation screws must be screwed right down.

- Refit the control knob, then turn it to the Max. position and then back to Min. several times, checking that the flame is maintained.
- Fully open and close the oven door several times and check that the flame is maintained. If the flame is maintained, then switch the oven burner off.
- Reconnect the oven to the electricity supply.
- **IMPORTANT:** It is now necessary to carry out a full function test of the appliance (this should include a gas tightness test).


### Substituting the grill burner

**IMPORTANT:** Your appliance must be disconnected from the electric and gas supply before completing this process.

- Open the oven door completely. Remove the grill burner attachment screws at the end of the burner (on the right side).

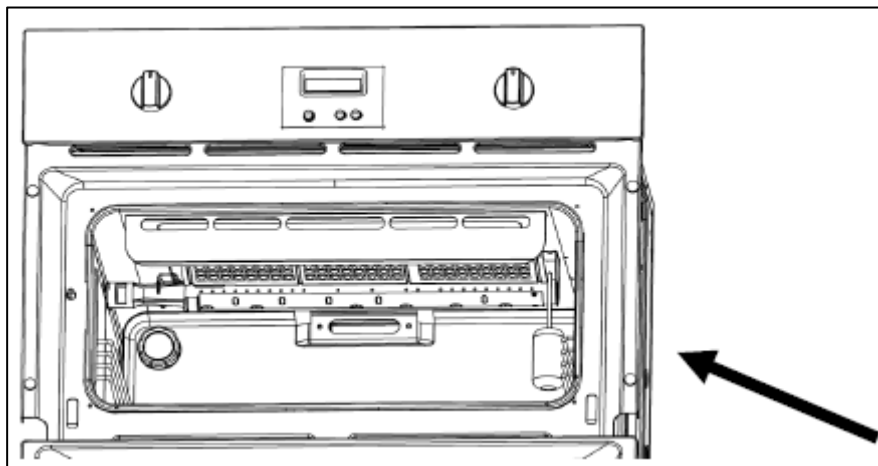

- Remove the burner by moving it towards the right and sliding it off the support which props up the left side of the muffle, until the injector is uncovered. In doing so, take care not to change the position of the igniter and safety device which are attached to the burner.
- Unscrew the remove the injector and replace with the injector which corresponds to the new gas type (see the table on page 31).

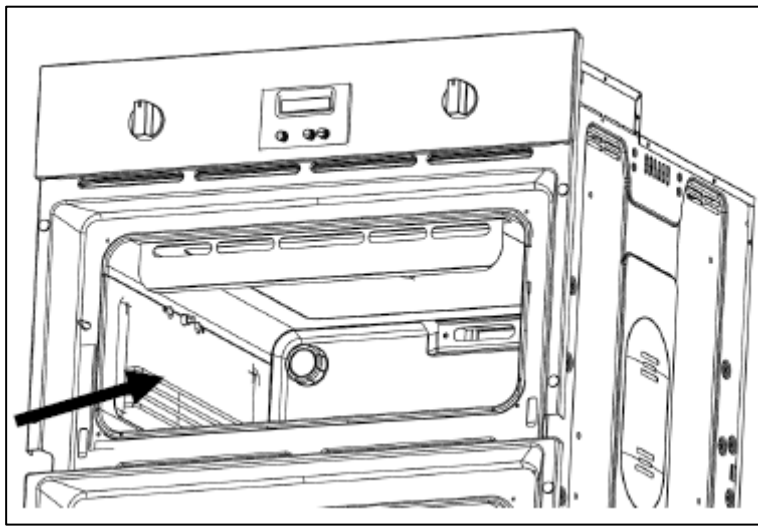

- Put the oven burner back together, taking care not to change the position of the igniter and safety device which are attached to the burner.

### **My appliance isn't working correctly**

#### ***The gas oven burner or grill burner do not light.***

- \* Check that the oven is switched on at your mains supply.
- \* Check that the fuse in the spur outlet doesn't need replacing.
- \* Check that there is not a problem with your gas supply

#### ***Food is cooking too quickly or too slowly.***

- \* Check that you are cooking at an appropriate temperature and shelf level.

#### ***The oven is not cooking evenly.***

- \* Check that the oven is installed correctly.
- \* Check that you are cooking at an appropriate temperature and shelf level.

#### ***The oven light does not work.***

- \* Follow the "Replacing the oven bulb" section on page 23.

#### ***I am getting condensation in my oven.***

- \* Steam and condensation is a natural by product of cooking any food with high water content, such as frozen food, chicken etc.

- \* You may get condensation in the oven cavity and forming between the oven door glasses. This is not necessarily a sign that the oven is not working correctly.
- \* Do not leave food in the oven to cool after it has been cooked and the oven has been switched off.
- \* Use a covered container, where practical, when cooking to reduce the amount of condensation that forms.



***IMPORTANT: If your appliance appears not to be operating correctly, then you should disconnect it from your mains supply and then contact Baumatic Customer Care on telephone number (0118) 933 6911.***

***DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.***

Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

***The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then he will not complete a repair.***

***This includes situations where appliances have been tiled in, sealed in with sealant, have wooden obstructions placed in front of the appliance, like plinths. Or any installation other than the one specified by Baumatic Ltd. has been completed.***

Please refer to the conditions of guarantee that appear on the warranty card that you receive with the appliance.

***IMPORTANT: Baumatic Ltd. operates a policy of continuous improvement and reserves the right to adjust and modify its products without prior notification.***



***United Kingdom***

Baumatic Ltd.,  
Baumatic Buildings,  
6 Bennet Road,  
Reading, Berkshire  
RG2 0QX  
United Kingdom

**Sales Telephone**

(0118) 933 6900

**Sales Fax**

(0118) 931 0035

**Customer Care Telephone**

(0118) 933 6911

**Customer Care Fax**

(0118) 986 9124

**Spares Telephone**

(01235) 437244

**Advice Line Telephone**

(0118) 933 6933

**E-mail:**

sales@baumatic.co.uk  
customercare@baumatic.co.uk  
spares@baumatic.co.uk  
technical@baumatic.co.uk

**Website:**

www.baumatic.co.uk

***Republic of Ireland***

**Service Telephone**

1-890 812 724

**Spares Telephone**

091 756 771

***Czech Republic***

Baumatic CR spol s.r.o.  
Průmyslová zóna Sever 696  
460 11 Liberec 11  
Czech Republic

+420 483 577 200

www.baumatic.cz

***Slovakia***

Baumatic Slovakia, s.r.o.  
Galvániho 7/D  
Slovakia

+421 255 640 618

***Germany***

Baumatic Gmbh  
Lilienthalstrasse 1  
320 52 Herford  
Deutschland

+49 5221 694 99-0

www.baumatic.de

***Italy***

Baumatic Italia S.R.L.  
Via Galvani N.3  
35011 Campodarsego (PD)

+3904 9920 2297

www.baumatic.it

***Holland***

Baumatic Benelux B.V.  
Grindzuigerstraat 22  
1333 MS ALMERE  
Nederland

+3136 549 1555

www.baumatic.nl





