


BFE320SS
Fridge Freezer

Instruction manual

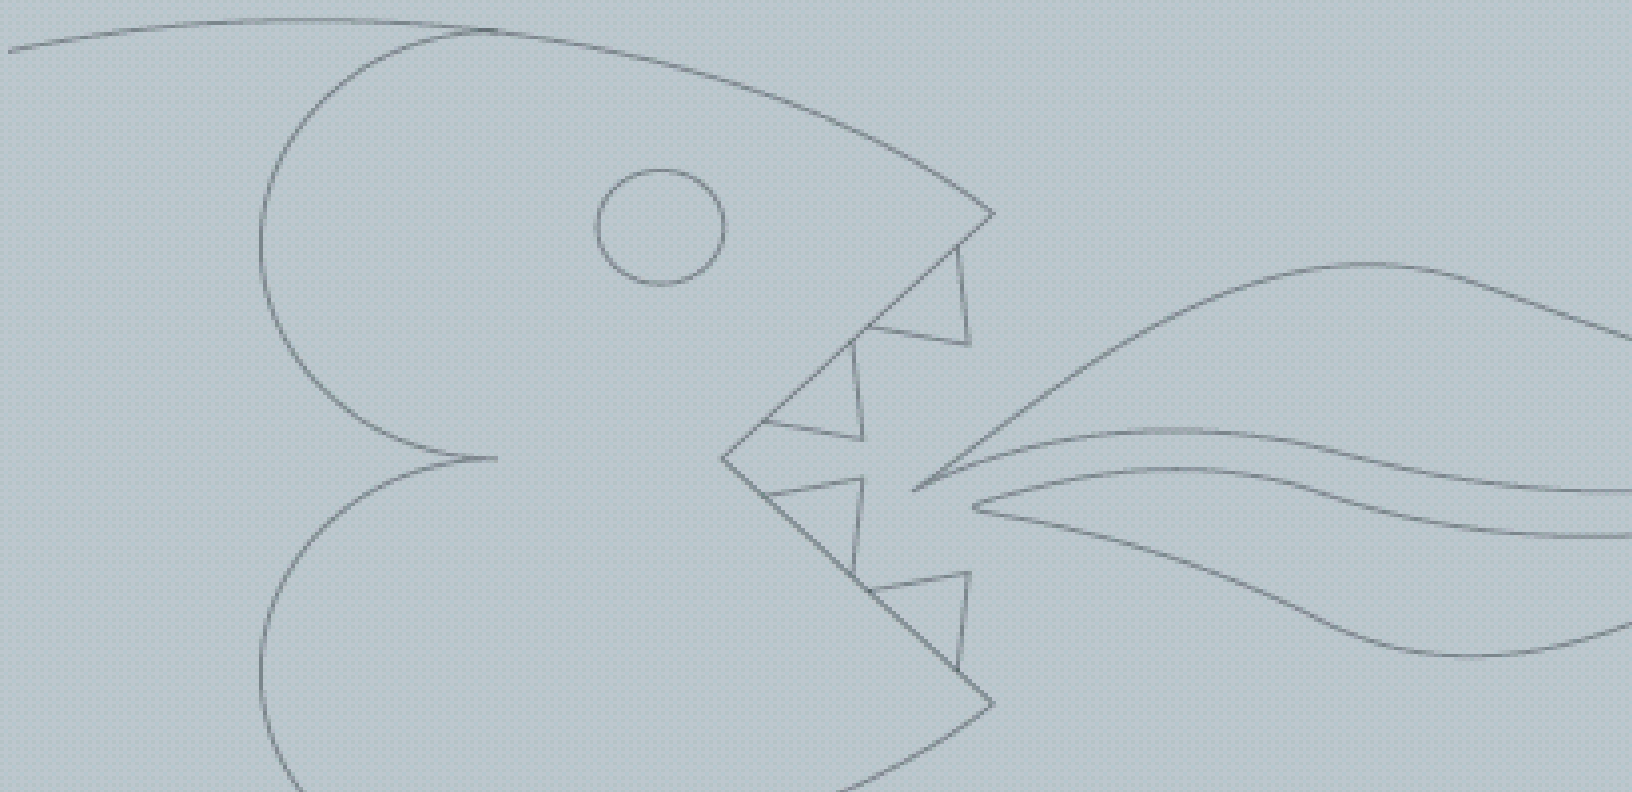

Thank you for your confidence in buying a Baumatic appliance and congratulations on your excellent choice. We hope it will successfully serve its purpose for many years.

An upright fridge-freezer is combined from two parts: The top part is the fridge section and the bottom part is the freezer section..

A refrigerator is used in households for storage of fresh food at temperatures above 0°C.

A freezer is used in households for freezing fresh food and storage of frozen food for up to one year (depending on the type of food).

Before first operation	3 - 4
Description of the appliance	5
Location and installation.....	6 - 7
Control panel	8 - 12
Recommended distribution of food	13
Storing fresh food in the refrigerator	14 - 16
Storage of food in the ZERO'N'FRESH drawer.....	17 - 18
Freezing and storage of frozen food	19 - 21
Defrosting.	22
Cleaning	23
Troubleshooting guide.....	24 - 25
Noise information	26
Guarantee.....	27
Baumatic contact details.....	28

Before first operation



- Before connecting the appliance read these instructions carefully. They describe the appliance and provide instructions for its safe and correct use. The instructions are prepared for various models so they may contain descriptions of functions and components that your appliance may not have.
- Remove the wrapping that protects the appliance during transport. Door corners are fitted with protective spacers. Remove the spacers and replace them with the attached pegs.
- Before connecting the appliance to the mains supply, leave it in an upright position for about 2 hours. This will reduce the possibility of malfunctions in the cooling system resulting from transportation and handling.
- The appliance must be connected to the mains supply in accordance with the standing regulations and local requirements.
- The appliance must not be used in the open air or exposed to weather precipitation.
- Always disconnect the appliance from the power supply (disconnect the plug from your mains supply) before cleaning and before replacing the light bulb.
- If the power supply cord is damaged, in order to avoid hazard it must be replaced by a suitably qualified person.
- If the appliance is not going to be used for a long period of time, then turn it off using the ON/OFF button and disconnect it from mains supply. Empty the appliance, clean the interior and leave the door ajar.
- For the protection of environment please refer to the W.E.E.E directive later in this booklet.


- Wrappings contain environmentally friendly materials which can be recycled, recovered or disposed of without threat to the environment.
- To prevent any pollution be careful not to damage the insulation or refrigeration tubes at the rear wall during the installation, cleaning and disposal of the appliance.
- Never let children play with the appliance.
- Self closing door hinges (certain models only) pull the door to the cabinet just before closing, thereby preventing the door from remaining ajar. Equally it limits the door opening angle and prevents damage to adjacent walls and cupboards.
- A rating plate with basic information is located in the interior of the appliance.



W.E.E.E. DIRECTIVE.

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Description of the appliance

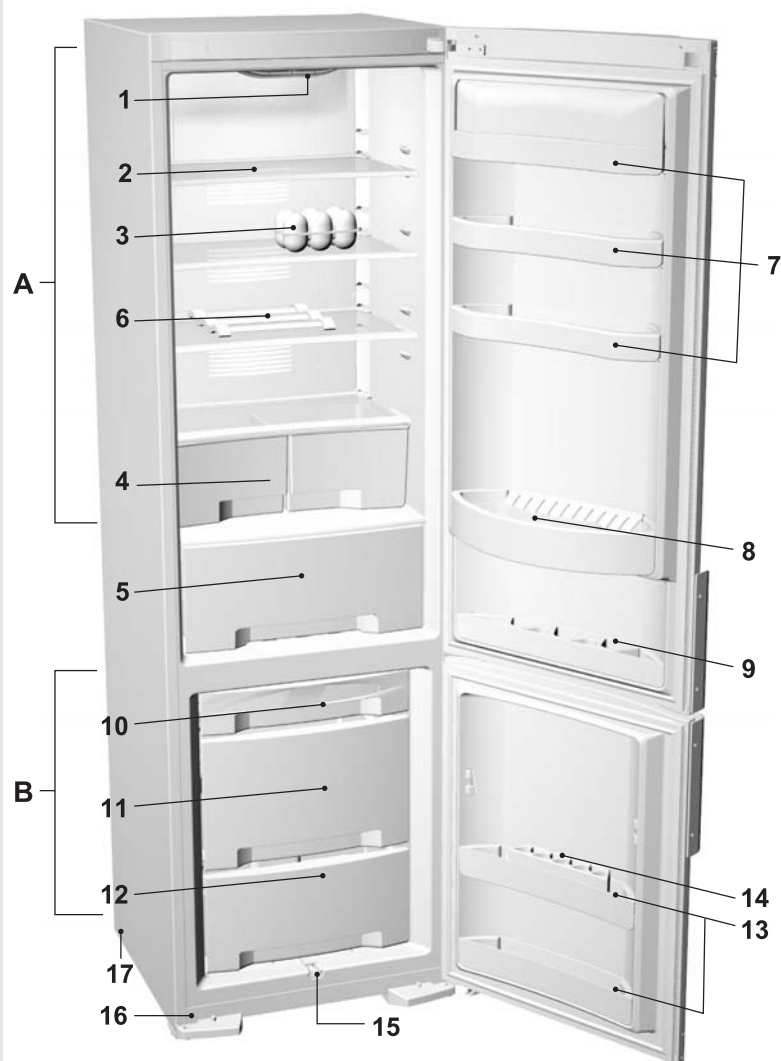

A Refrigerator

B Freezer

- 1 Interior light
- 2 Shelf (adjustable height)
- 3 Foldable egg rack (closed - six eggs, open - 12 eggs)
- 4 Vegetable crisp pan*
- 5 ZERO'N'FRESH food storage drawer with pull-out guides (may. 20 kg)
- 6 Bottle rack*
- 7 Refrigerator door shelf (options: deep, shallow; covered or no cover)
- 8 Twin row bottle carrier with safety holder
- 9 Tube holder*
- 10 Fast freeze drawer for small quantities of food*
- 11 Large BIG'N'FREEZE drawer with pull-out guides (storage/freezing)** (max. 16 kg)
- 12 Storage compartment (short)
- 13 Freezer door shelf
- 14 Ice tray
- 15 Defrost drain outlet groove
- 16 Legs
- 17 Wheels

Interior accessories of the appliance may vary according to the model.

Pull-out guide drawers (or shelves) are extracted by lifting the rear end and pulling out inclined under the 45° angle. Reinsert in opposite sequence.

* Certain models only.

** Freezing compartment depends on the model (see chapter on Freezing of provisions).


Location and installation

Selecting the location

- Place the appliance in dry and well aired room. The appliance operates best at temperature ranges indicated in the chart below. Relevant class of the appliance is indicated on the rating plate.


Class	Ambient temperature
SN (subnormal)	from +10°C to +32°C
N (normal)	from +16°C to +32°C
ST (subtropical)	from +18°C to +38°C
T (tropical)	from +18°C to +43°C


Positioning the appliance

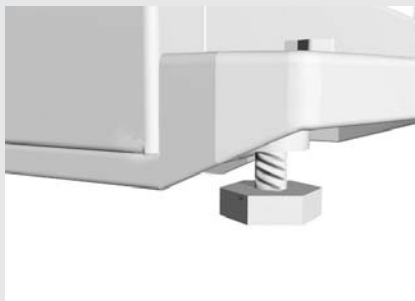

Positioning the appliance requires two persons in order to avoid injuries or damage to the appliance.

- Place the appliance flatly and firmly on a solid base. The appliance is fitted with adjustable feet on the front side, used to level the appliance. The rear side of the appliance is fitted with wheels (certain models only) which facilitate the positioning of the appliance into its final location.
- Anything positioned above the appliance must be at least 5 cm away to allow sufficient cooling of the condenser. You must allow a 15mm gap to the rear of the appliance.
- Avoid exposing the appliance to direct sunlight or heat sources. If this is not feasible, then you should install an insulation plate between the appliance and the adjacent heat source.
- The bottom front corners of your appliance are fitted with handles to facilitate moving. The appliance may stand independently or adjacent to a cupboard or wall. Be sure to leave enough space for the opening of the door, to avoid damage to the appliance or personal injury. Also leave ample space for extracting shelves (see the diagram on the next page).

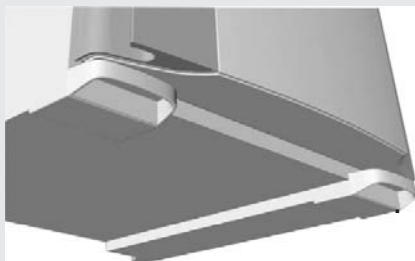

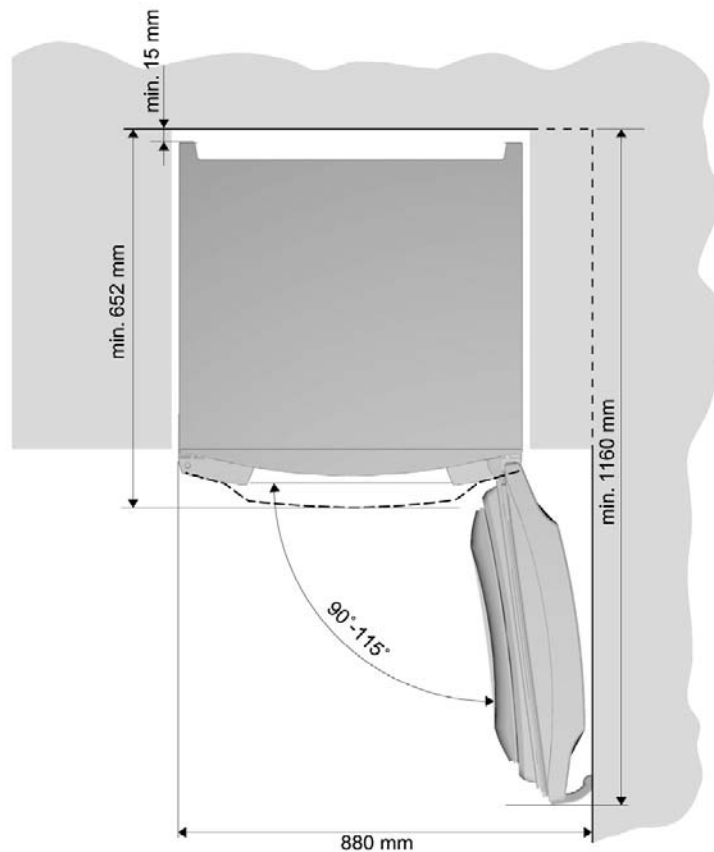

Connecting to power supply

- Use the power cord to connect the appliance to the mains power. Your wall socket must be fitted with a ground terminal (safety socket). The nominal voltage and frequency of the appliance are indicated on the rating plate.
- The mains power connection and grounding must be made in line with standing regulations and local requirements.

The appliance is able to accommodate minor temporary voltage tolerances, but they may not exceed -10% to +6%


Reverse door swing

The direction of the door swing may be reversed, but the procedure has to be performed by a suitably qualified service technician.

Control panel

Control panel

The control unit is located on the exterior of the appliance door.

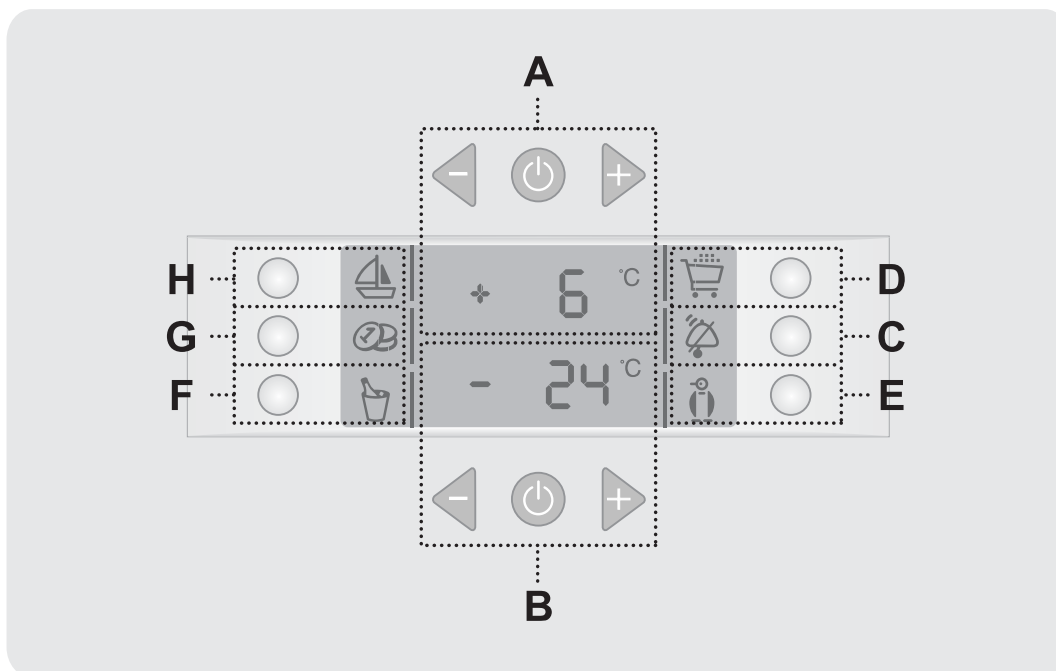

Setting ON




Setting OFF

- A Fridge temperature selector and ON/OFF button
- B Freezer temperature selector and ON/OFF button
- C Alarm button
- D Fridge fast cooling button
- E Fast freeze button
- F Quick cooling of beverages in the fridge section
- G Economy button
- H Holiday setting

The ON/OFF button

First plug the power cord into the wall outlet. The LCD display is on and indicates dashes.

- Switch the appliance on/off by pressing buttons  (**A, B**), for 3 seconds.
- Single compressor appliances have the fridge and freezer sections switched on and off by pressing button (B). After that you may switch the refrigerator on/off by pressing the button (A).
- The display indicates a fridge temperature of +9°C and a freezer temperature of -16°C. These values remain on the display until the actual temperature within the unit falls below the above values.
- The appliance is factory preset to the recommended fridge temperature of +5°C and freezer temperature of -18°C.

Setting the temperature

The fridge temperature setting range is from +1°C to +9°C (or +3°C to +8°C for appliances equipped with the ZERO'N'FRESH drawer). The freezer temperature setting range is from -16°C to -24°C (or -2°C to +3°C for appliances equipped with the ZERO'N'FRESH drawer - not adjustable).

Reducing the temperature:

press button  (**A** for refrigerator, **B** for freezer);

Increasing the temperature:

press button  (**A** for refrigerator, **B** for freezer);

- When you press one of temperature setting buttons, the digital display starts flashing and indicates the last selected temperature.
- The temperature setting is changed by pressing the relevant button and will increase in steps of 1°C. During the setting procedure all other buttons are void.
- Around 5 seconds after the release of the button, the display automatically indicates the actual temperature.

Power failure

 
Other settings



In case of power failure the display flashes and indicates temperature that was reached during the failure (max. +25°C). The appliance operates on its preceding settings. To display the actual temperature press the Alarm button.

Alarm

Continuous sound - the fridge door is open.

If the refrigerator door is open for more than one minute, a **continuous tone will sound and a symbol** appears. The alarm can be shut off by closing the door, or by pressing the alarm off button  (C).

Intermittent sound - fridger/freezer temperature too high.


Elevated temperature within the refrigerator is signaled by an intermittent alarm sounding and the symbol and temperature both flash on the display.

- The alarm can be switched off by pressing the alarm off button (C). The symbol and flashing temperature are switched off automatically when the interior is cool enough, and there is no longer a danger to your perishable goods.
- If the temperature in the freezer compartment fails to reach the required level even 24 hours after the alarm had been shut down, the sound alarm is switched on again and shuts off automatically when the freezer compartment cools down to the required level and there is no longer a danger for perishable food.

After turning on the appliance for the first time the appliance has a 24-hour alarm delay to avoid unnecessary panic.

 


Fast cooling of the refrigerator


This function is activated by pressing the button  (D). It is switched off automatically after 6 hours, and the setting returns to the one previously set. This function is used **for fast cooling of large quantities of fresh food** inserted all at once.



Economy button

Press button  (G) to activate the **energy saving function**. The best storage temperature and energy consumption are automatically set at +5C for the refrigerator and -18C for the freezer. The setting is switched off by pressing the same button. This function is used **for saving energy**.


Fast freeze function

Press the fast freeze button  (E) to activate the intensive cooling of the freezer. If you fail to switch this function off manually by pressing the same button again, it turns off automatically after 50 hours of operation. The function is intended **for fast freezing of large quantities of inserted food**.


In case of power failure the fast freeze procedure is repeated.

This function should be used when the appliance is first switched on, after cleaning, and when larger quantities of fresh food are inserted in the appliance.


Quick cooling of beverages

Press button * (F) to activate quick cooling of beverages in the freezer. Place a 0.75 l bottle (or larger one) into the large BIG'N'FREEZE drawer with pull-out guides. After a 45 minute period the sound alarm indicates that your drink is cooled.

Caution! Make sure you withdraw the bottle from the freezer, otherwise it might freeze and burst.

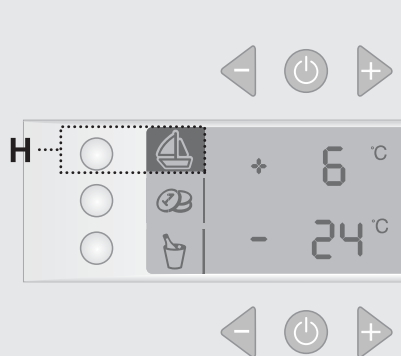

Holiday button

This is activated by pressing button  (**H**). The fridge temperature is automatically set at +9°C (+8°C in appliances equipped with ZERO'N'FRESH drawer) and the freezer at -18°C. This setting is switched off by pressing the same button again. This function is useful when you plan a **longer absence from home**. You should remove quickly perishable food from the appliance. Do not forget to switch the function off when you return from the holiday.

Child lock

A built-in child lock prevents the appliance from unwanted temperature alterations and/or being switched off. Activate this device by pressing button (**C**) for 3 seconds. When this feature is active if you press any button the wording **LOC** appears.

Errors in operation

In case of malfunction the display indicates different error codes (see chapter Troubleshooting).

Display illumination

The display illuminates when the door is opened and a button is pressed. It remains lit for 3 minutes after the last change.

Recommended distribution of food

Recommended distribution of food

Refrigerator compartments:

- **top section:** canned food, bread, wine, cake, ...
- **middle section:** dairy products, cheese, readymade food, desserts, juices, beer, TV-dinners, ...
- **bottom section:** meat, meat products, delicatessen, ...
- **crisp pan:** fresh fruit, vegetables, salads.
For appliances without a ZERO'N'FRESH drawer also: root vegetables, potatoes, onions, garlic, tomatoes, tropical fruit, sauerkraut, turnips, ...
- **ZERO'N'FRESH drawer:** fresh meat, meat products, fish, seafood, dairy products, salads, fruit, vegetables, mayonnaise, dips and sauces, ...

Refrigerator door lining compartments:

- **top/middle section:** eggs, butter, cheese, ...
- **bottom section:** beverages, cans, bottles, ...

Freezer door lining compartments:

- **top section:** freezing compartment
- **bottom section:** storage compartment
- **door lining:** packed vegetables, ice-creams, ice,
- **quick cooling of beverages:** (see Quick cooling of beverages in the freezer)




142492

Storing fresh food in the refrigerator

Important precautions for storing fresh food

- ⚠ Proper use of the appliance, adequately packed food, correct temperature setting and hygienic precautions all have a substantial impact on the quality of your stored food.**
- ⚠ Always follow the best before date, printed on the packaging of your food.**
- ⚠ Food stored in the refrigerator should be properly packed so as to prevent emission and/or retention of moisture and odours.**
- ⚠ Never store inflammable, volatile or explosive substances.**
- ⚠ Beverages with high alcohol percentage should be stored in tightly sealed bottles, in a vertical position.**
- ⚠ Some organic solutions like volatile oils in lemon or orange peel, acids in butter etc. can cause damage if they come into prolonged contact with plastic surfaces or gaskets. This can cause accelerated aging of these surfaces.**
- ⚠ Unpleasant odours inside the refrigerator are a sign that something is wrong with your food or that your refrigerator needs cleaning (see chapter Cleaning).**
- ⚠ If the appliance is going to be left unattended for a prolonged period, make sure you remove quickly perishable articles of food from the appliance before you leave.**

Interior accessories and space distribution

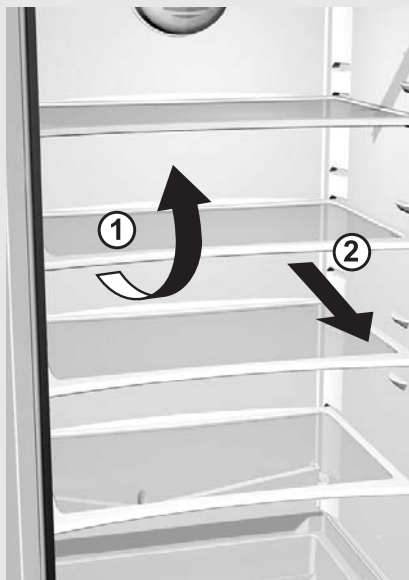

Equipment depends on the model.

- Shelves can be optionally placed on the guides inside the appliance. They are protected against being pulled out accidentally. To remove the shelf, slightly lift up the back part of the shelf and pull it out. Quickly perishable food should be stored on the back i.e. the coldest part of the shelves.
- The bottle carrier (certain models only) can be placed in a variety of locations. It can carry different bottles and/or cans, and it may also be used to store bottles on a table.
- The crisper tray below the glass shelf at the bottom of the refrigerator should be used for the storage of fruit and vegetables. It retains the right level of moisture in the items and prevents drying out.
- The refrigerator door liner consists of various shelves and holders used for storing cheese, butter, eggs, yogurt, and other smaller packages, tubes, cans etc. The bottom shelf is used for storing bottles.
- The two-row tray in the refrigerator door inner liner is for frequently used food and offers you much better use of space in the door inner liner. Food should be sorted in two rows according to the principle - tallest at the back and smaller in the front.
- The fan (certain models only) improves even distribution of temperature and decreases the chance of dew upon the storage racks. The fan does not operate when the refrigerator door is open.

***Approximate storage
time of fresh foods***

Food	Period
eggs, marinades, smoked meat,	up to 10 days
cheese	up to 10 days
carrots, etc...	up to 8 days
butter	up to 7 days
cake, fruit, TV-dinner dishes, raw chunks of meat	up to 2 days
fish, raw minced meat, seafood	up to 1 day

Storing of food in the ZERO'N'FRESH drawer

The **ZERO'N'FRESH** drawer allows storage of a wide selection of fresh food, approximately **three times longer than in a traditional refrigerator**. Food remains fresh for long time retaining its taste and nutritive ingredients. It reduces decay and loss of mass, so fruit and vegetables are more fresh and natural. Storage temperature is **around 0°C** (preset). Temperature may vary between -2°C and +3°C, depending on the temperature variation within the refrigerator.

If the temperature of the room in which the appliance is installed, is lower than 16°C, the recommended setting for the refrigerating compartment is 5°C or lower. For optimum operation of the drawer, it must be completely closed.

The drawer has pull-out guides and additional separate compartments (depending on the model) for the separate storage of food and usage of space according to your individual tastes.



- The moisture level in the drawer depends upon the moisture of the stored food, and on the number of times that you open the drawer.
- When you buy food check its freshness: this affects the quality and durability of the food you are storing.
- Store non-wrapped meat or vegetable food separately, or wrap it in suitable packages. Be careful not to handle different types of meat. They should be packed and stored separately to avoid any transfer of bacteria between the meats.
- Approximately 30-60 minutes prior to use remove food from the drawer to let its aroma and taste develop at ambient temperature.
- Food sensitive to a low temperature **is not** suitable **for storage in the ZERO'N'FRESH drawer:** i.e. pineapple, avocado, bananas, olives, potatoes, eggplants, cucumber, beans, paprika, melons, sweet melons, pumpkins etc.

Recommended storage periods in the ZERO'N'FRESH drawer*

Food	Storage period
Meat:	
sausages, cold cuts, beef, pork, venison, raw meat	up to 7 days
poultry	up to 5 days
fish	up to 4 days
seafood	up to 3 days
Vegetables:	
cabbage, garlic, carrots	up to 180 days
celery, herbs	up to 30 days
lettuce, cauliflower, chicory, rhubarb	up to 21 days
Brussels sprouts, asparagus, kale, Chinese cabbage, turnips, radish	up to 14 days
onions, mushrooms, spinach, peas	up to 7 days
Fruit:	
apples	up to 180 days
pears, kiwi	up to 120 days
grapes, quince	up to 90 days
peaches	up to 30 days
redcurrant, gooseberry, plums	up to 21 days
apricots, huckleberry, cherry	up to 14 days
raspberry, strawberry	up to 3-5 days
Other:	
milk	up to 7 days
butter	up to 30 days
cheese	up to 30 days

* depending upon the quality and freshness of food

Freezing and storage of frozen food



- The freezer interior door lining is also fitted with various shelves and holders that can be used for storing frequently used frozen food. Which you may need easy access to, (ice-cream, open packages of vegetables, etc.)
- Activate the fast freeze function by pressing button **(E)** for continuous operation 24 hours before you intend to freeze fresh food. After this period place the fresh food in **freezing compartment I or III**, depending on the model (see illustration). Do not let the already frozen packages come into contact with the fresh food.
- After 24 hours you may relocate the food **to the storage compartment**, and repeat the freezing procedure if required. You may also remove the drawers and store frozen food directly on the cooling shelves.
- For freezing smaller quantities of fresh food (1-2 kg), the engagement of the fast freeze function is not required.

***Important precautions
for freezing of fresh
food***

- ⚠ You should only freeze food which is suitable for freezing and low temperatures. Food should be of adequate quality and fresh.**
- ⚠ Select adequate packaging for each kind of food and pack it correctly.**
- ⚠ The packaging should be air tight and well sealed, without leaking. Since this could cause substantial vitamin loss and dehydration.**
- ⚠ Mark packages with the following data: type and amount of foods and the date of loading.**
- ⚠ It is imperative that food is frozen as quickly as possible. We therefore recommend that the size of the package is not too large and should be cooled before loading into the freezer.**
- ⚠ The amount of fresh foods that can be loaded in the freezer as a single load is declared on the rating plate. If the loaded amount is too large, the quality of freezing is reduced which in turn will affect the quality of the frozen food.**

***Storing commercially
frozen food***

The storage time and recommended temperature for storing commercially frozen foods is indicated on the packaging. Always follow the manufacturer's instructions for storage and use of frozen food. When shopping be careful to choose only food which is adequately packed and provided with complete data. It should also be stored in freezers where the temperature never rises above -18°C. Do not buy packages of food wrapped with frost. This indicates that the package was thawed before at least once.

Take care that packages don't start to thaw during the journey to your home. The temperature rise will shorten the storage time and affect the quality of your commercially frozen foods.

Approximate storage time of frozen foods

Food	Period
ruit, beef	from 10 to 12 months
Vegetables, veal, poultry	from 8 to 10 months
Venison	from 6 to 8 months
Pork	from 4 to 6 months
Chopped (minced) meat	4 months
Bread, pastry, TV-dinner, fat free fish	3 months
Intestines	2 months
Smoked sausages, fat fish	1 month

Defrosting frozen food

Partially thawed or defrosted foods should be used as soon as possible. Cold air preserves the food but it does not destroy the microorganisms which will rapidly activate themselves after defrosting and make foods perishable.

Partial defrosting reduces the nutritional value of food, especially fruits, vegetables and readymade meals.

Making ice



Remove the cap from the ice tray and fill it to the indicating mark with cold water or some other liquid, suitable for freezing. Close it and place it in the door shelf. The ice tray can produce 8 cubes.

The period required for ice to form is 2-6 hours. It is recommended to make a quantity of ice, prior to the time that you require it.

Ice cubes are discharged from the tray by turning the tray upside down and placing it under cold running water. Shake the tray, open the cover and pour the ice out. **(CERTAIN MODELS ONLY).**

Defrosting the appliance

Automatic defrosting of the refrigerator


The refrigerator needs no special defrosting procedure, because the ice deposited at the inner back wall is defrosted automatically.


Ice deposited on the inner back wall during the compressor operation is defrosted when the compressor stops operating. The condensed water drops are drained through the outlet in the inner back wall into a drain pan which is situated above the compressor, where it will evaporate.

For appliances without the ZERO'N'FRESH drawer:



In case of excessive ice deposits at the inner rear wall of the refrigerator (3-5 mm), switch the appliance off by pressing the ON/OFF button and defrost it manually.

Defrosting the freezer

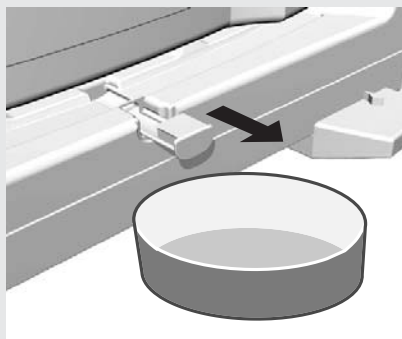

- You should defrost the appliance when the frost layer in the freezer reaches a thickness of around 3-5 mm.
- 24 hours before defrosting set the fast freeze key (E), to continuous operation in order to additionally freeze the food inside. The yellow light will turn on.  After that empty the freezer and take care that the packages remain frozen.
- Switch the freezer section off by using the ON/OFF button for the freezer section.
- To drain the defrost water pull the funnel shaped groove at the bottom of the appliance out, and place a convenient vessel underneath to collect the defrost water.
- Never use powered appliances to defrost the freezer (hair dryer, etc.).
- Avoid using defrosting sprays, as they may cause damage to the plastic parts and may be hazardous to health.
- Clean the interior of the appliance and wipe it dry (see chapter Cleaning).
- Before reloading food into the freezer switch the freezer section back on, using the ON/OFF button.

Cleaning

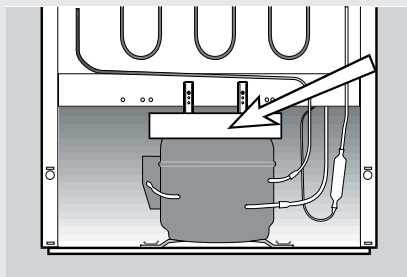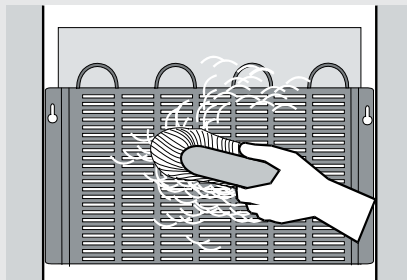

Prior to any cleaning attempt, disconnect the appliance from the mains (pull the plug out from the mains wall outlet). Special antibacterial protection in the top layer of the inner walls will prevent the multiplication of bacteria and helps to keep the interior clean and germ free. Make sure you remove any traces of the cleaning agents that you use.

- Clean the **exterior** of the appliance with warm water and liquid detergent.
- For cleaning of plastic, coated, or aluminum parts avoid using abrasive or special cleaning agents (like stainless steel polish), as these may damage the surface.
- Clean coated and aluminum surfaces should be cleaned using a soft cloth and alcohol based cleaning agent (like glass cleaner).
- Wash the **interior** of the appliance with liquid detergent and lukewarm water, mixed with a little vinegar.


- For appliances without the ZERO'N'FRESH drawer:


The drain outlet located below the cooling panel on the rear wall collects the defrost drainage water, so it must not become clogged (with food particles, for example). Make sure you inspect it periodically and clean it if necessary (use a plastic straw to free any debris).

- The **condenser** on the rear wall must always be clean and free of dust or kitchen deposits, therefore clean the dust periodically with a non-metallic brush or vacuum cleaner.
- Clean the **drip pan** above the compressor. Ice or frost deposits exceeding 3-5 mm increase energy consumption, so you need to remove them regularly. **Do not use sharp pointed objects, solvents or sprays during the cleaning or defrost process.**

After cleaning, switch the appliance back on and reload it.

Troubleshooting guide

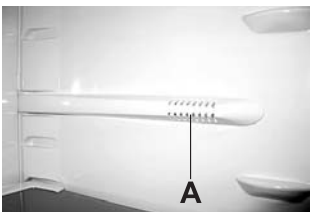Fault:	Cause/Remedy
The appliance does not operate after connection to the mains:	<ul style="list-style-type: none"> • Check if there is power to the socket, the fuse and if the appliance is switched on.
Cooling system operates continuously without intermittent stoppages:	<ul style="list-style-type: none"> • The rooms ambient temperature too high. • Frequent opening of the door/door open for too long. • Door not closed properly (a particle between the door gasket, sagged door, check gasket sealing, etc...). • An excessive quantity of fresh food inserted at once. • Check air circulation for sufficient cooling of the compressor, and clean the condenser. • Intensive freezing' or 'Intensive cooling' option is on.
Excessive ice formation at the rear interior wall of the refrigerator:	<ul style="list-style-type: none"> • Frequent opening of the door, door open too long. • Inserting hot food in the refrigerator. • Food or a dish is touching the rear interior panel of the refrigerator. • Bad door sealing; clean or replace the gasket if it is dirty or damaged.
Water dripping from the appliance:	<ul style="list-style-type: none"> • The drain outlet is clogged, so drain water drips past the collection groove. • Clean the clogged outlet using a plastic straw. For models fitted with the ZERO'N'FRESH drawer call the BAUMATIC service department.. • Thaw any thick ice deposits manually (see chapter Defrosting).
Sound alarm (refrigerator/freezer): 	<ul style="list-style-type: none"> • Frequent opening of the door, door open too long. • Door not closed properly (a particle between the door gasket, sagged door, damaged gasket, etc...). • Excessively long power failure. • An excessive quantity of fresh food inserted at once. • Refrigerator sensor (A) is crammed with fresh food. Free the sensor and allow air to circulate around it.

Fault:	Cause/Remedy
Difficulty opening the door	<ul style="list-style-type: none"> If you attempt to open the door immediately after it has been closed. You may experience resistance. This happens because a certain quantity of cold air escapes from the appliance through the open door and is replaced by warm ambient air. Cooling of such air creates negative pressure (a vacuum) and suction, which prevents easy opening of the door. The situation is normalised after 5-10 minutes, after which you can open the door with ease.
Bulb replacement: 	<ul style="list-style-type: none"> Before replacing the light bulb, disconnect the appliance from the power supply. Remove the plastic cover, replace the bulb with a new one (E14, same voltage as the factory one), fit back the cover. Don't forget: the old bulb does not belong to organic waste. The light bulb is not covered by the warranty.
Error code displayed:	<ul style="list-style-type: none"> If the character E1 appears on the digital display call the Baumatic Service Department.
Troubleshooting helpful hints:	<ul style="list-style-type: none"> If you are not able to fix a problem by any of the above tips, disconnect the power cord from the mains outlet, wait 10 minutes, and reconnect the appliance. In case trouble persists, contact the Baumatic Service Department, giving them the model and serial number of the appliance, this is written on the rating plate inside of the appliance.

Noise level

The refrigerator - freezer appliances are cooled by the refrigeration system with a compressor, whose operation will produce a certain noise level. The level of this noise depends upon the location, correct use and age of the appliance.

- **After starting the appliance**, the operation of the compressor (the refrigerant flow) may be somewhat louder. This does not mean that something is wrong with the appliance, neither has it any influence on the lifespan of the appliance. Gradually the noise will reduce and eventually subside.
- Sometimes the appliance produces **unusual and louder noises** which is rather unusual for the appliance. The noise is often the consequence of inadequate positioning of the appliance:
 - The appliance should be placed and leveled firmly on a solid base.
 - It should not touch the wall or adjacent kitchen units standing next to it.
 - Check whether the accessories in the interior of the appliance are placed correctly in their positions; also check the bottles, tins and other vessels that might touch each other and rattle.

THE MANUFACTURER RESERVES THE RIGHT TO ALTER THE SPECIFICATIONS WITH NO IMPACT TO THE FUNCTIONAL OPERATION OF THE APPLIANCE.

Baumatic Ltd. Conditions of Guarantee

Dear Customer,

Your new Baumatic appliance comes complete with a free 12 month guarantee covering both parts and labour costs resulting from defective materials or workmanship.

Baumatic also gives you the opportunity to automatically extend the guarantee period for a further 12 months at no extra cost, giving an initial guarantee period of 24 months. The extended guarantee period applies to England, Scotland, Wales and Northern Ireland only.

To qualify for your full 24 months guarantee you **must** register your appliance within 28 days of purchase to be covered under this guarantee. This can be done online via: www.baumatic.co.uk or through returning the guarantee card which can be found in each new Baumatic appliance.

* In addition, your appliance is covered by a 5 year parts warranty. Baumatic Ltd will provide free of charge the parts required to repair the appliance, only if they are fitted by a Baumatic engineer, for any defect that arises due to faulty materials or workmanship within a period of 5 years from the original purchase date.

* An additional 1 to 3 year insurance scheme for labour is available should you wish to extend the warranty period.

Should any person other than an authorised representative of Baumatic Ltd interfere with the appliance, the policy is negated and Baumatic Ltd will be under no further liability.

The guarantee covers the appliance for normal domestic use only, unless otherwise stated.

Any claims made under the terms of the guarantee must be supported by the original invoice/bill of sale issued at the time of purchase.

This guarantee is transferable only with the written consent of Baumatic Ltd.

If the appliance fails and is considered either not repairable or uneconomical to repair during the manufacturer warranty period, a free of charge replacement will not be offered.

The guarantee for any replacement will only be for the remainder of the guarantee on the original product purchased.

The guarantee does not cover:

- Sinks and taps
- Failure to comply with the manufacturers instructions for use.
- The replacement of cosmetic components of accessories
- Accidental damage or wilful abuse.
- Subsequent loss or damage owing to the failure of the appliance or electrical supply
- Incorrect installation
- Losses caused by Acts of God, civil war, failure to obtain spare parts, strikes or lockouts
- Filters, fuses, light bulbs, external hoses, damage to bodywork, paintwork, plastic items, covers, baskets, trays, shelves, burner bases, burner caps, decals, corrosion, rubber seals.

In the course of the work carried out it may be necessary to remove the appliance from it operating position. Whilst all reasonable care will be taken, Baumatic Ltd cannot accept responsibility for damage sustained to any property whatsoever in this process.

This guarantee is in addition to and does not diminish your statutory or legal rights.

Contacting Baumatic Ltd

Sales	Service	Spares	Technical/Advice
TEL: 0118 933 6900	TEL: 0118 933 6911	TEL: 0118 933 6922	0118 933 6933
FAX: 0118 931 0035	FAX: 0118 986 9124	FAX: 0118 933 6942	0118 933 6942

For ROI (Republic of Ireland), please contact one of the numbers below:

TEL: 01 – 6266798 FAX: 01 - 6266634

Thanks you for buying Baumatic.

* Applies to UK, Scotland, Wales & Northern Ireland only (Republic of Ireland has 1 year labour & 1 year parts warranty only)

Baumatic Ltd

Make-up for your kitchen

Headquarters

Baumatic Ltd.
Baumatic Buildings,
6 Bennet Road,
Reading,
Berkshire
RG2 0QX, United Kingdom

Sales Telephone
+44 118 933 6900

Sales Fax
+44 118 931 0035

Service Telephone
+44 118 933 6911

Service Fax
+44 118 986 9124

Spares Telephone
+44 118 933 6922

 
Technical / Advice Telephone
+44 118 933 6933

E-mail:

sales@baumatic.co.uk

technical@baumatic.co.uk

Http (Internet site):
www.baumatic.com





Baumatic®

www.baumatic.com