


BF337
FRIDGE-FREEZER

Instruction manual

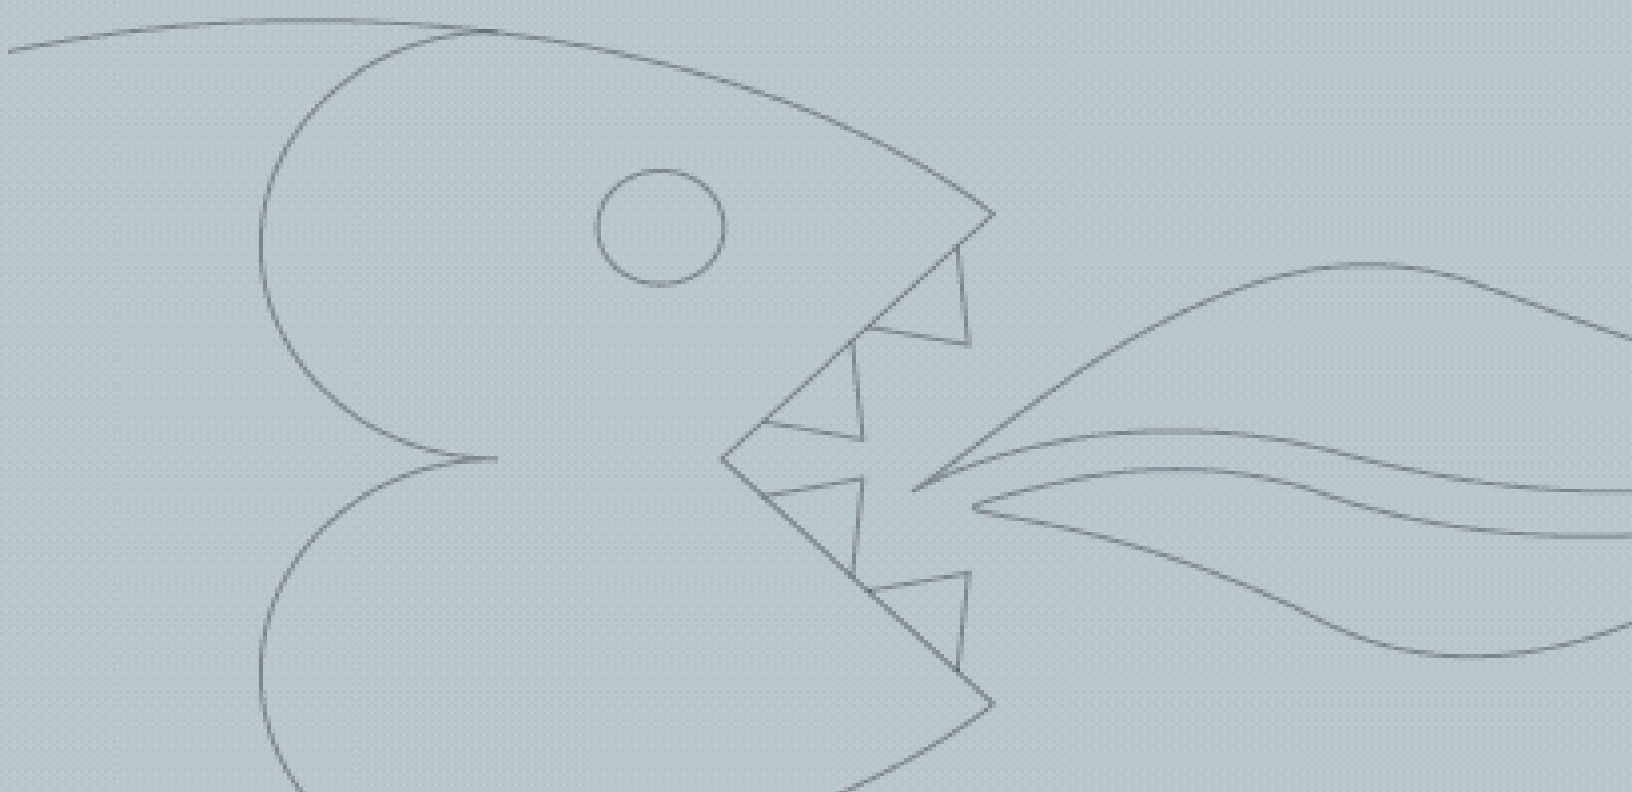

User Manual for your
BF337
FRIDGE-FREEZER



NOTE: This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference.

CONTENTS

YOUR FRIDGE-FREEZER'S SPECIFICATIONS	3
---	----------

SAFETY INFORMATION / ENVIRONMENTAL NOTE ..	4
---	----------

USING YOUR FRIDGE-FREEZER.....	5-12
---------------------------------------	-------------

YOUR BF337 FRIDGE-FREEZER.....	5
BEFORE USING YOUR FRIDGE-FREEZER.....	6
USING YOUR FRIDGE-FREEZER.....	7-8
ARRANGING FOOD	9-10
NOTES ON USING YOUR APPLIANCE	11
CLEANING AND MAINTENANCE.....	12

INSTALLING YOUR FRIDGE-FREEZER.....	13
--	-----------

HOW TO REVERSE THE DOOR SWING	15-18
--	--------------

<i>TROUBLESHOOTING</i>	<i>19</i>
-------------------------------------	------------------

CONDITIONS OF GUARANTEE.....	20
-------------------------------------	-----------

CONTACT DETAILS.....	21
-----------------------------	-----------

Specifications of your BF337 Fridge-freezer

Congratulations on purchasing a Baumatic BF337 Fridge-Freezer!

Your Fridge-Freezer has:

- ***Gross capacity: 337 litres***
- ***Net capacity (fridge / freezer): 208/97 litres***
- ***Energy efficiency class: A***
- ***Star rating: *******
- ***Frost Free fridge & freezer***
- ***Mark resistant coating***
- ***Fast freeze switch***
- ***3 Safety glass shelves***
- ***2 Salad Crispers***
- ***Butter compartment***
- ***Bottle rack***
- ***4 Freezer drawers***
- ***Reversible doors***

Dimensions mm (H x W x D)
1869 x 600 x 636

To fully enjoy using your appliance long into the future, please firstly familiarise yourself with the specifications, safety advice and operational instructions included in this manual.

NOTE:

When you install your Fridge-Freezer, it is important to bear in mind its climatic rating.

In order to find out the climatic rating of your appliance, check the data rating tag inside your refrigerator. It indicates the ambient temperature range within which your appliance will function.

Important Safety Information: Please Read this before installing & using.

ELECTRICAL SAFETY

 The appliance complies with Directives 89/368/EEC, 73/23/EEC and following changes.

- **NOTE** - This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance of electrical current. You will be able to tell if it is because a non-grounded appliance will give off an electrical discharge. **Manufacturer declines all responsibility for any damage due to non-grounding of appliance.**
 - DURING THE GUARANTEE PERIOD ONLY BAUMATIC SERVICE ENGINEERS OR AN AUTHORISED AGENT OF BAUMATIC SHOULD CARRY OUT REPAIRS ON THIS UNIT.
 - DO NOT USE IF THE SUPPLY CORD IS DAMAGED. NEVER TAKE RISKS WITH FIRE!
- **ENSURE YOU CONNECT THIS APPLIANCE TO A SUPPLY RATED AT 220-240V (or 200-230V) and 50HZ.**
- **NOTE:** the supporting structure is constructed in panels of treated sheet steel, electrostatically enamelled to resist ill-treatment and to give long-lasting beauty and shine.

 Do not attempt to alter the specifications of this appliance. Doing so could damage the machine, cause injury & invalidate your warranty. **DO NOT USE ADAPTERS/SHUNTS.**

 Do not allow children to play with, near or inside this Fridge-Freezer.

 Do not pull on the power supply cable to free the plug from the wall!

 Do not attempt to use your Fridge-Freezer outdoors or any place where it is likely to come into contact with the elements.

 Do not pull out or insert the plug with wet hands.

 Before any cleaning or maintenance work, ensure that the appliance has been disconnected from the power supply.

 Never allow the back coils of the Fridge-freezer to come into contact with any wall surface. **ALWAYS ENSURE THAT THE SPACE INTO WHICH YOU ARE PLACING YOUR APPLIANCE IS FREE OF STORED ITEMS SUCH AS PAPERS OR OTHER FLAMMABLE MATERIALS.**

 **NEVER** block the VENTILATION OPENINGS OF THE APPLIANCE EITHER INSIDE OR ON ITS EXTERIOR. IT IS VITAL TO KEEP YOUR FRIDGE-FREEZER WELL VENTILATED SO THAT THERE IS PROPER AIR FLOW BETWEEN THE BOTTOM OF THE UNIT AND THE PLINTH / KICK PLATE ON WHICH IT IS SITTING.

 **WARNING – DO NOT DAMAGE THE REFRIGERANT CIRCUIT. AT THE END OF THE FUNCTIONAL LIFE OF THE EQUIPMENT (WHICH USES COOLING GAS R600a [ISOBUTANE]) AND INFLAMMABLE GAS INSIDE THE INSULATING FOAM, IT MUST BE PLACED IN SAFETY BEFORE SENDING IT FOR PROPER WASTE DISPOSAL.**

PLEASE OBSERVE ALL INSTALLATION ADVICE IN THIS MANUAL FOR SAFE USAGE OF YOUR APPLIANCE.


Note: Before discarding an old refrigerator/freezer, switch off and disconnect it from the power supply. Cut off and render any plug useless. Ensure that the door cannot jam (removing it is best), regardless of whether or not it can be pushed open from inside. **AN OLD FRIDGE/FREEZER CAN BE A DEADLY PLAYTHING FOR CHILDREN!**

CONFORMITY TO W.E.E.E. DIRECTIVE

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.


Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

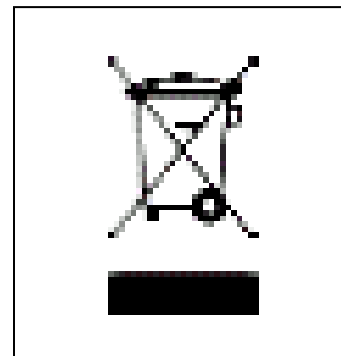

Using your Baumatic BF337 FRIDGE-FREEZER:

Your BF337 Fridge-Freezer:

Key:

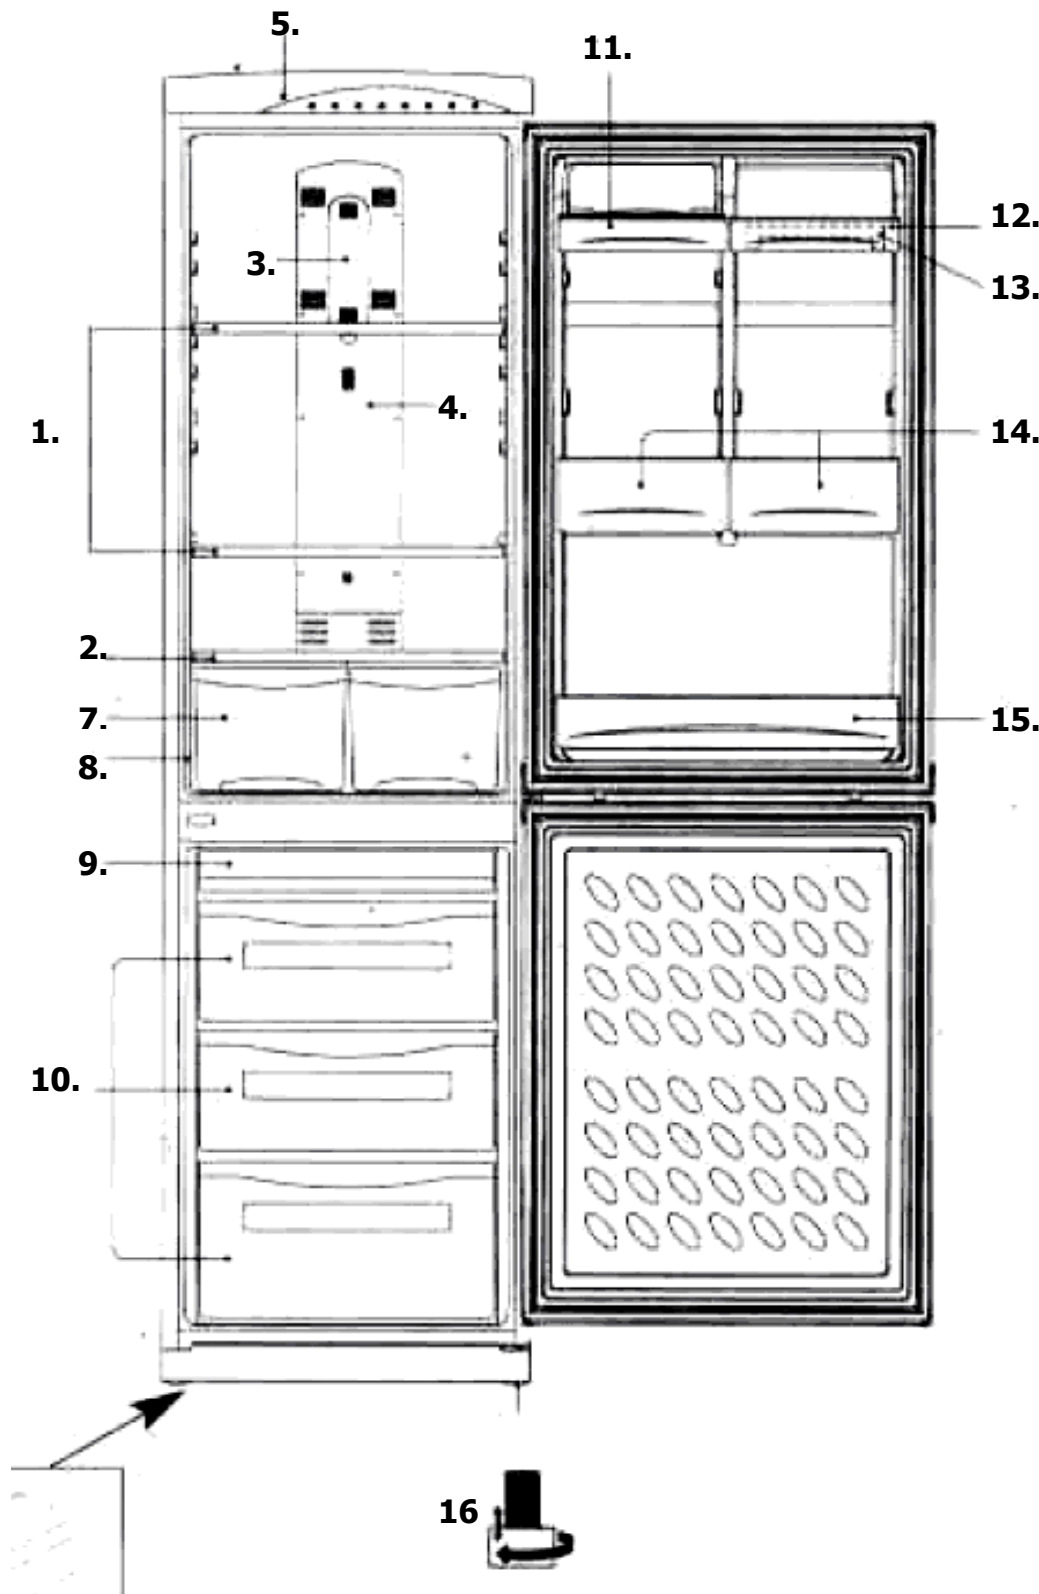

1) Shelves - *these can be removed for better space adjustment.*

2) Crisper Box Cover - *helps you keep your fruit & vegetables crispy.*

3) Interior Refrigerator Light.

4) Multi Airflow Duct - Vent

5) Control & Display Panel

6) (Not Available)

7) Crisper Boxes

8) Rating Plate

9) Ice Cube Tray

10) Case for Storing & Freezing

11) Butter tray

12) Egg Section

13) Egg Holder

14) Small Bottle Rack

15) Large Bottle Rack

16) Adjustable Foot

UPON DELIVERY:

When your Fridge-Freezer has been delivered, you will need to wait approximately **3 hours** before turning it on. The fluid of the compressor installed in the appliance will need time to settle. **PLEASE DO NOT PLUG IN ANY EARLIER THAN THIS!**

.....
NOTE:

THERE CAN BE AN ODOUR WHEN YOU FIRST SWITCH ON THE APPLIANCE. IT WILL VANISH WHEN THE UNIT STARTS COOLING.

We recommend that you have the Fridge-Freezer delivered near to where you plan to install it so that this fluid can settle.

SITUATING YOUR FRIDGE-FREEZER

CAUTION: DO NOT PLACE THE APPLIANCE NEAR HEAT SOURCES AND LEAVE AT LEAST 5CM OF SPACE ABOVE THE UPPER SECTION.

FOR FULL INSTALLATION ADVICE, PLEASE SEE PAGE 13


MAKE A NOTE OF THE LOCATION FOR YOUR NEW FRIDGE-FREEZER. MAKE SURE THAT IT WILL FIT PROPERLY SO THAT:

- 1) The doors can open freely and completely.**
- 2) You can access your food conveniently.**
- 3) There is sufficient space at the back for the cooling coils to give off heat safely & that they do not touch the plug (see SAFETY SECTION).**

NOTE: You can reverse the swing of the door to customise the unit to your location. Please see page 14 for details.

Turning on your Baumatic BF337 FRIDGE-FREEZER:

PLEASE FAMILIARISE YOURSELF WITH THE DISPLAY PANEL AT THE TOP OF THE UNIT (ILLUSTRATED BELOW).

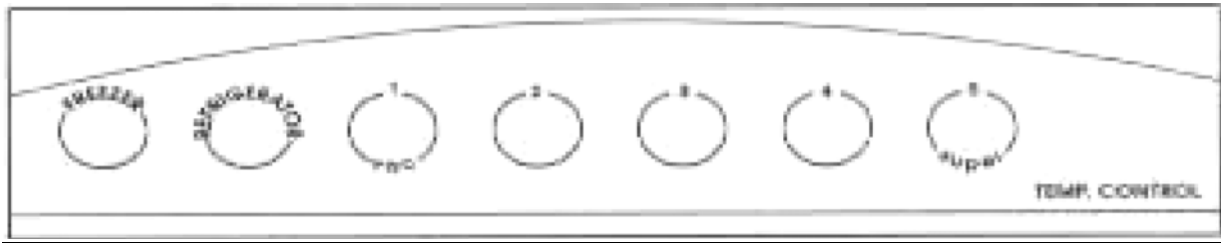

KEY (from left in above figure)

BUTTONS

- **FREEZER** – Press this button to turn the Freezer ON and OFF
- **REFRIGERATOR** – Press this button to turn the Fridge ON and OFF
- **1 - VAC** – Press this button when you are away from home for a long period. This will keep your Fridge at a temperature of 7 ° C. It will keep your freezer at a temperature of -16° C. This will switch your appliance to energy saving mode.
- **2 - LOW** – Press this button to make the freezer and the refrigerator compartments **warmer** than the position 'MID'. This will keep your fridge at a temperature of 5°C and your freezer at a temperature of -18° C.
- **3 - MID** – Press this button to make the compartments stay at a normal temperature. This will keep your fridge at a temperature of 3 ° C and your freezer at -20°C.
- **4 - HIGH** – Press this button to make the compartments in both your fridge and freezer **colder** than position 'MID'. This will keep your fridge at a temperature of 1° C and your freezer at a temperature of -22°C.
- **5 - SUPER** – Press this button to make your fridge-freezer enter superfreeze mode. This will charge the compartments with a constant, powerful supply of cold air. It will keep your fridge at a temperature of 0°C and your freezer at a temperature of -23°C.

YOU SWITCH ON YOUR APPLIANCE by PLUGGING IT IN and then PRESSING THE 'FREEZER' and 'REFRIGERATOR' buttons.

You can then set the temperature range you want by pressing one of the functions buttons: 'VAC', 'LOW', 'MED', 'HIGH' OR 'SUPER'. Your fridge-freezer's thermostat automatically regulates the inside temperature of the compartments. By pressing the buttons to the right of 'Low', colder temperatures can be achieved.

Notes on using your Baumatic BF337 FRIDGE-FREEZER:

IMPORTANT NOTE: Both your fridge and freezer are FROST FREE. This means that you will never have to defrost either your refrigerator or your freezer.

 
Your appliance will prevent frost from forming anywhere in the appliance.

Do not expose the interior of the appliance to excessive amounts of humidity.

REMINDER: Allow the unit time to settle after delivery. If your plug and power socket are now behind the fridge and you still need to move the unit into place, be especially careful: ***Remember to leave a safe distance between the back of the fridge and the wall.***

You switch your Fridge-Freezer **OFF** by pressing the 'refrigerator' and 'freezer' buttons again to power them down. You can also disconnect the appliance from the mains supply.

NOTE: When you first switch on the appliance, allow 24 hours for it to cool down to the desired temperature. During this time, **DO NOT** open the door often or place a lot of food inside the unit.



WARNING! If the appliance is switched off then switched back on again after a short period, the compressor will start up again after approximately half-an-hour. ***This is part of the normal operation of the appliance.***

ARRANGING FOOD IN YOUR FRIDGE-FREEZER

Refrigerator Compartment:

- *To reduce humidity and the consequent increase of frost, NEVER place liquids in unsealed containers in the refrigerator. Frost tends to concentrate in the coldest parts of the evaporator. In time, the unit will need more frequent defrosting if too much humidity develops inside it.*
- *NEVER place warm food inside the refrigerator. Warm food must be allowed to cool at room temperature. It should then be arranged to ensure adequate air circulation in the refrigerator compartment.*
- *DO NOT ALLOW anything to touch the refrigerator's back wall as it will cause frost. Also, packaging, especially paper, can stick to it and spoil.*
- *DO NOT open the refrigerator door too often or leave it open for long spells of time.*
- *ARRANGE meat and cleaned fish (wrapped in packages or sheets of plastic) which you will then use within 1-2 days.*
- *You can put fruits and vegetables into the crisper without packing them.*

REMINDER: *You should regulate the temperature of your Fridge-Freezer bearing the following in mind:*

- **Ambient temperature**
- **How often the doors are opened and closed**
- **Quantity of food stored in the compartments**

ARRANGING FOOD IN YOUR FRIDGE-FREEZER

Freezer Compartment

-
 - Your freezer's chief function is to allow you to store deep-frozen or frozen foods for long periods of time, and to make ice cubes.
 - DO NOT put warm food into the freezer.
 - DO NOT put fresh or warmish food with frozen food side-by-side as the former can thaw the latter and cause spoilage.
 - While freezing fresh food (meat, fish, mincemeat, etc.), divide into bagged parts so you can access them separately.
 - The instructions shown on frozen food packages should always be carefully followed. If no information is provided, food should not be stored for more than 3 months from the purchase date.
 - When buying frozen food, ensure that these have been frozen at suitable temperatures and that the packaging is intact and not sodden. Store your frozen goods in your freezer as soon as possible after purchase.
 - If a package of frozen food shows signs of swelling or wet marks, it is probable that the food had previously been poorly stored and has now deteriorated. Discard it.

- The Storage life of frozen food depends on the room temperature, thermostat setting, how often the door is opened, the type of food and how long it has taken to get the food from the store to your freezer. Always follow the printed packaging instructions and never exceed the maximum storage life indicated.
- Use the fast freezing shelf (the middle drawer of the freezer) to freeze home cooking.

NOTES ON USING YOUR FRIDGE-FREEZER

- **ALWAYS Cover and wrap foods, especially if they are PUNGENT.**


MAKING ICE CUBES:



- **Fill each of the ice cube containers' cells $\frac{3}{4}$ full with water.**
- **Place the container in the ice tray compartment shelf.**

NOTE: Be careful where you store your appliance. For example, your refrigerator will experience performance difficulties if it is kept in a place whose temperature dips below the set temperature of the refrigerator.

Also be careful to keep the air vents on the rear inside wall of the refrigerator open.

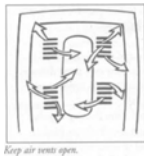

IN CASE OF A BLACKOUT (GENERAL POWER FAILURE)

In case of Power Failure, find out how long the electricity will be off. If the failure is not going to be for any longer than 12 hours, leave the food in the freezer and keep the door closed.

If the POWER FAILURE is going to last longer than 12 hours and some food defrosts, consume the latter as soon as possible.

LONG ABSENCES (vacations, etc.): In the case of long absences, the appliance must be switched to the 'VAC' mode. If the absence is going to be for a very long time, you should consider turning your appliance off, emptying it out completely, drying it and leaving the

CLEANING / MAINTENANCE


NOTE: Before attempting to clean your Fridge-Freezer, UNPLUG IT and make sure you do the following:

- ✓ Remove the baskets and the ice-cube tray.
- ✓ Leave the door open.
- ✓ In order to collect water deposits, take out the bottom drawer and soak up the water using a sponge.
- ✓ Clean the inside of your Fridge-Freezer using a solution of soda bicarbonate in warm water (1 tablespoon Bicarbonate to 2 litres of water).
- ✓ Clean the condenser (back of unit) with a broom once a year.

NEVER USE SOLVENTS TO CLEAN THE INSIDE OF YOUR FRIDGE-FREEZER.

MAINTENANCE THE ONLY MAINTENANCE YOUR FRIDGE-FREEZER REQUIRES IS THE REPLACEMENT OF THE INTERNAL BULB. REMEMBER TO UNPLUG YOUR APPLIANCE FIRST

Replacing the Refrigerator Light Bulb

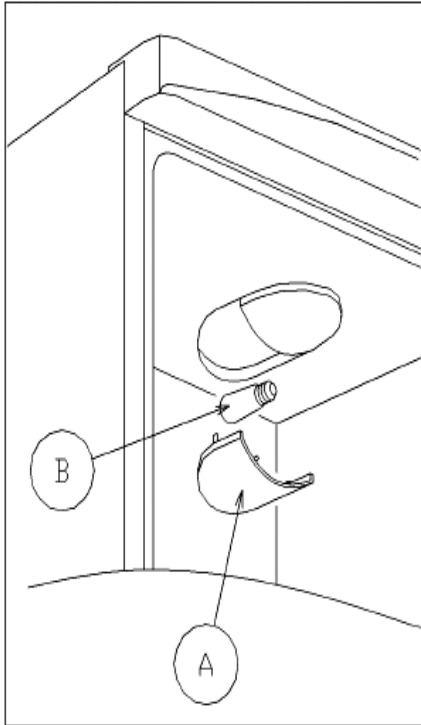


1. Unplug the unit from the power supply,
2. Remove the refrigerator light cover (A) by pressing the hooks placed both sides of the cover.
3. Change the present light bulb (B) with a new one (not more than 15 W).
4. Place the light cover in its place and plug the unit.

INSTALLATION INSTRUCTIONS – BF337 FRIDGE-FREEZER:

- 1) Allow for adequate space and install your fridge-freezer on a firm, level floor. This is very important as the appliance must be level so that there will be no unnatural noises or poor cooling.
- 2) Ensure that you are going to be placing your fridge-freezer away from heat sources and in a well-ventilated position. This should be at least 50 cm from radiators, gas or coal stoves and 5 cm away from electric stoves. Do not place the appliance in the path of direct sunlight.
- 3) Make sure that the plug is accessible after positioning your fridge-freezer.
- 4) Keep a space of 15cm above your fridge freezer.

- 5) Fit the plastic wall spacers to the condenser at the back of the refrigerator. This will maintain good performance.

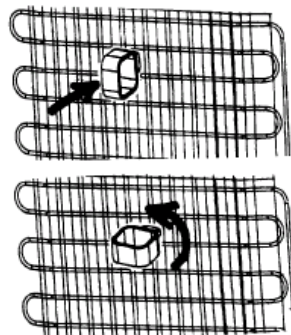

- 6) If placing beside another refrigerator or freezer, keep at least 2cm between the units to prevent condensation.
- 7) Gently move the appliance into place or, in the case of installing in a unit, into its housing.
- 8) Your fridge-freezer has adjustable feet so you will be able to level it to the surface on which you want to install it. Simply turn each foot to either raise or lower it.



INSTALLATION-AMBIENT TEMPERATURE GUIDELINES

YOU MUST install this appliance in well ventilated, dry room.

Energy use is affected by the ambient temperature.

You are therefore advised to:

- Not expose the appliance to direct sunlight;
- Not install the appliance next to radiators, cookers or other sources of heat;
- Only install the appliance at a location whose ambient temperature corresponds to the climate classification, for which the appliance is designed.

The climate classification can be found on the data rating tag, which is located at the left on the inside of the appliance.

Cooling Temperature Ranges

Climate Classification	Recommended Ambient Temp.
SN	+10 to +32° C
N	+16 to +32° C
ST	+18 to +38°C
T	+18 to +43°C


If the appliance is installed next to another refrigerator or freezer a clearance of 5 cm at the side is required. This is to prevent the formation of condensation on the outside of the appliance.

REVERSING THE DOOR OPENING (swing of the door):

REMINDER: make sure that there is sufficient space behind the cooling coils at the back of your Fridge-Freezer.

IMPORTANT: Before carrying out this work...

Lay or lean the Fridge-Freezer on its back side, taking care not to damage or break the condenser or back coils. Make sure there are no sharp or hard objects on the floor upon which you will lie the appliance down.

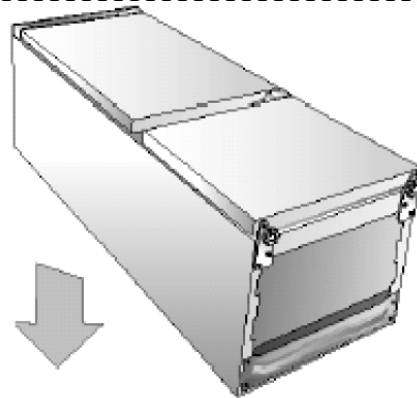


NOTE: YOU MUST DISASSEMBLE THE FRIDGE DOORS IN THE FOLLOWING SEQUENCE:

BOTTOM DOOR FIRST THEN TOP DOOR.

(Note: the lettered parts refer to following diagrams):


- 1) Remove the plinth³⁾ beneath the bottom door by gently pulling on it. Keep it near to hand.
- 2) Using a flat-head screwdriver, unscrew the pin 'P' (pictured in the diagram at right) from its surrounding lower hinge assembly. Lift it out of its socket ('D') and keep it safe.

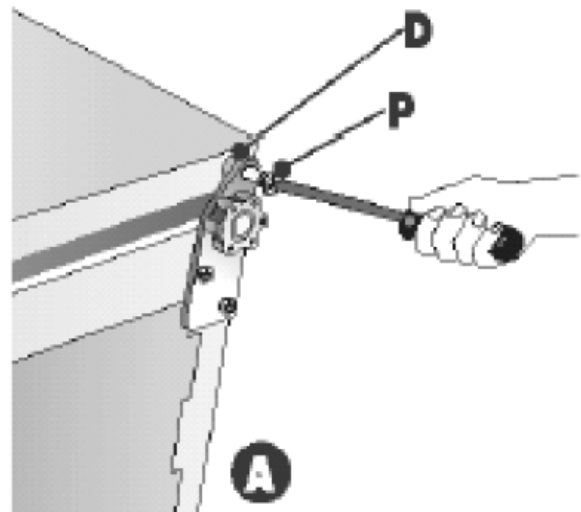

REVERSING THE DOOR OPENING (swing of the door):


- 3) Using a star-head screwdriver, remove the remainder of the hinge assembly from around where the pin had been.

- 4) Remove the lower door by gently sliding it out (see picture 'B') – see diagram at right.

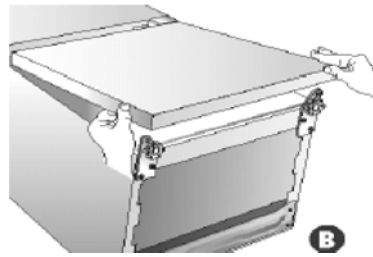


- 5) Using a small flat-head screwdriver, prise the covering caps from the socket holes of the other side of the fridge's lower side.

- 6) Now look at the middle hinge section (to which the top of the bottom door had been connected). Slide off the hinge cover 'H'.

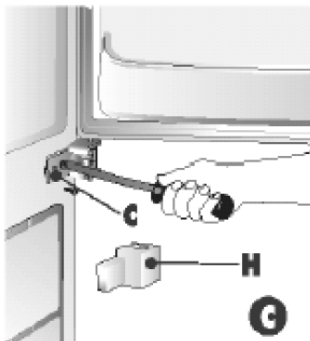

- 7) Disassemble the middle hinge 'C' using a star-head screwdriver and remove the middle hinge altogether, keeping it in a safe place nearby.

- 8) Carefully slide the top door free from its top hinge pin ('K'), remove the hinging accessory from its bottom edge and replace it on the opposite side with the other hinging accessory that is provided in the plastic bag.

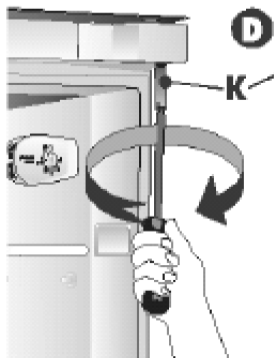

- 9) Using a flat-head screwdriver, disassemble the upper pin 'K'.


REVERSING THE DOOR OPENING (swing of the door):

- 10) Using a star-headed screwdriver, disassemble the remainder of the top hinge assembly and keep it safely nearby. **NOTE** – you will need to disturb the top console panel as you do this.

TO REATTACH THE DOORS – Note that you must start with the top door and proceed to the bottom door.

- 11) Lifting the top console panel, and using a small flat-head screwdriver, remove the plugs covering the holes on the other side of the fridge's top doorway.
- 12) Screw the hinge assembly back in, noting that the position must be the reverse of its former position on the other side of the doorway.


- 13) Once you have reattached the washer to the pin, attach the pin 'K' to the hinge assembly, noting that its position must be such that it will make an exact contact with the hinge socket ('D' in picture on page 14)

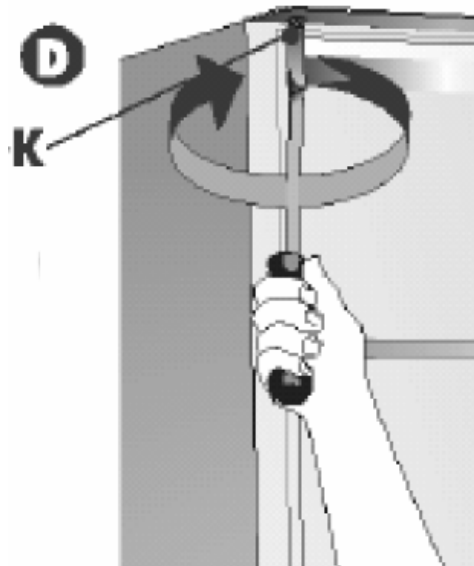

- 14) Take the hinge socket out of the former opening side of the door's top ridge. Insert this in the hole on the other side of the top ridge of the door.
- 15) Reattach the upper door, being careful not to let it hang loosely. Get someone else to hold the door if you can. It is advisable to have it wide open while performing this step.

REVERSING THE DOOR OPENING (swing of the door):

- 16) **Look at the middle section where the middle hinge will go and gently remove the two filler caps. Note that the holes contain insulation foam which can be bored into easily.**
- 17) **Take the top door's bottom hinge socket from the former opening side of the door. Replace it in the hinge hole on the other side.**
- 18) **Invert the middle hinge and carefully latch the top pin into the bottom socket of the top door.**
- 19) **Now attach the middle hinge assembly. Ensure that the top door can open and close properly and levelly before you move to the next step.**

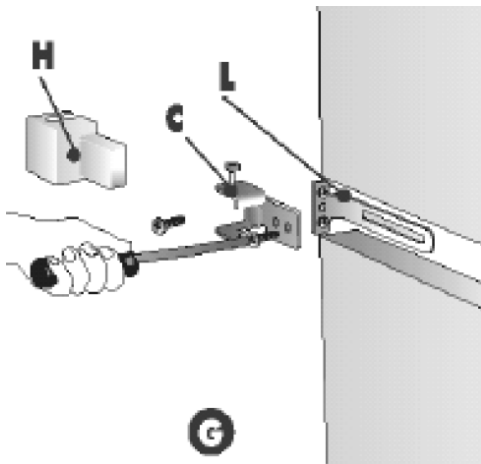

- 20) **Reassemble the hinge 'C' and the support 'L' on the left hand side. The hinge cover 'H' must be remounted at the end of the installation.**
- 21) **Reverse the position of the hinge sockets at the top and the bottom of the bottom door (as you had done with the top door).**
- 22) **Remount the lower door. If you can, have someone else hold it so it goes back on straight and ensure that the top pin fits into its socket properly.**
- 23) **Reattach the bottom hinge, making sure that the pin fits into its socket properly and it has a washer.**
- 24) **Ensure all hole covering caps are replaced.**

NOTE – TEST THE OPENING AND CLOSING OF BOTH DOORS

Troubleshooting

Trace a problem using the table below instead of having to call for help.

PROBLEM	WHAT TO DO
YOUR FRIDGE-FREEZER DOES NOT APPEAR TO BE WORKING / OPERATION LAMP'S ARE OFF WHEN THEY SHOULD BE ON / FOOD HAS DEFROSTED WITHOUT YOUR KNOWLEDGE / NO APPARENT POWER	CHECK THAT THE PLUG IS WELL-INSERTED INTO THE POWER SOCKET
	THAT THERE IS POWER FROM THE MAINS – THERE MAY BE A BLACKOUT OR YOUR FUSES MAY HAVE BLOWN.
	THAT THE ELECTRONIC THERMOSTAT (REGULATOR FOUND ON THE INSIDE WALL OF THE FRIDGE-FREEZER NEAR THE TOP) IS IN THE RECOMMENDED FUNCTIONING POSITION AND NOT '0' (OFF).
	THAT THE SOCKET IS SUFFICIENT AND NO ADAPTER OR EXTENSION LEADS HAVE BEEN USED.
	THAT THE POWER SUPPLY VOLTAGE CORRESPONDS TO THE APPLIANCE.
YOUR FRIDGE-FREEZER APPEARS TO BE PERFORMING POORLY	YOU HAVE OVERLOADED THE APPLIANCE. TAKE OUT AND CONSUME FOOD; LOOK FOR OUT-OF-DATE FOOD THAT CAN BE DISPOSED OF.
	THE THERMOSTAT SETTING IS SET TO '1'. SET IT HIGHER.
	ENSURE THAT THE DOOR HAS BEEN CLOSED PROPERLY. FOR INSTANCE, THERE MAY BE A PROBLEM INSIDE THE UNIT, KEEPING THE DOOR OPEN OR ANOTHER FAULT, SUCH AS BROKEN OR MISSING DOOR SEAL.
	ENSURE THAT THERE IS NO DUST ON THE CONDENSER.
	ENSURE THAT THERE IS ENOUGH ROOM AT THE REAR AND OF THE UNIT/
THERE IS A NOISE	THE COOLING GAS WHICH CIRCULATES MAY MAKE A SLIGHT NOISE (BUBBLING SOUND) EVEN WHEN THE COMPRESSOR IS NOT RUNNING. THIS IS NORMAL. IF THESE SOUNDS CHANGE, ENSURE:
	YOUR UNIT IS WELL LEVELLED / NOTHING IS TOUCHING THE REAR OF THE UNIT / NO MATERIAL ON THE APPLIANCE IS VIBRATING.
<i>IMPORTANT</i> – MAKE SURE THAT THERE IS ADEQUATE AIR FLOW FOR YOUR FRIDGE-FREEZER. PARTICULAR AREAS TO WATCH INCLUDE THE SPACE BETWEEN THE FEET. KEEPING THESE AREAS WITH ADEQUATE AIR-CIRCULATION WILL PREVENT YOUR FRIDGE FREEZER FROM EXPERIENCING PROBLEMS.	

BAUMATIC LTD. -CONDITIONS OF GUARANTEE.

Dear Customer,

The conditions of guarantee which apply to your Baumatic appliance are as follows: This product is guaranteed for 12 months from the date of original purchase. Baumatic Ltd will repair any defect that arises due to faulty materials or workmanship free of charge during this period.

*In addition, your appliance is covered by a 5 year parts warranty. Baumatic Ltd will provide free of charge the parts required to repair the appliance, only if they are fitted by a Baumatic engineer, for any defect that arises due to faulty materials or workmanship within a period of 5 years from the original purchase date.

*An additional and annually renewable insurance scheme for labour is available should you wish to extend the warranty period.

Should any person other than an authorised representative of Baumatic Ltd interfere with the appliance, the policy is negated and Baumatic Ltd will be under no further liability.

The guarantee covers the appliance for normal domestic use only, unless otherwise stated.

Any claims made under the terms of the guarantee must be supported by the original invoice/bill of sale issued at the time of purchase.

This guarantee is transferable only with the written consent of Baumatic Ltd.

If the appliance fails and is considered either not repairable or uneconomical to repair between twelve months and five years from purchase date, a free of charge replacement will not be offered.

The guarantee for any replacement will only be for the remainder of the guarantee on the original product purchased.

This guarantee does not cover:

x Sinks and taps

X Failure to comply with the manufacturer's instructions for use.

X The replacement of cosmetic components or accessories.

X Accidental damage or wilful abuse.

X Subsequent loss or damage owing to the failure of the appliance or electrical supply.

X Incorrect installation.

X Losses caused by Acts of God, civil war, failure to obtain spare parts, strikes or lockouts.

X Filters, fuses, light bulbs, external hoses, damage to bodywork, paintwork, plastic items, covers, baskets, trays, shelves, burner bases, burner caps, decals, corrosion, rubber seals..

In the course of the work carried out it may be necessary to remove the appliance from its operating position. Whilst all reasonable care will be taken, Baumatic Ltd cannot accept responsibility for damage sustained to any property whatsoever in this process.

This guarantee is in addition to and does not diminish your statutory or legal rights.

Contacting Baumatic.

SALES

TEL: 0118 933 6900

FAX: 0118 931 0035

SERVICE

TEL: 0118 933 6911

FAX: 0118 986 9124

SPARES

TEL: 0118 933 6922

FAX: 0118 933 6942

TECHNICAL / ADVICE

TEL: 0118 9336933

FAX: 0118 9336942

For mainland UK and Northern Ireland, please contact one of the above numbers for further information or any other query you may have.

For ROI (Republic of Ireland), please contact one the numbers below:

TEL: 01 - 6266798 FAX: 01 - 6266634

Thank you for buying Baumatic.

*Applies to UK, Scotland, Wales & Northern Ireland only. (Republic of Ireland has 1 year labour and 1 year parts warranty only) .

Baumatic Ltd

Make-up for your kitchen

Headquarters

Baumatic Ltd.
Baumatic Buildings,
6 Bennet Road,
Reading,
Berkshire
RG2 0QX, United Kingdom

Sales Telephone
+44 118 933 6900

Sales Fax
+44 118 931 0035

Service Telephone
+44 118 933 6911

Service Fax
+44 118 986 9124

Spares Telephone
+44 118 933 6922

Technical / Advice Telephone
+44 118 933 6933

E-mail:

sales@baumatic.co.uk

technical@baumatic.co.uk

Http (Internet site):
www.baumatic.com

Baumatic UK/cod. 1230000666

NOTE YOUR APPLIANCE DETAILS HERE:

DATE _____

DEALER:

ADDRESS:

SERIAL NUMBER:

