

Setting Instructions:

BE SURE TO SET THE DATE AND DAY FIRST, THEN SET THE TIME.

Your clock has a day/date function that changes automatically between 12 o'clock midnight and 6am.

**Note: - On short months it will be necessary to manually reset the date
I.e. 28th Feb. to the 1st March.**

It is important to make sure the clock changes during the night. To do this, simply move the hands using the 'Hand Set Knob' clockwise, until the day/date begins to change.

Once it starts to change move the hands forward to show the first 7 o'clock position you come to. You now know your clock is showing 7am.

1. Now set the day and date using the day and date plates (fig.1.) as desired.
2. Turn the hand to the current time; using the hand set knob (fig.1) remembering it is showing 7.00am.
3. Fix a suitable hook or screw in the desired location of the clock.
4. Insert '1' R6 (AA) type battery in to the battery compartment according to the positive (+) and the negative (-) symbols.
5. Hang the clock vertically on the wall.

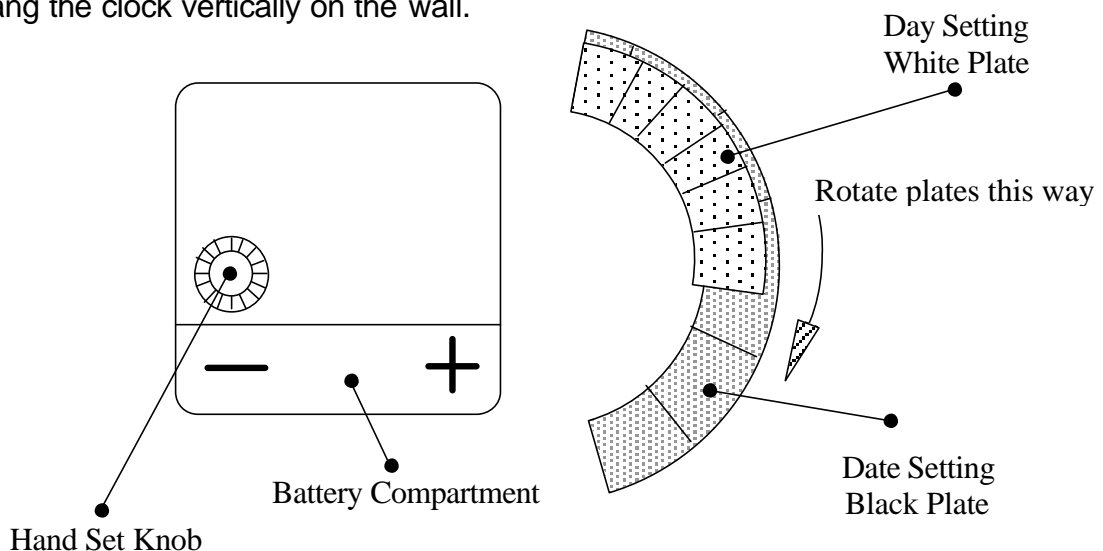


Fig.1.