

QUICK START GUIDE PAGE 2 TESTING AND OUTDOOR SENSOR INSTALLATION

Please follow the Instructions below carefully & test the sensors before installing outdoors.

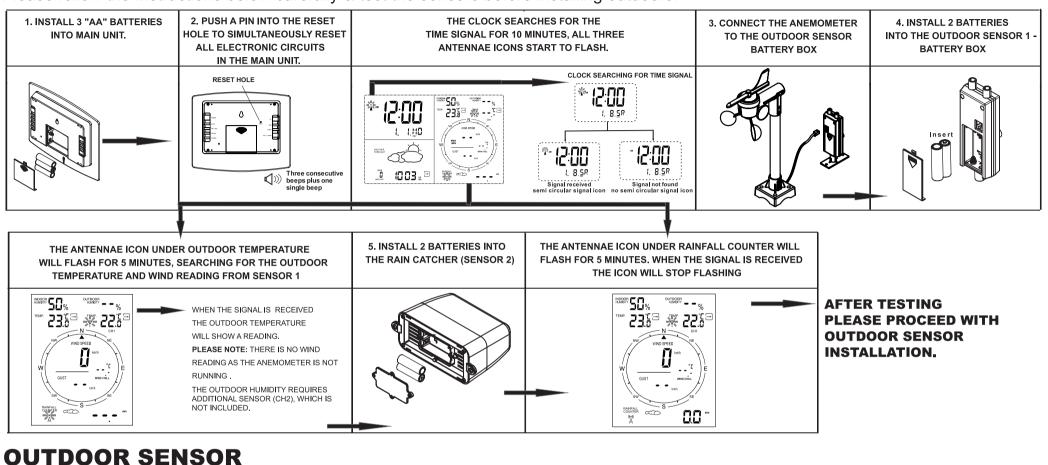

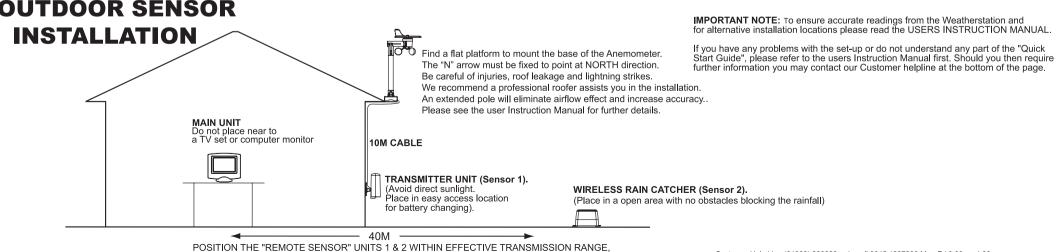

40 METERS FROM THE MAIN UNIT WITHOUT ANY OBSTACLE.