

Figure 1: INF-MFB

The INF-MFB is a keyfob transmitter designed for use with the infinite alarm system.

Registration

To register the INF-MFB:

- Set the receiver to Registration mode.
- Press one of the buttons, making sure that the LED lights up when the button is pressed.
- 3. Press the same button again to complete the registration process.

Note: Alternatively, the INF-MFB can be registered to the receiver by manually entering the transmitter's serial number.

Battery Replacement

If the LED blinks during transmissions, this indicates that the batteries are low and need replacing.

To replace the batteries:

- Insert a small screwdriver into the pry-off slot see Figure 2. Carefully twist the screwdriver to separate the front and back of the casing.
- Observing correct polarity, replace the batteries. 2.
- Close the casing making sure that the front and back click shut.



Figure 2: Opening the Casing

Technical Specifications

Antenna: Built-in whip

Frequency: 868.35, 433.92 or 418MHz FM Power: 2 x 3V Lithium Battery, Size CR1225

Current Consumption:

16mA (transmission), 2μA (standby)

RFI Immunity: 40V/m

Operating Temperature: 0 - 60°C Dimensions: 62 x 42 x 15mm

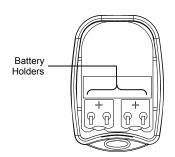


Figure 3: INF-MFB Rear View (Casing Open)



ESP- Electronics Line UK

Unit 7, Leviss Trading Estate, Station Road, Stechford, Birmingham B33 9AE.

IF YOU REQUIRE FURTHER ASSISTANCE PLEASE CALL OUR HELPLINE 0121 786 1881, SEND A FAX 0121 789 8055

Tel: (44-121) 789-8111, Fax: (44-121) 789-8055 OR AN EMAIL VIA OUR WEBSITE www.espuk.com





