


D667 Benton
8V 2A
10-16V 2A
(USA/Canada)

Beldrukker
 Tryk
 Tryckknapp
 Pulsante
 Botões
 Painike
 夜間表示灯

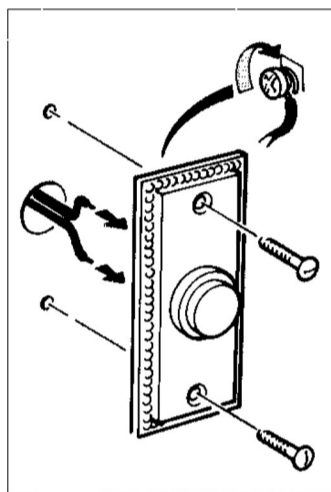

400-540/1

Remove the lamp from this push if using with a battery powered chime.

Enlever l'ampoule de ce bouton-poussoir en cas d'utilisation avec un carillon alimenté par piles.

Entfernen sie die Lampe dieses Tasters wenn sie einen Gong mit Batterien betreiben.

Quitar la bombilla del pulsador si lo utiliza con un carillon a pilas.

 


recyclable pack 86% recycled card

Made in England by Friedland
 © Friedland
 © Friedland 1992



5 004100 411952



89/336/EEC