

# **EH1794** 2.5KW Oil Filled Radiator with 24 Hour Timer



**User Manual** Please Retain for Future Reference

This Product is Only Suitable for Well Insulated Spaces or Occasional Use

### **IMPORTANT**

### Installer and Users please note:

These instructions should be read carefully and left with the user of the product for future reference.

### **BEFORE USE**

You must inspect the appliance including its cable and plug for any signs of damage. If the product is damaged, **DO NOT** use it, and contact your supplier immediately.

### **PRODUCT SAFETY**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

• Do not cover. This symbol shown on the casing of the heater means that the heater should not be covered. For indoor use only.

- Do not use in bathrooms, wet rooms or other damp locations.
- Do not use this product with an extension lead
- Not intended for use in Boats, Caravans or other similar locations.
- Please allow for a 50 cm safe area around the top and sides
- Do not place the mains lead beneath a carpet or rug.
- Please ensure the heater is not positioned below a socket outlet.
- Do not use the heater in locations where paint, petrol or other flammable liquids are used or stored..
- Please ensure the heater is switched off and unplug when not in use, also keep unpluged before assembly or disassembling parts.
- Do not use the heater for other than its intended use.
- Do no insert any object into the heater through the grilles. This may damage the heater or result in overheating or electric shock.
- Check the product regularly including the mains lead for damage. If any damage is detected stop using it immediately and consult your supplier.
- Only use this product on a flat, stable surface.
- Do not leave this product unattended when in use.
- For domestic use
- There are no user serviceable parts in this product
- Allow to cool down before moving

### **INSTALLATION OF FEET**

Before attempting to fit the feet turn the appliance upside down and place on a flat firm surface. Holding the product securely fit the bar containing the castors to the underside of the product and fix in place using the wing nuts provided. Make sure the feet are secure before turning over.



### **OPERATION**

Plug the mains lead into a 13Amp socket and switch the product on at the mains. Using the two power switches on the side of the product select the required operation.

- 1. Make sure the selector switch is switched to position I see (Timer section below) for manually on
- **2.** Both switches off = Off
- **3.** Left switch on right switch off = Low heat
- **4.** Left switch off right switch on = Medium heat
- 5. Both switches on= High Heat

This product is also fitted with an adjustable thermostat. After selecting the required heating setting turn the thermostat clockwise until it reaches its furthest point. Allow the room to heat up to the required temperature and then rotate the thermostat anti-clockwise until you hear the heater click off. Leaving the thermostat in this position will maintain the temperature at this level.

Please note that in very large room or draughty rooms the product might be insufficient to reach the required temperature.



### **HEATER MODE BUTTON**

0 = Off (this will switch the heater off even when not being used with the timer. Clock=Timer Mode I = On manual

TIMER INSTRUCTIONS

1) Set the mode button to timer

2) Set the time by rotating the outer dial until the current time is in line with the pointer arrow

3).The timer is controlled by moving the plastic segments in and out from the centre. Each segment is equal to 15 minutes. Moving the segment out (away from the centre) will switch the unit on and towards the centre will turn the product off

### PAT TESTING

When used in a workplace, this product should be safety-tested yearly by a qualified electrician (PAT Tested). We recommend that it is PAT tested regularly when used in a domestic environment.

### **GENERAL SAFETY REQUIREMENTS**

Domestic wiring must be tested periodically by a qualified electrician at least once every 10 years or at every change of occupancy.

For office and retail premises, and buildings such as village halls, the wiring must be inspected at least once every 5 years.

It is recommended that all buildings be fitted with smoke alarms (it is mandatory for new buildings).

### **OPERATING COSTS**

At time of going to press, the average cost of electricity is £0.145 per unit (kilowatt-hour). The amount you are being charged will be shown on your electricity bill.

At this cost, the EH0154 will cost £0.29 per hour to run with the thermostat set to its maximum.

If the thermostat is used to regulate the temperature the operating costs will be lower, depending on the room temperature.

### MAINTENANCE

Before cleaning, turn the heater off, and disconnect from the mains supply. The heater may then be cleaned using a damp cloth with a drop of washing-up liquid to remove any dust or dirt from the case. Do no use stronger detergents or solvents as these may damage the plastic.

Using a dry 1" (25 mm) paint-brush, remove any dust from the grilles.

If the mains lead is damaged, it must be replaced by the manufacturer or an authorised service centre.



If the mains plug needs to be replaced, proceed as follows:

- Connect the brown wire to the terminal labelled "L".
- Connect the blue wire to the terminal labelled "N".
- Make sure that the cord-grip is positioned correctly (over the outer sheath of the cable) and it fully tightened.

## **DISPOSAL AND RECYCLING**

You must not dispose of this appliance with domestic household waste.

Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user.

When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

### **TECHNICAL SPECIFICATION**

Dimensions:	240×240×120mm
Weight:	10.5 g
Power supply:	230V ~
Power consumption:	2.kW

### **SERVICE WARRANTY**

Prem-i-Air guarantees the product free from defects in materials and workmanship for a period of two years.

Should this unit be operated under conditions other than those recommended, at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our Help Desk on (0845) 459 4816.

Prem-i-Air Appliances Ltd., Lancots Lane, Sutton, St. Helens, Merseyside, WA9 3EX

Website: www.prem-i-air.com

