

Service & Warranty

- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- For your convenience, record the complete Model/Type Number (located on the Product Identification Plate) and the date you received the product below, and attach your purchase receipt docket as proof of purchase.
- To ensure your product is covered by warranty, the complete faulty product together with your purchase receipt should be returned to your retailer.

ONE (1) YEAR LIMITED WARRANTY SAVE THIS WARRANTY INFORMATION

EHS (International) Ltd. guarantees this product free from defects in materials and workmanship for a period of one (1) year.

Should this unit be operated under conditions other than those recommended or at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, this will render **WARRANTY VOID**. The product you buy may sometimes differ slightly from illustration.

Should you have a problem with this product, please contact to our service desk, Tel: (0870) 742 5021



EHS, Manchester M17 1RN



FAN FORCED HEATER MODEL HT2007



**THANK YOU FOR CHOOSING THIS EHS
PRODUCT. BEFORE USING IT, PLEASE
READ THIS INSTRUCTION MANUAL**

A. Important Safety Instructions

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

WARNING – This appliance is intended for domestic use only. Any other use is not recommended by the manufacturer and may cause fire, electrical shocks or other injury to persons or property.

When using electrical appliances, basic safety precautions should always be followed:

1. This heater is hot when in use. To avoid burns **DO NOT** touch the air outlet grills during use. If provided, use handles when moving this heater.
2. **DO NOT** direct the heater towards curtains furniture or other flammable objects and ensure that they are at least 3 feet (0.9m) from the front and 1 foot (0.3m) away from the sides and rear.
3. Extreme care should be taken when any heater is used by, or near children and the elderly, and whenever the heater is left operating and unattended.
4. Before operating the heater remove the unit from its packaging and check it is in good condition.
5. **DO NOT** operate any heater with a damaged cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner. Return the heater to an authorised service facility for examination and repair.
6. **DO NOT** attempt to repair or adjust any electrical or mechanical functions on this unit as this may void warranty.
7. **DO NOT** let children play with the packaging, for example plastic bags.
8. Check the household voltage to ensure it matches the appliance's rated specification.
9. **DO NOT** sit the fan heater on soft surfaces, like a bed, where openings may become blocked. **DO NOT** cover.
10. Always unplug the heater when not in use. To disconnect heater, turn switches to **OFF** position (O) and remove plug from the power socket. When unplugging pull the plug and not the cord.
11. This heater is not intended for use in wet or damp locations. Never locate the heater where it may fall into a bathtub or other water container. **DO NOT** use in bathrooms or outdoors. When not in use always store in a dry area.
12. **DO NOT** run power cord under carpeting, or cover with rugs or runners. Arrange the cord away from areas where it may be tripped over.

13. Avoid the use of an extension cable as this may overheat and cause a fire.
14. **DO NOT** insert or allow objects to enter any ventilation or exhaust opening as this may damage the heater and could cause an electrical shock or fire.
15. **DO NOT** use the heater in areas where gasoline, paint, or flammable liquids are used or stored.

B. BS Plug Wiring

Wiring Instructions: Should it be necessary to change the plug please note the wires in the mains lead are coloured in accordance with the following code:

 
BLUE - NEUTRAL
BROWN - LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

1. The **BLUE** wire is the **NEUTRAL** and must be connected to the terminal which is marked with the letter **N** or coloured **BLACK**.
2. The **BROWN** wire is the **LIVE** and must be connected to the terminal which is marked with the letter **L** or coloured **RED**.
4. Always ensure that the cord grip is positioned and fastened correctly.


If a **13A (BS 1363)** fused plug is used it must be fitted with a **13A** fuse. If in doubt consult a qualified electrician.

Wiring for a 13 Amp Plug (BS1363)

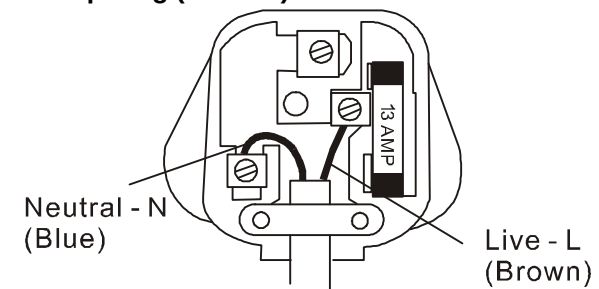

READ & SAVE THESE IMPORTANT INSTRUCTIONS

 C. Product Description

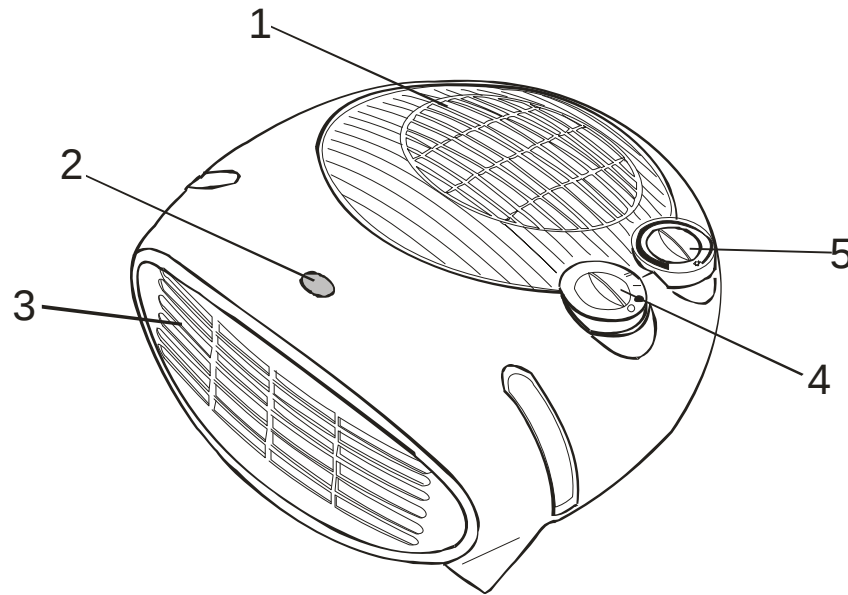

- | | |
|------------------------|--------------------|
| (1) Air Inlet | (2) Power On Light |
| (3) Air Outlet | (4) Control Switch |
| (5) Thermostat Control | |

 
D. Pre-Operation Instructions

1. Carefully remove your heater from the box (please save the carton for off-season storage).
2. Before plugging the heater into the power socket, ensure the unit is in the **OFF** (O) position.
3. Place the heater on a firm level surface.
4. Avoid overloading your circuit by not using other high wattage appliances in the same power socket.

E. Operation

CONTROL SWITCH

The fan heater incorporates a rotation switch. You can select the different settings by turning the switch clockwise to:

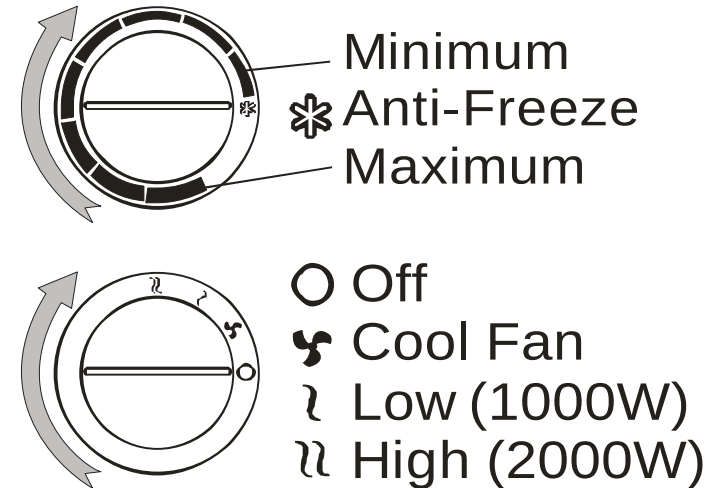

1. Plug the supply cord into a convenient power socket.
2. For heater operation, please turn the Thermostat knob in a clockwise direction to the maximum position.
3. Turn the Control Switch to the desired heat setting.
4. For fan-only option, without any heat output, turn the Control Knob to the cool fan setting.

CAUTION: AIR OUTLET GRILL BECOMES HOT WHEN HEATER IS SWITCHED ON.

THERMOSTAT

When the appliance is switched on:

1. Before setting the thermostat turn the thermostat knob in a clockwise direction to the maximum position.
2. Once the room has reached the desired temperature, turn the thermostat knob slowly in an anti-clockwise direction until the fan heater stops. The temperature is now set. The power indicator light will switch off.

3. The heater will automatically maintain the set temperature and switch on when the room temperature is low and switch off if it is too high. The red indicator light indicates the heater is switched on.
4. It is normal for the heater to turn **ON** and **OFF** as it maintains the pre-set temperature, to prevent this you need to change the thermostat setting.

ANTIFREEZE FUNCTION – Turn the unit on and put the thermostat on the antifreeze position. When the ambient temperature drops to 0° C, this function will maintain the room temperature at about 5° C.

F. Wall Mounting

This heater is wall mountable. Please read following instructions:

1. The heater must be securely fitted to the wall, which must be 10cm minimum thickness and 60cm above floor level.
2. Position the installation template sheet in the place where you wish to wall mount your heater, and drill 3 holes, as indicated on the diagram below. (Fig 1)

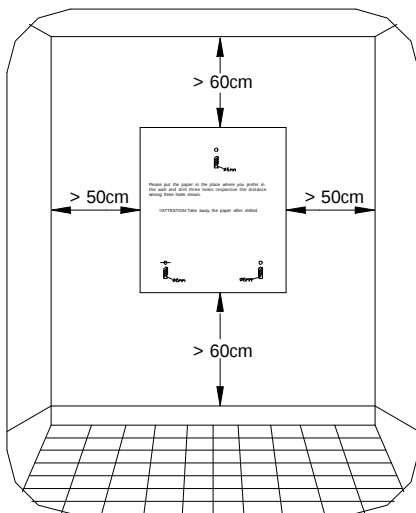 


Fig. 1

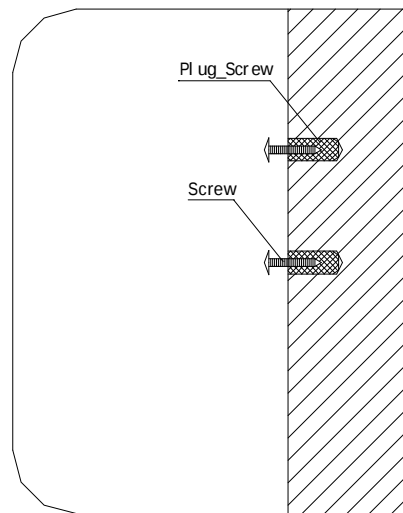 


Fig. 2

3. Remove the template sheet before mounting the heater.
4. Insert wall (screw) plugs into the three holes and fasten the three screws into the holes. (Fig. 2)

5. Turn heater **OFF** and unplug before mounting onto the wall.
6. Hang the heater (air outlet face down) onto the screws through the mounting holes in the base. (Fig. 3)
7. Slide the heater to the right along hanging slot than slide it down to mount securely. (Fig. 4)

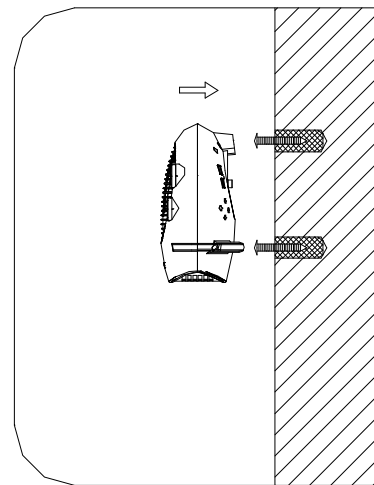 


Fig. 3

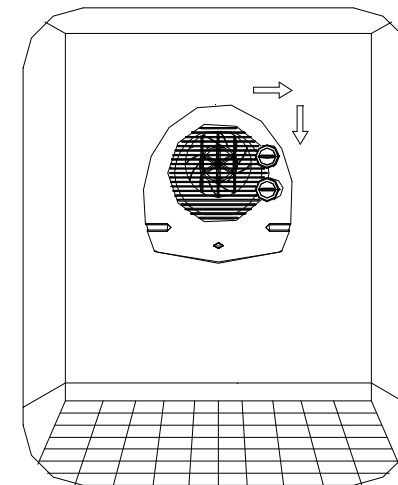 


Fig. 4

WARNING: Ensure heater is securely mounted on the wall before plugging in.

G. Safety Overheat Shut Off

A thermal overload protector is built into the heater to prevent overheating. When a potential overheat temperature is reached the heater will automatically shut off and the power indicator light will go out. If this occurs inspect and remove any objects on or adjacent to the heater that may have caused a high temperature. The unit needs to be reset to start.

RESET THE HEATER

1. Turn the Control Setting to the **OFF** (O) position
2. Unplug the heater and wait 5-10 minutes for the unit to cool down.
3. After 5-10 minutes, plug the unit in again and operate normally.

If the fault reoccurs remove the plug from the socket and have the unit service by authorised service engineers.

H. Specification

Voltage : 230-240V~ 50Hz
Power : 2000W
Weight : 1.37kg
Dimensions : 27 (L) x 25 (W) x 14 (H) cm



I. Maintenance

1. Before you clean the unit turn the switch to **OFF** (O), disconnect the plug from the power socket and wait for it to cool down.
2. **DO NOT** use detergents, abrasive cleaning liquids or other chemicals (alcohol, gasoline, etc.) to clean the unit.
3. Wipe the exterior surfaces of the heater occasionally with a damp cloth (not wet), using a solution of mild detergent and water. Dry the case thoroughly before operating the heater.
4. Light accumulated dust may be removed from air outlet grilles with a soft cloth or vacuum cleaner.
5. The fan motor is factory lubricated for life and will require no further lubrication.
6. Store heater in a clean dry place when not in use. Remember portable electric heaters are designed for spot heating or as a supplemental heat source. They are not intended to be main sources of heat during the normal heating season.

CAUTION: DO NOT allow water to run into the interior of the heater as this could cause an electrical shock or fire.