

in sink erator **EMERSON**

FOOD WASTE DISPOSER INSTALLATION AND USE MANUAL
English, Chinese, Arabic (UK, Hong Kong, Ireland, and Saudi Arabia)

www.inSinkErator.com 220-240V, 50-60Hz
©2019 InSinkErator, a business unit of
Emerson Electric Co. All Rights Reserved.
for UK/Hong Kong/Ireland/Saudi Arabia

FOOD WASTE DISPOSER INSTALLATION AND USE MANUAL

Food waste disposers can provide an environmentally responsible alternative to transporting food waste to landfills. And they can help reduce greenhouse gas emissions by recycling food waste. Additionally, capable wastewater treatment plants can process food waste into fertilizer. (Check the plant in your area.)

Read through the entire installation manual before installing the disposer. Determine which of the tools, materials, and accessories you will need before you begin. Make sure you have all necessary disposer parts before installing the disposer.

NOTE: The Evolution models grind much finer than any other disposer. For this reason you may notice that it takes a little longer to dispose of some food waste. This is completely normal.

NOTE: Make sure that the installation of this appliance is allowed by the authorities.

TOOLS & MATERIALS YOU WILL NEED:
Phillips Screwdriver, Adjustable Wrench, Safety Glasses.
TOOLS, MATERIALS AND ACCESSORIES YOU MAY NEED: 3/8" Socket Wrench, Drain Auger, 3.5 mm Electrical Clamp, 38 mm Drain Trap, 33 mm Hole Drill, Hammer, Hack Saw, Water Hose Clamp, Pipe Wrench, Copper Earth Wire, Dishwasher Drain Connector Kit, Electrical Outlet Switch, Drain Tube Extension.

PARTS LIST (May vary depending on model)

| DISPOSER | DISCHARGE ASSEMBLY #1 (Evolution models) | DISCHARGE ASSEMBLY #2 (Evolution models) | AIR SWITCH (Evolution models) |
|-----------------------------|--|--|-------------------------------|
| 1. Strainer Basket and Plug | 1. Mounting Bracket, Model 66 | 1. Elbow Discharge Tube | 1. Model 66 A/S |
| 2. Rubber Gasket | 2. Mounting Bracket, Model 66 | 2. Elbow Discharge Tube | 2. Model 46 A/S |
| 3. Lower Mounting Ring | 3. Lower Mounting Ring | 3. Lower Mounting Ring | 3. Lower Mounting Ring |
| 4. Upper Mounting Ring | 4. Upper Mounting Ring | 4. Upper Mounting Ring | 4. Upper Mounting Ring |
| 5. Discharge Cap | 5. Discharge Cap | 5. Discharge Cap | 5. Discharge Cap |
| 6. Discharge Tube | 6. Discharge Tube | 6. Discharge Tube | 6. Discharge Tube |
| 7. Rubber Gasket | 7. Rubber Gasket | 7. Rubber Gasket | 7. Rubber Gasket |
| 8. Air Switch | 8. Air Switch | 8. Air Switch | 8. Air Switch |
| 9. Screws | 9. Screws | 9. Screws | 9. Screws |

WARNING Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION Caution indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE Notice is used to address practices not related to personal injury.

食物垃圾處理器安裝和使用手冊

食物垃圾處理器可為戶內食物垃圾提供環保處理途徑... 食物垃圾處理器可以幫助減少溫室氣體排放...

安裝前請讀取所有安全資訊

- 警告** 警告：如果某種情形有危險，如果不避免，會造成人員死亡或重大人身傷害。
- 注意** 注意：如果某種情形有危險，如果不避免，可能造成輕微或使人人身傷害。

www.inSinkErator.com 220-240V, 50-60Hz
©2019 InSinkErator, a business unit of Emerson Electric Co. All Rights Reserved.

1. CHECK INSTALLATION DIMENSIONS

2. DISCONNECT AND CLEAN SINK DRAIN

3. REMOVE EXISTING DISPOSER

4. DISASSEMBLE OLD DISPOSER MOUNTING ASSEMBLY

5. ATTACH UPPER MOUNTING ASSEMBLY TO SINK

6. DISASSEMBLE OLD DISPOSER MOUNTING ASSEMBLY

1. DISPOSER HEIGHT: Distance from bottom of sink bowl to centerline of discharge outlet. (Add 12 mm when stainless steel sink is used.)

2. DISTANCE FROM CENTERLINE OF DISCHARGE OUTLET TO END OF DISCHARGE TUBE: Distance from disposer vertical centerline to centerline of trap connection. This property drain and prevent standing water in the disposer, the waste pipe entering the drain must be level with the disposer discharge outlet.

3. CHECK INSTALLATION DIMENSIONS: Disposer height, Distance from bottom of sink bowl to centerline of discharge outlet, Distance from centerline of the discharge outlet to end of discharge tube, Disposer width.

4. DISCONNECT AND CLEAN SINK DRAIN: Disconnect the sink drain from the wall, clean the sink drain, and reattach the drain to the wall.

5. REMOVE EXISTING DISPOSER: Turn the disposer off, disconnect the power, and remove the disposer from the sink drain.

6. DISASSEMBLE OLD DISPOSER MOUNTING ASSEMBLY: Turn off the power, disconnect the power, and disassemble the old disposer mounting assembly.

7. ATTACH UPPER MOUNTING ASSEMBLY TO SINK: Attach the upper mounting assembly to the sink, ensuring it is level and secure.

8. DISASSEMBLE OLD DISPOSER MOUNTING ASSEMBLY: Turn off the power, disconnect the power, and disassemble the old disposer mounting assembly.

9. ATTACH DISCHARGE TUBE TO WASTE DRAIN PIPE: Attach the discharge tube to the waste drain pipe, ensuring it is level and secure.

10. CONNECT DISPOSER TO MOUNTING ASSEMBLY: Connect the disposer to the mounting assembly, ensuring it is level and secure.

11. ATTACH SPECIFICATION LABEL: Attach the specification label to the disposer.

12. CONNECT DISPOSER TO ELECTRICAL SUPPLY: Connect the disposer to the electrical supply, ensuring it is properly grounded.

1. 檢查安裝尺寸: 測量水槽高度、水槽碗底到排水口中心線距離、排水口中心線到排水管末端距離。

2. 取下現有食物垃圾處理器: 關閉電源，斷開排水管與牆壁的连接，拆卸現有食物垃圾處理器。

3. 取下現有食物垃圾處理器安裝組件: 關閉電源，拆卸舊安裝組件，清潔水槽排水口。

4. 將上下兩部分安裝到水槽上: 將安裝組件安裝到水槽上，確保安裝平穩。

5. 將新安裝組件安裝到水槽上: 將新安裝組件安裝到水槽上，確保安裝平穩。

6. 將食物垃圾處理器安裝到排水管上: 將食物垃圾處理器安裝到排水管上，確保安裝平穩。

EVOLUTION MODELS

66, 56, 46 MODELS, 560 SUPREME, E75

LC-50

DISCHARGE TUBE INSTALLATION (EVOLUTION MODELS): Place metal flange (F) over discharge tube (D) into Air-Wrator Tailpipe Mount. Secure with spring type hose clamp (H) (See Figure 7.1).

DISCHARGE TUBE INSTALLATION (MODEL 66, 56, 46, 560 SUPREME, E75): Place metal flange (F) over discharge tube (D) into rubber gasket (G) with mounting ring (I) to secure. Use metal flange and discharge tube to dispose with 25 mm (1 inch) bolts (J).

DISCHARGE TUBE INSTALLATION (LC-50): Place metal flange (F) over discharge tube (D) into rubber gasket (G) with mounting ring (I) to secure. Use metal flange and discharge tube to dispose with 25 mm (1 inch) bolts (J).

DISASSEMBLING THE DISPOSER: Turn off power, disconnect power, and disassemble the disposer from the sink drain.

DISCHARGE TUBE INSTALLATION (EVOLUTION MODELS): Place metal flange (F) over discharge tube (D) into Air-Wrator Tailpipe Mount. Secure with spring type hose clamp (H) (See Figure 7.1).

DISCHARGE TUBE INSTALLATION (MODEL 66, 56, 46, 560 SUPREME, E75): Place metal flange (F) over discharge tube (D) into rubber gasket (G) with mounting ring (I) to secure. Use metal flange and discharge tube to dispose with 25 mm (1 inch) bolts (J).

DISCHARGE TUBE INSTALLATION (LC-50): Place metal flange (F) over discharge tube (D) into rubber gasket (G) with mounting ring (I) to secure. Use metal flange and discharge tube to dispose with 25 mm (1 inch) bolts (J).

DISASSEMBLING THE DISPOSER: Turn off power, disconnect power, and disassemble the disposer from the sink drain.

MODEL XX - XX S/N XXXXXXXXXX

11. CONNECT DISPOSER TO ELECTRICAL SUPPLY: Connect the disposer to the electrical supply, ensuring it is properly grounded.

AIR SWITCH (EVOLUTION MODELS, MODEL 66, 56, 46 A/S, 560 SUPREME, E75): The Evolution Model 66, Model 56 and Model 46 A/S disposers include a built-in air switch. An air switch activator from the unit by sending a pulse of air to the control box.

AIR SWITCH INSTALLATION: 1. Make sure you have all necessary disposer parts before installing the disposer. 2. Remove the nut from the push button below, while keeping the stainless steel washer and rubber gasket in place. 3. Push one end of the PVC tubing onto the spout of the push button below. 4. Push the other end of the tube through the hole in the work top and through the nut underneath the work top. 5. Push the tubing into the hole and then thread the nut underneath the work top. 6. Push the air switch into the hole and then push the top of the air switch, which is located on the underside of the waste disposer. (See Figure 11.3.)

DISABLING THE AIR SWITCH: The air switch can be disabled if wall switch operation is preferred. The disposer is shipped with the air switch in the "off" position. 1. Push one end of the PVC tubing provided onto the spout of the push button below. (See Figure 11.3.) 2. Push the other end of the tube and firmly push up the spout of the air switch, which is located on the underside of the waste disposer. (See Figure 11.3.) 3. Depress the air switch one time until you hear the "click." Remove and discard the push button below and PVC tubing. The disposer may now be activated by a wall switch.

食物垃圾處理器安裝和使用手冊

食物垃圾處理器可為戶內食物垃圾提供環保處理途徑... 食物垃圾處理器可以幫助減少溫室氣體排放...

安裝前請讀取所有安全資訊

- 警告** 警告：如果某種情形有危險，如果不避免，會造成人員死亡或重大人身傷害。
- 注意** 注意：如果某種情形有危險，如果不避免，可能造成輕微或使人人身傷害。

www.inSinkErator.com 220-240V, 50-60Hz
©2019 InSinkErator, a business unit of Emerson Electric Co. All Rights Reserved.

MODEL XX - XX S/N XXXXXXXXXX

11. CONNECT DISPOSER TO ELECTRICAL SUPPLY: Connect the disposer to the electrical supply, ensuring it is properly grounded.

MODEL XX - XX S/N XXXXXXXXXX

11. CONNECT DISPOSER TO ELECTRICAL SUPPLY: Connect the disposer to the electrical supply, ensuring it is properly grounded.

MODEL XX - XX S/N XXXXXXXXXX

11. CONNECT DISPOSER TO ELECTRICAL SUPPLY: Connect the disposer to the electrical supply, ensuring it is properly grounded.

MODEL XX - XX S/N XXXXXXXXXX

11. CONNECT DISPOSER TO ELECTRICAL SUPPLY: Connect the disposer to the electrical supply, ensuring it is properly grounded.

