




Quick Reference Guide

Important: This is a 'quick start' guide, for further information and detail read the installer / user manual supplied with the product:

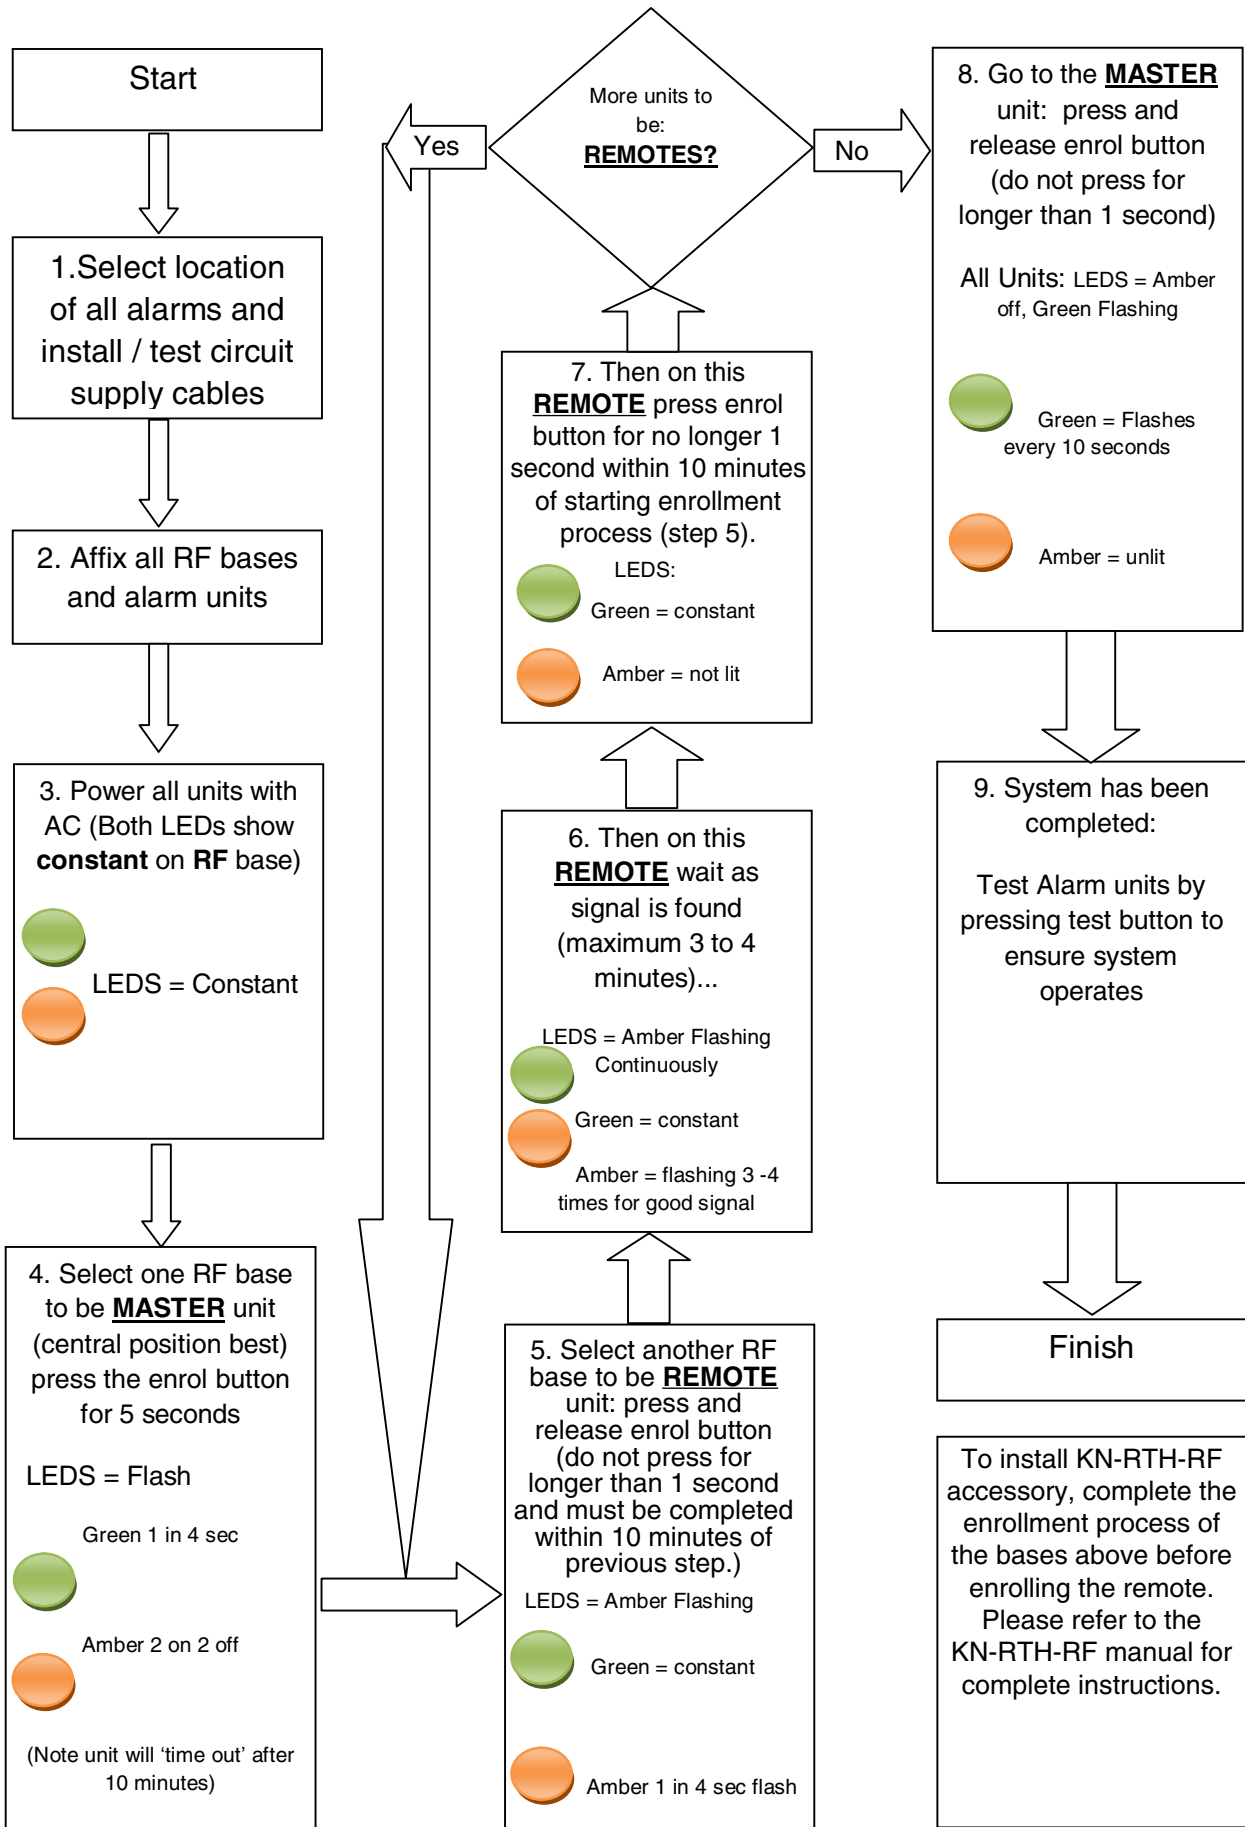

(Quick Start Guide Rear Page)

LED Settings (Status) Chart

	Green	Amber	Comment
Factory setting	On 	On 	Not enrolled in System
Enrol Mode	Blinking every 4 sec	2 seconds on every 4 seconds	Master unit enrolling Remotes
	On	2 seconds on every 4 seconds	Remote waiting
	Flashes	1-6 flashes every 4 seconds	Remote communicating
Normal Operation	Off 1 second every 10 seconds	Off	Master Unit
	Off 0.5 second every 10 seconds	Off	Remote Unit
Error modes – Remote unit	Off 0.5 second every 10 seconds	On	Has poor or no communication link with Master Unit
Error modes – Master Unit	Off 1 second every 10 seconds	0.5 seconds / 10 seconds	Poor or no communication with at least one remote unit
		On	Poor or no communication with (all) remote unit(s)

Kidde Safety Europe Ltd
 Mathisen Way
 Colnbrook
 SL3 0HB
 Telephone: 01753 685148
 www.smoke-alarms.co.uk