


LEDLITE™ LT10PIRCCT

Installation Sheet

6W/10W LED PIR Fire Rated Downlight

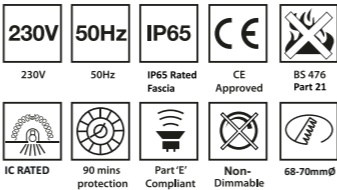

General Instructions

These instructions should be read carefully and retained after installation for further reference and maintenance.

Safety

Before carrying out any installation or maintenance, ensure the mains power to the luminaire is switched off, and either remove the circuit fuses or turn off the circuit breaker.

- Installation must be carried out by a qualified electrician.
- This luminaire must be installed in accordance with the current edition of the IEE Wiring Regulations and all relevant building regulations.
- Before installation, ensure that the total circuit load, including this luminaire, does not exceed the rated capacity of the circuit cable, fuse, or circuit breaker.

Installation

- Switch off the mains power before starting. Cut an appropriately sized hole in the ceiling according to the cut-out dimensions, ensuring the area is clear of electrical wiring, water/gas pipes, or ceiling joists (see Fig. 1).
- The downlight is IC Rated and suitable for use with insulation materials. No additional IC cage accessories are required.
- Wire the cable according to the wiring diagram shown in Fig. 2.
- Insert the driver into the ceiling hole (see Fig. 3) and connect the downlight to the driver using the supplied connectors (see Fig. 4).
- Install the downlight into the ceiling cut-out using the two spring clips provided (see Figs. 5 and 6).
- Restore the mains power and test the installation to ensure proper operation.

Fig. 1
Cut a 70mm diameter mounting hole in ceiling

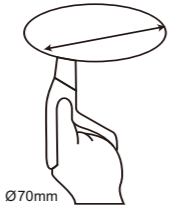


Fig. 2
Connect mains supply to driver

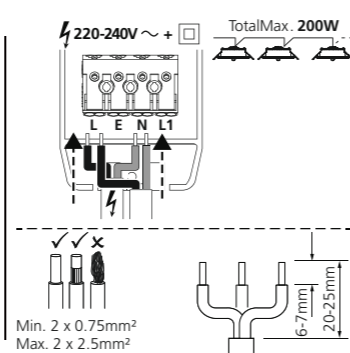
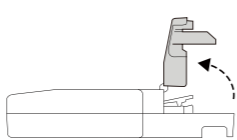


Fig. 3
Insert the driver into hole

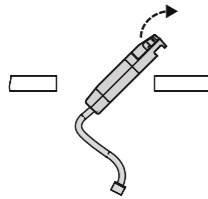


Fig. 4
Connect downlight to driver

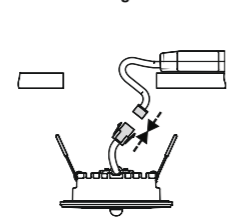


Fig. 5
Fold spring clips upwards and insert downlight into hole



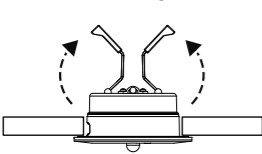


Fig. 6
Release spring clips to hold the downlight in place

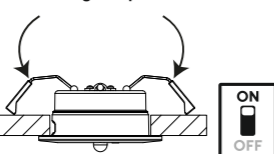


Exploded View:

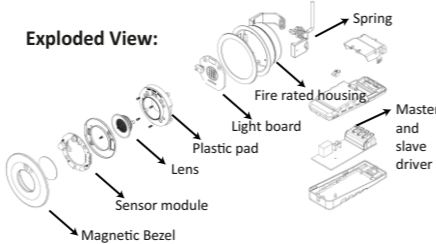


For further information visit www.tlc-direct.co.uk


PIR Sensor Detection:

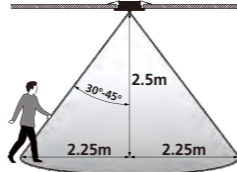

Master-Slave Function:

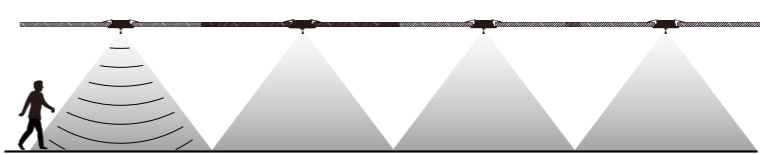


Master-slave Wiring Diagram:

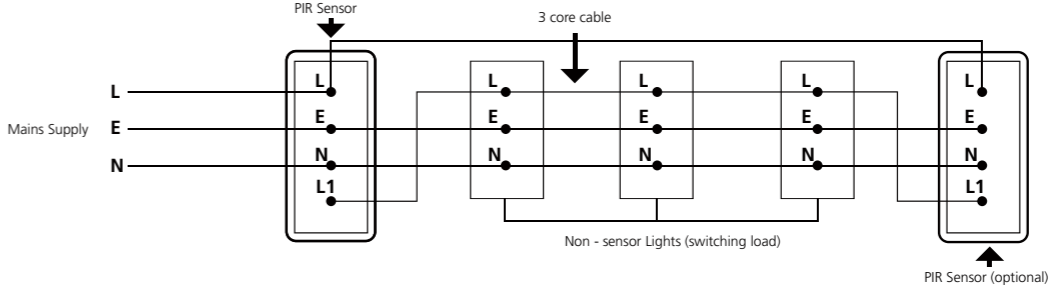


Colour Changing Function




The LT10PIRCCT is a 3 CCT switchable downlight. The colour temperature is adjustable from 3000k, 4000k to 6000k.

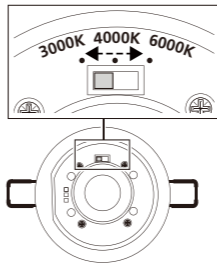

Power Switching Function

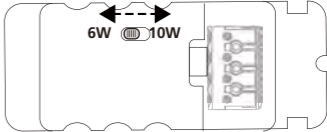

Dimensions (mm):

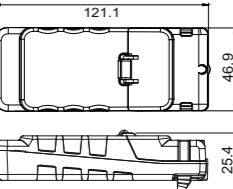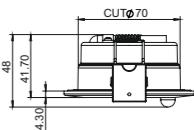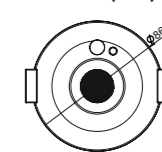

Sensor Setting

Please check the settings below for PIR sensor adjustments:

Hold Time				Sensitivity				Lux		Standby	
I	1	2	10s	I	3	4	25%	I	5	Night	Off
II	1	2	1min	II	1	2	50%	II	1	Day	On
III	1	2	3min	III	1	2	75%				
IV	1	2	10min	IV	1	2	100%				

SAFETY FIRST

- BEFORE STARTING ANY ELECTRICAL WORK ALWAYS SWITCH OFF AT THE MAINS
- IF IN DOUBT CONSULT A QUALIFIED ELECTRICIAN

LEDLITE™
Energy Saving LED