LTH10RGBW - RGBW Colour Changing Harness

IP65 **(€** 220-240V

Please read these instructions before commencing installation & retain them for future reference.

Important information

- These products are designed for connection to a 220-240V mains supply.
- Any broken or damaged parts should be replaced as soon as possible.
- We will not accept responsibility for any claims arising from a poor installation.

To reduce risk of fire, electric shock or injury to persons, please strictly adhere to the instructions below:

- Keep combustible material away from lamps. Do not allow lamps or sockets to come into contact with walls, ceiling, fabrics and other materials. Lamps should hang freely in downwards direction.
- · Make sure the linking socket is covered or closed.
- If cable is damaged do not use & replace as soon as possible.
- · Replace lamps with RGBW lamps only.

SPECIFICATIONS:

Voltage range: 220-240 V/AC

Frequency: 50/60 HzOutput Voltage: DC 12V

• Ingress Protection: IP65

Single RGBW Lamp Power: 0.5W


• 20 RGBW Lamps included


· Lamp cap: Three-core lamp cap

- Control Mode: Touch Button and Remote Control
- 3 metres lead-in to the first lampholder
- 50 cm spacing between lampholders
- 20 lampholders / 10 metres
- Cable Type: 3 core VW-1 Cable
- · Link up to 3 harnesses together

REMOTE CONTROL SPECIFICATIONS:

- Control Distance: up to 8m
- Remote Control Mode: RF
- Remote Control Frequency: 433MHz
- Number of Keys: 24 keys
- · Modes: 4 modes adjustable
- · Brightness and speed adjustments
- Battery Type: CR2025

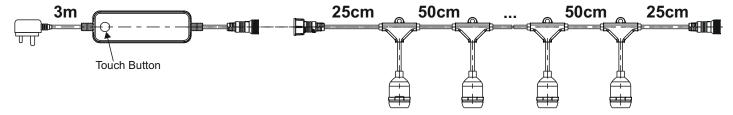

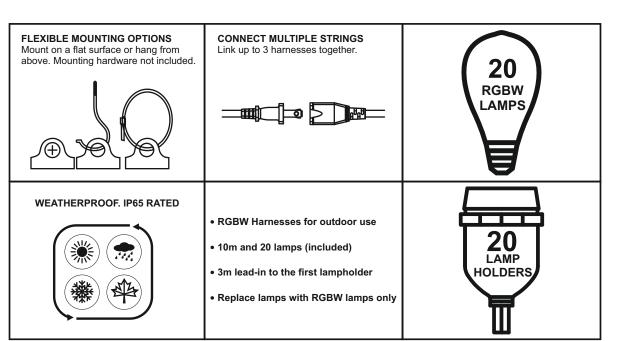




Installation Instructions:

- Install each lamp into the lamp holders by rotating them clockwise. Make sure the lamp is installed tight into the lamp holder.
- Rotate the lamp anti-clockwise if you want to replace it.
- Plug the controller cable to the festoon using the weatherproof connection

Please be aware that the 2 arrows on the plugs must line up! (Fig. 1)

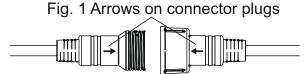

- You can link up to 3 harnesses using the IP65 connectors at each end.
- Plug the harness in to 220-240V socket and turn the light on to test the lights.
- Use the remote control provided to control the light (see below remote control functions)
- All buttons on the remote control have a memory function; after setting the harness will remember the last mode it was set.

Pair Code Function:

In order to prevent a remote control from controlling two or more products, the pair code function can be used:

- Turn the power ON and then press the TOUCH button on the harness controller for 5 seconds.
- The lamps will flash red to indicate the harness is in pairing mode.
- Press the Red button (R) on the remote control and the light will stop flashing.

buttons

(4 modes)

Toggle ON/OFF

• The remote control is now paired successfully with the harness controller.

Remote Control Functions

Remote Control Setup:

- Pull plastic protection from battery compartment to activate remote control (see Fig.2).
- The harness is controlled by the RF remote control. Please ensure the remote control aims at the controller when changing colours or modes.
- If the RF remote control becomes insensitive after a period of time or the control distance becomes much shorter please replace the battery (see Fig.3).

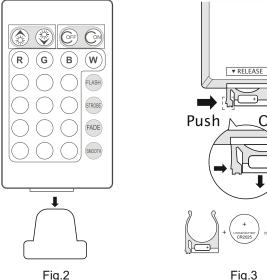


Fig.3

Open

Remote Control Buttons:

OFF button ON button Dimming button (G) (B) (w) STROBE Static monochrome FADE shortcut button (16 colour choices) Mode selector

ON/OFF Button - Switch the unit on or off. **Dimming** - When in static monochrome mode (R, G, B and W) use it to adjusts the brightness of the light.

Static Monochrome - Use the buttons to directly select the desired colour (16 choices)

FLASH - Automatic change of colours (fast)

STROBE - Automatic jumping change of colours (slow)

FADE - Fast automatic change of colours with blending effect

SMOOTH - Slow automatic change of colours with blending effect

