

LEDLITE™ Installation Sheet

LTPH10BC - 10m LED Party Light Harness with 10 x BC/B22 Lampholders*

IP65    220-240V

*Lamps not included

Please read these instructions before commencing installation & retain them for future reference.

Important information


- This product is designed for connection to a 220-240V mains supply.
- Any broken or damaged parts should be replaced as soon as possible.
- We will not accept responsibility for any claims arising from a poor installation.

To reduce risk of fire, electric shock or injury to persons, please strictly adhere to the instructions below:


- Keep combustible material away from lamps. Do not allow lamps or sockets to come into contact with walls, ceiling, fabrics and other materials.
- Ensure the end cap or, if connecting multiple sets, the plugs & sockets are screwed tightly together to avoid moisture ingress.
- If cable is damaged do not use the harness.

SPECIFICATION	
Voltage	220-240V/AC
Cable Colour	Black
Cable Type	H05VV-F 2x0.75mm ²
Lamp Holders	BC
Plug Type	UK Plug
Total Length	10m
Harness	7m
Lead In	3m
BC Holder Spacing	0.70m
Lamps	NOT Included
BC Holder Quantity	10 pcs.
Linkable	up to 20 harnesses
IP Rating	IP65 (Waterproof)
Certified	CE, RoHS
Warranty	2 Years


**BC / B22
Lampholders**




CONNECT MULTIPLE STRINGS
Link more than 10 harnesses together.
(2W Lamps Max.)




WEATHERPROOF. IP65 RATED





**LAMPS
NOT
INCLUDED**

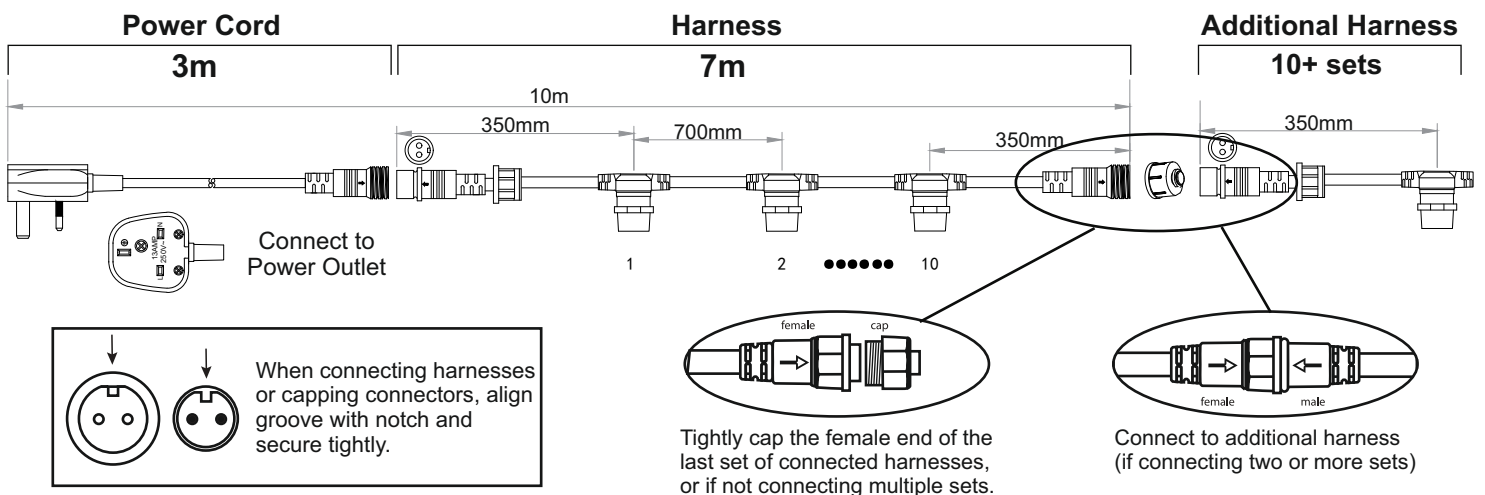

Installing / Replacing Lamps:

⚠ WARNING: Risk of electric shock! Disconnect power at the source prior to installing/replacing lamps.

NOTE: Lamps are not included. The harness can be linkable up to 20pcs if the lamps used are 2W max.

- Install or replace lamps only during dry and calm weather conditions.
- Lightly hold the socket in one hand and twist the lamp into the B22 lamp holder. The top of the holder forms a tight seal around the lamps and the lamps make contact with the sockets.
- Lamps must be installed tight in the sockets to prevent moisture from getting inside.

Maintenance:

Periodically clean the harness, check connections and ensure no additional weight has been added.