



LEDLI⊤E™ (i) Installation Sheet LTADJ - Adjustable bezel for LED Fire rated Down Light

Read these instructions before commencing installation & retain them for future reference.

Important information

It is recommended that luminaires are installed by a qualified electrician ensuring the installation complies to current IEE wiring regulations & local building control. These products are designed for use with LTFRD12 downlights (including emergency). LEDLite will not accept responsibility for any claims arising from a poor installation.

Important User Advice

Always switch off mains supply before servicing. This luminaire is suitable for indoor use only and should not be fitted to damp or wet surfaces such as freshly plastered or painted walls.

Installation Procedure

LEDLite recommends that a sample hole is cut in some scrap material to familiarise yourself with the installation. Once you are completely satisfied:

Locate the areas suitable to install these luminaires.

Cut a 108mm round hole in the ceiling and ensure sufficient ceiling void without infringing on joists, water pipes or electrical cables.

Remove supplied white bezel from LTFRD12 downlight by turning clockwise.

Remove spring from LTFRD12 downlight and place them on the adjustable bezel.

Attach LTFRD12 downlight to adjustable bezel turning anti-clockwise, taking care not to cross thread fitting as per Fig. 1.

Make sure the orientation of the driver is as per Fig. 2.

Connect luminaire to mains supply (Blue - Neutral, Brown - Live).


Press spring back and push luminaire body into aperture.

Tilt to required position.

Fit this product as per illustration shown in Fig. 3.

Ensure there is adequate free air ventilation around the fitting (75mm all round and 25mm above).

Turn on the mains supply to test the luminaire.

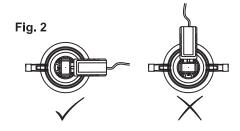

Available Finishes: White, Brushed Chrome, Polished Chrome.

