

LTFL810RGB - 80/100W Multi Power RGB LED Floodlight

IP65    220-240V

Please read these instructions before commencing installation & retain them for future reference.

Important information

It is recommended that floodlights are installed by a qualified electrician ensuring the installation complies to current IEE wiring regulations & local building control.

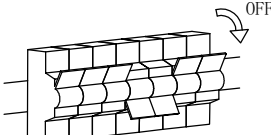 
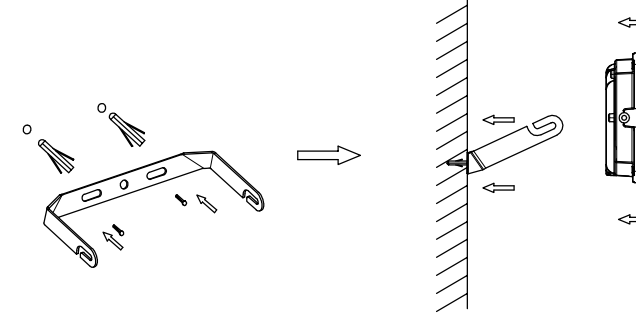 
 
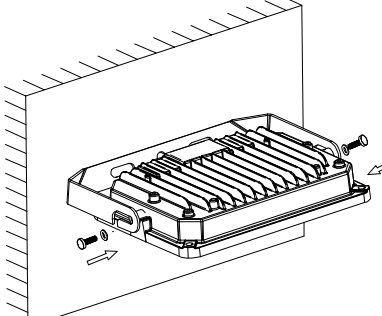 
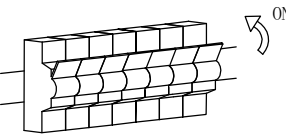 
- These products are designed for connection to a 220-240V mains supply.
- Any broken or damaged parts should be replaced as soon as possible.
- We will not accept responsibility for any claims arising from a poor installation.

SPECIFICATIONS:

- **Voltage range:** 220-240 V AC
- **Frequency:** 50/60 Hz
- **Power:** 80W/100W Switchable
- **Beam Angle:** >105°
- **CCT:** RGB
- **Switch:** RGB Remote Control (included)
- **Protection against electric shock:** Class I. Requires earth connection.
- **Ingress Protection:** IP65
- **Slide-in bracket and additional round bracket for easy installation**
- **Material:** Die cast Aluminium body with tempered glass diffuser
- **Ambient temperature range:** -20°C to +40°C
- **Warranty:** 3 Years

INSTALLATION INSTRUCTIONS:

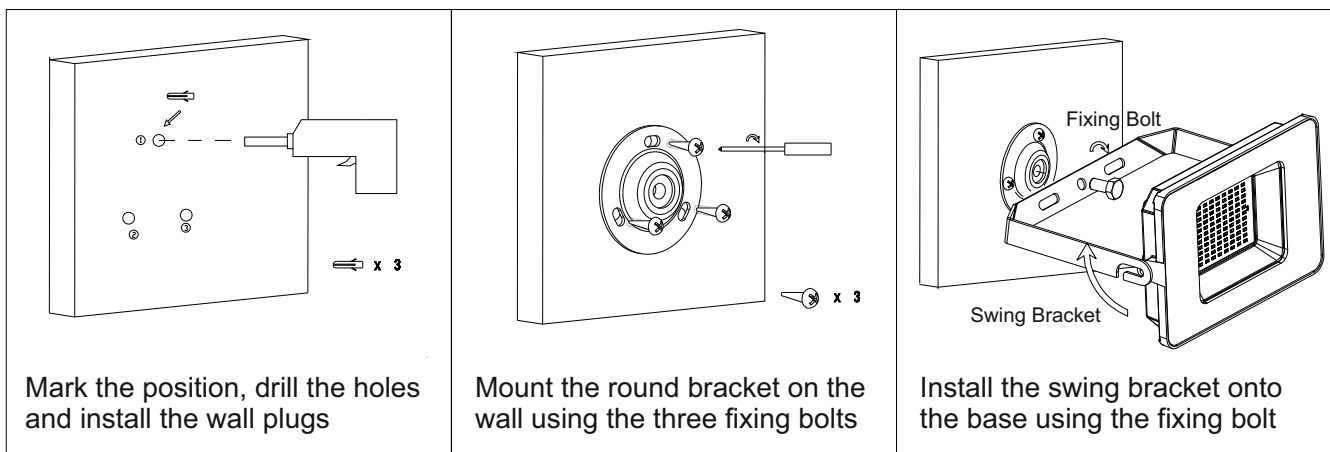 
 Always switch off mains supply before servicing.

1.  Turn off mains power.	2.  Mark the holes position and mount the bracket on the wall. Slide the floodlight into position.
3.  Live (L) - Brown Neutral (N) - Blue Earth (E) -  Yellow/Green Input 220-240V/AC, 50/60HZ Terminate loose ends of wire to an appropriate IP Rated junction box or similar, ensuring polarities are observed.	4.  Use the screws provided to fix the floodlight into the bracket. 5.  Turn on mains power and test the floodlight.

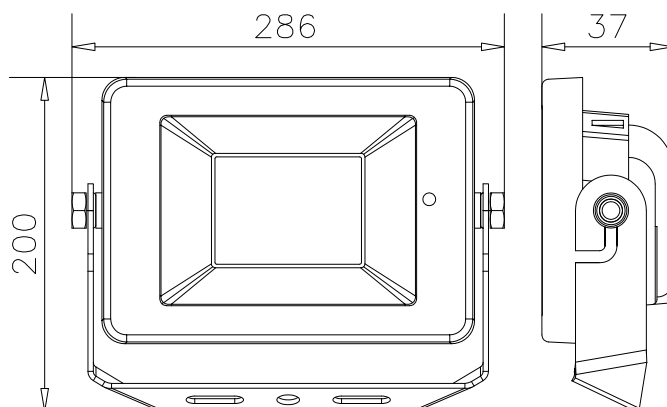 
WARNING: Ensure all items and screws are secure and fitted correctly.

- This floodlight is not dimmable.
- Floodlights should not be connected in series.

Installing the Additional Bracket:



DIMENSIONS(mm):



RGB Remote Control:

- Control Distance: up to 6m
- Mode: 4 modes adjustable
- Battery Type: CR2025

Remote Control Setup:

- Pull plastic protection from battery compartment to activate the remote control.
- The floodlight is controlled by the IR remote control. Please ensure the remote control aims at the lamp when changing colours or modes.
- If the IR remote control becomes insensitive after a period of time or the control distance becomes much shorter please replace the battery

