# LTTEC5 - ECO 5ft T8 LED Compatible Tube

**(€** 220-240V 🔊 🔊





Please read these instructions before use and retain them for future reference.

# Important information

It is recommended that the fittings are installed by a qualified electrician ensuring the installation complies to current IEE wiring regulations & local building control.

- These products are designed for connection to a 220-240V mains supply.
- We cannot accept responsibility for any claims arising from a poor installation.


# Important User Advice

- · Always switch off mains supply before installation.
- The fitting is suitable for indoor use only.
- The T8 LED Tube package contains the LED tube and the LED starter
- The T8 LED Tube is used for replacing 58W T8 fluorescent tubes
- Working temperature: -20°C ~ +45°C
- The T8 LED Tube is compatible with fittings with starters; there's no modifications to be made to the fitting
- This tube is designed for general lighting service (excluding for example explosive atmospheres)

50/60Hz	Lamp is suitable for use in luminaires with magnetic ballasts.	300	Lamp should be used in dry conditions or in a luminaire that provides protection.
<b>E</b>	Lamp is not suitable for use in emergency luminaires designed for double-capped fluorescent lamp(s).		Lamp is not dimmable.

# Operating instructions for light replacement (for use with Magnetic Ballast)


 Schematic steps of removing the fluorescent lamp and inserting the LED tube designed to retrofit the linear fluorescent lamp

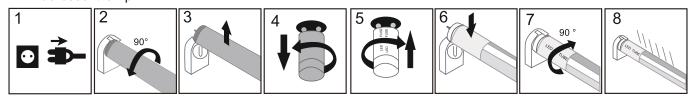


- 1. Switch off mains supply
- 2. and 3. Remove the fluorescent lamp
- 4. Remove the starter
- 5. Insert the LED replacement starter into the starter holder
- 6. Insert the LED tube into the lampholder
- 7. Secure position by turning the tube by 90°
- 8. Switch on electricity to test the lamp

# Wiring diagrams:

### 1. Tube replacement - Magnetic Ballast

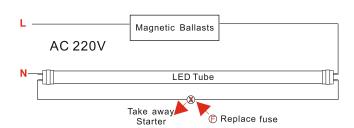

# 2. Tube replacement - Electronic Ballast

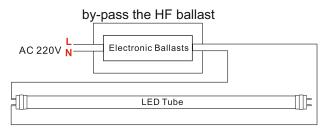

#### 3. Tube installation - LED tube fittings

