

TL3500H 36W CFL FLOOD LIGHT INSTRUCTION

Read all instructions before proceeding with installation.

We strongly recommend that this floodlight should be installed by a qualified electrician.

SPECIFICATIONS:

Power Source: 220-240V AC 50Hz

Loading: 36W

WIRING INSTRUCTIONS

1. This Halogen Floodlight has three wires:


Brown-Live

Blue-Neutral

Green/Yellow-Earth

Connect these wires to 220-240 volt AC power source.

2. Refer to the following diagram for wiring connection using the terminal block

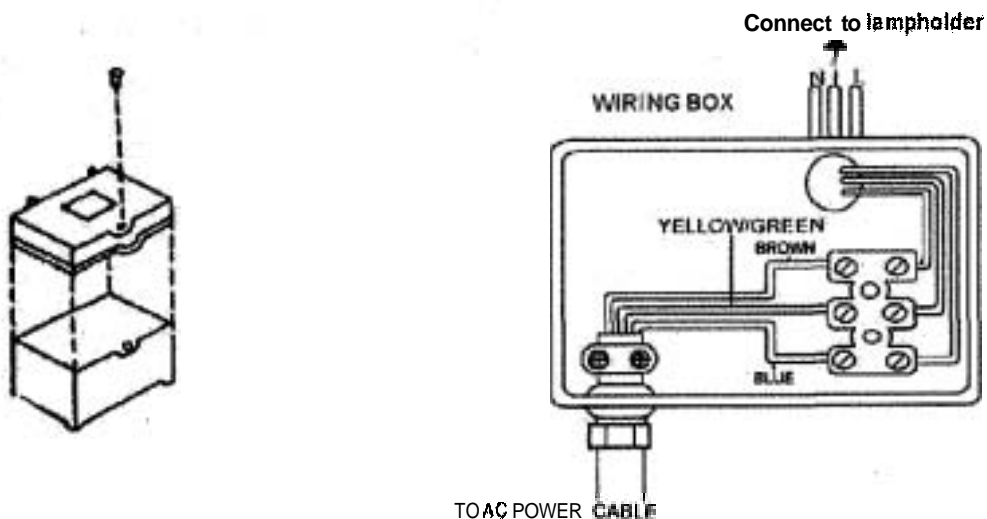

3. Use the green/yellow wire to earth the fixture.

4. Double check the connections after wiring as errors may damage the lamp or cause a fire hazard.

MOUNTING POSITION:

-The rear and two sides of the lamp should be a distance of 50mm from the mounting surface

- The distance between the front of the glass and the illuminated surface must be $\geq 0.5m$.

- The place where the lamp is mounted should be kept dry and clean.

LAMP TUBE FITTING:

Unscrew the bolt and open the glass holder. Turn the pin slots of the tube holders on both ends vertically (see figure.2); While the tube pins are in the tube holders on both ends, turn the tube at 90° (see figure. 3). Close the glass holder with the bolt. The tube cannot be fitted with bare hands.

CAUTION:

1. This lamp must be installed by a qualified electrician. Switch off the power before the installation to avoid electric shock.
2. If the shielding glass is cracked or the lamp is not working, ensure they are disposed of by a qualified electrician.
3. This lamp can not be used under a sealed space or inflammable, explosive surrounding.
4. Use after verification of the input voltage of this lamp is in compliance with the local voltage.
5. An interval of 1 minute is required before restarting the lamp.
6. Switch off the power before cleaning the lamp.
7. This shall be deemed as normal while the initial lumen is inadequate when switching on the power. After 3-5 minutes the lumen will reach the normal level.

CARE AND MAINTENANCE:

Your portable worklight requires very little care or maintenance. Simply clean the lens and stand regularly with a non-abrasive cleaner. Be sure the lamp is turned off and ample time is given to cool before cleaning.

© 2013 Suncoast Lighting
All rights reserved.
Suncoast Lighting, Inc.
10000 W. 11th Ave.
Tampa, FL 33613