 


230V 16A Industrial Check Plug

 
The Martindale Check Plug Socket Tester is completely safe in operation. The Check Plug's moulded body gives lasting durability and is maintenance free.

OPERATING INSTRUCTIONS


Simply plug the Check plug into a live 230V 16A socket and it will show whether or not the socket is correctly wired. Fault indications are instantly identified using the key on the face label. Simple to use and virtually indestructible.



ALL THREE PANELS LIT -
Socket correctly wired



 CENTRE & RIGHT PANELS LIT -
Faulty Neutral connection



CENTRE & LEFT PANELS LIT -
Faulty Earth connection



RIGHT PANEL LIT -
Phase/Earth reversal



LEFT PANEL LIT -
Phase / Neutral connections reversed



NO PANELS LIT -
Faulty Phase supply connection

NOTE:

This unit will not detect Earth/ Neutral reverse.

Any electrical repairs should only be carried out by a competent person.

Martindale Electric Company Ltd

Metrohm House, Penfold Trading Estate, Imperial Way,
Watford, WD24 4YY, UK.
Tel: 01923 441717 Fax: 01923 446900.
Website: www.martindale-electric.co.uk
E-mail: sales@martindale-electric.co.uk

 


230V 16A Industrial Check Plug


The Martindale Check Plug Socket Tester is completely safe in operation. The Check Plug's moulded body gives lasting durability and is maintenance free.

OPERATING INSTRUCTIONS


Simply plug the Check plug into a live 230V 16A socket and it will show whether or not the socket is correctly wired. Fault indications are instantly identified using the key on the face label. Simple to use and virtually indestructible.



 ALL THREE PANELS LIT -
Socket correctly wired



 CENTRE & RIGHT PANELS LIT -
Faulty Neutral connection



CENTRE & LEFT PANELS LIT -
Faulty Earth connection



RIGHT PANEL LIT -
Phase/Earth reversal



LEFT PANEL LIT -
Phase / Neutral connections reversed



NO PANELS LIT -
Faulty Phase supply connection

NOTE:

This unit will not detect Earth/ Neutral reverse.

Any electrical repairs should only be carried out by a competent person.

Martindale Electric Company Ltd

Metrohm House, Penfold Trading Estate, Imperial Way,
Watford, WD24 4YY, UK.
Tel: 01923 441717 Fax: 01923 446900.
Website: www.martindale-electric.co.uk
E-mail: sales@martindale-electric.co.uk

