



**Model
PBX 308 Plus
Extension User Guide**

Contents

Introduction	3
Internal Calls	3
Making Outgoing Calls	3
Transferring Calls	4
Call Pick Up	4
Conference Calls	5
System Speed Dials	5
Confirm Extensions Numbers	6
Operator Call	6
Ringback on Busy	6
Transfer Calls When Busy	6
Transfer All Calls To Another Extension	6
Transfer All Calls To Your Secretary	6
BT or Cable Select (Star) Services	7

Introduction

The Orchid PBX 308 extensions need to Dial 9 for access to an outside Exchange Line, however Extensions can be converted to Direct Dial by the System Administrator – Direct Dial extensions do not have to dial 9 for a line. The Direct Dial feature is ideal if you make a lot of outgoing calls and few internal calls. Direct Dial extensions need to dial * in front of the extension number when making internal calls and when using some of the other features of the PBX 308.

Internal Calls

Allows you to call another extension

Dial: **Extension Number 21 - 28**

For Direct Dial Extensions, **Dial *** in front of the Extension number eg; *21

Making outgoing calls

Dial 9 and wait for **External Dial Tone**, dial the **telephone number**.
Ideally, program 9 and a pause # into a one touch memory.

NB: The pause is necessary in case you need to Redial a number. Direct Dial extensions just need to press Redial.

Making outgoing calls from Direct Dial extensions

Dial the Telephone Number

Last Number Redial in “Dial 9 For a Line” mode

For last number Redial to work properly in “Dial 9 for a Line” mode you need to enter a Pause # after the 9 when dialling the number. Most modern telephones have a pause button on the keypad.

Some DECT cordless phones enable you to program the phone so that “9 Pause” is inserted in front of every number dialled.

If your telephones do not have a Pause button, we recommend you contact the System Administrator to get your extension converted to “Direct Dial” Mode.

Transferring Calls

Allows you to manually or automatically transfer an incoming call to another extension.

To transfer manually:

Dial: **Recall / Extension Number** **Announce Caller** **If the extension wants to take the call, replace handset.**

NB: If the extension does not want to take the call, when they replace their handset the call will revert back to you. If the extension does not answer, press Recall to revert back to the caller.

To transfer automatically:

Dial: **Recall (R)** **Extension Number** **Replace Handset**

If the extension does not answer within 25 seconds the call will be redirected back to you and your phone will ring.

NB: If the extension is engaged, you will be automatically reverted back to the caller. When the call is being transferred the caller will hear "Music on Hold" or a comfort tone.

Call pick up

If your extension is not programmed to ring on incoming calls this feature allows you to pick up a call ringing on another extension.

Dial: **# 7**

For Direct Dial Extensions

Dial: *** # 7**

Conference calls

Allows you to set up a conference call between 2 extensions and an incoming outside call.

During the call press **RECALL (R) Dial: * **Extension Number****

If the other extension answers all three parties will be connected.

If the extension does not answer, press **Recall (R)** to revert back to the Caller.

System Speed Dials

Up to 99 telephone numbers can be stored in to system speed-dial locations 01 – 99. Please contact your System Administrator for details

Dialling Speed Dial numbers

To call the number in Speed-Dial location 01, Dial **## 01**

To call the number in Speed-Dial location 33, Dial **## 33**

Confirm Extension number

If you have a Caller Display phone you can confirm the Extension number.

Dial: # * 9 hang up, the phone will ring and the display will show 6 digits. The first 3 digits show the Extension Jack number ie; 004 and the last 3 digits show the Extension number ie; 024

Operator Call

Any extension can **Dial: 0** and they will be automatically connected to Extension 22. If 22 is busy they will be connected to 23.

Ringback on Busy

If the Extension you call is busy you can enter Ringback mode by Dialling

Recall (R) # # 0 0 and hang up.

When the Extension is Free your phone will ring, lift the handset and the Free Extension will ring

automatically.

Transfer calls when busy

This feature enables you to transfer Internal and External calls to another Extension if you are engaged on a call.

To Activate Transfer **Dial: # * 1 Ext no**

To Cancel Transfer when engaged **Dial: # * 1 00**

Transfer All calls to another Extension

To transfer all calls to another Extension **Dial: # * 2 Ext no**

To cancel the transfer of all call **Dial: # * 2 00**

Transfer all calls to your secretary

To transfer all calls to your secretary **Dial: # * 6 Ext No**

In this mode only the Secretary can call your Extension.

To cancel calls being transferred to your secretary **Dial: # * 6 00**

BT or Cable Select (Star) Services

Select Services (Also known as Star Services) such as Call Divert, 3 way Calling etc, can be set up on extensions that are in "Dial 9 for a Line" mode or 'Direct Dial' mode.

To operate Star Services from an extension in "Dial 9 Mode".

Dial **#** followed by Line number 1, 2 or 3 followed by the service On or Off code.

To operate Star Services from an extension in "Direct Dial Mode"

Dial *** #** followed by the line number 1, 2 or 3 then the service On or Off code.