

Panasonic

Digital Cordless Phone

Model No. **KX-TG8200E/KX-TG8202E**

Digital Cordless Answering System

Model No. **KX-TG8220E/KX-TG8222E**

 
Quick Guide

Routine care

- To clean the product, use a dry soft cloth. The outer surface of the product can be scratched by wiping or rubbing with a hard cloth.

Connections


Base unit

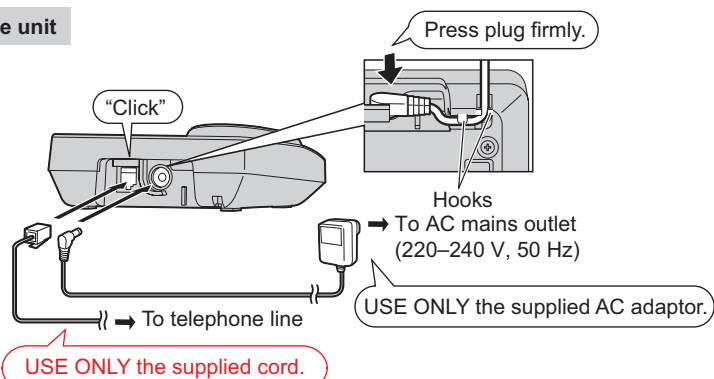

Important:

- If you use a telephone line cord which is not supplied, the unit may not work properly.

 
Charger (KX-TG8202/KX-TG8222)

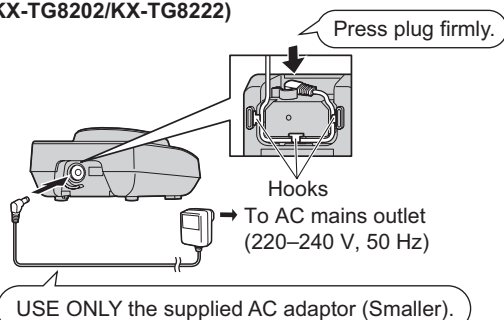

PQQW15778ZA DC0607PW0

Battery installation/Battery charge

 Initial charge: 7 hours

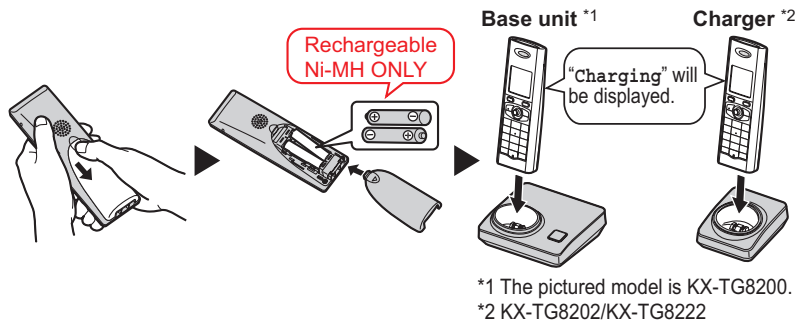


Note:

- USE ONLY rechargeable Ni-MH batteries.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.

Screen saver mode

The backlight will turn off completely after 1 minute of inactivity if the handset is not on the base unit or charger.

 Press [**⏏**] to turn the display on again.

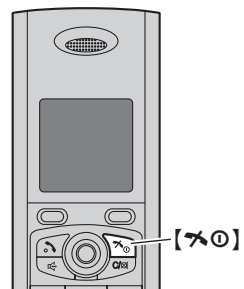

Operating tips

Using the joystick

 
Push the joystick up, down, left, or right to navigate through menus and to select.

Note:

- When selecting menu or the desired item, these operating instructions use the following indication.


Example: [▲]/[▼]: "OFF"

Push the joystick up or down to select the words in quotations.




Adjusting the receiver or speaker volume

  Push the joystick up or down while on a call.

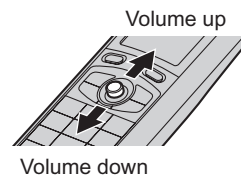





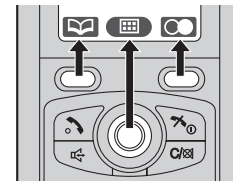


Soft keys

The handset features 2 soft keys and a joystick. By pressing a soft key, or by pressing the centre of the joystick, you can select the feature shown directly above it on the display.



Menu icons

When in standby mode, pressing down on the centre of the joystick reveals the handset's main menu. From here you can access various features and settings.





	Caller List		Handset Setup
	SMS (Short Message Service)		Base Unit Setup
	Time Settings ^{*1}		Display Setup
	Answer System ^{*2}		

  
 
*1 KX-TG8200/KX-TG8202

*2 KX-TG8220/KX-TG8222

Date and time	
1	(centre of joystick)
2	Select by pushing the joystick in any direction. → OK
3	Push the joystick up or down to select “ Time Settings ”. → OK
4	Push the joystick up or down to select “ Set Date & Time ”. → OK
5	Enter the current date, month, and year.
6	Enter the current hour and minute.
7	OK → []


 
Basic operations	
Making/Answering calls (Handset)	
Making calls	Dial the phone number. → []/[
Answering calls	[]/[
Hanging up	[]
Receiver/speaker volume	Push the joystick up or down while on a call.
Making a call using the redial list	(right soft key) → []/[]: Select the desired number. → []/[
Handset ringer volume	<ol style="list-style-type: none"> (centre of joystick) → → OK []/[]: “Ringer Setup” → OK []/[]: “Ringer Volume” → OK []/[]: Select the desired volume. → OK → []
Phonebook (Handset)	
Adding entries (names and phone numbers)	<ol style="list-style-type: none"> (left soft key) → []/[]: “New Entry” → OK Enter the party's name (16 characters max.). → OK Enter the party's phone number (24 digits max.). → OK []/[]: Select the desired category. → OK []/[]: “save” → OK → [] <ul style="list-style-type: none"> To enter a name, see the character table in the operating instructions.
Making calls	<ol style="list-style-type: none"> (left soft key) []/[]: Select the desired entry. → []
Answering system (Base unit): KX-TG8220/KX-TG8222	
Answering on/off	Press [] to turn on/off the answering system.
Listening to messages	[]


Frequently asked questions	
Question	Cause & solution
Why is  flashing?	<ul style="list-style-type: none"> • The handset is too far from the base unit. Move closer. • The base unit AC adaptor is not connected. Check the connections. • You are using the handset or base unit in an area with high electrical interference. Place the handset and base unit away from interference sources, such as antennas and mobile phones. • The handset is not registered to the base unit. Register it (page 7).
Why is the handset display blank?	<ul style="list-style-type: none"> • The handset is in screen saver mode. Press  to activate the handset display again.
What should I do when the handset does not turn on?	<ul style="list-style-type: none"> • Make sure that the batteries are installed correctly. • Fully charge the batteries. • Clean the charge contacts and charge again.
How long is the battery operating time?	<ul style="list-style-type: none"> • When you are using fully-charged Ni-MH batteries (supplied batteries); In continuous use: 12 hours max. In continuous standby mode: 150 hours max. • It is normal for batteries not to reach full capacity at the initial charge. Maximum battery performance is reached after a few complete cycles of charge/discharge (use). • Actual battery performance depends on a combination of how often the handset is in use and how often it is not in use (standby).
Can I keep the handset on the base unit or charger when I am not using it?	<ul style="list-style-type: none"> • Even after the handset is fully charged, the handset can be left on the base unit or charger without any ill effect on the batteries.
When should I replace the batteries?	<ul style="list-style-type: none"> • If the batteries are fully charged until  is displayed, but  is displayed after a few calls, replace the batteries with new ones.
What is a PIN?	<ul style="list-style-type: none"> • The PIN is a 4-digit number that must be entered in order to change certain base unit settings. The default PIN is "0000".

Frequently asked questions	
Question	Cause & solution
What do I need to do to display caller information?	<ul style="list-style-type: none"> You need to subscribe to Caller ID service. Consult your service provider/telephone company for details. The message "You must first subscribe to Caller ID." will be displayed until you receive caller information after subscribing to Caller ID service.
What should I do when: <ul style="list-style-type: none"> I hear static or sound cuts in and out? there is interference from other electrical units? 	<ul style="list-style-type: none"> Place the handset and the base unit away from other electrical appliances. Move closer to the base unit. Your unit is connected to a telephone line with DSL service. We recommend connecting a filter (contact your DSL service provider) to the telephone line between the base unit and the telephone line jack.
What should I do when the operating time seems to be short even after I fully charged the batteries?	<ul style="list-style-type: none"> Wipe the battery ends (+, -) and the unit contacts with a dry cloth.
What do I need to do to erase → (Missed call) from the display?	<ul style="list-style-type: none"> There are unviewed missed calls remaining. View them using the following method. <ol style="list-style-type: none">  (centre of joystick) →  → OK Push the joystick down to search from the most recent call, or push the joystick up to search from the oldest call.


Registering a handset to a base unit

The supplied handset and base unit are pre-registered. When you purchase an additional handset, refer to the additional handset's installation manual for registration. If for some reason the handset is not registered to the base unit, register the handset.

 
- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: "Registration" → **OK**
- 3 **[▲]/[▼]**: "Register H.set" → **OK**
- 4 **[▲]/[▼]**: Select a base unit number. → **OK**

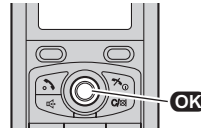

 
- 5 Proceed with the operation for your model.
 - **KX-TG8200/KX-TG8202**
Press and hold **[*]]** on the base unit for about 5 seconds. (No registration tone)

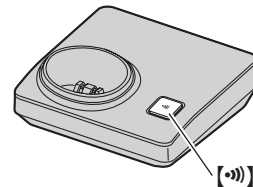

 - **KX-TG8220/KX-TG8222**
Press and hold **[*]]** on the base unit for about 5 seconds, until the registration tone sounds.

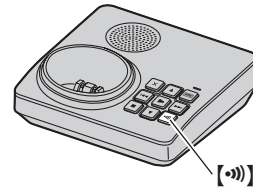

 - 6 Wait until "Enter Base PIN" is displayed.
 - Enter the base unit PIN (default: "0000").
 - **OK**

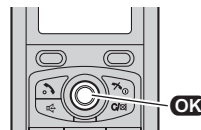

Optional service (Caller ID and SMS)

If you subscribe to Caller ID service, you can:



- display caller information



- identify who is calling by using different display colours and ringtones (handset phonebook category)

To use SMS, you must subscribe to Caller ID and/or appropriate service.



- SMS (Short Message Service)

Sales and support information

 
 
 
 
 
 
 
Customer Care Centre

- For customers within the UK: 0844 844 3898
- For customers within the Republic of Ireland: 01289 8333
- Visit our website for product information: www.panasonic.co.uk
- E-mail: customer.care@panasonic.co.uk

Direct Sales at Panasonic UK

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Care Centre Monday - Thursday 9:00am - 5:30pm, Friday 9:30am - 5:30pm (Excluding public holidays).
- Or go on line through our Internet Accessory ordering application at www.panasonic.co.uk
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK Ltd.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products, take a browse on our website for further details.

Customer Care Helpline Tel. No.: U.K. 0844 844 3898 / R.O.I. 01289 8333

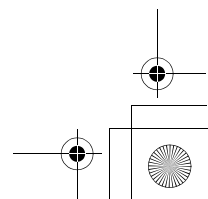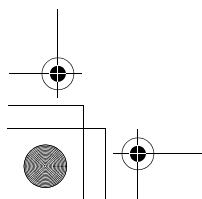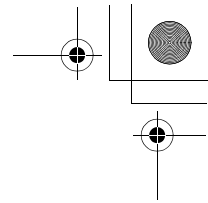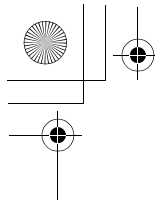

IMPORTANT

**If you have problems setting up
or operating this product please
call the Panasonic DECT Helpline**

0844 844 3898 (UK)

01289 8333 (Repl of Ireland)