

SLx Gold 4-Way Scart Switching Box



18264SP

USER GUIDE


Philex Customer Careline 08457 573479

Instructions

- 1) Connect your AV equipment to the Scart Switching Box as shown in the diagram.
- 2) To view any of the AV devices through your TV, simply press the selector button **IN** for the Scart socket that the device is connected to.
- 3) When the device is not in use, the selector button for that Scart socket should be returned to the **OUT** position.
- 4) Connect any equipment with phono plug outputs to the phono IN sockets. Ensure all buttons are in the OUT position.

Additional feature

You can connect a Hi-Fi system to your equipment using this scart selector. Connect wired Scart plug (E) to your source equipment. Connect stereo phono cables (*not supplied*) from the phono OUT sockets to your Hi-Fi system. Ensure all buttons are in the OUT position.

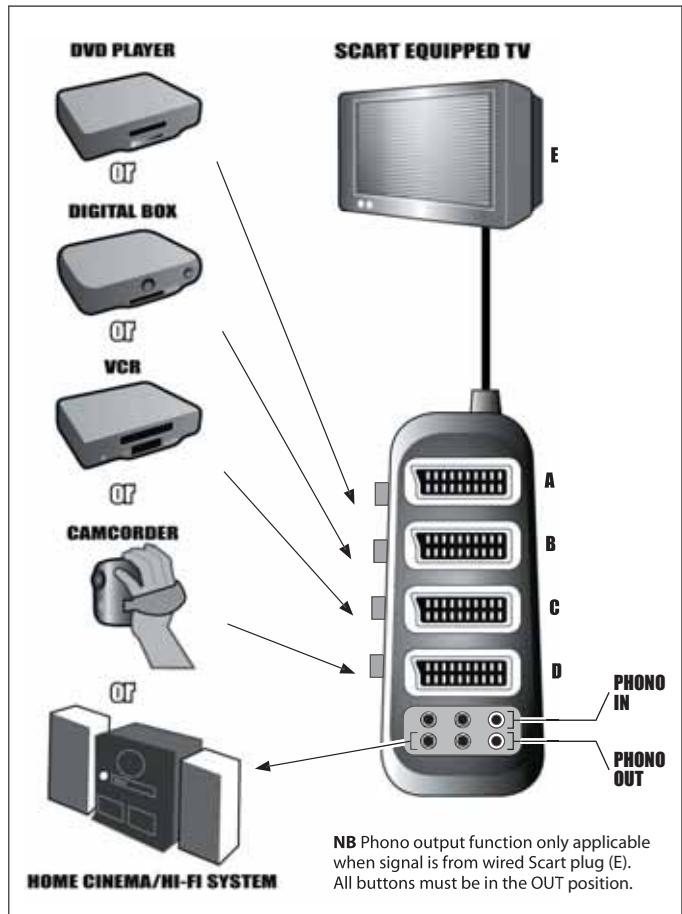

If problems
persist, please
contact:

Philex Customer Careline:
08457 573 479
(Local rate – UK only)

Technical Support:
<http://technical.philex.com>