



AV AUTO SELECTOR

28520
28520SP
28520R
28520HS

USER GUIDE

Philex Customer Careline 08457 573479

Setting up

Scart Input A (VCR2 / CAMERA / DVD RECORDER)

Any AV equipment that does not use a direct Scart to Scart connection, or Scart equipment that does not have its own automatic switching voltage should be connected to the AV Auto Selector using *Scart Input A* (for example, a camcorder that uses a 3 phono to Scart connection).

Scart Inputs B and C (VCR / SAT / DVD PLAYER)

Satellite receivers, VCRs, games consoles, etc., that use a fully wired Scart to Scart connection (with automatic switching facility) can use either *Scart Input B* or *Scart Input C*.


Phono Output 1

Phono Output 1 (video, left and right audio) provides the same signals as the *TV/Monitor Scart output*. A second TV or another VCR can be connected here (using a 3 Phono to 3 Phono lead, or 3 Phono to Scart lead as appropriate). Use the audio Phono outputs (marked white for the left channel, red for the right channel) to connect to a Hi-Fi or amplifier.

Phono Output 2

Phono Output 2 (video, left and right audio) can be connected to the output of the TV.

Continued overleaf ►

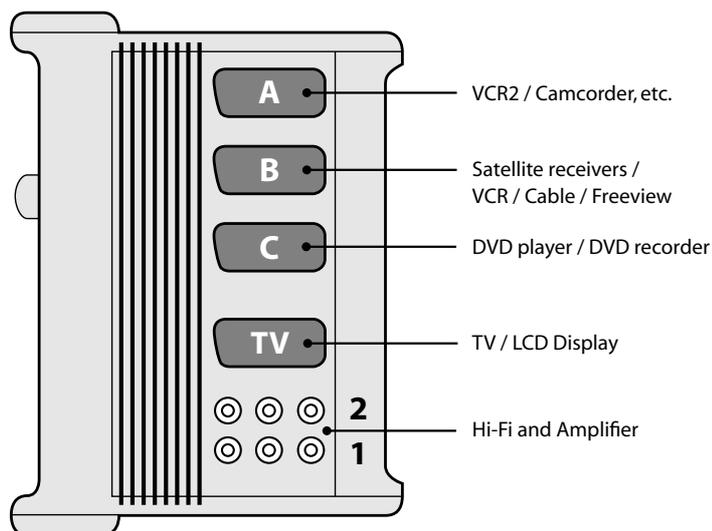

► *Phono Output 2 continued from overleaf*

Connection via a fully wired (21 pins all connected) Scart to Scart lead will allow playback of sound and video independent of each other whilst copying or watching TV programmes. For example, when in AV mode most modern TVs will show the channel set on the tuner (via the Scart socket). In this way you can view a programme from the satellite receiver whilst your VCR is recording the programme received by the TV's tuner.

Mains Connection

Attach the supplied AC/DC power adaptor to the power input on the right-hand side of the AV Auto Selector. Plug the mains adaptor into a mains socket. The power indicator on the front panel will illuminate red.

Using the AV Link switch

The *AV Link switch* allows you to view normal broadcast or cable TV whilst recording from a satellite receiver or camcorder.

Press the *AV Link switch*. The indicator illuminates YELLOW. A switching voltage from *Scart Inputs B* or *C* is sent to the *TV/Monitor Scart socket*. This will automatically switch the TV to *AV mode*.

Use your TV remote control to switch to *AV mode* if this does not occur automatically, or to view normal TV/cable programmes whilst recording.

Copying

From camcorder to VCR or DVD recorder/ Hard disc recorder (Scart input A to Scart input B)

- To copy from a camcorder (or other equipment connected to *Scart Input A*) to a VCR connected to *Scart Input B*, set the camcorder to *PLAY* and the VCR to *RECORD*. The 'A' indicator will illuminate GREEN.

From satellite receiver to VCR or DVD recorder/ Hard disc recorder (Scart Input C to Scart Input B)

- To copy from a satellite receiver (or other equipment connected to *Scart Input C*) to a VCR connected to *Scart Input B*, switch on the satellite receiver and switch off any equipment connected to *Scart Input A*. Set the VCR to *RECORD*. The 'C' indicator will illuminate GREEN.

Troubleshooting

If no signal is observed on the television screen when a device has been connected to the *AV Auto Selector*, check all Scart plug connections, especially the monitor Scart lead.

If problems persist, please contact

Philex Customer Careline: 08457 573 479
(Local rate – UK only)

Technical Support: <http://technical.philex.com>

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



© Philex Electronic Ltd. 2004