

EH0525 16" Pedestal Fan



3 Speed settings
Oscillation function
Adjustable height
Remote control
Timer

IMPORTANT


Installer and Users please note:


These instructions should be read carefully and left with the user of the product for future reference.

BEFORE USE

You must inspect the appliance including its cable and plug for any signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.


ASSEMBLY

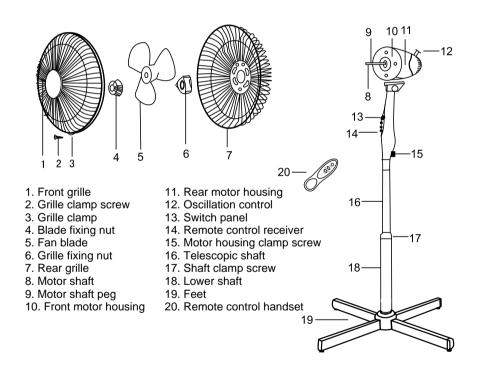

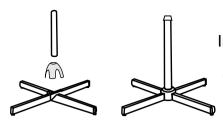


Interlock the two feet (19), place the lower shaft on top of the feet, and fix with four screws.

 
Slide the motor assembly onto the telescopic shaft (16), and tighten the clamp screw (15). Loosen the shaft clamp screw (17), pull the telescopic shaft to the required height, and re-tighten the clamp screw.





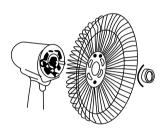

Rotate the grille fixing nut (6) anticlockwise to remove it from the motor housing. Locate the rear grille (7) on to the motor housing (10) and fix in place with the grille fixing nut (6).

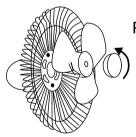

Place the blades (5) on the motor shaft (8), and locate the peg (9) into the recess at the back of the blades. Fix the blades in place using the blade fixing nut (4). Rotate anticlockwise to tighten (it has a left-handed thread)



Attach the front grille (1) to the rear grille (7) using the grille clamp (3), and tighten the fixing screw (2) to retain in place.

OPERATION

- Plug the mains lead into a 13 Amp mains socket.
- If connecting via an extension lead, make sure that the lead is rated at 3 Amps or more, and that it is fully unwound.
- Use the height adjustment knob (17) to adjust the tube to the optimum height.
- Switch the appliance on at the mains socket.
- Use the "ON/SPEED" push-button switch on the control panel (13) to switch on and select the speed required:

Low Speed = 1140 m³/h airflow Medium Speed = 1260 m³/h airflow High Speed = 1380 m³/h airflow

- Oscillation is selected by pressing the oscillation knob (12) downwards, and switched off by pulling it upwards
- It is normal for the motor to become warm in normal use.
- Press the "OFF" button to turn off.
- Unplug the appliance from the mains when not in use.
- Press the "TIMER" button to select the timer. The timer can be set to 1 hour, 2 hours or 4 hours by pressing the button once, twice or three times; after the selected time has elapsed the fan will switch off.
- Press the "TIMER" button to switch off the timer and return to continuous operation.

REMOTE CONTROL

The remote control duplicates the functions of the switches on the control panel.

OPERATING COSTS

At time of going to press, the average cost of electricity is £0.12 per unit (kilowatt-hour). The amount you are being charged will be shown on your electricity bill. At this cost, the EH0525 will cost 14½p per day to run.

PRODUCT SAFETY

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance
- Do not use in close proximity to gas appliances
- Do not use unless correctly installed.
- Do not cover when in use.
- Do not place the mains lead beneath a carpet or rug.
- Do not use the appliance in locations where paint, petrol or other flammable liquids are used or stored.
- Do no insert any object into the appliance through the grilles. This may damage the appliance or result in overheating or electric shock.
- Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- The appliance is fitted with an overload cut-out which will operate if the motor overheats or is stalled. If this happens, disconnect from the mains supply immediately, and allow the motor to cool down.

PAT TESTING

When used in an office environment, this product must be safety-tested yearly by a qualified electrician (PAT Tested) in order to comply with the Electricity at Work Regulations.

We recommend that it is PAT tested regularly when used in a domestic environment.

GENERAL SAFETY REQUIREMENTS

Domestic wiring must be tested periodically by a qualified electrician at least once every 10 years or at every change of occupancy.

For office and retail premises, and buildings such as village halls, the wiring must be inspected at least once every 5 vears.

It is recommended that all building be fitted with smoke alarms (it is mandatory for new buildings).

MAINTENANCE

Before cleaning, turn the appliance off, and disconnect from the mains supply. The appliance may then be cleaned using a damp cloth with a drop of washing-up liquid to remove any dust or dirt from the case. Do no use stronger detergents or solvents as these may damage the paint finish.

Using a dry 1" (25mm) paint-brush, remove any dust from the arilles.

If the mains lead is damaged, it must be replaced by the

Fuse ЗА

Live

Neutral

(Blue)

manufacturer or and authorised service centre.

If the mains plug needs to be replaced, proceed as follows:

- Connect the brown wire to the terminal labelled "L".
- · Connect the blue wire to the terminal (Brown) labelled "N".
- Connect the green/yellow wire to the terminal labelled with the earth symbol or "E".
- Make sure that the cord-grip is positioned correctly (over the outer sheath of the cable) and it fully tightened.

DISPOSAL AND RECYCLING

You must not dispose of this appliance with domestic household waste.

Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user.

When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

TECHNICAL SPECIFICATION

Dimensions: 1250 (max) ×450×450 mm

Weight: 2.5 kg
Power supply: 230V AC
Power consumption (max): 50 W

Air flow low speed: 2700 m³/h

medium speed: 3600 m³/h high speed: 3750 m³/h

Operating current (max): 0.22 A

Noise: <60 dB(A)

SERVICE WARRANTY

Prem-i-Air guarantees the product free from defects in materials and workmanship for a period of two years.

Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our Help Desk on (0845) 459 4816.

Prem-i-Air Appliances Ltd., Lancots Lane, Sutton, St. Helens, Merseyside. WA9 3EX

website: www.prem-i-air.com