QUAW10 Instructions 50*50mm



Note: We would recommend naming the devices in your Kinetic Switch app something that is easy for Alexa or Google Home to understand.

3) Echo, Echo Dot, Tap or other Amazon voice-operated devices. 4) Google Home, Google Home Mini or other Google voice-operated devices. Enable Smart Life skill/action in your Alexa / Google Home APP Search for "Smart Life" skill and add it to the Alexa APP "Smart Home" skills. For Google Home search for "Smart Life" action and add it to Home Control. Enable the skill/action in your Alexa/Google APP and input the name and password used to register the Kinetic switch APP to link it with Alexa/Google APP. Voice control can be used now to control the Wifi device such as follows:	Wireless socket adaptor switch pairing method ⁺ : The wireless Quinetic energy switch and wireless socket adaptor can be paired with any combination: an adaptor can be controlled by a maximum of 10 separate switches, a switch can pair with an unlimited number of socket adaptors. The range of a switch may also be extended by putting the adaptor into the "Bridging Mode". Code pairing steps: 1. Press the function button for 3 seconds and the indicator light begins to flash slowly. Then release the button and enter the single pairing state. 2. Press the wireless kinetic energy switch and the indicator light of the socket adaptor will go out, which means that the pairing is successful. 3. If you need to add more switches to the same adaptor, please repeat the above process; each adaptor can store up to 10 switches, pairing in formation.	 5. In order to put the controller the function button for 7 seco pulse continuously to indicate 6. If the controller indicator light controller will still function no single switch. 7. To remove the adaptor stored function button for 10 second goes out - the pairing information of the pairing information of the pairing information. Press for 3 seconds to enter 	nds. The indicator light will da successful "bridge". t continues to pulse the transly even if used with a d pairing information press is until the indicator light titon will be cleared.	Precautions: 1. To prevent injury, the socket adaptor must be securely plugged in to a 13 Amp wall socket. 2. Please note the maximum loading of an individual controller. Exceeding this maximum will result in blowing the fuse (non replaceable). 3. Do not short-circuit, otherwise it will cause permanent damage to the socket adapter. 4. The socket will remain "OFF" after a power cut, saving energy, reducing fire risk and protecting your appliances. 5. Po roi foor use only. 6. Please use the socket in dry place; it must not be used in a bathroom or other damp locations. 7. Damage caused by incorrect installation and operation are not covered under warranty. Troubleshooting: 1. If pairing does not work first check if the indicator is lit. Re-pair in case the pair is lost after power failure. 2. If the receiver does not respond check the LED indicator.	
"Alexa/Ok Google, turn on/off [kitchen light]" "Alexa/Ok Google, turn on [phone charger]".	Single, double and triple switches follow the same pairing method.	program mode	clear memory	If this does not light check the wall outlet and refer back to supplier.	*For more information about phone APP pairing, instructions and troubleshoot please visit www.tlc-direct.co.uk website.

