

# QUINETIC Installation Sheet

## QUFL10 - 10W 3CCT Selectable Quinetic LED Floodlight

IP65    220-240V

Please read these instructions before commencing installation & retain them for future reference.

### Important information

It is recommended that floodlights are installed by a qualified electrician ensuring the installation complies to current IEE wiring regulations & local building control.

- These products are designed for connection to a 220-240V mains supply.
- Any broken or damaged parts should be replaced as soon as possible.
- We will not accept responsibility for any claims arising from a poor installation.

### SPECIFICATIONS:

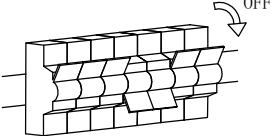 
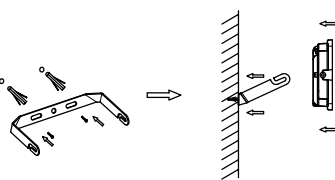 
 
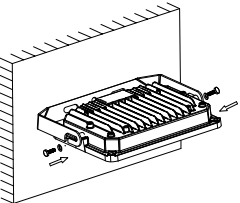 
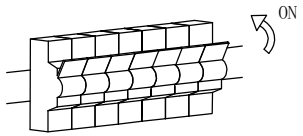 
- **Voltage range:** 220-240 V/AC
- **Frequency:** 50/60 Hz
- **Power:** 10W
- **Lumen Output:** 1000lm  $\pm$  5%
- **CCT Changeable:** 3000K/4000K/6000K
- **CRI**>80
- **Protection against electric shock:** Class I. Requires earth connection.
- **Ingress Protection:** IP65
- **Slide-in bracket and additional round bracket for easy installation**
- **Material:** Die cast Aluminium body with tempered glass diffuser
- **Ambient temperature range:** -20°C to +40°C

### Complete with built-in Quinetic Receiver




- **Control method:** pairing by using Quinetic Wireless Switches or QUPIR\* (see next page for instructions)
- **Control distance\*\*:** - up to 15m indoor  
- up to 60m outdoor

### ▲ INSTALLATION INSTRUCTIONS:

Always switch off mains supply before servicing.

|                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                                                                                                                                       |                                                                                                                                                     |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1.</p>  <p>Turn off mains power.</p>                                                                                                                                                                                                                                                                                             | <p>2.</p>  <p>Mark the holes position and mount the bracket on the wall. Slide the floodlight into position.</p> |                                                                                                                                                     |
| <p>3.</p>  <p>Live (L) - Brown<br/>Neutral (N) - Blue<br/>Earth (E) - Yellow/Green <br/>Input 220-240V/AC, 50/60HZ</p> <p>Terminate loose ends of wire to an appropriate IP Rated junction box or similar, ensuring polarities are observed.</p> | <p>4.</p>  <p>Use the screws provided to fix the floodlight into the bracket.</p>                                  | <p>5.</p>  <p>Turn on mains power and test the floodlight.</p> |

### Installing the Additional Bracket:
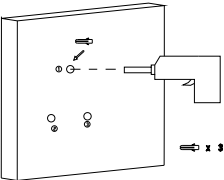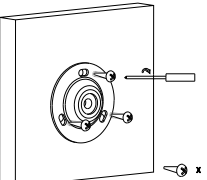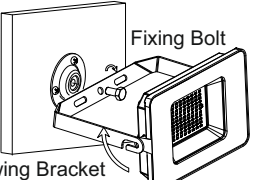   
|                                                                                                                                                          |                                                                                                                                                             |                                                                                                                                                                                                |
|----------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>Mark the position, drill the holes and install the wall plugs</p> |  <p>Mount the round bracket on the wall using the three fixing bolts</p> |  <p>Fixing Bolt<br/>Swing Bracket</p> <p>Install the swing bracket onto the base using the fixing bolt</p> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### WARNING:

- Ensure all items and screws are secure and fitted correctly.
- This floodlight is not dimmable.
- Floodlights should not be connected in series.

## QUFL10 - 10W 3CCT Selectable Quinetic LED Floodlight

The Quinetic Ultra Slim Floodlight comes with an integrated wireless Quinetic controller that can be paired with the Wireless Quinetic energy switch using any combination: a floodlight can be controlled by a maximum of 10 separate Quinetic switches/PIRs, a switch can pair with an unlimited number of floodlights. Multiple gang switches are supported, for separate floodlight control.

### QUINETIC PAIRING INSTRUCTIONS:

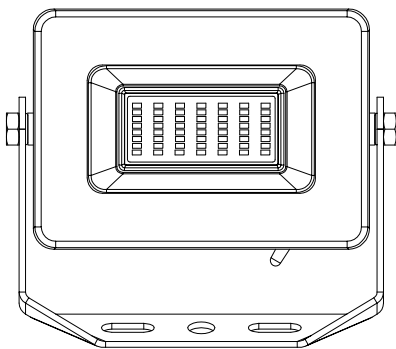 
1. Turn off the light by switching off mains then turn it back on again.
2. The light will enter in pairing mode for the first 10 seconds.
3. **a. Push Type Switch** (dimmable switch / Key Fob switch) - Press the switch quickly 3 times during the first 10 seconds then wait 5 more seconds for the switch to be paired with the floodlight.  
After 5 seconds you can press the switch to turn ON/OFF the floodlight and check if the pairing was successful.
- b. QUPIR Quinetic PIR** - Press and hold the pairing button on the PIR sensor for 3 seconds to enter the PIR pairing mode; the green LED sensor indicator will flash slowly (flashing once per second) and then release the button. Press the PIR pairing button quickly 3 times during the first 10 seconds (when the floodlight is in pairing mode) then wait 5 more seconds for the PIR to be paired with the floodlight.  
After 5 seconds you can move in front of the PIR to turn ON/OFF the floodlight and check if the pairing was successful.

**NOTE:** Do not press the switch again before the 5 seconds as this is the required time for pairing. If the switch is pressed again before the 5 seconds have passed the switch will not be paired with the floodlight and step 1 to 3 must be followed again.


4. In order to remove the floodlight stored pairing information follow steps 1 and 2 to enter pairing mode. Press the switch quickly 5 times (5 ON/OFF cycles for standard rocker switch) during the first 10 seconds until the floodlight flashes - this means that the wireless switch is now unpaired.

### Changing Colour Temperature:


Use the toggle switch at the bottom of the floodlight to change the colour temperature:



Left Position: 3000K

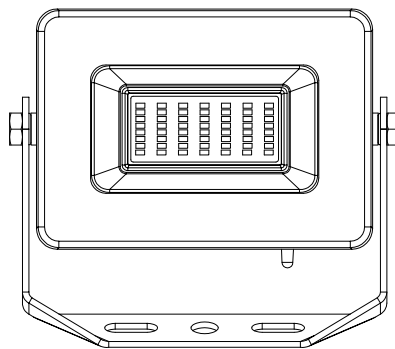 

Middle Position: 4000K

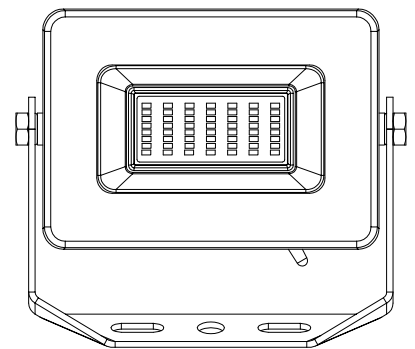 

Right Position: 6000K

### DIMENSIONS(mm):

