

Knightsbridge
the mark of quality

ML ACCESSORIES LTD
ML Accessories Limited
LUS 5TA
www.mlaccessories.co.uk

Screwless - 45A cooker control unit

These instructions should be read carefully and retained after installation for further reference and maintenance.

SAFETY

- Before installation/maintenance, ensure that the mains supply is switched off and the circuit fuses are removed or circuit breakers switched off
- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations and current Building Regulations. If in any doubt, consult a qualified electrician
- 230V 50Hz
- Do not overload this accessory or subject it to conditions outside its rating
- Please recycle


SCREWLESS FRONT PLATE FIXING

- Always ensure the wall surface is flat and smooth
- Remove the front plate by placing a medium size flat head screwdriver in the notch at the side and lever off gently. Fix the main unit to the back box using the fixing screws supplied
- Clip the front plate back onto the main assembly, ensuring the screwdriver notch is at the side
- The main unit is fitted with a gasket, this **MUST NOT** be removed, this gasket is to stop discolouration of the front plate due to natural moisture in some wall finishes
- To maintain the finish of this product, periodically wipe over with a soft dry cloth only

INSTALLATION

- Connect this accessory as per the relevant diagrams
- All Earth connections must be made and maintained. Use green/yellow sleeving on earth conductors that are not insulated
- Fit the unit into a suitable wall box taking care not to compress, damage or trap any cables, and secure with the screws provided
- Check all connections are secure


WIRING

- **L - LIVE** = red or brown
- **N - NEUTRAL** = black or blue
-  **EARTH** = green and yellow
- All Screwless products **MUST** have an earth connection between the front plate and back box
- Use green and yellow sleeving on earth conductors that are not insulated

***Note** – if your installation uses four lug metal mounting box, remove the top and bottom lugs or bend fully back
IF IN ANY DOUBT PLEASE CONSULT A QUALIFIED ELECTRICIAN


45A DP COOKER CONTROL UNIT

This product has no cable entry and should only be used for "hard" wired installations.

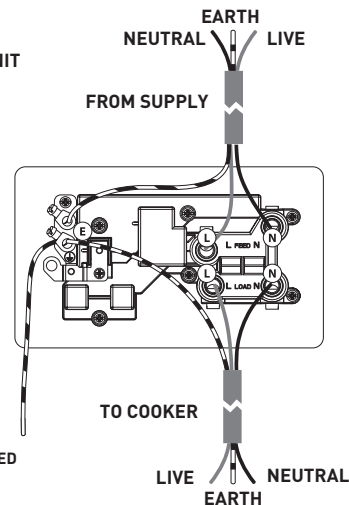

NOTE
THIS PRODUCT **MUST**
BE CONNECTED TO A
SEPARATE 45A PROTECTED
RADIAL CIRCUIT


45A DP SWITCH - DOUBLE PLATE

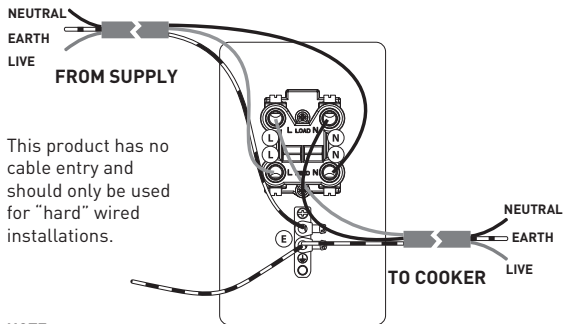

This product has no cable entry and should only be used for "hard" wired installations.

NOTE
THIS PRODUCT MUST BE CONNECTED TO A SEPARATE 45A PROTECTED RADIAL CIRCUIT

45A DP SWITCH - SINGLE PLATE

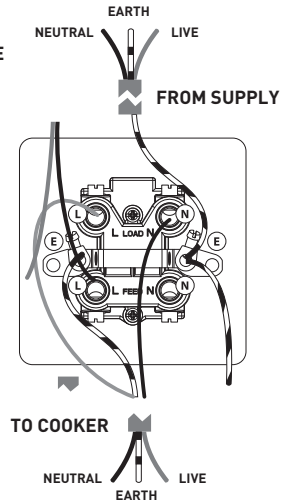

This product has no cable entry and should only be used for "hard" wired installations.

NOTE
THIS PRODUCT MUST BE CONNECTED TO A SEPARATE 45A PROTECTED RADIAL CIRCUIT

Knightsbridge
the mark of quality