

# Zip Scale Management

Drinking water filtration



Anti scale filter

- **Features**
- ✓ Eliminates scale up to a throughput of 3000 litres
- ✓ Easy to install
- ✓ Easy to change filter cartridge
- Tank exchange programme
- ✓ Replaces scale affected tanks and parts (HydroTap & Hydroboil) with clean ones



# Zip HydroTap / Hydroboil

# Scale Management Systems

Limescale filtration		Operating pressure	Operating temperature	Maximum capacity (litres)	Dimensions W x D x H (mm)
Filter housing / head / filter	FL3000	2-6 bar	4-30°C	3000	126 x 119 x 490
Replacement cartridge	FL3001	2-6 bar	4-30°C	3000	

- 4 stage filtration
  - Pre-filter to remove larger particles
  - Ion exchange filter medium
  - Activated carbon
  - Fine filter

### Ion exchange

Calcium and magnesium ions are selectively removed to prevent lime-scale deposits

#### Location

Can be installed vertically or horizontally

#### Use with HydroTap

Can be used in addition to or as a replacement to the integral submicron filter.

#### Filtration

10 micron

## **Approval**

WRAS

#### Note

FL3000 must only be used when the appliance is free from limescale

## Installation kit

 $\frac{1}{2}$ " BSP male straight adaptor and push fit stem reducer for connection to mains supply or HydroTap

½" BSP female to push fit adaptor for connection to mains supply or HydroTap

 $2 \times 3/8"$  BSP to push fit adaptors for connection to filter head


4 x push fit stem elbows for ease of installation (optional use)

2 metres 3/8" flexible nylon tubing


Circular retaining clip to support free end of filter assembly in horizontal installation

4x fixing screws

Internal filter blanking plug (optional use)

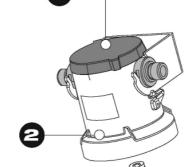

- 1. Wall mounting bracket
- 2. Filter head
- 3. Locking device
- 4. Shut-off valve on filter head
- 5. Pressure housing cap
- 6. Pressure housing
- 7. By-pass adjustment cap
- 8. Filter cartridge

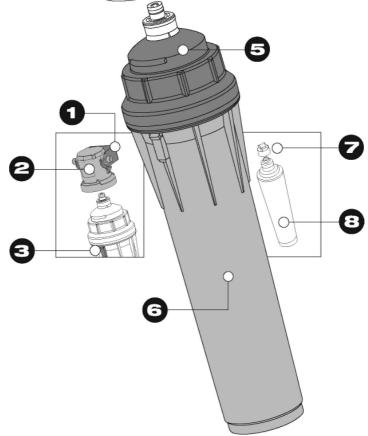

# Tank replacement programme

For customers who have either Zip Hydroboils or Zip HydroTaps that have accumulated scale build up, a specialised tank exchange system is available. Zip engineers will remove the tank assembly and replace it with a clean assembly that has been through the Zip descaling programme.

