


[600] Extension Group Assignment

Assigns an extension group for each extension. For example: by department or floor.

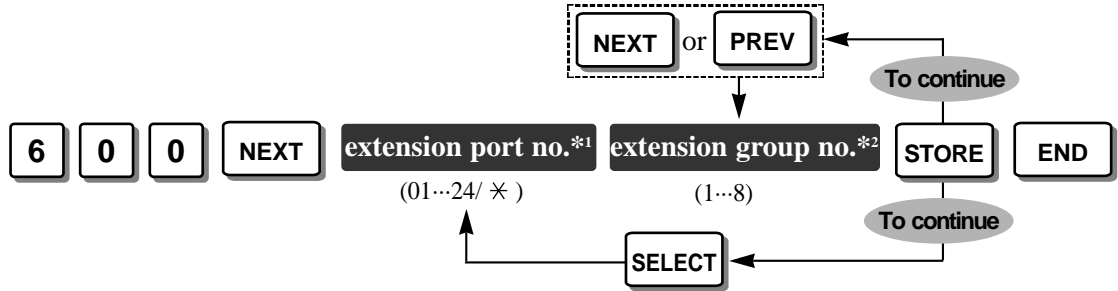

*1 Extension port number: 01 through 24 / * (All extension ports)

*2 Extension group number: 1 through 8

Default All extension ports – Extension group 1




- Every extension should belong to an extension group, but cannot belong to more than one group.



- **Feature References**
Section 3, Features
Extension Group, Extension Hunting

[601]-[603] Call Barring – Class of Service Assignment —Day/Night/Lunch

Programs a class of service (COS) in the day, night and/or lunch modes for each extension. There are 5 classes of service available for each extension.

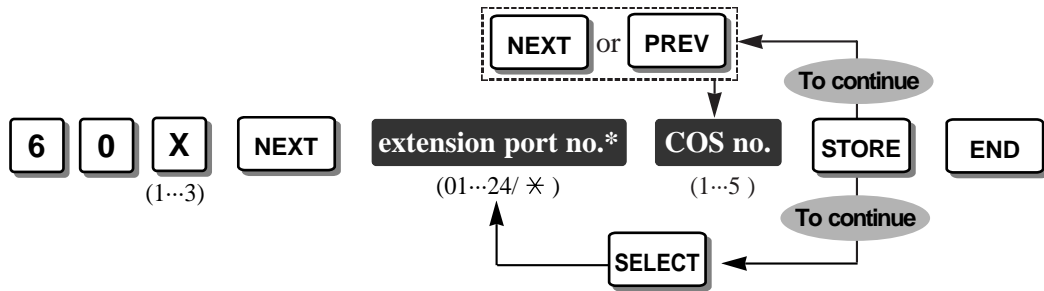

X – Program address selection number: 1 ([601] for day) / 2 ([602] for night) / 3 ([603] for lunch)

* Extension port number: 01 through 24 / * (All extension ports)


Default All extension ports – COS-1



- **Feature Reference**
Section 3, Features
Call Barring

[604] Extension Name Setting

Assigns a name to each extension which will be displayed when making or receiving an intercom call.

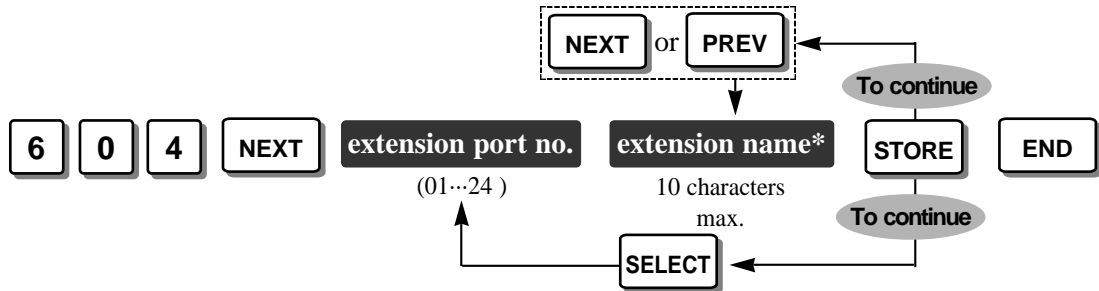

* Extension name:
Combination Table

Pressing SELECT (Times) Keys								
	0	1	2	3	4	5	6	
1	1	Q	q	Z	z	!	?	
2	2	A	a	B	b	C	c	
3	3	D	d	E	e	F	f	
4	4	G	g	H	h	I	i	
5	5	J	j	K	k	L	l	
6	6	M	m	N	n	O	o	
7	7	P	p	R	r	S	s	
8	8	T	t	U	u	V	v	
9	9	W	w	X	x	Y	y	
0	0		.	,	'	:	;	
*	*	"	+	-	=	<	>	
#	#	\$	%	&	@	()	

<Example>

— To enter “Mike”;

1. Press 6 and then press the SELECT button once to enter “M”.
2. Press 4 and then press the SELECT button 6 times to enter “i”.
3. Press 5 and then press the SELECT button 4 times to enter “k”.
4. Press 3 and then press the SELECT button 4 times to enter “e”.

Default All extension ports – Not stored.



- To erase all letters, press the CLEAR button. To erase 1 letter, press .
- Each name has a maximum of 10 characters.




- **Feature References**
Section 3, Features
Intercom Calling

[605] Account Code Entry Mode

Selects the account code input mode, **Option**, **Forced**, **Verify-All** or **Verify-Toll (Call Barring)**, for each extension port. This feature displays the account code of the called or calling party on the SMDR.

- Option:** The user can enter any account code, if needed.
- Forced:** The user must always enter an account code. The code can be any number.
- Verify-All:** The user must always enter an assigned account code in program [310] "Account Codes" to make an outside call.
- Verify-Toll (Call Barring):** The user can enter an assigned account code in program [310] to override call barring. The call barring COS numbers 3 through 5 will be changed temporarily to the COS number 2. (The COS numbers 1 and 2 will not be changed.)

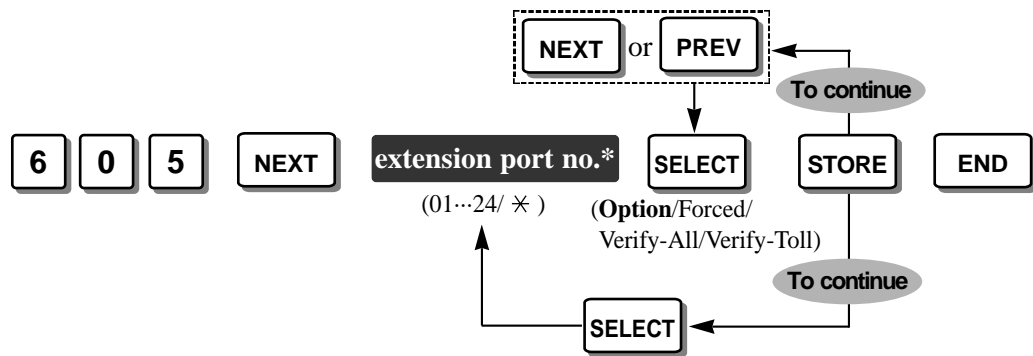

* Extension port number: 01 through 24 / * (All extension ports)

Default All extension ports – Option




• **Feature References**

Section 3, Features

Account Code Entry, Call Barring Override by Account Codes

[606] Call Transfer to an Exchange Line

Enables or disables transferring an intercom or outside call to any exchange line manually for each extension.

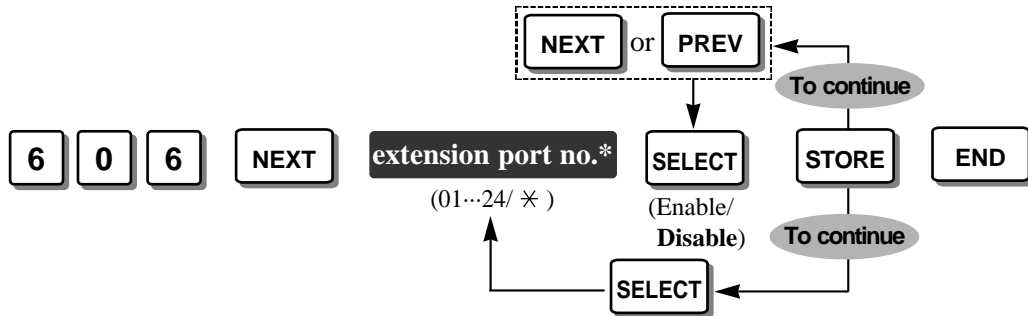

* Extension port number: 01 through 24 / * (All extension ports)

Default All extension ports – Disable




• **Feature References**

Section 3, Features

Call Transfer – to Exchange Line, Conference (3-party)

[607] Call Forwarding to an Exchange Line

Enables or disables automatically forwarding an incoming intercom or outside call to any exchange line for each extension.

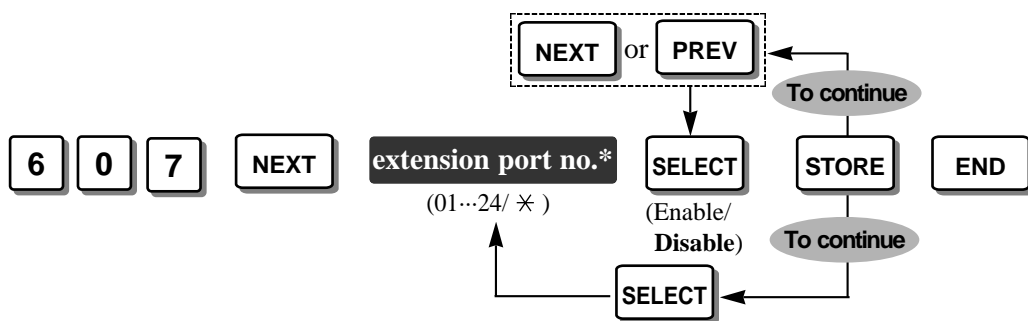

* Extension port number: 01 through 24 / * (All extension ports)

Default All extension ports – Disable




• **Feature Reference**

Section 3, Features

Call Forwarding

[608] Executive Busy Override

Enables or disables using the Executive Busy Override feature at each extension. If enabled, an extension user can interrupt an established call.

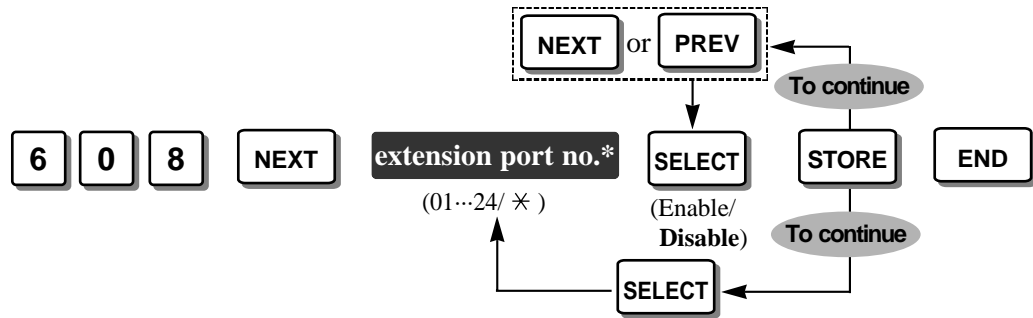

* Extension port number: 01 through 24 / * (All extension ports)


Default All extension ports – Disable



- **Feature Reference**
Section 3, Features
Executive Busy Override

[609] Do Not Disturb Override

Enables or disables using the Do Not Disturb Override feature at each extension. If enabled, an extension user can ring an extension which has set the Do Not Disturb feature.

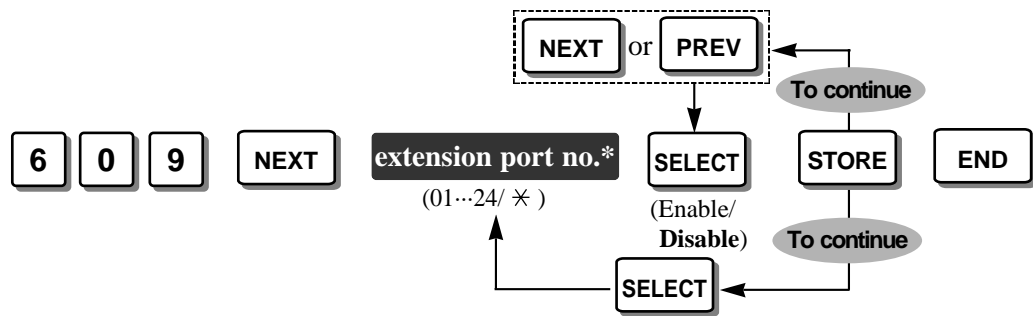

* Extension port number: 01 through 24 / * (All extension ports)


Default All extension ports – Disable



- **Feature Reference**
Section 3, Features
Do Not Disturb (DND)

[610] Paralleled Telephone Connection

Enables or disables a single line telephone (SLT) to be connected in parallel with a proprietary telephone.

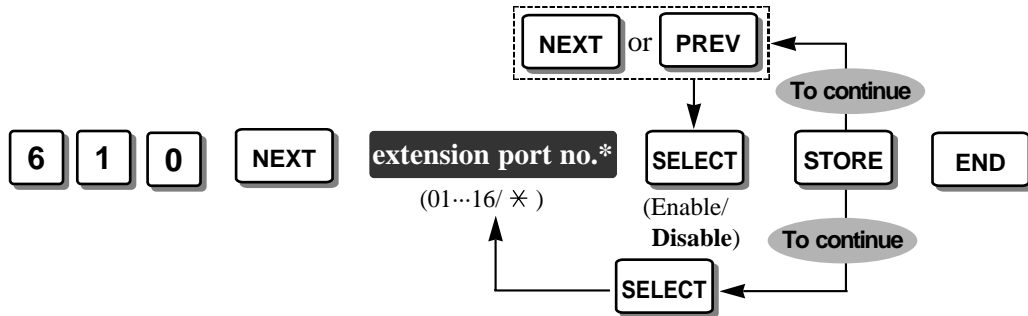

* Extension port number: 01 through 16 / * (All extension ports)


Default All extension ports – Disable



- **Feature Reference**
Section 3, Features
Paralleled Telephone Connection

[611] TAM (Telephone Answering Machine) Extension

Assigns the port number of an extension connected to a telephone answering machine (TAM) to activate the Call Retrieving from TAM feature.

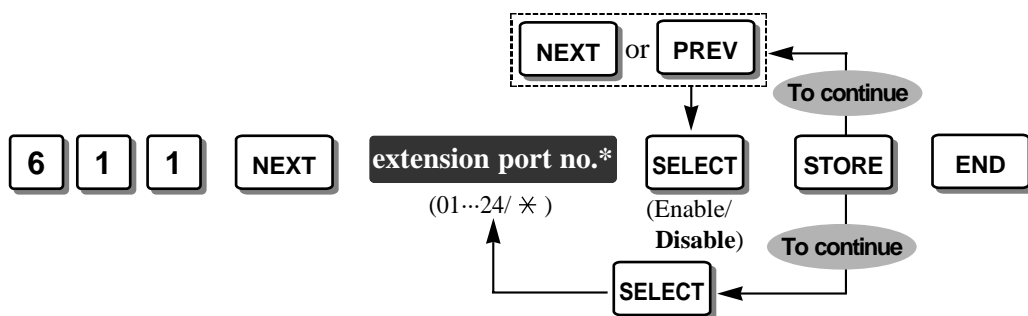

* Extension port number: 01 through 24 / * (All extension ports)


Default All extension ports – Disable (not connected)



- **Feature Reference**
Section 3, Features
Call Pickup

[612] Room Monitor Assignment

Enables or disables which extension(s) can be monitored using the Room Monitor feature.

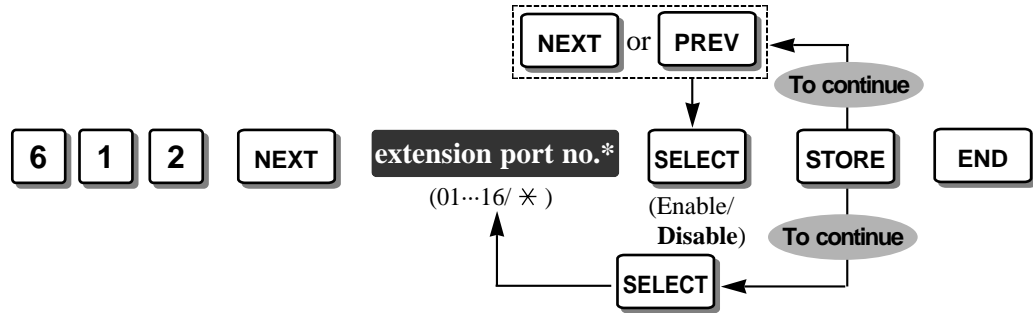

* Extension port number: 01 through 16 / * (All extension ports)


Default All extension ports – Disable (Cannot be monitored.)



- **Feature Reference**
Section 3, Features
Room Monitor

[613] Exchange Line Duration Time Limit Selection

Enables or disables the time limit programmed in [212] “Exchange Line Duration Time Limit” for each extension.

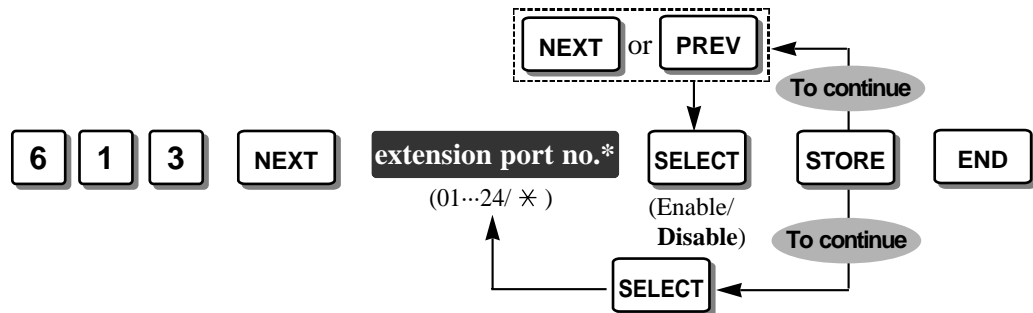

* Extension port number: 01 through 24 / * (All extension ports)


Default All extension ports – Disable



- **Feature Reference**
Section 3, Features
Limited Call Duration

[614] Internal Pulse Detection

Enables or disables connecting a single line telephone (SLT) to receive pulse signals for each extension.

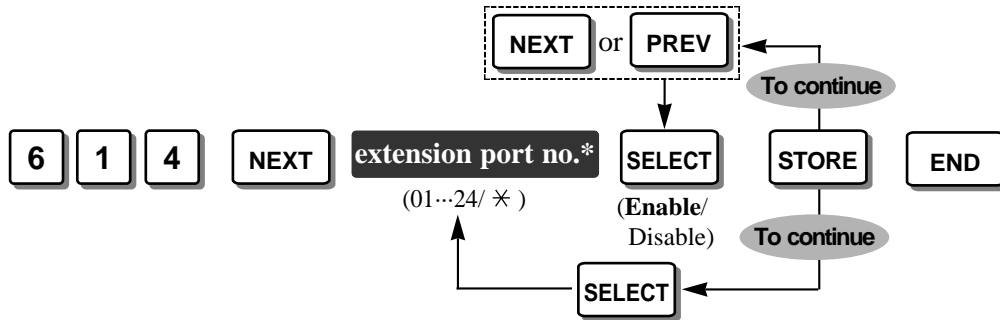

* Extension port number: 01 through 24 / * (All extension ports)

Default All extension ports – Enable




- If you select “MODE 1” in program [207] “Recall Timing Range Selection” and “Enable” in this program, the system will distinguish between a pulse signal and hooking depending on the situation. When you select “Disable” in this program, if “1” is dialed during the pulse mode, the system will regard it as hooking and all other numbers will be disregarded.



- **Feature Reference**
Section 3, Features
Recall Button on a Single Line Telephone

[615] LCD Language Assignment

Selects the language, **English, Spanish** or **Portuguese**, shown on the LCD display of a proprietary telephone on an extension basis. The selected language is shown during operation and Proprietary Telephone Settings.

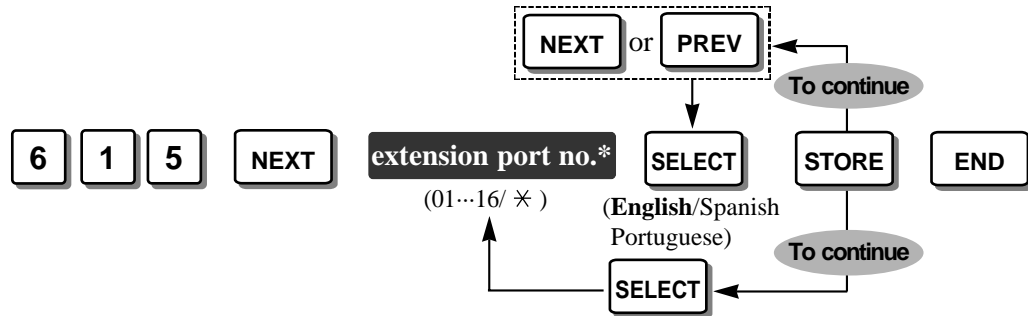

* Extension port number: 01 through 16 / * (All extension ports)

Default All extension ports — English




- The language used for the SMDR printout is assigned in program [806] “SMDR Language Assignment”.



- **Feature Reference**
Section 3, Features
Language Selection

[700]-[702] Doorphone Ringing Assignment—Day/Night/Lunch

Enables or disables receiving a call from up to 4 doorphones in the day, night and/or lunch modes for each extension.

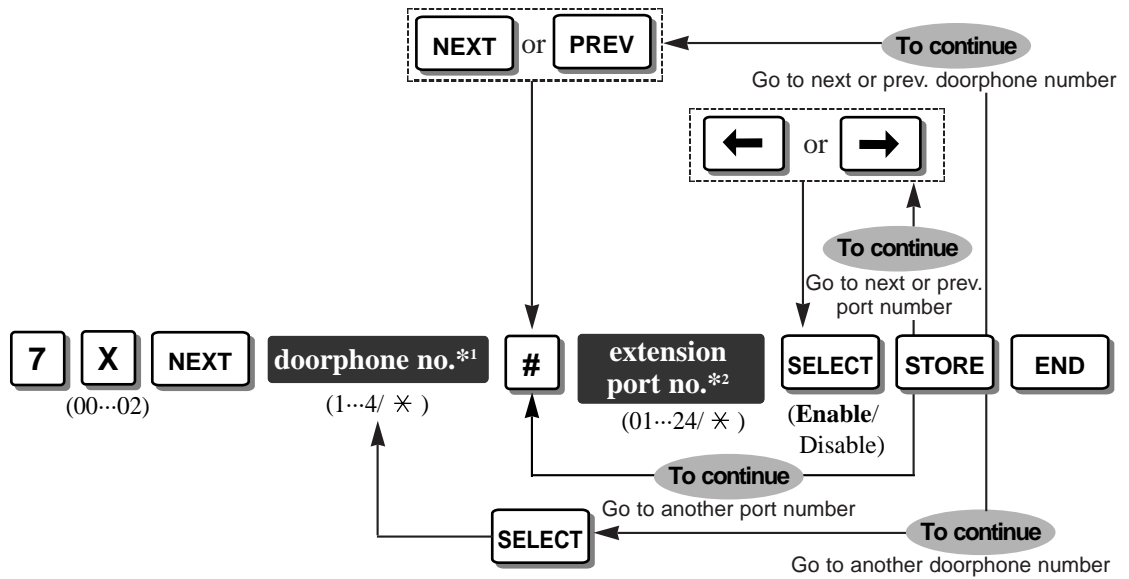

X – Program address selection number: 00 ([700] for day) / 01 ([701] for night) / 02 ([702] for lunch)

*1 Doorphone number: 1 through 4 / * (All doorphones)

*2 Extension port number: 01 through 24 / * (All extension ports)


Default All doorphones – all extension ports – Enable



- **Feature Reference**
- Section 3, Features
- Doorphone Call

[703]-[705] Door Opener Assignment—Day/Night/Lunch

Enables or disables accessing to up to 4 door openers in the day, night and/or lunch modes for each extension.

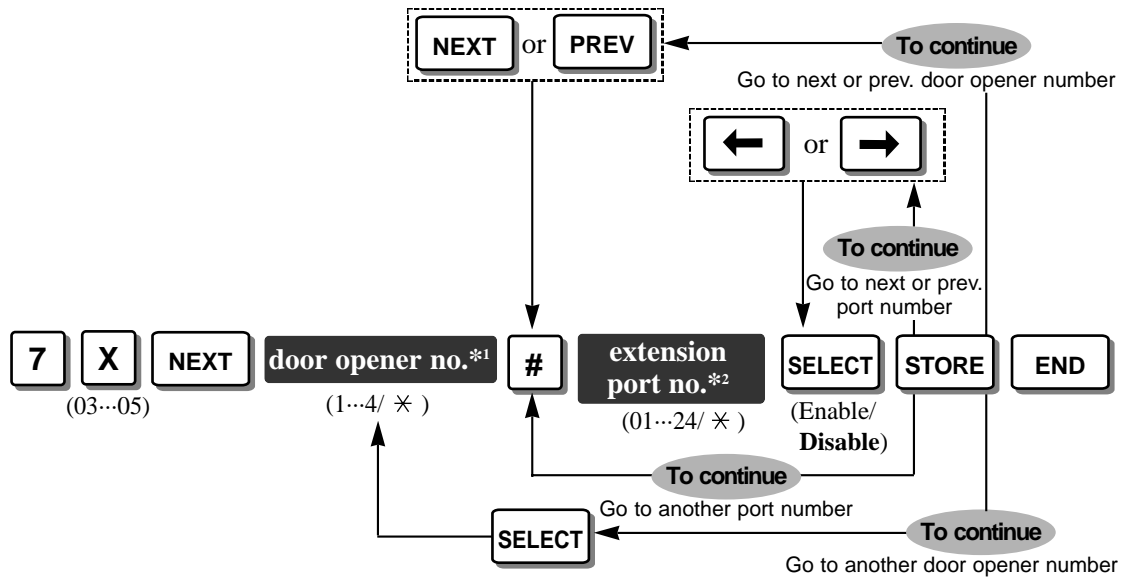

X – Program address selection number: 03 ([703] for day) / 04 ([704] for night) / 05 ([705] for lunch)

*1 Door opener number: 1 through 4 / * (All door openers)

*2 Extension port number: 01 through 24 / * (All extension ports)


Default All door openers – all extension ports – Disable



- **Feature Reference**
- Section 3, Features
- Door Opener

[706] Doorphone Ringing / Tone Pattern Selection

Selects the doorphone ringing pattern, **Single**, **Double**, **Triple** or **S-Double**.

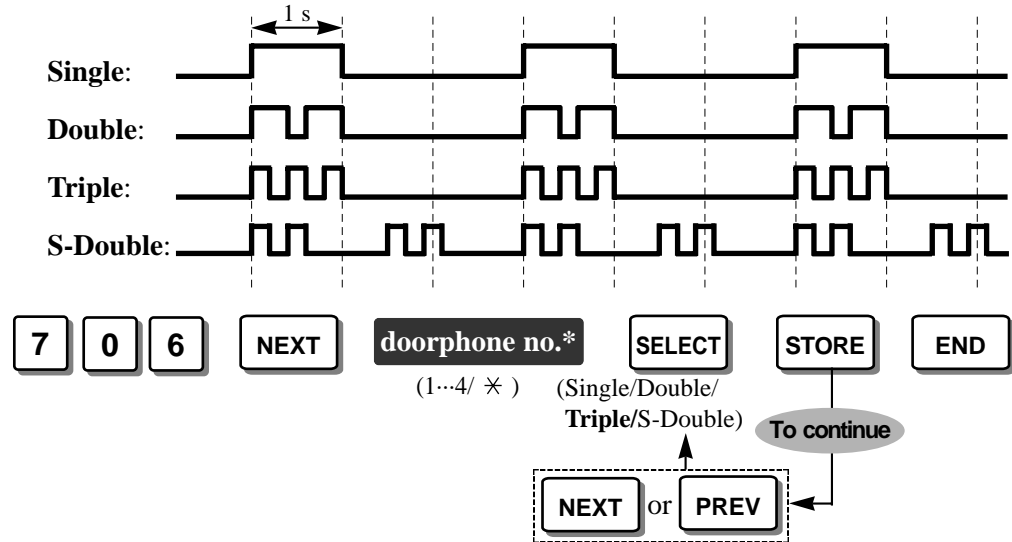

* Doorphone number: 1 through 4 / * (All doorphones)


Default All doorphones – Triple

! When a doorphone call is received at a proprietary telephone, a tone is heard instead of ringing.

☞ **Feature References**
Section 3, Features
Doorphone Call, Ringing Pattern Selection

[707] Doorphone Access Tone Selection

Enables or disables sending a doorphone access tone to a monitored doorphone. If enabled, the access tone is heard from the doorphone when monitoring from a telephone starts.

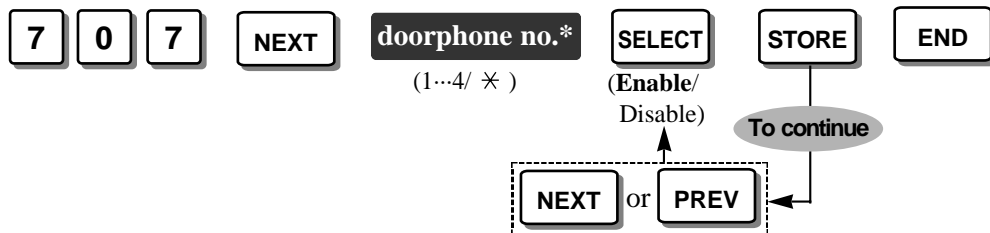


* Doorphone number: 1 through 4 / * (All doorphones)

Default All doorphones – Enable

☞ **Feature References**
Section 3, Features
Doorphone Call, Room Monitor

[708] Doorphone Ringing Time

Sets the ringing time when making an intercom call from a doorphone.

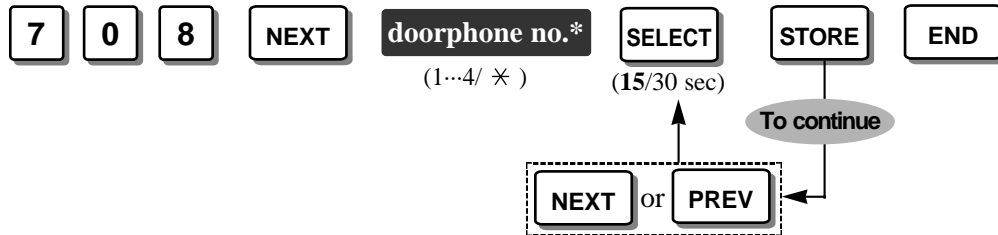

* Doorphone number: 1 through 4 / * (All doorphones)

Default All doorphones – 15 seconds



- **Feature Reference**
Section 3, Features
Doorphone Call

[709] Door Opener Time

Assigns the length of the door opener time. The door is unlocked for the assigned period of time.



* Door opener number: 1 through 4 / * (All door openers)

Default All door openers – 5 seconds



 
 
- **Feature Reference**
Section 3, Features
Door Opener

[801] SMDR Parameter

Assigns the following 2 printing parameters to match the SMDR output with the paper size used in the printer.

Page Length: Sets the number of lines per page.


Skip Perf: Sets the number of lines to be skipped at the end of every page.
(Perforation)



Default Page length – 66 lines
Skip perforation – 0 line

- ! The page length should be at least 4 lines longer than the skip perforation length.
- To correct a wrong entry, press the CLEAR button and enter the new one.

- ☞ **Feature Reference**
Section 3, Features
Station Message Detail Recording (SMDR)

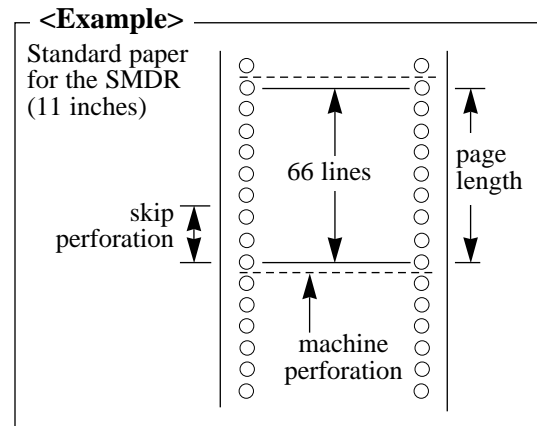

[802] Incoming/Outgoing Call Selection for Printing

Determines which calls will produce an SMDR printout.



*1 Outgoing: On (Print all calls) / Off (No printing) / Toll (Print toll calls only)

*2 Incoming: On (Print all calls) / Off (No printing)

Default Outgoing calls / Incoming calls – On

- ! If “Outgoing; Toll” is selected, only calls which are checked in programs [302]–[305] “Call Barring – Classes 2 through 5 Denied Codes” and are allowed, are printed out.

- ☞ **Feature Reference**
Section 3, Features
Station Message Detail Recording (SMDR)

[803] Secret Speed Dialling / One-Touch Dialling Printing

Selects to print or not print (on SMDR) secret dialling numbers stored in program [001] “System Speed Dialling Entry” and/or stored in One-Touch Dialling even though they are not displayed on the LCD.



Default No printing



• **Feature References**

Section 3, Features

Secret Dialling, Station Message Detail Recording (SMDR)

[804] System Data Dump

Starts and stops printing the assigned data. All or a specific area of current system-programmed data is printed out. The areas are as follows.

All Para: Prints out all data.

System Para: Prints out all data except for the following 4 parameters.

CO Para: Prints out programs [400] through [403] and [405] through [424].


Ext Para: If the extension is a proprietary telephone, programs [102], [516] [600] through [613] and [615] will be printed out. The assigned data on the PF (Programmable Feature) buttons and line keys will also be printed out. If the extension is a single line telephone, programs [102], [516] and [600] through [614] will be printed out. The assigned Personal Speed Dialling numbers are also printed out.

DSS Para: Prints out the assigned data in the DSS buttons and PF buttons on the DSS console.

Speed Dial: Prints out the System Speed Dialling numbers and names assigned in programs [001] and [011].

Stop Output : Stops printing.

< To select All parameters, System parameter, Speed dial and/or Stop output. >

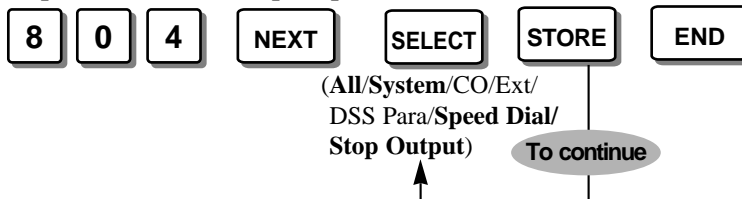

< To select the CO (exchange line) parameter. >



< To select the Extension parameter. >



< To select the DSS parameter. >



- *1 Exchange line number: 1 through 6 / * (All exchange lines)
- *2 Extension port number: 01 through 24 / * (All extension ports)
- *3 DSS console number: 1 through 2 / * (Both DSS console numbers)



• This program and [999] “System Data Clear” are not included.



- **Feature Reference**
 Section 3, Features
 Station Message Detail Recording (SMDR)

[805] SMDR Account Code Selection

Selects printing out the account code stored in program [310] “Account Codes”, or just the index of the account code on SMDR printout.



Default CODE



• The printing of the index of the account code only occurs if the extension user entered their account code in the “Verify-All” or “Verify-Toll (Call Barring)” input mode as programmed in [605] “Account Code Entry Mode”.



- **Feature References**
 Section 3, Features
 Account Code Entry, Station Message Detail Recording (SMDR)

[806] *SMDR Language Assignment*

Selects the language, **English**, **Spanish** or **Portuguese**, used for an SMDR printout.

8 **0** **6** **NEXT** **SELECT** **STORE** **END**

(English/Spanish
Portuguese)

Default English



• **Feature References**

Section 3, Features

Language Selection, Station Message Detail Recording (SMDR)

[998] *ROM Version*

Confirms the system ROM version.

9 **9** **8** **NEXT** **END**

Display example:


Y551JA 990620 (E)
| |
Version Date

[999] System Data Clear

Resets all or a specific area of the current assigned data to the default settings. The areas are as follows.

- All Para :** Resets all data to the default settings.
- System Para:** Resets all data to the default settings except for the data of the following 4 parameters.
- CO Para:** Resets programs [400] through [403] and [405] through [424] to the default settings on an exchange line basis.
- Ext Para:** Resets programs [102], [516] and [600] through [615] to the default settings on an extension basis.
- DSS Para:** Resets the assigned data on the DSS buttons and PF buttons on the DSS console.
- Speed Dial :** Resets the System Speed Dialling numbers (00 through 99) assigned in program [001].

< To select All, System parameter and/or Speed Dial. >

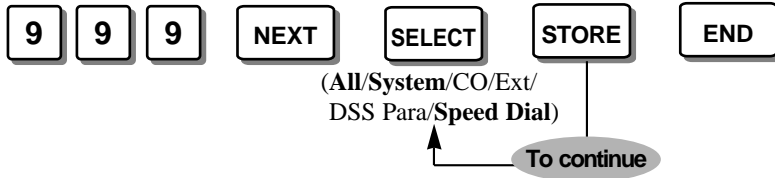

< To select the CO (exchange line) parameter. >



< To select the Extension parameter. >



< To select the DSS parameter. >



- *1 Exchange line number: 1 through 6 / * (All exchange lines)
- *2 Extension port number: 01 through 24 / * (All extension ports)
- *3 DSS console number: 1 through 2 / * (Both DSS console numbers)



• This program and [804] “System Data Dump” are not included.

• **Feature Reference**

Section 3, Features
System Data Default Set

