

Knightsbridge

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

Supplied By:
 (UK) Manufacturer: ML Accessories Ltd, Unit E, Chiltern Park, Boscombe Road, Dunstable, LUS 4LT, www.mlaccessories.co.uk
 (EU) SILV Lighting Group, Daimlerstraße 21-23, 52535 Libach-Palmborg, Germany
 Email: core@silv.com
 Made in China

DCAU622_V3

INSTALLATION

- Connect the accessory as per the diagram in this manual, ensuring the correct polarity is observed (terminal positions may vary)
- L** - LIVE - Brown
- N** - NEUTRAL - Blue
- EARTH** - Green and yellow
- All earth connections must be made and maintained. Use green/yellow sleeving on earth conductors that are not insulated.
- Check all electrical connections are secure with all exposed copper within the terminal and no loose or frayed conductors.
- Check the total load on the circuit including when this product is fitted does not exceed the rating of the circuit cable, fuse or circuit breaker.
- Do not overload this accessory or subject it to conditions outside its rating.
- Please note the IP (Degree Protection) rating of this product when deciding the location for installation.
- This product is for indoor use only.

SAFETY

- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician.
- Please isolate mains prior to installation or maintenance.
- Check the total load on the circuit including when this product is fitted does not exceed the rating of the circuit cable, fuse or circuit breaker.
- Do not overload this accessory or subject it to conditions outside its rating.
- Please note the IP (Degree Protection) rating of this product when deciding the location for installation.
- This product is for indoor use only.

WARNING!

This unit should NOT be subject to any insulation resistance testing, failure to follow this instruction could cause damage to the USB circuit and void the warranty.

GENERAL

This product should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

13A SOCKET WITH USB CHARGER

Clean with a soft dry cloth only, do not use aggressive cleaning products or solvents which may damage the product and invalidate the warranty.

13A SOCKET WITH QUAD USB CHARGER / QUAD USB CHARGER

13A SOCKET WITH USB AND BLUETOOTH SPEAKER / STAND ALONE BLUETOOTH SPEAKER

DUAL VOLTAGE SHAVER SOCKET

1A UNSWITCHED ROUND PIN SOCKET

13A SWITCHED SOCKET

CHARGING INDICATOR

Products with LED charge indicators will change colour depending on the level of current drawn by the connected device. The Red/Green status indicator gives an approximate charge reading - please refer to device battery level for true reading.

BLUETOOTH AUDIO SPECIFICATION

- Output Power: Max. 3W RMS
- Sensitivity: 1.0V 380mV
- SNR: -85dB
- Speaker Frequency Range: 200Hz - 16kHz

BLUETOOTH CONNECTION

- Press the power button directly under the speaker.
- Bluetooth indicator will begin to flash.
- Activate Bluetooth pairing on your mobile device and scan for Bluetooth devices.
- Connect to the device named: **SPEAKER, SPEAKER1, SPEAKER2**, etc.
- Once a connection has been established you will hear a "beep" sound and the Bluetooth indicator will flash at a different frequency to confirm.

! WARNING !

This unit should NOT be subject to any insulation resistance testing, failure to follow this instruction could cause damage to the USB circuit and void the warranty.

GENERAL

This product should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

OUTLETS WITH USB CHARGING FUNCTION

These products are designed for charging portable USB devices only, and contain a short circuit and overload protection feature. If there is no power from the USB socket supply the connected device. Check to ensure the USB socket and USB device have not come into contact with water, liquid or debris and the cable to the device is not damaged. With no device connected to the USB socket it will automatically reset and be ready for use.

WARNING

USB or Bluetooth products, dimmers, shaver sockets and products with LED or neon indicators must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed. Please note this kind of damage will void the warranty.

Please note that we do not recommend our 13A sockets be used for Electric Vehicle (EV) charging for prolonged periods.

METAL CLAD FIXING

- Remove front facplate and mount rear box in a suitable location. The back box has multiple 20mm cable entry points to aid installation.
- Wire as per the instructions in this document, and fix plate to back box using the screws provided.

FLAT PLATE, SCREWLESS AND RATCHED EDGE FIXING

- Always ensure the wall surface is flat and smooth.
- This unit is fitted with a gasket - this MUST NOT be removed, this gasket is to stop discolouration of the plate due to natural moisture in some wall finishes.
- This product must be fitted only after painting and decorating is complete.
- Switches products only - remove the front plate by placing a medium size flat-head screwdriver in the notch at the side and lever off gently. After wiring and fitting to the wall box as per the instructions in this document, clip the front plate onto the main assembly ensuring the screwdriver notch is at the side.

ML Accessories Limited Unit E, Chiltern Park, Boscombe Road, Dunstable, LUS 4LT www.mlaccessories.co.uk

2-WAY SWITCH

Terminal positions may alter

2-WAY SWITCH

2-WAY DIMMER

Terminal positions may alter

2-WAY DIMMER

13A FUSED SPUR

Live Earth Neutral

13A FUSED SPUR

20A SWITCH

Earth Live

20A SWITCH

4SA SWITCHES

Earth Live

4SA SWITCHES

COOKER CONTROL UNIT

Earth Live

COOKER CONTROL UNIT

These products have no cable entry and should only be used for "hard wired" installations.

2-WAY SWITCH

Terminal positions may alter

2-WAY SWITCH

2-WAY DIMMER

Terminal positions may alter

2-WAY DIMMER

13A FUSED SPUR

Live Earth Neutral

13A FUSED SPUR

20A SWITCH

Earth Live

20A SWITCH

4SA SWITCHES

Earth Live

4SA SWITCHES

COOKER CONTROL UNIT

Earth Live

COOKER CONTROL UNIT

These products have no cable entry and should only be used for "hard wired" installations.

2-WAY SWITCH

Terminal positions may alter

2-WAY SWITCH

2-WAY DIMMER

Terminal positions may alter

2-WAY DIMMER

13A FUSED SPUR

Live Earth Neutral

13A FUSED SPUR

20A SWITCH

Earth Live

20A SWITCH

4SA SWITCHES

Earth Live

4SA SWITCHES

COOKER CONTROL UNIT

Earth Live

COOKER CONTROL UNIT

These products have no cable entry and should only be used for "hard wired" installations.