

# System Highlights

## System Capacity

 
<b>Basic System</b>	Extensions	8
	Exchange lines	3
<b>Expansion</b>	Maximum extensions	24
	Maximum exchange lines	6

## Special System Points

### System Expansion

This system can expand the exchange lines and extension capacity by installing an optional card.


☞ 2-24

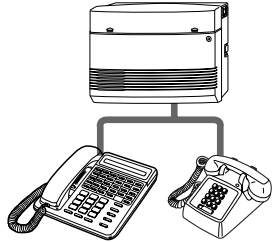

### Calling from the outside (Direct Inward System Access)


External callers can call extensions in the system. If you install an optional card, an outgoing message will greet the caller and give information about how to access an extension.

 ☞ 3-22

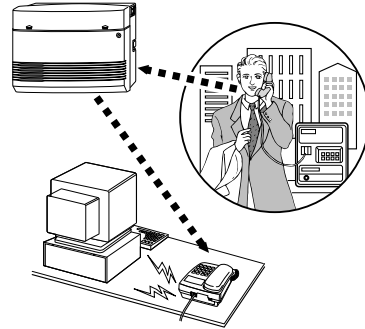

### Hybrid

 This system can accept Panasonic analogue proprietary telephones. Also, single line devices such as single line telephones, facsimiles and data terminals can be connected.

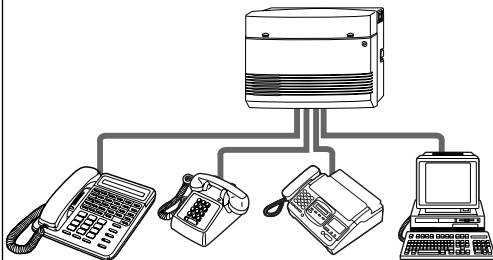

# Precautions

---

## **FOR YOUR SAFETY PLEASE READ THE FOLLOWING TEXT CAREFULLY.**

This appliance is supplied with a moulded three pin mains plug for your safety and convenience. A 5 amp fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5 amps and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained. A replacement fuse cover can be purchased from your local Panasonic Dealer.

**IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY.**

**THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13 AMP SOCKET.**


If a new plug is to be fitted please observe the wiring code as shown below. If in any doubt please consult a qualified electrician.

### **WARNING : THIS APPLIANCE MUST BE EARTHED.**

**IMPORTANT** : The wires in this mains leads are coloured in accordance with the following code:

Green-and-yellow:	Earth
Blue:	Neutral
Brown:	Live

 
As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows.

The wire which is coloured GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked with the letter E or by the safety earth symbol  or coloured GREEN or GREEN-AND-YELLOW.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

**How to replace the fuse** : Open the-fuse compartment with a screwdriver and replace the fuse and fuse cover.

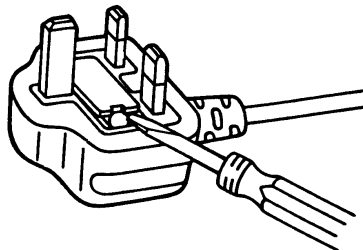

# *Precautions*

---

This equipment should be used on PSTN lines requiring 2-wire Loop calling unguarded clearing with Loop Disconnect or DTMF address signalling.

The equipment must be connected to direct extension lines and a payphone should not be connected as an extension.

## **Operation in Power Failure**

In the event of a power failure, two single line telephones connected to extension ports 01 and 09 will be directly connected to the following Exchange lines:

Exchange line 1 : extension port 01

Exchange line 4 : extension port 09

- Set the Dialling Mode (Tone or Pulse) of your telephone, according to the Exchange line.
- 999 and 112 can be dialled on the apparatus for the purpose of making outgoing calls to the BT emergency (999) and (112) service.

Satisfactory performance can not be guaranteed for every allowed combination of host and subsidiary apparatus.

999 and 112 can be dialled on the apparatus after accessing the Exchange line for the purpose of making outgoing calls to the BT emergency (999) and (112) service.

During dialling, this apparatus may tinkle the bells of other telephones using the same line. this is not a fault and we advise you not to call Fault Repair Service.

**‘Prevention of access by user.** This apparatus is intended to be accessible only to authorised personnel. This apparatus must be installed in a locked room or similar environment, such that user access is prevented. Failure to prevent such user access will invalidate any approval given to this apparatus.’

## **Caution:**

Do not push the PAUSE button more than twice following the initial access digit (or digits). Failure to comply with this requirement may result in unsatisfactory operation.

## **Notice:**

This PBX should only be used on B•T lines on which specific BT services or facilities are provided.

### **CAUTION**

**Danger of explosion if battery is incorrectly replaced.**

**Replace only with the same or equivalent type recommended by the manufacturer.**

**Dispose of used batteries according to the manufacturer’s instructions.**

## *Precautions*

---

- The apparatus is designed to be installed and operated under controlled conditions of ambient temperature and a relative humidity not greater than 60 %.
- Avoid installing the apparatus in damp or humid environments, such as bathrooms or swimming pools.
- The apparatus shall not be exposed to dripping or splashing.
- Keep the unit away from heating appliances and electrical noise generating devices such as fluorescent lamps, motors and televisions. These noise sources can interfere with the performance of the Advanced Hybrid System.
- This unit should be kept free of dust, moisture, high temperature (more than 40 °C) and vibration, and should not be exposed to direct sunlight.
- Never attempt to insert wires, pins, etc. into the vents or other holes of this unit.
- If there is any trouble, disconnect the unit from the telephone line. Plug a single line telephone into the telephone line. If the telephone operates properly, do not reconnect your system to the line until the system has been repaired. If the telephone does not operate properly, chances are that the problem is in the telephone network, and not in your system.
- Do not use benzine, thinner, or the like, or any abrasive powder to clean the cabinet. Wipe it with a soft cloth.

### **WARNING**

THIS UNIT MAY ONLY BE INSTALLED AND SERVED BY QUALIFIED SERVICE PERSONNEL.

WHEN A FAILURE OCCURS WHICH RESULTS IN THE INTERNAL PARTS BECOMING ACCESSIBLE, DISCONNECT THE POWER SUPPLY CORD IMMEDIATELY AND RETURN THIS UNIT TO YOUR DEALER.

DISCONNECT THE TELECOM CONNECTION BEFORE DISCONNECTING THE POWER CONNECTION PRIOR TO RELOCATING THE EQUIPMENT, AND RECONNECT THE POWER FIRST.

THIS UNIT IS EQUIPPED WITH AN EARTHING CONTACT PLUG. FOR SAFETY REASONS THIS PLUG MUST ONLY BE CONNECTED TO AN EARTHING CONTACT SOCKET WHICH HAS BEEN INSTALLED ACCORDING TO REGULATIONS.

THE POWER SUPPLY CORD IS USED AS THE MAIN DISCONNECT DEVICE, ENSURE THAT THE SOCKET-OUTLET IS LOCATED/INSTALLED NEAR THE EQUIPMENT AND IS EASILY ACCESSIBLE.

TO PREVENT THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

 
 
# Precautions

---

For your future reference

SERIAL NO. _____ DATE OF PURCHASE _____ (found on the bottom of the unit)
NAME OF DEALER _____
DEALER'S ADDRESS _____


**Note** • This Installation Manual does not show the complete model number that indicates the country where your equipment should be used. The model number of your unit is found on the label affixed to the unit.

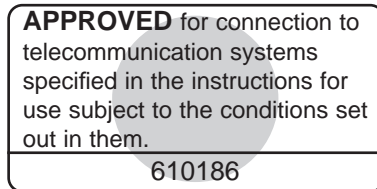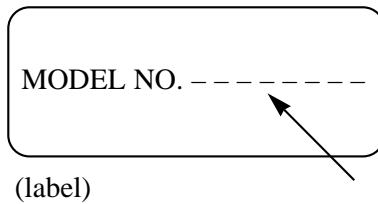

**Warning:**

This is a Class A Product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

 This unit complies with the EU Directives.

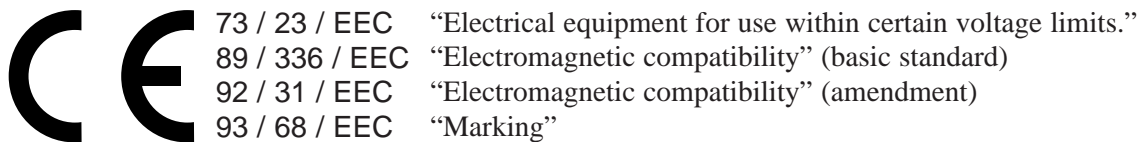

The CE mark on this unit certifies compliance with the above mentioned Directives.

# *Introduction*

---

## *Structure of the Manual*

This manual consists of the following sections:

### **Section 1. Basic System Construction**

Provides general information on the system including connection diagrams.

### **Section 2. Installation**

Contains the system installation and wiring instructions, as well as how to install the optional cards.

### **Section 3. Features**

Describes the optional and programmable features in alphabetical order. It also provides information about the conditions, required System Programming, connection references, related features and operating instructions references for every feature.

### **Section 4. System Programming**

Describes the steps required to assign features to extensions or to the system.

### **Section 5. Appendix**

Provides specifications and the default values of the System Programming.

### **Section 6. Troubleshooting**

Provides information for system and telephone troubleshooting.

### **Section 7. Programming Tables**

Provides programming tables for user-programmed data.

## *Description of the Symbols Mainly Used in this manual*



Additional information and conditions.



The feature or program references.

# Contents

---

## Section 1 Basic System Construction

### Section 2 Installation

2.1	Before Installation .....	2-2
2.2	Unpacking .....	2-4
2.3	Names and Locations .....	2-4
2.4	Wall Mounting .....	2-5
2.5	Frame Ground Connection .....	2-6
2.6	Opening the Top Front Cover .....	2-6
2.7	Exchange Line Connection .....	2-7
2.8	Extension Connection .....	2-10
2.9	External Pager (Paging Equipment) Connection .....	2-12
2.10	External Music Connection .....	2-13
2.11	Paralleled Telephone Connection .....	2-14
2.12	Polarity Sensitive Telephone Connection .....	2-15
2.13	Printer and PC Connection .....	2-16
2.14	Location of Optional Cards .....	2-19
2.15	OGM/FAX Detection Card Installation .....	2-19
2.16	Doorphone and Door Opener Connection .....	2-21
2.17	Installing a 3-CO Line & 8 Ext Expansion Card (KX-TA62477) and 8 SLT Extn. Expansion Card (KX-TA62474) .....	2-25
2.18	Auxiliary Connection for Power Failure Transfer .....	2-30
2.19	Securing the Cords .....	2-31
2.20	Closing the Front Cover .....	2-31
2.21	Starting the System for the First Time .....	2-32
2.22	System Restart .....	2-33
2.23	System Data Clear .....	2-34

### Section 3 Features

A	Absent Message Capability .....	3-2
	Account Code Entry .....	3-3
	Alternate Calling – Ring/Voice .....	3-3
	Automatic Callback Busy (Camp-On) .....	3-4
	Automatic Exchange Line Access Number .....	3-4
	Automatic Route Selection (ARS) .....	3-5
B	Busy Extension Signalling .....	3-10
C	Call Barring .....	3-11
	Call Barring — Extension Lock Boundary Class .....	3-13
	Call Barring for System Speed Dialling .....	3-13
	Call Barring Override by Account Codes .....	3-14
	Call Forwarding .....	3-15
	Calling Party Control (CPC) Signal Detection .....	3-15
	Call Park .....	3-16
	Call Pickup .....	3-17
	Call Splitting .....	3-17

# Contents

---

	Call Transfer – to Exchange Line .....	3-18
	Call Transfer – to Extension.....	3-18
	Call Waiting .....	3-19
	Conference (3-party) .....	3-20
	Conference (5-party) .....	3-21
<b>D</b>	Data Line Security .....	3-21
	Date and Time Setting .....	3-22
	Direct In Line (DIL).....	3-22
	Direct Inward System Access (DISA).....	3-22
	Display Contrast Adjustment (KX-T7130 only).....	3-28
	Distinctive Dial Tones .....	3-28
	Do Not Disturb (DND).....	3-29
	Door Opener .....	3-30
	Doorphone Call .....	3-30
	DSS Console.....	3-31
<b>E</b>	Emergency Call .....	3-32
	Exchange Line Ringing Selection .....	3-32
	Executive Busy Override.....	3-33
	Extension Button Confirmation (KX-T7130 only).....	3-33
	Extension Feature Clear .....	3-34
	Extension Group.....	3-35
	Extension Hunting .....	3-36
	Extension Lock.....	3-36
	Extension Password / System Password .....	3-37
	External Feature Access .....	3-38
<b>F</b>	Flexible Buttons.....	3-39
<b>H</b>	Handsfree Answerback.....	3-40
	Handsfree Operation.....	3-40
	Hold .....	3-40
	Host PBX Access.....	3-41
<b>I</b>	Intercept Routing .....	3-42
	Intercom Calling.....	3-42
<b>L</b>	Language Selection .....	3-43
	Limited Call Duration .....	3-43
	Line Access Keys .....	3-43
	Log-In/Log-Out .....	3-44
<b>M</b>	Message Waiting.....	3-45
	Microphone Mute .....	3-45
	Music on Hold / Background Music (BGM) .....	3-46
<b>O</b>	One-Touch Dialling .....	3-46
	Operator / Manager Extension .....	3-47
	Operator Call .....	3-47
	Outgoing Message (OGM).....	3-48
	Outside Calling.....	3-52



# Contents

---

<b>P</b>	Paging .....	3-53
	Parallelled Telephone Connection .....	3-54
	Personal Speed Dialling .....	3-54
	Pickup Dialling .....	3-55
	Polarity Reverse Detection .....	3-55
	Power Failure Transfer .....	3-56
	Preferred Line Assignment — Incoming .....	3-56
	Preferred Line Assignment — Outgoing .....	3-57
	Proprietary Telephone Setting Data Default Set .....	3-57
	Pulse to Tone Conversion .....	3-58
<b>R</b>	Recall .....	3-58
	Recall Button on a Single Line Telephone .....	3-59
	Receiving Calls .....	3-59
	Redial .....	3-60
	Ringing Pattern Selection .....	3-60
	Room Monitor .....	3-61
<b>S</b>	Secret Dialling .....	3-62
	Self-Extension Number Confirmation (KX-T7130 only) .....	3-62
	Station Message Detail Recording (SMDR) .....	3-63
	System Data Default Set .....	3-64
	System Speed Dialling .....	3-65
<b>T</b>	Timed Reminder .....	3-65
	Time (Day/Night/Lunch) Service .....	3-66
<b>U</b>	Uniform Call Distribution (UCD) .....	3-67
<b>V</b>	Voice Mail Integration for KX-TVP100 .....	3-71
	Volume Control .....	3-74
<b>W</b>	Walking COS .....	3-74

## **Section 4 System Programming**

<b>4.1</b>	<b>Before System Programming .....</b>	<b>4-2</b>
<b>4.2</b>	<b>System Programming .....</b>	<b>4-5</b>
	[000] Date and Time Setting .....	4-5
	[001] System Speed Dialling Entry .....	4-5
	[002] System Password .....	4-6
	[003] DSS Console Port Assignment .....	4-7
	[004] Paired Telephone Assignment for DSS Console .....	4-7
	[005] One-Touch Transfer Using a DSS Button .....	4-8
	[006] Time (Day/Night/Lunch) Service Changing Mode .....	4-8
	[007] Time (Day/Night/Lunch) Service Start Time .....	4-9
	[008] Operator Assignment .....	4-9
	[009] Extension Number Assignment .....	4-10
	[010] LCD Time Display Selection .....	4-11
	[011] System Speed Dialling Name Setting .....	4-12
	[012] Alternative Feature Numbering Plan .....	4-13
	[100] Hunting Group Set .....	4-14

# Contents

---

[101] Hunting Type.....	4-14
[102] Voice Mail Port for KX-TVP100.....	4-15
[103] DTMF Integration for KX-TVP100.....	4-16
[104] Hold Mode Selection .....	4-17
[105] Conference Tone .....	4-17
[106] External Paging Access Tone .....	4-18
[107] DTMF Receiver Check .....	4-18
[108] Recall Mode for a Locked Extension .....	4-18
[109] CO Indicator Assignment.....	4-19
[110] Recall Key Mode.....	4-19
[111] Hold Music Selection.....	4-20
[112] DSS Console Indication Mode .....	4-20
[115] Extension Ringing Pattern Selection .....	4-21
[116] Conference Pattern Selection .....	4-21
[117] Call Pickup Tone .....	4-22
[118] Pulse Restriction .....	4-22
[119] Redialling after Pulse to Tone Conversion .....	4-22
[120] Bell Frequency .....	4-23
[121] Automatic Exchange Line Access Number Selection .....	4-23
[122] Automatic Rotation for Exchange Line Access.....	4-23
[123] Break Ratio .....	4-24
[124] SLT Ringing Mode Selection.....	4-24
[125] Call Barring Check for * and #.....	4-24
[126] DSS Off-Hook Mode .....	4-25
[127] Pickup Group Set .....	4-25
[200] Hold Recall Time .....	4-26
[201] Transfer Recall Time.....	4-26
[202] Call Forwarding Start Time .....	4-27
[203] Pickup Dial Delay Time.....	4-27
[204] Call Duration Count Start Time .....	4-28
[206] Dialling Start Time.....	4-28
[207] Recall Timing Range Selection.....	4-29
[208] Interdigit Time.....	4-29
[210] DTMF Time .....	4-30
[211] No Dial Disconnection.....	4-30
[212] Exchange Line Duration Time Limit.....	4-31
[213] Bell Off Detection .....	4-31
[300] Carrier Excepted Code Assignment.....	4-32
[301] Call Barring – System Speed Dialling Boundary Class .....	4-32
[302]-[305] Call Barring – Classes 2 through 5 Denied Codes.....	4-33
[306] Call Barring – Exception Codes .....	4-34
[309] Emergency Dial Number Set .....	4-34
[310] Account Codes .....	4-35
[311] Automatic Pause Insertion Codes .....	4-35
[312] Call Barring – Extension Lock Boundary Class .....	4-36

# Contents

---

[350] ARS Selection .....	4-37
[351]-[354] Routes 1 through 4 Selection Codes (Leading Digits)..	4-37
[355]-[358] Routes 1 through 4 Exception Codes .....	4-38
[359] 1st Carrier Selection Code (BT Line Access Code).....	4-38
[360] ARS Modification – Removed Digits.....	4-39
[361] ARS Modification – Added Number .....	4-39
[362] ARS Dial Tone Pattern Selection.....	4-40
[363] ARS Interdigit Time.....	4-40
[364] ARS Trunk Group.....	4-41
[381]-[384] Routes 1 through 4 Authorisation Codes.....	4-42
[385]-[388] Routes 1 through 4 Itemised Bill.....	4-43
[389] Itemised Bill Code Assignment .....	4-43
[400] Exchange Line Connection Assignment.....	4-44
[401] Dial Mode .....	4-44
[402] Pulse Speed Selection .....	4-45
[403] Host PBX Access Codes.....	4-45
[404] Trunk Group Assignment.....	4-46
[405]-[407] Flexible Outward Dialling Assignment —Day/Night/Lunch .....	4-47
[408]-[410] Flexible Ringing Assignment —Day/Night/Lunch .....	4-48
[411]-[413] Delayed Ringing Assignment —Day/Night/Lunch .....	4-49
[414]-[416] Exchange Line Mode —Day/Night/Lunch.....	4-50
[417] Pause Time .....	4-51
[418] Recall Time .....	4-52
[419] Automatic Designated Exchange Line Access .....	4-52
[420] Calling Party Control (CPC) Signal.....	4-53
[421] CPC Detection for Outgoing Calls .....	4-54
[422] Disconnect Time .....	4-54
[423] Exchange Line Ringing Pattern Selection .....	4-55
[424] Reverse (Polarity) Circuit Assignment .....	4-56
[500] DISA Incoming Dialling Mode Selection .....	4-57
[501] DISA Built-in Auto Attendant .....	4-58
[502] OGM Mode Selection.....	4-59
[503] FAX Connection.....	4-60
[504] DISA Delayed Answer Time .....	4-60
[505] DISA Waiting Time after OGM.....	4-60
[506] DISA Busy Mode.....	4-61
[507] DISA Intercept Mode.....	4-61
[508] DISA Ringing Time before Intercept .....	4-62
[509] DISA Ringing Time after Intercept .....	4-62
[510] DISA No Dial Mode .....	4-63
[513] Cyclic Tone Detection.....	4-63
[514] FAX Tone Detection .....	4-64
[515] Intercept Time for Internal DISA .....	4-64

# Contents

---

[516] DISA Incoming Assignment .....	4-65
[517] DISA AA Wait Time .....	4-65
[519] DISA OGM Mute Time .....	4-66
[520] UCD Group .....	4-66
[521] UCD Busy Waiting Time .....	4-66
[522] UCD OGM Message Interval Time .....	4-67
[523] UCD Busy Mode.....	4-67
[524] UCD Intercept Mode.....	4-68
[525] UCD Ringing Time before Intercept .....	4-68
[526] UCD Ringing Time after Intercept .....	4-68
[600] Extension Group Assignment .....	4-69
[601]-[603] Call Barring – Class of Service Assignment —Day/Night/Lunch .....	4-69
[604] Extension Name Setting.....	4-70
[605] Account Code Entry Mode .....	4-71
[606] Call Transfer to an Exchange Line .....	4-72
[607] Call Forwarding to an Exchange Line .....	4-72
[608] Executive Busy Override .....	4-73
[609] Do Not Disturb Override .....	4-73
[610] Paralleled Telephone Connection.....	4-74
[611] TAM (Telephone Answering Machine) Extension .....	4-74
[612] Room Monitor Assignment.....	4-75
[613] Exchange Line Duration Time Limit Selection .....	4-75
[614] Internal Pulse Detection.....	4-76
[615] LCD Language Assignment.....	4-77
[700]-[702] Doorphone Ringing Assignment —Day/Night/Lunch ..	4-78
[703]-[705] Door Opener Assignment —Day/Night/Lunch .....	4-79
[706] Doorphone Ringing / Tone Pattern Selection .....	4-80
[707] Doorphone Access Tone Selection.....	4-80
[708] Doorphone Ringing Time .....	4-81
[709] Door Opener Time .....	4-81
[800] SMDR RS-232C Communication Parameters.....	4-82
[801] SMDR Parameter .....	4-83
[802] Incoming/Outgoing Call Selection for Printing.....	4-83
[803] Secret Speed Dialling / One-Touch Dialling Printing .....	4-84
[804] System Data Dump .....	4-84
[805] SMDR Account Code Selection .....	4-85
[806] SMDR Language Assignment.....	4-86
[998] ROM Version.....	4-86
[999] System Data Clear.....	4-87

# *Contents*

---

<b>Section 5</b>	<b>Appendix</b>	
5.1	Default Values .....	5-2
5.2	Specifications .....	5-7
<b>Section 6</b>	<b>Troubleshooting</b>	
6.1	While Installing .....	6-2
6.2	While Connecting .....	6-3
6.3	While Operating .....	6-4
<b>Section 7</b>	<b>Programming Tables</b>	
	<b>Template</b>	

*Section 1*  
*Basic System Construction*

# 1 Basic System Construction

The KX-TA624 has a basic capacity of 8 extensions and 3 exchange lines. It is capable of supporting Panasonic analogue proprietary telephones, and single line devices such as single line telephones, facsimiles and data terminals.

To expand its capabilities, the system can be equipped with optional components or customer-supplied peripherals such as an external speaker, external music source (e.g. a radio) and door opener.

## System Connection Diagram

