

**P611BS/SS 60 cm Built in fan
oven**
**P622BS/SS & P632BS/SS 60cm
Built in multifunction oven.**

INSTRUCTION MANUAL



User Manual for your Baumatic

P611BS/SS 60 cm 4 Function fan oven
P622BS/SS 60 cm 7 Function multifunction oven
P632BS/SS / W 60 cm 9 Function multifunction oven




NOTE: This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference; for you or any person not familiar with the operation of the appliance.

Contents

Environmental note	4
Important safety information	5 – 7
Specifications	8 - 11
P611BS/SS	8
P622BS/SS	9
P632BS/SS/W	10
Cooling fan	11
Control panel	12 - 13
Oven programmer/timer display	13
Setting and using the oven programmer/timer	13 - 19
Selecting manual operation mode	13
Setting the time of day	13
The oven timer	13
Before first use	14
Setting the minute minder function	15
Setting the duration function	16
Setting the end cook function	17
Setting the start and end time function	18
Adjusting the audible signal	19
Selecting a cooking function and temperature	19 - 23
Selecting manual operation mode	19
Selecting an oven function	19
P611BS/SS, P622BS/SS and P632BS/SS/W standard oven functions	20
P611BS/SS additional functions	20
P622BS/SS and P632BS/SS/W additional functions	20 -21
P632BS/SS/W additional functions	21
Thermostat control knob	21
Oven operating light	21
Cooking guidelines	22
Warnings	23
Cleaning and maintenance	24 - 26
Removable oven roof liner (P622BS/SS and P632BS/SS/W only)	25
Replacing the oven bulb	25
Removing the oven door for cleaning	26
Installation	27 - 29
Electrical connection	27
Installing the oven into the kitchen cabinet	28
Positioning the appliance	28
Ventilation requirements	29
My appliance isn't working correctly	30 -32
Cooking tables	32 – 37
Shelf levels	37
Contact details	38

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



- The packaging materials that Baumatic uses are environmentally friendly and can be recycled.
- Please discard all packaging material with due regard for the environment.

IMPORTANT SAFETY INFORMATION



Your safety is of the utmost importance to Baumatic. Please make sure that you read this instruction booklet **before** attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Baumatic Advice Line.

General Information

- This appliance is designed for domestic household use and can be built into a standard kitchen cabinet or housing unit.
- **IMPORTANT:** *The adjacent furniture or housing and all materials used in the installation **must** be able to withstand a minimum temperature of 85°C above the ambient temperature of the room it is located in, whilst in use.*
- Certain types of vinyl or laminate kitchen furniture are particularly prone to heat damage or discolouration at temperatures below the guidelines given above.
- Any damage caused by the appliance being installed in contravention of this temperature limit, or by placing adjacent cabinet materials closer than 4mm to the appliance, **will be the liability of the owner.**
- The use of this appliance for any other purpose or in any other environment without the express agreement of Baumatic Ltd. will invalidate any warranty or liability claim.
- Your new appliance is guaranteed against electrical or mechanical defects, subject to certain exclusions that are noted in Baumatic's Conditions Of Guarantee. The foregoing does not affect your statutory rights.
- **Repairs may only be carried out by Baumatic service engineers or their authorised service agent.**

Warning and safety instructions

- This appliance complies with all current European safety legislation. Baumatic do wish to emphasise that this compliance does not remove the fact that the appliance surfaces **will become hot during use and retain heat after operation.**

Child Safety

- Baumatic strongly recommend that babies and young children are prevented from being near to the appliance and not allowed to touch the appliance **at any time**.
- If it is necessary for younger family members to be in the kitchen, please ensure that they are kept under close supervision at all times.

General Safety

- **Do not** place heavy objects on the oven door or lean on the oven door when it is open, as this can cause damage to the oven door hinges.
- **Do not** leave heated oil or fat unattended, as this is a fire risk.
- **Do not** place pans or baking trays directly on the base of the oven cavity, or line it with aluminium foil.
- **Do not** allow electrical fittings or cables to come into contact with areas on the appliance that get hot.
- **Do not** use the appliance to heat the room it is located in or to dry clothing.
- **Do not** install the appliance next to curtains or soft furnishings.
- **Do not** attempt to lift or move cooking appliances by using the oven door or handle, as this may cause damage to the appliance or result in injury to the person lifting the appliance.

Cleaning

- Cleaning of the oven should be carried out on a regular basis.
- Great care should be taken whilst using this appliance and when following the cleaning procedure.
- **IMPORTANT:** *The appliance must be disconnected from the mains before following the cleaning procedure.*

Installation



This appliance must be correctly installed by a suitably qualified person, strictly in accordance with the manufacturer's instructions.

- ***Baumatic Ltd. declines any responsibility for injury or damage, to person or property, as a result of improper use or installation of this appliance.***
- Heat, steam and moisture will be created during use of the appliance, take care to avoid injury and ensure that the room is adequately ventilated. If the appliance is going to be used for prolonged periods of time, then additional ventilation may be required.
- Please consult with your qualified installer if you are in any doubt about the amount of ventilation that you will require.


Declaration of conformity

- In the parts destined to come into contact with foodstuffs, this appliance is in accordance with the requirements of the EC directive 89/109 transposed in the Italian Legislative Decree No. 108 of 25/01/92.
- **CE:** Appliance conforming to the European directives 89/336/EEC, 93/68/EEC, 73/23/EEC and subsequent revisions and "RoHS" directive 2002/95/CE.*
- The manufacturer declares that the oven is built using certified materials and requires the appliance to be installed in accordance with the standards currently in force. This appliance must be used by a trained person for domestic purposes only.

The RoHS directive stands for "the restriction of the use of certain hazardous substances in electrical and electronic equipment". This directive bans the placing on the EU market of new electrical and electronic equipment containing more than the agreed levels of lead, cadmium, mercury, hexavalent chromium, polybrominated biphenyl (PBB) and polybrominated diphenyl ether (PBDE) flame retardants.

Specifications

P611BS/SS

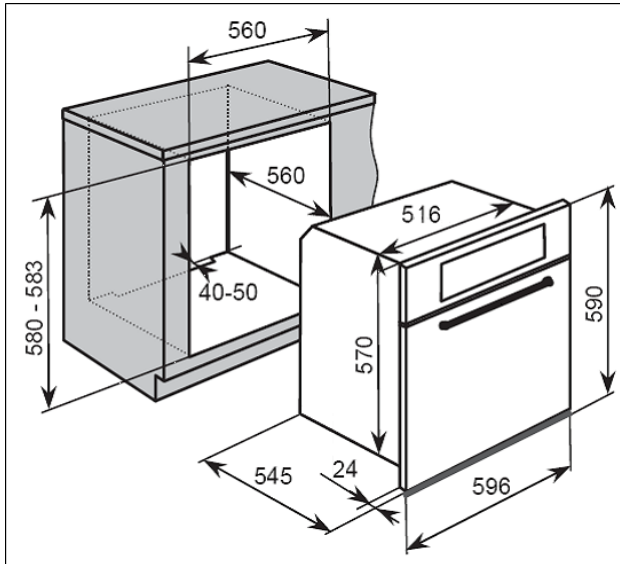

Product Dimensions

Height: 590 mm
Width: 596 mm
Depth: 545 mm

Aperture dimensions

Height: 580 – 583 mm
Width: 560 mm
Depth: 560 mm

Product specifications

- 4 oven functions
- Energy efficiency class: A
- Gross oven capacity: 59 litres
- Net oven capacity: 50 litres
- Oven light
- LED full programmer
- Cooling fan
- Thermostatically controlled grill
- Triple-glazed removable door
- Mark resistant coating (**P611SS only**)
- Wipeclean enamel cavity

Standard accessories

- Removable side racks
- Safety shelf
- Enamelled baking tray with handle
- Trivet

Optional extras

- TEL2KIT Telescopic runners kit
- SCL4KIT Stay-clean liners kit
- BPS2 Pizza stone

Electrical details

Rated Voltage:

230 Vac 50 Hz

Supply Connection:


13 A (double pole switched fused outlet with 3mm contact gap)

Max Rated Inputs:

2.40 kW

Mains Supply Lead:

3 x 1.5mm²

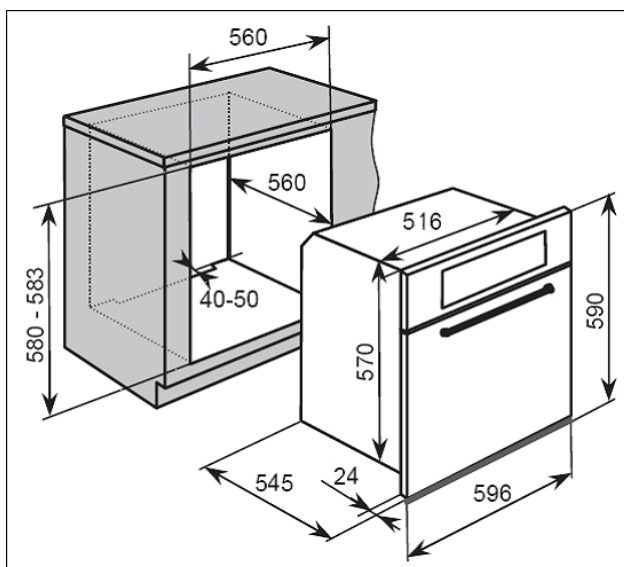P622BS/SS**Product Dimensions**

Height: 590 mm
Width: 596 mm
Depth: 545 mm

Aperture dimensions

Height: 580 – 583 mm
Width: 560 mm
Depth: 560 mm

Product specifications

- 7 oven functions
- Energy efficiency class: A
- Gross oven capacity: 59 litres
- Net oven capacity: 50 litres
- Oven light
- LED full programmer
- Cooling fan
- Thermostatically controlled grill
- Triple-glazed removable door
- Mark resistant coating
- Wipeclean enamel cavity

Standard accessories

- Removable side racks
- 2 x Safety shelves
- Enamelled baking tray with handle
- Trivet

Telescopic runners- 1 level

Optional extras

- SCL4KIT Stay-clean liners kit
- BPS2 Pizza stone

Electrical details**Rated Voltage:**

230 Vac 50 Hz

Supply Connection:


13 A (double pole switched fused outlet with 3mm contact gap)

Max Rated Inputs:

2.40 kW

Mains Supply Lead:

3 x 1.5mm²

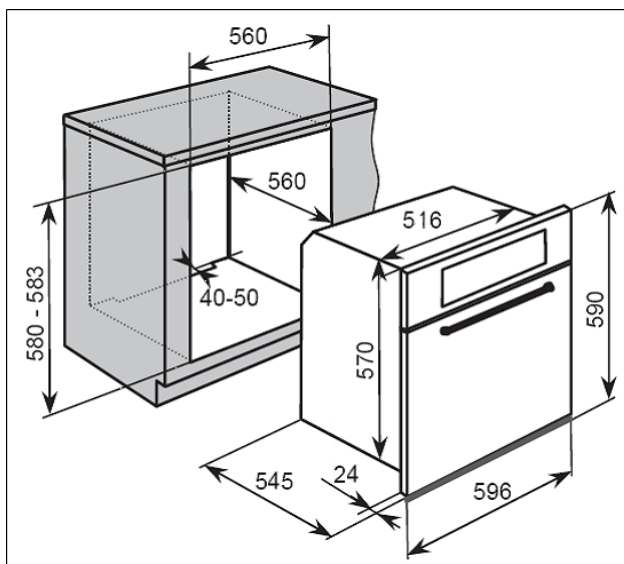P632BS/SS/W**Product Dimensions**

Height: 590 mm
Width: 596 mm
Depth: 545 mm

Aperture dimensions

Height: 580 – 583 mm
Width: 560 mm
Depth: 560 mm

Product specifications

- 9 oven functions
- Energy efficiency class: A
- Gross oven capacity: 59 litres
- Net oven capacity: 50 litres
- Oven light
- LED full programmer
- Cooling fan
- Thermostatically controlled grill
- Triple-glazed removable door
- Mark resistant coating **(P632SS only)**
- Wipeclean enamel cavity

Standard accessories

- Removable side racks
- 2 x Safety shelves
- 2 x Enamelled baking trays with handle
- Trivet
- Removable roof liner
- Telescopic runners- 2 levels
- BPS2 Pizza stone

Electrical details**Rated Voltage:**

230 Vac 50 Hz

Supply Connection:

16 A (double pole switched fused outlet with 3mm contact gap)

Max Rated Inputs:

3.30 kW

Mains Supply Lead:

3 x 1.5mm²

Oven Light Bulb:

25 W/300°C screw type pigmy

Cooling fan

- A tangential cooling fan is fitted inside of these appliances, to make the internal temperature of the oven stable and the external surface temperature lower.
- After you have finished cooking and switched off the oven, the cooling fan will continue to run for a period of time afterwards. The length of time will depend on how long the oven has been switched on for and at how high a temperature.

For future reference please record the following information which can be found on the rating plate and the date of purchase which can be found on your sales invoice. The rating plate for your oven can be located by opening the oven door and looking on the right hand side of the oven chassis.


Model Number

Serial Number


Date of Purchase

Control Panel


P611BS/SS

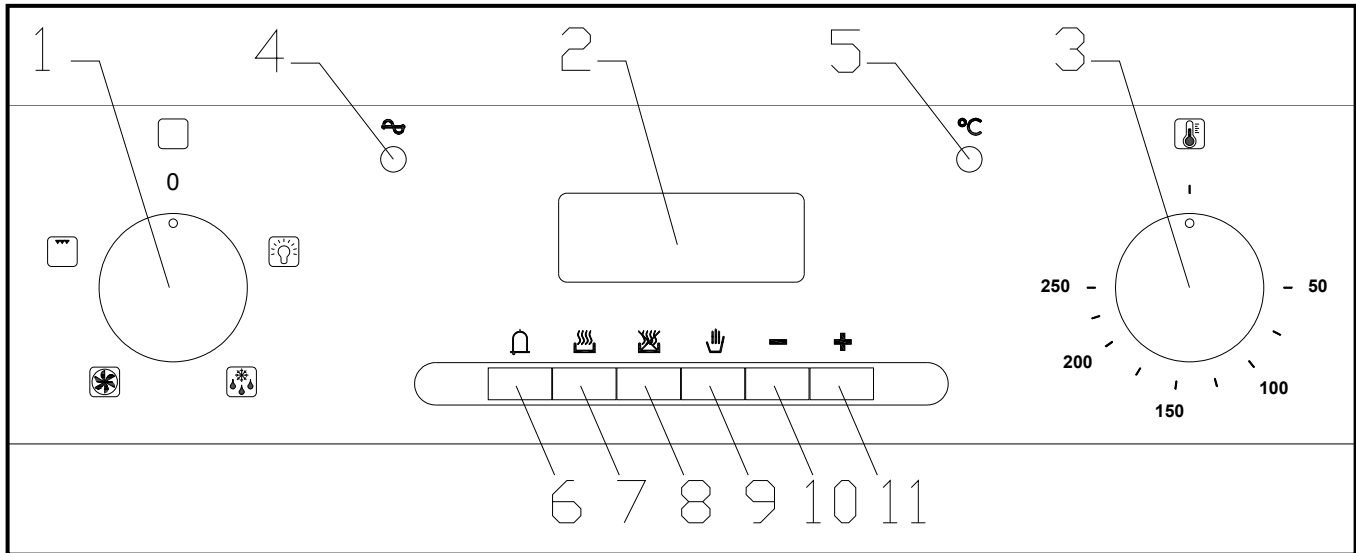

P622BS/SS

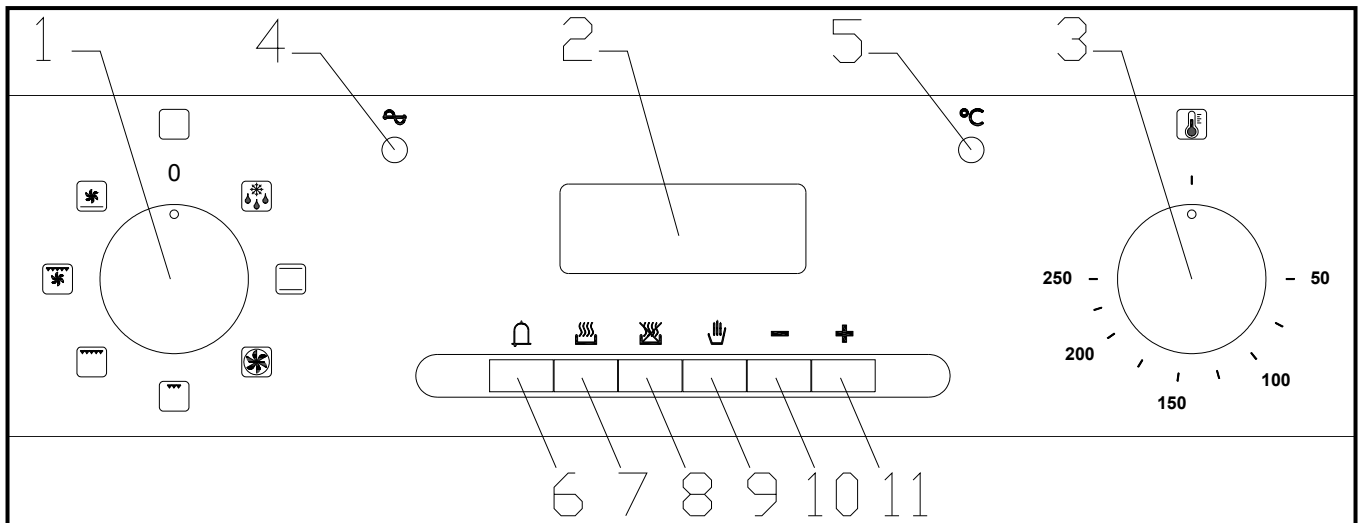


P632BS/SS/W

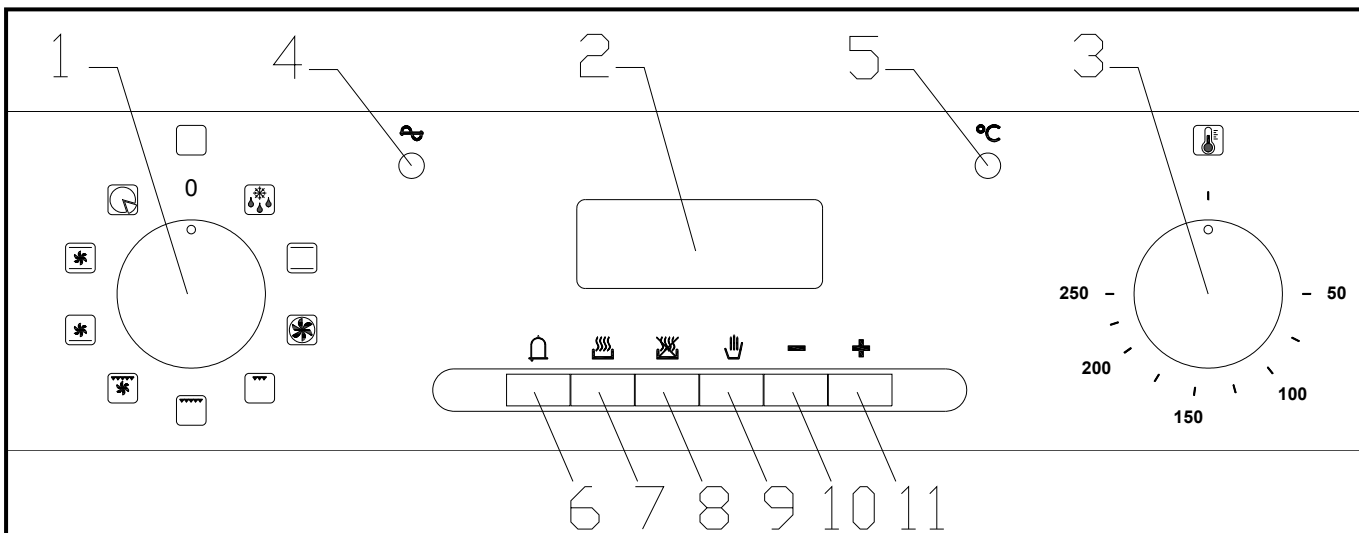

- 1) Oven function selector knob
- 2) LED display
- 3) Thermostat control knob
- 4) Power indicator light
- 5) Oven operating light
- 6) Timer minute minder button
- 7) Timer duration button
- 8) Timer end cook button
- 9) Timer manual operation button
- 10) Timer minus button
- 11) Timer plus button

Oven programmer/timer display

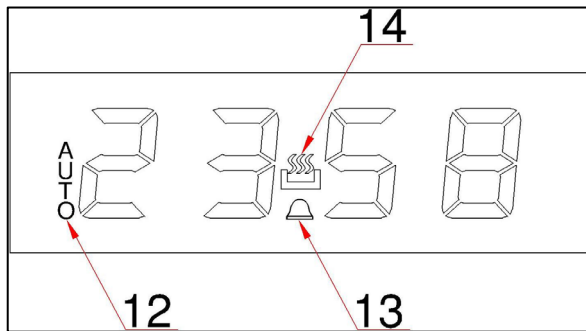

- 12) Auto function symbol
- 13) Minute minder symbol
- 14) Manual operation symbol.

Setting and using the oven programmer/timer

Selecting manual operation mode

After your appliance is connected to your mains supply for the first time, the numbers on the timer display will flash. Before you can select a cooking function or set a temperature, you must set the appliance into "manual operation" mode.

- To select manual operation mode, press the manual operation button **(9)** on the control panel.

Setting the time of day

After setting your oven for manual operation, you should also set the time of day.

- After pressing the manual operation button **(9)**, use the minus button **(10)** and plus button **(11)** to adjust the time that appears in the display. After getting the display to the correct time, release the minus and plus buttons. After a few seconds the time will fix in the display and you will be able to use your oven.

The oven timer

- Only the minute minder can be used with the defrost oven function. None of the other timer modes will work with the defrost function.

Before first use

- To remove any residue from the oven that may have been left from the manufacturing process, you should select the fan oven function and set the thermostat to its maximum temperature setting.
- It is perfectly normal for a smell to be produced during this process.
- You should make sure that any windows in the room are left open during this process.
- It is advisable for you not to remain in the room whilst the burning off process is taking place.
- You should leave the oven on maximum setting for 30 – 40 minutes.
- After the oven cavity has cooled, it should then be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.
- Outer parts of the oven should be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.
- We would recommend that an appropriate stainless steel cleaner and polish is regularly used on the stainless steel surfaces of this appliance.

Setting the minute minder function

You are able to set the minute minder at any time, regardless of whether an oven function has been selected. You can set a period of time using the minute minder function and an alarm will sound when that period of time has elapsed.

- Press the minute minder button **(6)**, the display will show a value of 00:00. Set the period of time that you wish the minute minder to countdown for, by using the minus **(10)** and plus **(11)** buttons.
- Once the display has got to your desired countdown time, let go of the minus and plus buttons. The minute minder symbol **(13)** will appear on the timer display.
- Once a countdown time has been set, it is possible to shorten or lengthen the time by using the minus or plus buttons.
- An alarm will sound when the countdown time has elapsed. The alarm can be silenced by pressing the minute minder button.
- ***Important:*** *The oven will continue to heat once the alarm has been silenced. If you have finished cooking, then you should turn the oven function selector and thermostat control knob to 0.*

Setting the duration function

This function will allow you to set a countdown time similar to the minute minder function. However the oven will no longer continue to heat, once the countdown period has elapsed.

- Use the thermostat control knob **(3)** to set the temperature that you require. The manual operation symbol **(14)** will appear on the display.
- Use the oven function selector knob **(1)** to select the mode of cooking that you require.
- It is then possible to set the duration of the cooking time that you require.
- Press the duration button **(7)** and the display will show a value of 00:00. Set the period of time that you wish the duration function to countdown for, by using the minus **(10)** and plus **(11)** buttons.
- Once the display has got to your desired countdown time, let go of the minus and plus buttons. The countdown will start immediately and the word AUTO will appear on the timer display.
- Once a countdown time has been set, it is possible to shorten or lengthen the time by using the minus or plus buttons.
- An alarm will sound when the countdown time has elapsed and the oven will switch off. The word AUTO will flash and the heating symbol will disappear. The alarm can be silenced by pressing the duration button.
- You will need to return the oven to manual operation mode, once the duration function has been used. To do this you should press the "manual operation" button, the word AUTO will disappear from the display and the manual operation symbol will appear instead.
- ***Important:*** *If you do not turn the thermostat control knob and oven function selector knob to 0, then the appliance will continue to operate as soon as you press the manual operation button.*

Setting the end cook function

This function is similar to the duration function, however instead of selecting a period of time that you wish the oven to switch off after. You select the time of day that you wish the oven to switch off at.

- Use the thermostat control knob **(3)** to set the temperature that you require. The manual operation symbol **(14)** will appear on the display.
- Use the oven function selector knob **(1)** to select the mode of cooking that you require.
- Press the end cook button **(8)** and the display will show a value of 00:00. Set the time of day that you wish the oven to stop cooking at by using the minus **(10)** and plus **(11)** buttons. The timer will calculate how long the cooking time will be, based on the time of day that you have selected and show it on the display.
- Once the display has got to the time of day that you want the oven to stop cooking at, let go of the minus and plus buttons. The countdown will start immediately and the word AUTO will appear on the timer display.
- When the time is set, it can be modified by pressing the minus and plus buttons.
- When the time of day reaches the end of cooking time that you set, the oven will switch off and an alarm will sound. The word AUTO will flash and the heating symbol will disappear. The alarm can be silenced by pressing the "end cook" button.
- You will need to return the oven to manual operation mode, once the end cook function has been used. To do this you should press the manual operation button, the word AUTO will disappear from the display and the manual operation symbol will appear instead.
- ***Important:*** *If you do not turn the thermostat control knob and oven function selector knob to 0, then the appliance will continue to operate as soon as you press the "manual operation" button.*

Setting the start and end time function

This function will allow you to set a time in the future that the oven switches on at and a time that the oven will switch off at.

- Use the thermostat control knob **(3)** to set the temperature that you require. The manual operation symbol **(14)** will appear on the display.
- Use the oven function selector knob **(1)** to select the mode of cooking that you require.
- Press the duration button **(7)** and the display will show a value of 00:00. Set the period of time that you wish to cook for, by using the minus **(10)** and plus **(11)** buttons. The word AUTO will appear on the timer display.
- ***Immediately*** press the end cook button **(8)** and the timer display will show the value 00:00. Set the time of day that you want the oven to switch off at, using the minus and plus buttons.
- The oven will calculate what time it needs to switch on at, so that your food will cook for the length of time that you selected. It will automatically switch itself on, once it reaches the time of day that it has calculated.
- When the time of day reaches the end of cooking time that you set, the oven will switch off and an alarm will sound. The word AUTO will flash and the heating symbol will disappear. The alarm can be silenced by pressing the end cook or duration button.
- You will need to return the oven to manual operation mode, once the start and end time function has been used. To do this you should press the manual operation button, the word AUTO will disappear from the display and the manual operation symbol will appear instead.
- ***Important:*** *If you do not turn the thermostat control knob and oven function selector knob to 0, then the appliance will continue to operate as soon as you press the manual operation button.*

Adjusting the audible signal

- The audible signal has three different settings, low, medium and high.
- To adjust the level of the audible signal, make sure that the timer is in manual mode. Then press and hold the minus button and you will hear the current level that is set.
- Press the minus button again and the audible signal will adjust to the next level.
- When the required level of audible signal is reached, release the minus button and it will be set.

Selecting a cooking function and temperature


Selecting manual operation mode

After your appliance is connected to your mains supply for the first time, the numbers on the timer display will flash. Before you can select a cooking function or set a temperature, you must set the appliance into "manual operation" mode.


- To select manual operation mode, press the manual operation button **(9)** on the control panel.

Selecting an oven function


P611BS/SS

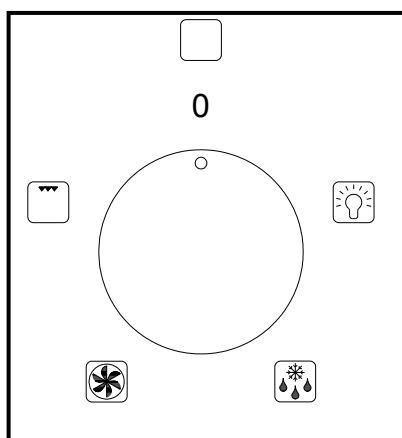

P622BS/SS

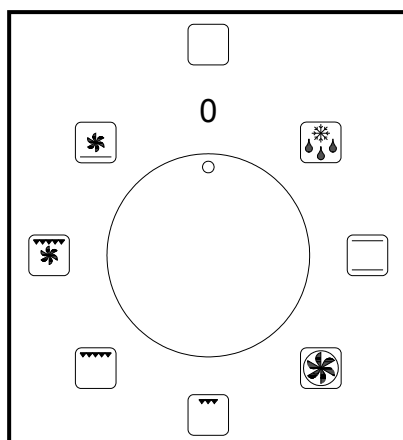

P632BS/SS/W

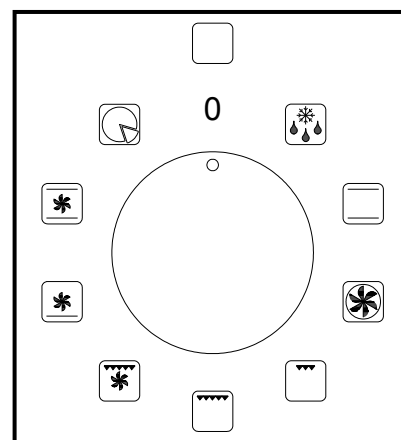

- The oven function selector knob should be used to select the particular mode of cooking that you require. The appliance will utilise different elements within the oven cavity, depending on the oven function that you select. When a function is selected, the power indicator light will come on.


P611BS/SS, P622BS/SS and P632BS/SS/W standard oven functions



DEFROST MODE: The fan runs without heat to reduce the defrosting time of frozen foods. The time required to defrost the food will depend on the room temperature, the quantity and type of food. Always check food packaging for the defrosting instructions.



FAN OVEN: This method of cooking uses the circular element while the heat is distributed by the fan. This results in a faster and more economical cooking process. The fan oven allows food to be cooked simultaneously on different shelves, preventing the transmission of smells and tastes from one dish on to another.




GRILL MODE: This method of cooking utilises the inner sections of the top element, which directs heat downwards onto the food. This function is suitable for grilling portions of bacon, toast and meat etc.

P611BS/SS additional functions




LIGHT MODE: Separate light control which allows the oven light to be switched on, even when the oven is not heating.

P622BS/SS and P632BS/SS/W additional functions



CONVENTIONAL OVEN (top and lower element): This method of cooking provides traditional cooking, with heat from the top and lower elements. This function is suitable for roasting and baking on one shelf only.



FULL GRILL: This method of cooking utilises the inner and outer parts of the top element, which directs heat downwards onto the food. This function is suitable for grilling medium or large portions of sausages, bacon, steaks, fish etc.



FAN AND LOWER ELEMENT: This method of cooking utilises the bottom element in conjunction with the fan, which helps to circulate the heat. This function is suitable for sterilizing and preserving jars.



FAN AND GRILL: This method of cooking utilises the top element in conjunction with the fan, which helps to provide a quick circulation of heat. This function is suitable where quick browning is required and "sealing" the juices in, such as steaks, hamburgers, some vegetables etc.

P632BS/SS/W additional functions




PIZZA MODE: This method of cooking uses the lower and circular element while the heat is distributed by the fan reproducing the same conditions of traditional clay wood-fire stoves.




CONVECTION OVEN AND FAN: This method of cooking provides traditional cooking with heat from the top and the lower element, it also utilises the circulation fan. This ensures a fast and even distribution of the heat. Suitable for light and delicate baking, such as pastries.

Thermostat control knob

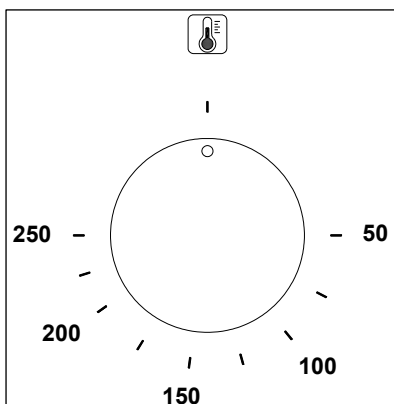

The oven thermostat control knob sets the required temperature of the oven. It is possible to regulate the temperature within a range of 50 - 250°C.

Oven operating light

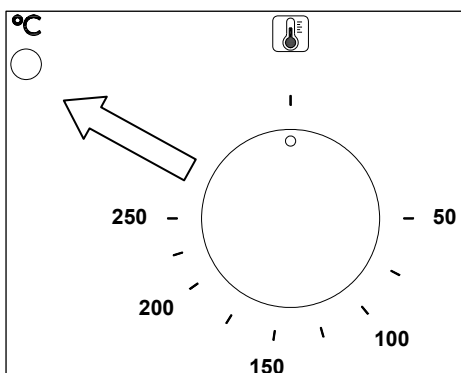

This light will come on to indicate that the oven's heating elements are in operation. The light will turn off when the temperature set on the thermostat control knob has been reached. It will cycle on and off throughout the cooking time.

You should not place food inside the cavity, until the correct cooking temperature has been reached.

Cooking guidelines

- Please refer to the information given on food packaging for guidance on cooking temperatures and times. Once familiar with the performance of your appliance, temperatures and times can be varied to suit personal preference.
- If you are using the fan oven function, then you should follow the information given on the food packaging for this particular mode of cooking.
- You should pre-heat the oven and not place food inside of it until the oven operating light has gone off. You can choose not to pre-heat when using the fan oven mode; however you should extend the cooking time given on the food packaging by at least ten minutes.
- ***IMPORTANT:*** *You should pre-heat the oven if you are baking no matter what oven function you are using.*
- If there is no guidance given on the food packaging specifically for cooking in fan oven mode, you can generally reduce the cooking time and temperature by 10% from the information given for conventional oven cooking.
- Make sure that frozen foods are thoroughly thawed before cooking, unless the instructions on the food packaging advise that you can “cook from frozen”.
- Before cooking, check that any accessories that are not required are removed from the oven.
- Place cooking trays in the centre of the oven and leave gaps between the trays to allow air to circulate.
- Try to open the door as little as possible to view the dishes.
- The oven light will remain on during cooking.

Warnings

- Keep the oven door closed when using **any** of the cooking functions, **including** the grill functions.
- Do not use aluminium foil to cover the enamelled baking tray or heat items wrapped in aluminium foil under the grill. The high reflectivity of the foil could potentially damage the grill element.
- You should also never line the base of your oven with aluminium foil.
- During cooking, never place pans or cookware directly onto the bottom of your oven. They should always be placed on the shelves provided.
- The grill heating element and other internal components of the oven become extremely hot during operation, avoid touching them inadvertently when handling the food which you are grilling.
- **Important:** *Be careful when opening the door, to avoid contact with hot parts of the oven and steam.*
- The baking tray handle should only be used to reposition the drip tray and **NOT** for removing it from the oven cavity.
- The baking tray handle should not be left in position when the appliance is switched on.
- When removing the baking tray, you should **ALWAYS** use an oven glove.
- **Warning:** *Accessible parts may become hot during use. Young children should be kept well away from the oven when it is in use.*



Cleaning operations must only be carried out when the oven is cool.

The appliance should be disconnected from your mains supply before commencing any cleaning process.

- The oven should be thoroughly cleaned before it is operated for the first time and after each use. This will avoid residual food stuffs becoming baked on the oven cavity. After residues have been baked on several times, they are far more difficult to remove.
- ***Never*** clean the oven surfaces by steam cleaning.
- The oven cavity should only be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.
- Any stains that may appear on the bottom of the oven will have originated from food splashes or spilt food, these splashes occur during the cooking process. These could possibly be a result of the food being cooked at an excessively high temperature or being placed in cookware that is too small.
- You should select a cooking temperature that is appropriate for the food that you are cooking. You should also ensure that the food is placed in an adequately sized dish and that you use the enamelled baking tray where appropriate.
- Outer parts of the oven should only be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.
- We would recommend that an appropriate stainless steel cleaner and polish is regularly used on the stainless steel surfaces of this appliance.
- If you use any form of oven cleaner on your appliance, then you must check with the manufacturer of the cleaner that it is suitable for use on your appliance.
- ***Any damage that is caused to the appliance by a cleaning product will not be fixed by Baumatic free of charge, even if the appliance is within the guarantee period.***

Removable oven roof liner (P632BS/SS/W only)


Your appliance is supplied with a roof liner, which should be slid over the top of the grill element.

- Once you have finished cooking, the liner should be removed and thoroughly cleaned after each use of the appliance.
- **Do not** allow fat and grease to build up on the oven liner, as this could cause a fire hazard.

Replacing the oven bulb




IMPORTANT: *The oven must be disconnected from your mains supply before you attempt to either remove or replace the oven bulb.*

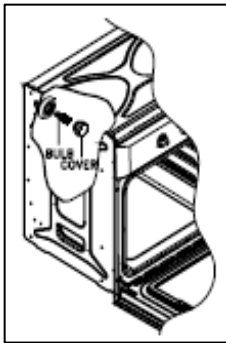

- Remove all oven shelves, the enamelled baking tray and the side rack that is on the same side as the oven light.
- Remove the light cover by turning it anti-clockwise.
- Unscrew the bulb clockwise and remove it from its holder.
- Replace the bulb with a 25 W/300°C, screw type pigmy.
- **Do not** use any other type of bulb.
- Place the lamp cover back into position.

Removing the oven door for cleaning

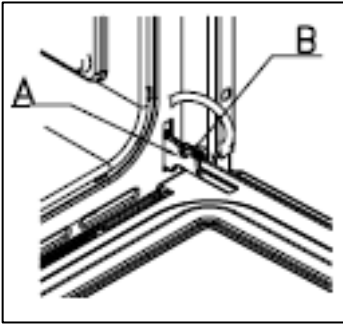

To facilitate the cleaning of the inside of the oven and the outer frame of the oven, the door can be removed as follows:-

- The hinges **(A)** have two movable bolts on them **(B)**.
- If you raise both of the movable bolts **(B)**, then the hinges **(A)** are released from the oven housing.
- You should grip the sides of the door at the centre and then incline it slightly towards the oven cavity and then pull it gently away from the oven cavity. **WARNING- Care should be taken as the inner edges of the door may be sharp.**
- **IMPORTANT:** You should make sure that the door is supported at all times and that you place the door on some padded material whilst cleaning it.
- The oven door and door glass should only be cleaned using a damp cloth and a small amount of detergent. The cloth **MUST NOT** have come into contact with any form of cleaning product or chemical previously.
- To refit the door you should slide the hinges back into their slots and open the door fully.
- **IMPORTANT:** The movable bolts **(B)** must be closed back into their original positions before closing the door.



- **Take care not to dislodge the hinge locking system when removing the door, as the hinge mechanism has a strong spring.**
- **Do not immerse the door in water at any time.**

INSTALLATION



The installation must be carried out by a suitably qualified person, in accordance with the current version of the following.

- UK Regulations and Safety Standards or their European Norm Replacements.
- ***Building Regulations*** (issued by the Department of the Environment).
- ***Building Standards*** (issued by the Scottish Development Department).
- ***IEE Wiring Regulations.***
- ***Electricity At Work Regulations.***

Before connecting the appliance, make sure that the supply voltage marked on the rating plate corresponds with your mains supply voltage.


WARNING: THIS APPLIANCE MUST BE EARTHED.

- This appliance should be wired into a 13 A (***P611BS/SS and P622BS/SS***) or a 16 A (***P632BS/SS/W***) double pole switched fused spur outlet, having 3 mm contact separation and placed in an easily accessible position adjacent to the appliance. The spur outlet must still be accessible even when your oven is located in its housing.



- To connect the oven power cord, loosen and remove the cover on the terminal block, in order to gain access to the contacts inside. Make the connection, securing the cord in place with the cable clamp provided and then immediately close the terminal block cover again.
- If you have to change the oven power cord, the earthing (yellow/green) conductor must always be 10 mm longer than the line conductors.
- Care must be taken to ensure that the temperature of the mains supply cable does not exceed 50°C.
- If the mains supply cable is damaged, then it must be replaced by an appropriate replacement which can be obtained from the Baumatic Spares Department.


Installing the oven into the kitchen cabinet

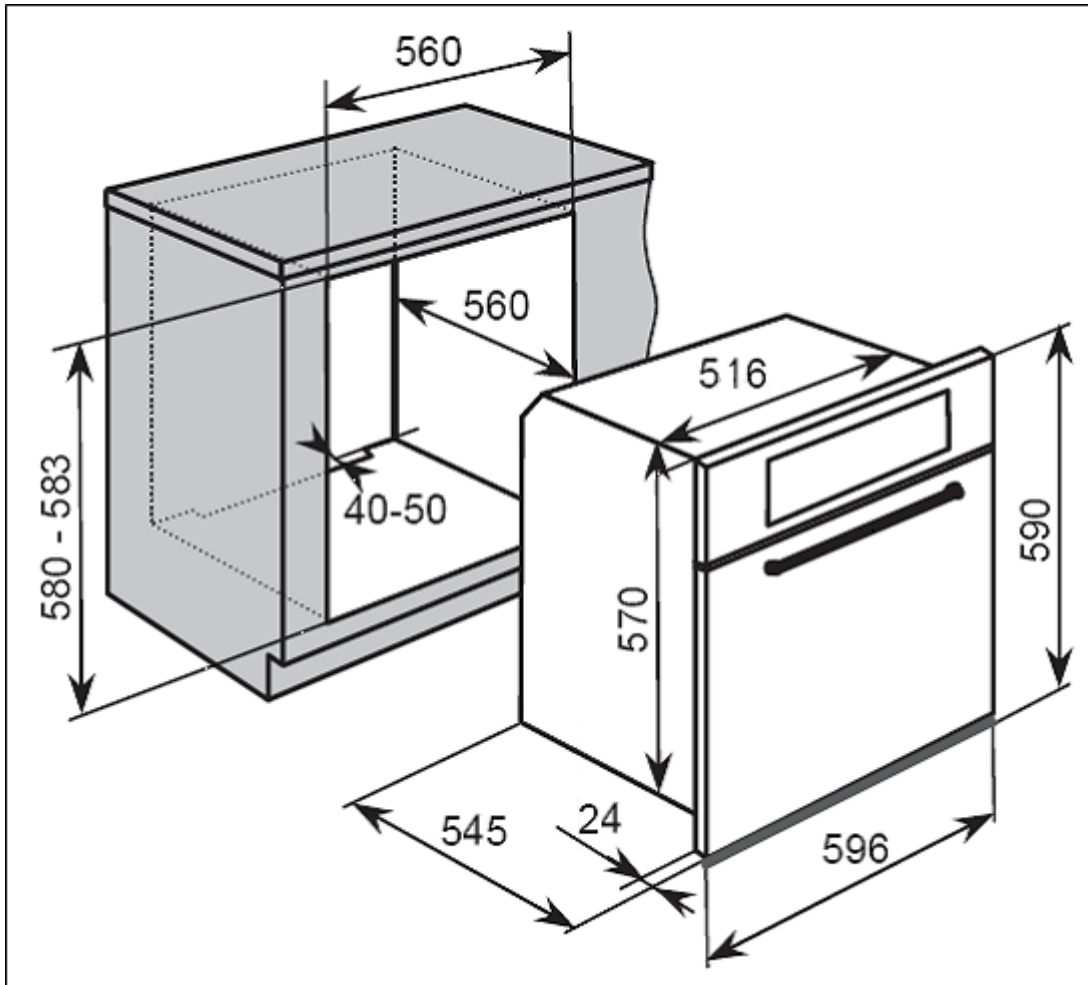


Positioning the appliance

- Ensure that the aperture that you will be fitting the oven into is of the size given in the above diagram.
- The oven must be fitted into an oven housing with the ventilation cut-outs shown in the "Ventilation requirements" section on the next page.
- Ensure that the rear panel of the furniture housing unit has been removed.


Ventilation requirements

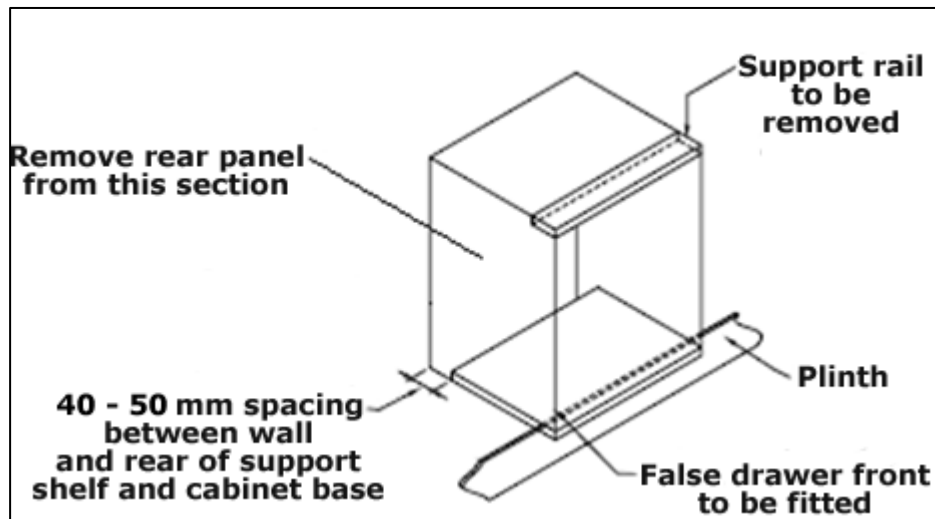

(Figure shows the ventilation and cut-out requirements for the installation of the appliance into a standard kitchen unit).

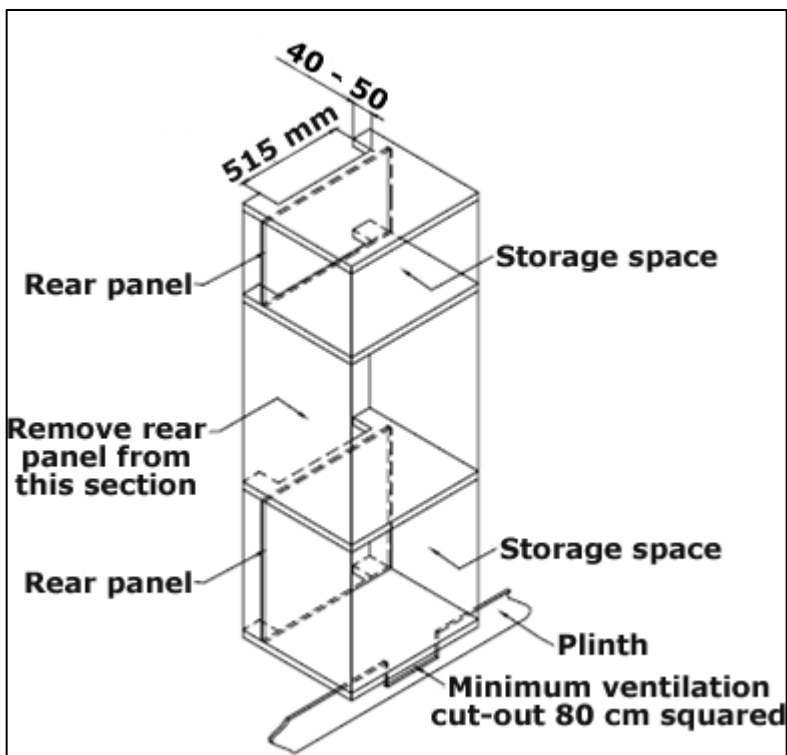

(Figure shows the ventilation and cut-out requirements for the installation of the appliance into a tall housing unit).

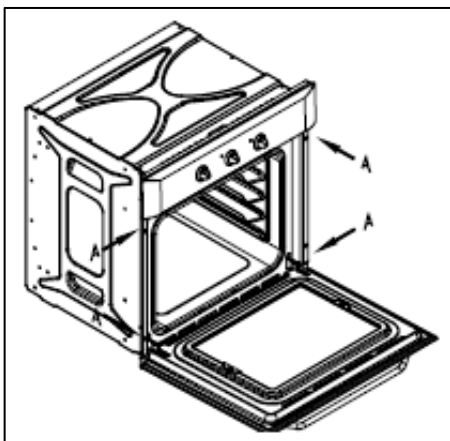

- Ensure that the oven has been securely fixed into the housing unit. The fixing of the oven into the housing is made by using four screws. These should be screwed through the oven cabinet and into the housing unit.

My appliance isn't working correctly

- ***The oven isn't coming on.***

- * Check that the oven is in manual operation mode.
- * Check that you have selected a cooking function and a cooking temperature.

- ***There appears to be no power to the oven and grill.***

- * Check that the appliance has been connected to the electrical mains supply correctly.
- * Check that the mains fuses are in working order.
- * Check that the operating instructions for setting the time of day and putting the appliance into manual operation mode have been followed.

- ***The grill function works but the main oven does not.***

- * Check that you have selected the correct cooking function.

- ***The grill and top oven element is not working, or cuts out for long periods of time during use.***

- * Allow the oven to cool for approximately 2 hours. Once cool, check whether the appliance is again working properly.

- ***My food is not cooking properly.***

- * Ensure that you are selecting the correct temperature and the correct cooking function for the food that you are cooking. It may be appropriate to adjust your cooking temperature by plus or minus 10°C, to achieve the best cooking results.

- ***My food is not cooking evenly.***

- * Check that the oven has been installed correctly and is level.
- * Check that the correct temperatures and shelf positions are being used.

- ***The oven light is not working.***
- * Refer to page 25 and follow the "Replacing the oven bulb" section.
- ***I am getting condensation in my oven.***
- * Steam and condensation is a natural by product of cooking any food with high water content, such as frozen food, chicken etc.
- * You may get condensation in the oven cavity and forming between the oven door glasses. This is not necessarily a sign that the oven is not working correctly.
- * Do not leave food in the oven to cool after it has been cooked and the oven has been switched off.
- * Use a covered container, where practical, when cooking to reduce the amount of condensation that forms.



IMPORTANT: If your appliance appears not to be operating correctly, then you should disconnect it from your mains supply and then contact Baumatic Customer Care on telephone number (0118) 933 6911.

DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.

Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then he will not complete a repair.

This includes situations where appliances have been tiled in, sealed in with sealant, have wooden obstructions placed in front of the appliance, like plinths. Or any installation other than the one specified by Baumatic Ltd. has been completed.

Please refer to the conditions of guarantee that appear on the warranty card that you receive with the appliance.

IMPORTANT: Baumatic Ltd. operates a policy of continuous improvement and reserves the right to adjust and modify its products without prior notification.

COOKING TABLES



**FOR
THE
P611BS/SS
P622BS/SS
AND
P632BS/SS/W
OVENS**



DEFROST MODE: The fan runs without heat to reduce the defrosting time of frozen foods. The time required to defrost the food will depend on the room temperature, the quantity and type of food. Always check food packaging for the defrosting instructions.



FAN OVEN: This method of cooking uses the circular element while the heat is distributed by the fan. This results in a faster and more economical cooking process. The fan oven allows food to be cooked simultaneously on different shelves, preventing the transmission of smells and tastes from one dish onto another.



GRILL MODE: This method of cooking utilises the inner sections of the top element, which directs heat downwards onto the food. This function is suitable for grilling portions of bacon, toast and meat etc.



CONVENTIONAL OVEN (top and lower element): This method of cooking provides traditional cooking, with heat from the top and lower elements. This function is suitable for roasting and baking on one shelf only.



FULL GRILL: This method of cooking utilises the inner and outer parts of the top element, which directs heat downwards onto the food. This function is suitable for grilling medium or large portions of sausages, bacon, steaks, fish etc.



FAN AND LOWER ELEMENT: This method of cooking utilises the bottom element in conjunction with the fan, which helps to circulate the heat. This function is suitable for sterilizing and preserving jars.



FAN AND GRILL: This method of cooking utilises the top element in conjunction with the fan, which helps to provide a quick circulation of heat. This function is suitable where quick browning is required and "sealing" the juices in, such as steaks, hamburgers, some vegetables etc.





PIZZA MODE: This method of cooking uses the lower and circular element while the heat is distributed by the fan reproducing the same conditions of traditional clay wood-fire stoves.



CONVECTION OVEN AND FAN: This method of cooking provides traditional cooking with heat from the top and the lower element, it also utilises the circulation fan. This ensures a fast and even distribution of the heat. Suitable for light and delicate baking, such as pastries.



- **IMPORTANT: Before you cook, we recommend that you pre-heat the oven cavity to 200°C, using the fan oven function. This pre-heating will allow you to decrease the cooking time, reduce energy consumption and give better cooking results.**
- **The oven temperatures and cooking times quoted in the following tables are intended as a guide only.**
- **It may be necessary to increase or decrease the temperature and time by 10% to suit individual preferences and requirements.**

COOKING TABLE			OVEN FUNCTIONS				TIME (min.)
				FAN ANG GRILL(**)			
FOOD	WEIGHT (Kg)	PREHEAT ⁽¹⁾ (min.)	TRAY LEVEL	TEMPERATURE (°C)	TRAY LEVEL	TEMPERATURE (°C)	
MEAT							
Beef Steak	0.8	10	3	200	3	250	20-25
Pork Steak	0.8	10	3	200	3	250	25-30
Chicken (piece)	1.2	10	3	200	3	250	40-45
Sausages	0.6	10	3	200	4	250	15-20
Hamburger	0.6	10	3	200	4	250	15-20
Skewered meat	0.6	10	3	200	4	250	20-25
FISH							
Sirloin	0.5	10	3	200	3	250	15-20
VEGETABLES							
Grill vegetables	0.5	10	4	200	4	250	15-20
Tomatoes	0.5	10	4	200	4	250	20-25
Potatoes	0.6	10	3	200	3	250	25-30
Corn	1.2	10	3	200	3	250	20-25
BREAD							
Toast Bread (slices)	-	10	4	200	4	250	3-5
White Bread (slices)	-	10	4	200	4	250	5-8

(¹) Ideally you should pre-heat the oven and not places food inside of until the oven operating light has gone out.

(**) Using the grill functions, the food should be turned half way through the cooking time.

(¹) Ideally you should pre-heat the oven and not places food inside of until the oven operating light has gone out.
 (**) Using the grill functions, the food should be turned half way through the cooking time.



COOKING TABLE				OVEN FUNCTIONS			
							
FOOD	WEIGHT (Kg)	PREHEAT ⁽¹⁾ (min.)	FAN COOKING TRAY LEVEL	FAN COOKING TEMPERATURE (°C)	CONVENTIONAL TRAY LEVEL	CONVENTIONAL TEMPERATURE (°C)	TIME (min.)
MEAT							
Beef	1	15	2	200	2	220	40-50
Pork	1	15	2	200	2	220	70-80
Turkey	1.5	15	2	200	2	220	70-80
Lamb	1.5	15	2	200	2	220	70-80
Chicken	1.2	15	2	200	2	220	50-60
Duck	1.5	15	2	200	2	220	50-60
Rabbit	1	15	2	200	2	220	40-50
FISH							
Sirloin	0.8	10	2 (1 & 3)*	180	2 (1 & 3)*	200	20-30
PASTA							
Lasagna	1	15	2	200	2	220	20-30
Macaroni Cheese	1	15	2	200	2	220	30-40
BREAD & PIZZA							
White Bread	0.5	10	2 (1 & 3)*	200	2	220	35-45
Multi Grain Bread	0.5	10	2 (1 & 3)*	200	2	220	20-30
Pizza	0.5	15	2 (1 & 3)*	200	2	220	15-20
BAKERY							
Cake with baking powder	0.7	10	2 (1 & 3)*	180	2	200	25-35
Apple Pie	1	15	2 (1 & 3)*	180	2	200	30-40
Strudel	1	15	2 (1 & 3)*	180	2	200	40-50
Fruit & Salad Tart	1.5	15	2 (1 & 3)*	180	2	200	35-45
Biscuits	0.7	15	1,2,4	180	2	200	25-35

(¹) Ideally you should pre-heat the oven and not place food inside until the oven operating light has gone out.

(**) Using the grill functions, the food should be turned half way through the cooking time.

(¹) Ideally you should pre-heat the oven and not place food inside until the oven operating light has gone out.


(**) Using the grill functions, the food should be turned half way through the cooking time.

COOKING TABLE				OVEN FUNCTIONS				TIME (min.)
								
				BOTTOM ELEMENT + FAN		PIZZA FUNCTION(*)		
FOOD	WEIGHT (Kg)	PREHEAT ⁽¹⁾ (min.)	TRAY LEVEL	TEMPERATURE (°C)	TRAY LEVEL	TEMPERATURE (°C)		
PASTA Lasagne Pasta for Oven	1	15	2	200	40-45	200	30-35	
	1	15	2	200	45-50	200	35-40	
BREAD & PIZZA White Bread Multi Grain Braed Pizza	0.5	10	1	200	10--15	200	5--10	
	0.5	10	1	200	15--20	200	5--10	
	0.7	15	2	200	20--25	200	10--15	
BAKERY Cake with baking powder Fruit & Salad Tart Biscuits Choux pastry	1.5	15	1	180	35--40	180	25--30	
	1	15	1	180	40--45	180	30--35	
	0.7	15	1,2,4	180	20--25	180	15--20	
	0.7	15	1,2,4	180	20--25	180	15--20	

(1) You should pre-heat the oven and not place food inside of it until the oven operating light is switch off (for 10-15 minutes).

(*) If using pizza stone, this has to be preheat in the oven before use.

Shelf levels

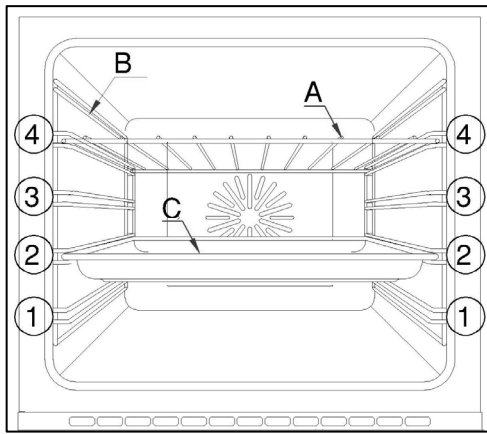

- Safety shelf **(A)**
- Removable side racks, which allow you to cook on four different levels **(B)**
- Enamelled baking tray **(C)**

- The numbers 1 – 4, indicate the different shelf positions that you can utilise within the oven.

**United Kingdom**

Baumatic Ltd.,
Baumatic Buildings,
6 Bennet Road,
Reading, Berkshire
RG2 0QX
United Kingdom

Sales Telephone

(0118) 933 6900

Sales Fax

(0118) 931 0035

Customer Care Telephone

(0118) 933 6911

Customer Care Fax

(0118) 986 9124

Spares Telephone

(01235) 437244

Advice Line Telephone

(0118) 933 6933

E-mail:

sales@baumatic.co.uk
customercare@baumatic.co.uk
spares@baumatic.co.uk
technical@baumatic.co.uk

Website:

www.baumatic.co.uk

Republic of Ireland**Service Telephone**

1-890 812 724

Spares Telephone

091 756 771

Czech Republic

Baumatic CR spol s.r.o.
Průmyslová zóna Sever 696
460 11 Liberec 11
Czech Republic

+420 483 577 200

www.baumatic.cz

Slovakia

Baumatic Slovakia, s.r.o.
Galvániho 7/D
Slovakia

+421 255 640 618

Germany

Baumatic Gmbh
Lilienthalstrasse 1
320 52 Herford
Deutschland

+49 5221 694 99-0

www.baumatic.de

Italy

Baumatic Italia S.R.L.
Via Galvani N.3
35011 Campodarsego (PD)

+3904 9920 2297

www.baumatic.it

Holland

Baumatic Benelux B.V.
Grindzuigerstraat 22
1333 MS ALMERE
Nederland

+3136 549 1555

www.baumatic.nl

