

Tips and Hints when using the Owl Plug-in Timer Adaptor

- Ensure the timer is set to AUTO mode to run the Plug-in Timers set program
- It is not required to set up all 9 Programs for the Timer. Set each not required program to Active 00:00 and Disable 00:00 hours and minutes
- Ensure total power does not exceed 2400W (Resistive)
- If the Plug-in Timer Adaptor has not been used for a long time, it will need to be plugged into a mains socket power supply for approximately 5 minutes to charge the internal rechargeable cell before it can be programmed.

FOR YOUR SAFETY

Read all instructions carefully before attempting to use.

This copy of the instructions should be kept for future reference

IMPORTANT SAFEGUARDS

When using the Plug-in Digital Timer Adaptor in order to reduce the risk of fire, electric shock and/or injury basic precautions should be followed:-

- This system is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure that they do not play with the Plug-In Timer Adaptor
- For Indoor use only. Keep away from all sources of water or moisture. Never expose Plug-In Timer Adaptors to the rain or dangerous gas.
- Do not overload. The maximum load as specified for the Plug-In Timer Adaptor should not be exceeded.
- Before using this Plug-In Timer Adaptor, check and make sure the electrical appliances are correct and properly connected and installed according to the requirements of those appliances.
- Do not operate any appliance with a damaged cord of plug.
- Do not try to repair, disassemble or modify any units of the Plug-In Timer Adaptor. There are no user-serviceable parts.
- Do not use the Plug-In Timer Adaptor for other than its intended use.
- The Plug-In Timer Adaptor is intended to be plugged in or connected to a 220-240V ac power outlet supply.


Specifications - Plug In Timer Adaptor

TSE007-040. Rating: 220-240VAC, 50Hz. Maximum Load: 10A, 2400W (Resistive)



Products Tested by Intertek Testing Services Ltd

OPERATION MANUAL FOR PLUG IN DIGITAL TIMER ADAPTOR

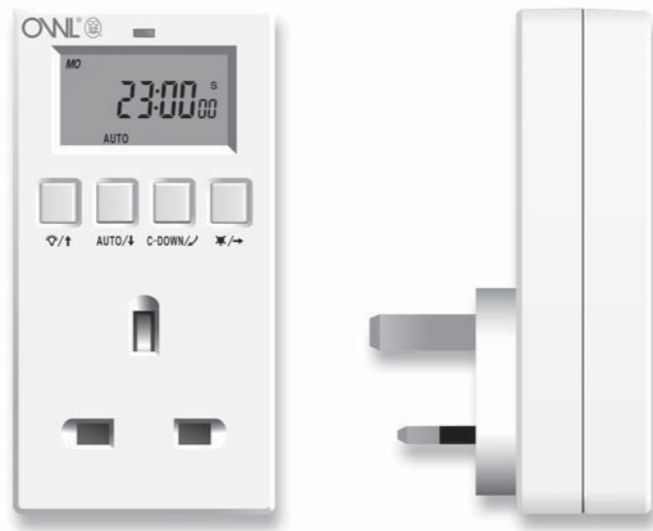

Plug in Digital Timer Adaptor. Model Number: TSE007-040

Owl Plug in Digital Timer Adaptor is designed to help you reduce the amount of electricity you use by conveniently switching appliances on and off as you need them.

Plug the Digital Timer Adaptor into the wall socket and then plug your appliance into the Adaptor. There are up to 9 on/off weekly programs, a countdown function, daylight saving function and a status display. Appliances can be set to operate at times of cheaper electricity and by switching off automatically will help to reduce energy consumption.

Plug in Digital Timer Adaptor Features

- Up to 9 settable weekly programs
- One button countdown function
- Manual Override
- Daylight Saving Function
- Timer mode display
- Rechargeable Battery Backup

Factory Settings

- Timer mode - ON
- Day – Monday (MO)
- Time – 00:00
- Countdown time – 00:00
- Daylight Saving Function - OFF

4 Timer Modes

ON → Manually turn the socket ON overriding the preset timer/countdown functions

OFF → Manually turn the socket OFF overriding the preset timer/countdown functions

AUTO → Activate the preset timer programs

COUNTDOWN → Activate the countdown function

Button Function Definitions

- : In current time display enables the timer. In Clock/Programs setting displays increments the value for selection. Press and Hold for 3 seconds to set the clock.
- : In current time display will enable the set timer programs to operate. In Clock/Programs setting displays the decrements the value for selection. Press and Hold for 3 seconds to set timer programs.
- : In current time display will enable the countdown to the preset time, and will disable the timer. In Clock/Program setting displays, confirms the selection. Press and Hold for 3 seconds to set the Countdown time.
- : In current time display will disable the timer. In Clock/Programs setting displays the stops the setting and exit to current time display. Press and Hold for 3 seconds to enable/disable Daylight saving function.
- & Reset the timer back to factory settings by pressing & holding & simultaneously for 3 seconds.

Setting or Adjusting the Clock and Day

- Pressing for 3 seconds, the existing set weekday will flash, press or to select actual weekday and confirm by pressing .
- The existing set hours will flash, press or to select current hour and press to confirm. Please note the clock is set as a 24hr clock.
- The existing set minutes will flash, press or to select current minute and confirm by pressing .
- The current time & day on the clock has been set.

Setting or Adjusting the Programs

About the Program ON/OFF mode

A program consists of two parts Start Time (ON) and Stop Time (OFF)

- – Start Time for the timer to turn ON
- – Stop Time for the timer to turn OFF

Setting the Program

The programs can be set in any timer mode, although programs will not become active until the timer mode is set to AUTO

1. Press and hold for more than 3 seconds to enter the programming mode. The number “1” under “PROG” and the icon will flash simultaneously.
2. Using or step through to the program number & start/stop that you wish to set and press to confirm. ie 1→ , 1→ , 2→ 8→ , 9→ , 9→ . Note that this procedure can be used to view program settings as the content of each program will be displayed including weekday, hour and minute
3. Having confirmed the program number you wish to set, the day will flash on the LCD. Press step through the days (MO,TU, WE, TH, FR, SA, SU) and to confirm selection.
4. Having confirmed the day, the hours will flash on the LCD. Press or to step through the hours and to confirm selection.
5. Having confirmed the hours, the Minutes will flash on the LCD. Press or to step through the minutes and to confirm selection.
6. After setting up the one program part the next program part symbol will flash. Repeat step 2 through step 5 to set another program part. To exit Program Setting press and the timer will return to current time display. Note if there is no input for more than 15 seconds the timer will exit the Program Setting and only store completed program settings.

Setting / Adjusting the Countdown Time

- Press and hold for more than 3 seconds to enter the Countdown setting mode
- Having entered the Countdown setting mode, the hours will flash on the LCD. Press or to step through the hours and to confirm selection.
- Having confirmed the hours, the Minutes will flash on the LCD. Press or to step through the minutes and to confirm selection.
- The Countdown timer is set. The timer will return to current time display.

Setting the Daylight Saving Function

- To Activate Daylight Savings press and hold for more than 3 seconds. The daylight saving icon “S” will display to the upper right hand corner of the minute figure. The current time and the times set in the programs will be advanced automatically by one hour (exclude the countdown time).
- To revert to standard time press and hold for more than 3 seconds. The daylight saving icon “S” will disappear, and the current time and the times set in the programs will move back automatically by one hour (exclude the countdown time).

Re-setting the Timer

- To reset the timer, press and hold the & simultaneously for 3 seconds. All programs and current time will be reset back to original factory settings.