

## Joining Single colour LED Tape in-line

Taking one of the existing T or X connectors for the tape as shown below:




Unclip one of the plastic connectors and slide it off the end of the connecting tape.



This will leave you with an in-line connector as below.



Slide the two lengths of tape to be joined in from either side ensuring the contacts on the connector make contact with the copper contacts on the tape.

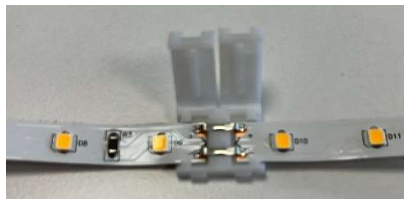

Clip the covers down and the connection is now locked in place.

