

Wireless Switch & Controller Pairing Guidance

Quinetic Switch & Controller Pairing Guidance

1. Normal Pairing


Step 1. Press the button on the controller and keep pressing for 3 seconds

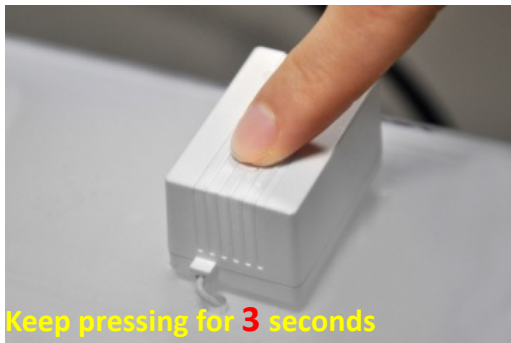

Step 2. When you see a slow flashing (1 flash in 1 second) remove your finger. Now the controller is in pairing mode. This mode will last for 10 seconds.



Step 3. within the 10 seconds, press the switch one or more times until the controller's flashing indicator light goes off. Now the pairing is complete and ready for use.

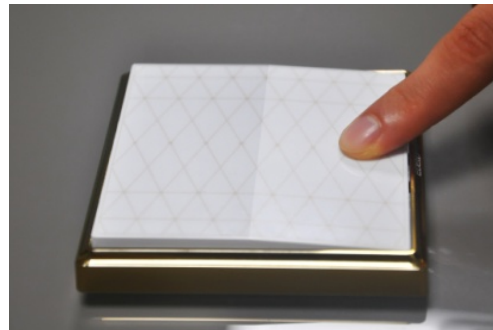


Quinetic Switch & Controller Pairing Guidance

2. Bridging (extend control distance)

Step 1. Finish “normal pairing” on a group of controllers with a specific switch (refer to page 1– normal pairing)




Step 2. Select a controller to be the “bridge” controller, press down the button on that controller and keep pressing for 7 seconds

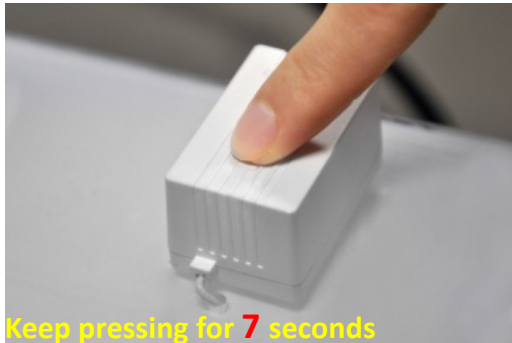

Step 3. After 7 seconds, when you see rapid flashing, remove your finger. The rapid flashing will last 3 seconds. The indicator light will then revert to a stable slower flashing to indicate that the controller is now in bridging mode.



Step 4. Multiple controllers can utilize the same “bridging” controller to extend the distance of the signal to other controllers thus enabling a switch to control other controllers outside of the standard range.

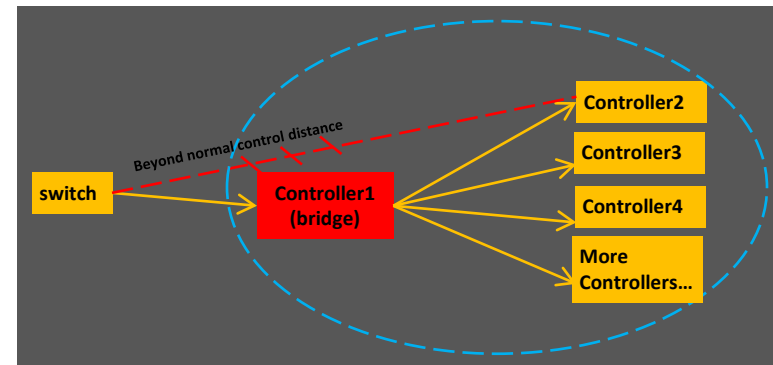

Quinetic Switch & Controller Pairing Guidance

3. Clear Memory (re-set)

Press the pairing button on the controller for 10 seconds. During the 10 seconds the indicator light will flash slowly for a period of 4 seconds and then flash rapidly for 3 seconds. The indicator light will then go off and the pairing is now cleared and can be newly paired as required.

