## **KSR1660** Installation Sheet

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintainence.

These fittings are Class I and must be Earthed

## Important Information

It is recommended that these luminaires are installed and fitted by a gualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply.

Any faulty, broken or damaged luminaires should be replaced immediately.

KSR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature, humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

## Important User Advice

Always safely isolate the mains supply before installing/servicing.

At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation.

## Installation Procedure

Familiarize yourself with the luminaire/installation procedure and ensure the power is safely isolated before installing the luminaire.

Identify a suitable area(s) for the Wall Light to be mounted on and ensure the surface being mounted onto is smooth and suitable for the product type.

Release both screws at the base of the Wall Light and remove to allow the main base plate to come free off the mounting bracket see Fig. 1

With the mounting plate free, offer up the mounting bracket to the mounting surface and prepare Wall for fixings provided, the hole spacing required is 73mm +/- 1mm.

With fixing positions prepared fasten fixings onto mounting bracket until secure


Using the terminal block provided terminate wiring Brown to Live, Blue to Neutral and Green/Yellow to Earth 🕑 see Fig. 2 With terminations completed re-secure Wall light onto mounting bracket ensuring no cables are pinched or nicked (Fig. 1).


With the Wall Light now securely mounted proceed to fit a suitable E14 LED lamp not exceeding the maximum wattage. If desired the wall light outreach arm can be adjusted to suit the angle of the surface it is being mounted onto. this can be done by releasing the turn buckle located above the lamp holder. For secure fitment ensure the turnbuckle is always tightened after any adjustment.

Finally turn on power and test wall Light.


Please Note: For cleaning and maintenance the shade of this wall light can be removed by unscrewing the collar of the lamp holder, please ensure on removing the shade that the rubber washer is retained and refitted as this protects the glass shade from accidental damage when the collar is tightened up.


Fig 1.

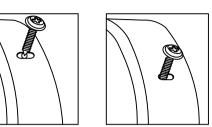

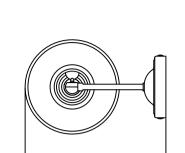

254mn



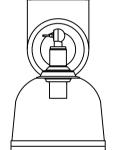

170mr

112mm


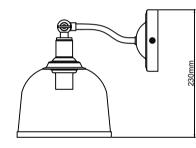


Fig. 2



KSR Lighting Aftersales: 023 92 674343 E-mail: aftersales@ksrlighting.com

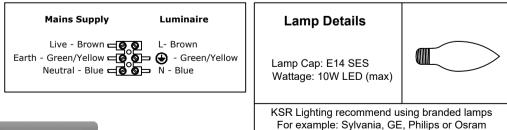

Available Finishes: Satin Chrome