



Models: AU-150SS and AU-210SS
150/210W/VA

**Single Output Dimmable Electronic Transformers
Dimmable with Resistive and Inductive Dimmers**

Important Note to the Installer

These instructions contain important information. Please ensure that a copy is left with the user/maintenance engineer.

Warning

This product should be installed by a competent electrician in accordance with these instructions and the latest edition of the I.E.E. Wiring Regulations (BS 7671) and other relevant regulations (e.g Building, Fire etc).

For use with 12V tungsten halogen lamps in Class III low voltage luminaires only.
Isolate from the mains supply before installation or maintenance.

Installation Instructions



The transformers feature loop-in, loop-out primary wiring terminals and an Integrated Earth Terminal to allow Earth continuity to be maintained in the primary wiring circuit.

The mains supply should be connected to the Primary Input terminals as follows:

Black/Blue - Neutral (terminals marked N)

Red/Brown - Live (terminals marked L)

Green/Yellow - Earth (terminal marked ) No part of the secondary (SELV) circuit should be earthed.

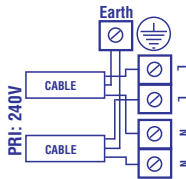

Input Terminals

Dual Live & Neutral terminals allow loop-in, loop-out wiring between transformers. Integrated Earth Terminal allows Earth continuity in the primary wiring circuit.

Output Terminal

Single output (up to transformer max load) Ensure that the cable current rating is sufficient.

The transformer should be sited in a well ventilated position. Do not enclose or cover the transformer with thermal insulating materials. The ambient temperature during operation must not exceed the ta°C rating of the transformer.

Keep the transformer away from direct sources of heat such as low voltage lamps (see Figure 1 below).

The transformer may be fitted in the same circuit as inductive loads as it has 1.0kV Surge protection in accordance with EN61547

Do not fit the transformer above the luminaire (see Figure 2 below).


Do not allow the input and output wiring to cross (see Figure 3 below).

The secondary (output) leads must not exceed 2m in length.


Ensure that the wattage of the lamps does not exceed the rating of the transformer.

Replace failed lamps immediately.

(Figure.1 - CORRECT Installation)

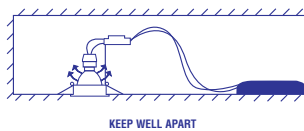


(Figure.2 - INCORRECT Installation)



(Figure.3)

DO NOT CROSS INPUT AND OUTPUT WIRING



Dimming


This transformer may be dimmed with most types of standard resistive and inductive dimmer switches.

Install the dimmer switch on the primary (mains) side of the transformer.

A slight buzzing noise is normal with some types of dimmer switch. An increase in transformer noise may be experienced when dimmed.

The dimmer should be loaded to at least 75% of its maximum capacity (refer to the dimmer manufacturers' instructions).

- The 150VA transformer requires a minimum load of 50-Watts for normal operation.
- For dimming applications a minimum load of 75-Watts is required.
- The 210VA transformer requires a minimum load of 50-Watts for normal operation.
- For dimming applications a minimum load of 100-Watts is required.

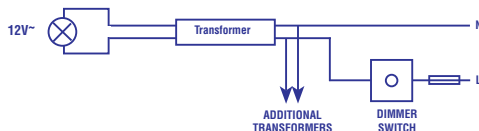

INSTALLATION WITH DIMMER SWITCH

Radio Interference

In common with other high frequency convertors this product may cause radio interference.

Under certain circumstances interference may be experienced on the medium and long wave radio bands. Please note that these transformers are suppressed to all relevant EMC standards.

Thermal Protection

The AU-150SS & AU-210SS transformers feature an auto-reset thermal switch and will shut down in the event of overheating and re-start when the temperature returns to normal.

When installed, the transformer must have adequate air cooling to prevent overheating. Ensure that there is adequate distance from the lamp to prevent heat transfer (min. 200mm).

Fault Finding/Testing

Electronic transformers give little or no output unless connected to a load of the correct rating. To measure output voltage use a true r.m.s. A.C. voltmeter with a bandwidth>30Khz. The output cannot be measured with a standard multi-meter.

IMPORTANT - Do not use a Megger or similar insulation resistance tester on circuits with electronic transformers connected as permanent damage to the transformers may result. Disconnect the transformers before testing.

TECHNICAL DATA

Model	Wattage	Pri. Current	Sec. Current	Ambient Temp.	Max. Case Temp.
AU-150SS	50 - 150	0.62A	13A	-20 to +45C	+80C
AU-210SS	50 - 210	0.87A	18A	-20 to +45C	+80C

Environmental Protection (W.E.E.E.) – Aurora's WEEE Reg.No. WEE/BG0130YX



Waste Electrical & Electronic Equipment Regulations (WEEE) requires that any of our products showing this marking (left) must not be disposed of with other household or commercial waste. Aurora does not levy any WEEE disposal charges to its customers for affected WEEE related products. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate any such product from other waste types and recycle it responsibly at your local facilities. Check with your Local Authority, Recycling Centre or retailer for recycling advice. If, when you purchased any Aurora product, your supplier included a WEEE disposal fee, you should then contact your supplier for advice on his takeback of the product for the correct disposal.

Guarantee

This product is guaranteed for a period of 10 years from purchase. Should this product fail during the guarantee period it will be replaced free of charge, subject to correct installation and return of the faulty unit.

The guarantee is invalid in the case of improper use or installation, tampering, removal of the Q.C. date label, installation in an improper working environment or installation not in accordance with the current edition of the I.E.E. Wiring Regulations (BS 7671).

Aurora does not accept responsibility for any installation or site visit costs associated with replacement of this product.

Aurora reserve the right to alter specifications without prior notice.



EN61347
EN61547

