

# **Ultimate** moulded and flat plate

# FITTING INSTRUCTIONS FOR ULTIMATE MOULDED AND FLAT PLATE ACCESSORIES Read these instructions fully before commencing work

and retain them for future reference. SAFETY INSTRUCTIONS

# These accessories are to be installed in accordance

with the current edition of the IEE Wiring Regulations (BS 7671: Requirements for Electrical Installations) and appropriate statutory regulations.

In the Republic of Ireland the installation must be in accordance with the ETCI National Rules for Electrical installations - ET 101. When mounting flat plate accessories, for the best

results and visual appearance, it is recommended

- that prior to installation, the mounting surface beneath the accessory frontplate is first prepared to ensure that it is flat and all high spots have been removed. Certain accessories may require that the top and bottom lugs in 1 gang, 4 lug boxes, are bent inwards and out of the way to ensure the correct installation within the box.
- Always use cable of the correct rating and type The layout of the terminal connections may differ between fittings, carefully check the location of the terminal connections before wiring.
- Secure the accessory to the wall by means of the fixing screws provided, positioning the cables in the box so as to avoid them being trapped.
- Replace the appropriate fuse, or switch on the appropriate circuit breaker. Switch on the mains isolator switch.

# PROCEED, CONSULT A QUALIFIED ELECTRICIAN Switch OFF the mains supply and remove the appropriate fuse or switch off the appropriate circuit

NOTE: IF YOU ARE IN ANY DOUBT ON HOW TO

- breaker before commencing installation. Ensure that no one else has access that would enable the supply to be inadvertently reconnected. Remove the existing accessory from the wall (if using the new accessory to replace an old one).
- 3. Remove any plaster debris and dust from the inside of the mounting box (wall box). Ensure that the heads of any box fixing screws do not protrude into the box.
- Accessories, particularly those with metal front plates, must be correctly earthed. This is achieved by
- connecting the fixed earth wire to the earth terminal provided on the accessory or on the metal plate and then connecting a short length of wire from this terminal to the terminal in the back box. NOTE: Some moulded plate switch accessories do

not have earth terminals. In such cases, the fixed earth wires should be connected directly to the earth terminal in the back box.

If the earth wire is bare it should be sheathed with a length of green/yellow sleeving.

**New colours** Old colours BROWN -RED -BLACK - NFIJTRAI BLUE - NEUTRAL The old colours will cease to be used from

As from 1st April 2004 new installations in the U.K. could be wired using the new EU harmonised colours for the supply conductors of twin and

# 1st April 2006.

earth cable:

IMPORTANT NOTICE

WIRING COLOUR CHANGES

10 AMP 1 GANG 2 WAY SWITCH (1 WAY SWITCHING)

Connect the cables as shown in the wiring diagram TO EARTH TERMINAL IN BOX


Flexible cable colours remain unchanged:

Eire conductor colours for twin and earth cable

BROWN - LIVE BLUE – NEUTRAL

and flexible cable:

BROWN – LIVE BLUE – NEUTRAL

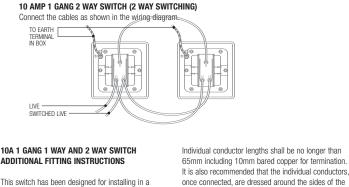

SWITCHED LIVE

# If cables enter from the side of the wall box then it is likely that it will need replacing with a deeper

retrofit installations providing:

10 AMF 2 GANG AND 4 GANG 2 WAY SWITCH Connect the cables as shown in the wiring diagram.

This switch has been designed for installing in a

16mm deep wall box. It is therefore suitable for


Cables enter from the top of the wall box Wall box does not protrude from the wall


TO EARTH TERMINAL IN BOX IN BOX 18

switch to ease switch installation in the box.

10 AMP 3 GANG 2 WAY SWITCH Connect the cables as shown in the wiring diagram.

SWITCHED LIVE

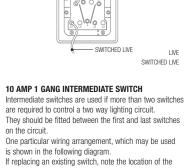

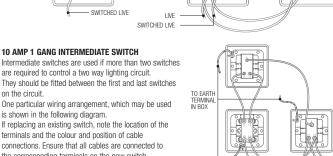

# the corresponding terminals on the new switch.


10 AMP 1 GANG TRIPLE POLE DISCONNECTOR

For use with extractor fans fitted with or without timer

control. Provides local isolation for maintenance or repair without the need to isolate the complete circuit.

Connect the cable conductors as shown in the wiring diagram, ensuring that the correct polarity is maintained between the load and supply conductors For extractor fans without timers, there will only be two load and two supply conductors.

Connect the cables as shown in the wiring diagram. Ensure that the load cable is connected to the appliance When used on a ring main there will be two supply cables. Connect both of the cables to the same terminals. For switches with flex outlets, pass load cable through outlet before connecting to switch. Ensure cable clamp is fitted and tightened across outer sheath of cable.

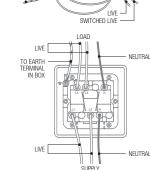

13 AMP SINGLE SWITCHED SOCKET


13 AMP UNSWITCHED SOCKET

there will only be one cable.

20 AMP DOUBLE POLE SWITCHES

Connect the cables as shown in the wiring diagram. The diagram shows connections for a ring main circuit. For radial circuits or a spur off a ring main there will only be one cable.

Connect the cables as shown in the wiring diagram. The diagram shows connections for a ring main circuit. For radial circuits or a spur off a ring main

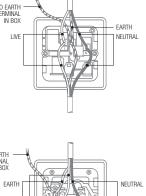

# 13 AMP 2 GANG UNSWITCHED SOCKET Connect the cables as shown in the wiring diagram. The diagram shows connections for a ring main


there will only be one cable.

13 AMP 2 GANG SWITCHED SOCKET Connect the cables as shown in the wiring diagram The diagram shows connections for a ring main circuit For radial circuits or a spur off a ring main there will

only be one cable.

only be one cable.

or radial circuits or a spur off a ring main

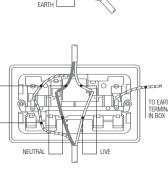

NEUTRAL


TO EART TERMINA IN BOX

NEUTRAL

# The diagram shows connections for a ring main circuit. For radial circuits or a spur off a ring main there will only be one cable.

13 AMP DOUBLE POLE 1 GANG SWITCHED SOCKET Connect the cables as shown in the wiring diagram

13 AMP DOUBLE POLE 2 GANG SWITCHED SOCKET Connect the cables as shown in the wiring diagram. The diagram shows connections for a ring main circuit. For radial circuits or a spur off a ring main there will

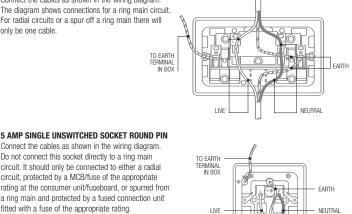


# circuit. It should only be connected to either a radial circuit, protected by a MCB/fuse of the appropriate rating at the consumer unit/fuseboard, or spurred from a ring main and protected by a fused connection unit

Connect the cables as shown in the wiring diagram. Do not connect this socket directly to a ring main

with a fuse of the appropriate rating. 45 AMP COOKER CONTROL UNIT The product must be earthed.

Connect the cables as shown in the wiring diagram. Ensure that the load cable is connected to the appliance. Do not connect this switch directly to

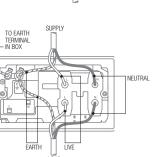

# BARE COPPER MUST BE SHEATHED IN GREEN/YELLOW SLEEVING. 45 AMP COOKER CONNECTION UNIT

The product must be earthed.

a ring circuit.


ensure that the load cable is securely retained by the cable clamp. Check and ensure that the load cable is connected to the appliance. Before re-fitting the front cover of the cooker connection unit, carefully remove the cable cut-out so that it fits neatly around the load cable.


Note – ensure that all sharp edges are removed. BARE COPPER MUST BE SHEATHED IN GREEN/YELLOW SLEEVING.

Connect the cables as shown in the wiring diagram. Fit the cooker connection unit to the back box, and

45 AMP 1 AND 2 GANG SWITCHES The product must be earthed. Connect the cables as shown in the wiring diagram. Ensure that the load cable is connected to the appliance. Do not connect this switch directly to a ring circuit.

BARE COPPER MUST BE SHEATHED IN GREEN/YELLOW SLEEVING.

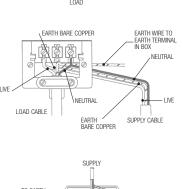

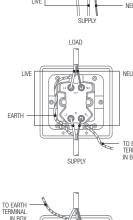

# EARTH

EARTH

EARTH

13 AMP SWITCHED FUSED CONNECTION UNIT Fitted with a 13 Amp fuse. Connect the cables as shown in the wiring diagram. Ensure that the load cable is connected to the appliance. When used on a ring main there will be two supply cables. Connect both of the cables to the same

For FCU's with flex outlets, pass load cable through

outlet before connecting to switch. Ensure cable clamp is fitted and tightened across outer sheath of cable.

13 AMP UNSWITCHED FUSED CONNECTION UNIT

Fitted with a 13 Amp fuse. Connect the cables as shown in the wiring diagram. Ensure that the load cable is connected to the appliance. When used on a ring main there will be two supply

cables. Connect both of the cables to the same terminals. For FCU's with flex outlets, pass load cable through outlet before connecting to switch. Ensure cable clamp

is fitted and tightened across outer sheath of cable. 25 AMP FLEX OUTLET PLATE The product must be earthed. Connect the cables as shown in the wiring diagram.

side of the frontplate so that the load cable fits neatly within it. NOTE: Ensure that all sharp edges are removed!

If required carefully remove the cable cut-out, on the

Before fitting frontplate, ensure that the load cable is securely retained by the cable clamp. Check that the load cable is connected to the appliance

ALL EARTH CONDUCTORS MUST BE SHEATHED IN GREEN/YELLOW SLEEVING. 20 AMP FLEX OUTLET Connect the cables as shown in the wiring diagram.

Ensure that the load cable is connected to the appliance. Pass the load cable through the flexout before connecting to terminals on rear of the plate Ensure that the cable clamp is fitted and thightened

across the outer sheath of the cable.

Important Safety Fitting Instructions Before commencing work, isolate the circuit.

# **Dimmer Switch Installation** Disconnect wires from the old switch

On square, four lugged boxes, bend the top and bottom lugs inwards and out of the way.

Do not overload or underload the dimmer.

Use the correct type of dimmer for the connected load.

Isolate supply before installing or removing bulb.

appropriate to the type of dimmer:

CIRCUIT AND OTHER EQUIPMENT COMPATIBILITY

To ensure optimum performance and reliability is obtained

from this dimmer switch during its lifetime the following

recommendations and precautions should be followed as

## It is recommended that the lighting circuit incorporating this dimmer is protected by a 6A or up to a 10A

maximum Type B miniature circuit breaker. Only use two-way (push) dimmers in two-way switching circuits. Only use one two-way dimmer in a two-way switching circuit.

Unless Compact Fluorescent (CFL) lamps are marked

'Dimmable' they must NOT be used with these dimmer switches. Use of non-dimmable CFL lamps may

permanently damage the dimmer or the lamp and will

invalidate any guarantee or warranty supplied with the dimmer switch It is recommended that a maximum number of 5 dimming CFL lamps only should be connected to an individual dimmer switch.

Do NOT mix electronic and magnetic transformers on

It is recommended that a maximum number of 5 Low

Voltage transformers should only be connected to an

the same dimmer switch.

individual dimmer switch.

LOADING TABLE

transformers be loaded to at least 70% of their rated maximum wattage.


It is recommended that dimmable electronic

Max. each Dimmer PLATE SIZE No. of Dimmers 250W/VA 400W/VA 250W/VA Maximum load of 500W/VA for the plate should not be exceeded


No. of Dimmers

Maximum load of 1000W/VA for the plate should not be exceeded

LIVE TO EARTH SUPPLY

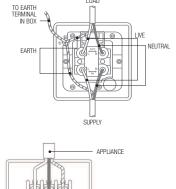

TO EARTH TERMINAL

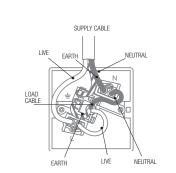

3. Install the dimmers as shown in the relevant wiring

diagram, ensuring that no wires are trapped between the plate and the box. The earth terminal on the plate

must be connected to the earth terminal in the box Fix the plate with the screws provided.

Do not over tighten the fixing screws.

Re-connect the power to the circuit and test operation.

APPLIANCE

- 5. It is normal for a faint buzzing sound to be heard from a dimmer switch. This is from the radio interference suppression coil and is no case for concern.
- LAMPS These dimmer switches are suitable for dimming incandescent lamps and dimmable CFL lamps only and are NOT to be used with Fluorescent lamps,

Light Emitting Diode (LED) lamps of any description

When using mains voltage Tungsten Halogen lamps, it is

essential that these types of lamps incorporate internal fuses and are from quality lamp manufacturers. The use

# of inferior low quality lamps without internal fuses is not recommended and will invalidate any guarantee or

or motor loads.

warranty supplied with the dimmer switch. LOW VOLTAGE TRANSFORMERS Only use Low Voltage dimmers with transformers. Do not use mains voltage dimmers.

Always check transformer compatibility BEFORE

installation and if in doubt always check with the

dimmer Helpline or the transformer manufacturer

The Low Voltage dimmer switches use leading edge (phase delay) dimming technology and must there

be used with compatible good quality dimmable electronic or wire-wound transformers. Trailing edge (phase cut) dimmable transformers must not be used. When running multiple lamps on dimmable electronic transformers ensure that all lamps are working correctly.

Replace failed lamps as soon as possible as a single failed lamp may cause flickering of other lamps.

Min.each Dimmer Total per Plate 60W/VA 250W/VA 400W/VA 60W/VA

500W/VA

Total per Plate

750W/VA

1000W/VA

60W/VA

lin.each Dimmer

60W/VA

60W/VA

| NOTE: The dimmer VA rating refers to the total circuit load, not the lamp load. Allowances must be made for transformer losses typically 20% for wire wound laminated and toroidal transformers and 15% for dimmable electronic transformers. |   |
|---|---|
| INSTALLATION WIRING DIAGRAM 1 WAY DIMMER Connect the cables as shown in the wiring diagram.   | INSTALLATION WIRING DIAGRAM 2 WAY DIMMERS WIRED IN 1 WAY CIRCUIT Connect the cables as shown in the wiring diagram. |
| TO EARTH TERMINAL IN BOX  | TO EARTH TERMINAL IN BOX  |


MAINS SUPPLY

Max. each Dimmer

250W/VA 250W/VA

## INSTALLATION WIRING DIAGRAM 2 WAY DIMMERS WIRED IN 2 WAY CIRCUIT Connect the cables as shown in the wiring diagram TO EARTH TERMINAL IN BOX

MAINS SUPPLY

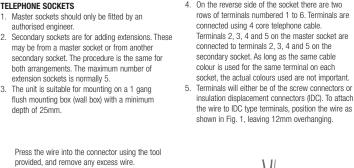

Telephone sockets fitted with metal front plates are fitted with earth terminals. The earth terminals on the socket should be connected to the earth terminal in the wall box by means of a short length of copper wire. If the wire is bare, it could be sleeved with green/yellow sleeving.

Position the cable so that the section covered by the braided screen sits beneath the cable clamp and the centre conductor sits within the centre conductor WIRING DIAGRAM FOR CO-AXIAL SOCKETS

CABLE CLAME

TERMINAL FOR CENTRAL CONDUCTOR

These accessories require a minimum box depth of 35mm. On the reverse of the accessory, remove the top

cover to expose the terminal connectors. There are two

COAXIAL CABLE

EARTI

IN BOX METAL PLATES

BACKING PLATE

**RJ45 DATA OUTLETS** 

CO-AXIAL AND SATELLITE SOCKETS

the underlying copper braided screen Roll the braided screen over the top of the outer sheath and trim back a short length of inner

Connect the cables as shown in the wiring diagram.

Carefully slit the outer cable sheath and peel back to

the required length. Remove the excess and expose

insulation to expose the centre conductor. Slacken the screws that retain the cable clamp and also the screw that clamps the centre conductor.

rows of terminals, each having a number of colour coded connectors. Determine whether the wiring scheme is T568A or T568B and use the appropriate colour code guide to identify the correct position of each of the cables. To attach the wire to the terminal connectors, position the wire as shown in Fig 2. Press the wire into the connector using the tool provided. Once all cables are connected, remove any excess wire and replace the top cover. In the case of accessories having 1 AND 2 GANG BLANK PLATES existing accessory, ensure that any remaining cables are isolated and terminated at a convenient junction. Where possible remove the cables from

inside the wall box. If the cable cannot be isolated, ensure that the bare ends of the live and neutral

cables are terminated separately, within suitably sized terminal blocks. The terminal blocks should then be covered with insulating tape for additional safety. Any earth cables must be sheathed in green/yellow sleeving and connected to the earth


# If the accessory to be removed is on a ring main it is important that, after removal, the connections for the ring circuit are maintained. This can be achieved by connecting all the live cables together, and then all the

neutral cables together with suitably sized terminal

blocks. The terminal blocks should then be covered with insulating tape for additional safety. All earth cables must be sheathed in green/vellow sleeving and connected to the earth terminal in the wall box.

**DIPLEXER AND TRIPLEXER** Undo the screw to remove the terminal cover on the rear of the socket. Remove 20mm of outer cable sheath and trim inner insulation to expose 10mm of the central 3. Ensure that any excess braided screen is wrapped around the inner insulation and is not touching the central conductor. Push the centre conductor of the co-axial cable into the terminal.

Recommended cable type: CT100 (or equivalent).

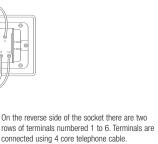

MAINS SUPPLY



CABLE CLAMP

CABLE BRAID TRAPPED UNDER CABLE CLAMP

## 1 GANG 2 GANG 00

terminal in the wall box. In all instances, it is

when removing an accessory.



proceedings may be instituted to protect such intellectual property rights.

The product is not kept or used in areas of

The product has not been tampered with.

The product has not been misused or handled

high humidity.

carelessly.

Any unauthorised reproduction of this booklet, in

other intellectual property rights and infringement

whole or part will be a breach of copyright and

- The product has been properly installed in accordance with the relevant wiring regulations and installation practices.

## tighten the centre conductor terminal screw. Ensure that the braided screen does not come into contact with the centre conductor terminal. In the case of accessories having metal front plates and fitted with earth terminals, the earth terminal on the accessory should be connected to the earth


terminal. Tighten the screws on the cable clamp and

Fig 1. - Connection Block

should be sleeved with green/yellow sleeving.

metal front plates and fitted with earth terminals, the earth terminal on the accessory should be connected to the earth terminal in the wall box by means of a

short length of copper wire. If this wire is bare, it

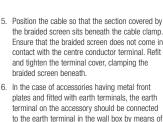

# against faulty materials or workmanship. During this period it will be repaired or replaced free of charge providing that: The product is returned to GET via the electrical wholesaler from whom the product was originally purchased, together with proof of The product has been used for its intended

purpose and connected to a mass supply of

This Guarantee does not affect your statutory rights other than those expressly set out above

and does not cover any claims for consequential

guaranteed for 25 years from the date of purchase

This product except for the dimmer switch is

GUARANTEE

220-240 volts.

loss or damage.

